

1976
Mazda
Rotary Pickup
WORKSHOP MANUAL

1976 Mazda Rotary Pickup WORKSHOP MANUAL

FOREWORD

This workshop manual was prepared as reference material of the service personnel of authorized Mazda dealers to enable them to correctly carry out the task of rendering services and maintenance on Mazda vehicles.

In order to ensure that the customers are satisfied with Mazda products, proper servicing and maintenance must be provided. For this purpose, the service personnel must fully same time, are recommended to keep the manual in a place where reference can readily be made.

The information, photographs, drawings and specifications entered in this manual were the best available at the time of printing this manual. All alterations to this manual occurring as the result of modifications will be notified by the issuance of Service Informations or supplementary volumes. It is, therefore, requested that the manual be kept up to date by carefully maintaining a follow-up of these materials.

Toyo Kogyo reserves the right to alter the specifications and contents of this manual without any obligation and advance notice.

All rights reserved. No part of this book may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying, recording, or by any informational storage and retrieval system, without permission in writing.

SECTION INDEX	
Name	Section
Engine	1
Emission Control System (Federal & Canada)	1A
Emission Control System (California)	1B
Lubricating System	2
Cooling System	3
Fuel System	4
Electrical System (Engine)	5
Clutch	6
Manual Transmission (Four-speed)	7
Manual Transmission (Five-speed)	7A
Automatic Transmission	7B
Propeller Shaft	8
Rear Axle	9
Steering	10
Brakes	11
Wheels and Tires	12
Suspension	13
Body	14
Electrical System (Body)	15
Technical Data	T

IMPORTANT SAFETY NOTICE

The service procedures described in this workshop manual are effective for carrying out the safe and reliable service operations.

This manual contains the General Service Instructions as mentioned below and various Notes. It is important to read these instructions and notes carefully in order to minimize the risk of personal injury to service personnel or the possibility that improper service methods will be followed which may damage the vehicle or render it unsafe. It is also important to understand that these instructions and notes do not cover all such risks.

Accordingly, anyone who performs service operations must make sure thoroughly prior to commencing service that neither his and his partner's safety nor vehicle safety will be jeopardized by the service method and tools selected.

General Service Instructions

1. If the vehicle is to be jacked up only at the front or rear end, be sure to block the wheels in order to ensure safety.
2. After the vehicle is jacked up, do not fail to support it with stand.
3. Use the fender cover, seat cover and floor cover to keep the car clean and prevent any damage.
4. Before servicing the electrical equipment, disconnect the negative cable at the battery.
5. Always replace gaskets and "O" rings with new ones.
6. Apply sealer to gaskets to prevent leakage.
7. Tighten the bolts and nuts to specified torque using a torque wrench.
8. Some of the service operations require the special tool. Be sure to use the special tool where specified and follow the proper work procedure.

ENGINE

1-A. ENGINE REMOVAL	1 : 1	1-C-10. Replacing Rotor Bearing	1 : 10
1-B. ENGINE DISASSEMBLY	1 : 2	1-C-11. Inspecting Rotor Oil Seal and Spring	1 : 11
1-B-1. Removing Deceleration Control Valve	1 : 2	1-C-12. Inspecting Apex Seal, Side Piece and Spring	1 : 11
1-B-2. Removing Evapo Compensator Valve and Altitude Compensator (Federal, Canada)	1 : 2	1-C-13. Inspecting Side Seal and Spring	1 : 12
1-B-3. Removing Air Pump and Drive Belt	1 : 2	1-C-14. Inspecting Corner Seal and Spring	1 : 12
1-B-4. Removing Alternator	1 : 2	1-C-15. Inspecting Eccentric Shaft	1 : 12
1-B-5. Removing Inlet Manifold and Carburetor Assembly	1 : 2	1-C-16. Inspecting Needle Bearing	1 : 12
1-B-6. Removing Thermal Reactor	1 : 2	1-C-17. Inspecting Eccentric Shaft Front and Rear Oil Seals	1 : 12
1-B-7. Removing Distributor	1 : 2	1-C-18. Checking Oil Pump Drive Chain and Sprockets	1 : 13
1-B-8. Removing Engine Mount	1 : 2	1-C-19. Checking Chain Adjuster	1 : 13
1-B-9. Removing Oil Filter and Cover	1 : 3	1-D. ENGINE ASSEMBLY	1 : 14
1-B-10. Removing Water Pump	1 : 3	1-D-1. Installing Oil Seal	1 : 14
1-B-11. Removing Oil Pan and Oil Strainer	1 : 3	1-D-2. Installing Front Side Seals	1 : 14
1-B-12. Removing Eccentric Shaft Pulley	1 : 3	1-D-3. Installing Front Rotor	1 : 15
1-B-13. Removing Front Cover	1 : 3	1-D-4. Installing Eccentric Shaft	1 : 15
1-B-14. Removing Oil Pump Drive	1 : 3	1-D-5. Installing Front Rotor Housing	1 : 15
1-B-15. Removing Balance Weight and Bearing Housing	1 : 3	1-D-6. Installing Rear Side Seals	1 : 16
1-B-16. Removing Oil Pump	1 : 4	1-D-7. Installing Intermediate Housing	1 : 17
1-B-17. Removing Clutch and Flywheel (Manual Transmission)	1 : 4	1-D-8. Installing Rear Rotor and Rear Rotor Housing	1 : 17
1-B-18. Removing Drive Plate and Counter Weight (Automatic Transmission)	1 : 4	1-D-9. Installing Rear Housing	1 : 17
1-B-19. Removing Rear Housing	1 : 4	1-D-10. Tightening Tension Bolts	1 : 18
1-B-20. Removing Rear Rotor Housing	1 : 5	1-D-11. Installing Flywheel (Manual Transmission)	1 : 18
1-B-21. Removing Rear Rotor	1 : 5	1-D-12. Installing Counter Weight (Automatic transmission)	1 : 18
1-B-22. Removing Intermediate Housing	1 : 6	1-D-13. Adjusting Eccentric Shaft End Play	1 : 19
1-B-23. Removing Eccentric Shaft	1 : 6	1-D-14. Installing Oil Pump Chain Adjuster	1 : 20
1-B-24. Removing Front Rotor Housing and Front Rotor	1 : 6	1-D-15. Installing Oil Strainer and Oil Pan	1 : 21
1-C. INSPECTION AND REPAIR	1 : 7	1-D-16. Installing Water Pump	1 : 21
1-C-1. Cleaning	1 : 7	1-D-17. Installing Distributor	1 : 21
1-C-2. Inspecting Front, Intermediate and Rear Housings	1 : 7	1-D-18. Installing Thermal Reactor	1 : 22
1-C-3. Inspecting Front Stationary Gear and Main Bearing	1 : 8	1-D-19. Installing Inlet Manifold and Carburetor Assembly	1 : 22
1-C-4. Replacing Front Main Bearing	1 : 8	1-D-20. Installing Alternator and Drive Belt	1 : 22
1-C-5. Inspecting Rear Stationary Gear and Main Bearing	1 : 8	1-D-21. Installing Air Pump and Drive Belt	1 : 22
1-C-6. Replacing Rear Main Bearing	1 : 9	1-D-22. Installing Oil Filter and Cover	1 : 22
1-C-7. Inspecting Rotor Housing	1 : 9	1-D-23. Installing Evapo Compensator Valve and Altitude Compensator (Federal, Canada)	1 : 22
1-C-8. Inspecting Rotor	1 : 9	1-D-24. Installing Deceleration Control Valve	1 : 23
1-C-9. Inspecting Rotor Bearing	1 : 10	1-E. ENGINE INSTALLATION	1 : 23
		SPECIAL TOOLS	1 : 23

1-A. ENGINE REMOVAL

The procedures for removing the engine from the vehicle for overhauling are as follows:

1. Disconnect the negative cable at the battery.
2. Drain the cooling water by opening the drain plugs.
3. Drain the engine oil.
4. Disconnect the primary wiring coupler and the high tension cords at the ignition coils.
5. Disconnect the wire at the "B" terminal of the alternator and pull off the wiring coupler from the rear of the alternator.
6. Disconnect the bullet connector from the choke heater lead of the carburetor.
7. Disconnect the coupler from the water temperature switch.
8. Disconnect the bullet connectors from the deceleration control valve.
9. Disconnect the coupler to the transmission at the rear end of the engine.
10. Disconnect the coupler from the oil thermo sensor (except California vehicles).
11. Disconnect the coupler from the oil level sensor lead.
12. Disconnect the connector from the water temperature gauge unit.
13. Disconnect the positive cable from the "B" terminal and ignition switch wire from the "S" terminal on the starting motor.
14. Remove the nuts attaching the air cleaner body and remove the air cleaner assembly.
15. Pull the couplers from the idle switch and air control valve (except California vehicle equipped with automatic transmission).
16. On California vehicle equipped with manual transmission, disconnect the coupler from the richer solenoid.
17. Disconnect the coupler from the power valve solenoid (automatic transmission only).
18. Remove the fuel pipe and fuel return pipe at the carburetor.
19. Disconnect the accelerator cable and the choke cable at the carburetor.
20. Remove the sub-zero starting assist hose at the carburetor (except California vehicles).
21. Disconnect the vacuum sensing tube from the vacuum pipe (automatic transmission).
22. Disconnect the vacuum sensing pipe for power brake unit from the inlet manifold.
23. Remove the air conditioning compressor, if equipped.
24. Remove the cooling fan and fan drive assembly.
25. Remove the upper and lower radiator hoses. On the vehicle equipped with automatic transmission, disconnect the automatic transmission fluid pipes from the radiator.
26. Loosen the hose bands and disconnect the heater hoses from the radiator and rear housing.
27. Disconnect the hoses from the oil cooler.
28. Remove the expansion tank cap.
29. Remove the radiator attaching bolts and remove the radiator.
30. Remove the exhaust pipe hanger from the bracket on the transmission.
31. Disconnect the exhaust pipe from the thermal

reactor. Remove the gasket.

32. On the vehicle equipped with manual transmission, remove the clutch release cylinder from the clutch housing.
33. Remove the starting motor.
34. Remove the bolts supporting the transmission to the engine.
35. Support the transmission with a suitable jack.
36. Remove the nuts from the right and left engine mountings.
37. Install a suitable lifting sling on the engine hanger brackets. Attach the sling to a hoist or other lifting device and take up all slack.
38. Pull the engine forward until it clears the clutch shaft. Then, lift the engine from the vehicle.
39. Install the **hanger** (49 1114 005) to the **engine stand** (49 0107 680A or 49 0839 000) and mount the engine on the engine stand.

1-B. ENGINE DISASSEMBLY

1-B-1. Removing Deceleration Control Valve

1. Disconnect the air outlet hoses from the inlet manifold.
2. Disconnect the vacuum sensing tube from the inlet manifold.
3. Remove the deceleration control valve and bracket by removing the bolts.

1-B-2. Removing Evapo Compensator Valve and Altitude Compensator (Federal, Canada)

1. Disconnect the air hoses from the inlet manifold and carburetor.
2. Disconnect the air hose from the evaporative line.
3. Remove the evapo compensator valve and altitude compensator with bracket by removing the bolts.

1-B-3. Removing Air Pump and Drive Belt

1. Disconnect the air outlet hose from the air pump.
2. Remove the air pump mounting and strap bolts.
3. Remove the air pump and disengage the air pump drive belt.



Fig. 1-1 Removing air pump

1-B-4. Removing Alternator

1. Remove the alternator mounting and strap bolts.
2. Remove the alternator and disengage the air pump drive belt.



Fig. 1-2 Removing alternator

1-B-5. Removing Inlet Manifold and Carburetor Assembly

1. Disconnect the evaporative hose from the ventilation valve.
2. Disconnect the connecting rod at the metering oil pump lever and remove the washer.
3. Disconnect the oil hoses at the metering oil pump outlets.
4. Disconnect the air outlet hose (thermal reactor ~ air control valve) at the air control valve.
5. Remove the nuts attaching the inlet manifold to the engine, and remove the inlet manifold and carburetor assembly.
6. Remove the manifold gasket and "O" rings.



Fig. 1-3 Removing inlet manifold and carburetor assembly

1-B-6. Removing Thermal Reactor

1. Remove the thermal reactor attaching nuts and remove the reactor from the engine.
2. Remove the gasket.

1-B-7. Removing Distributor

1. Disconnect the high tension cords from each spark plug.
2. Remove the distributor attaching nut and pull the distributor out of the front cover.

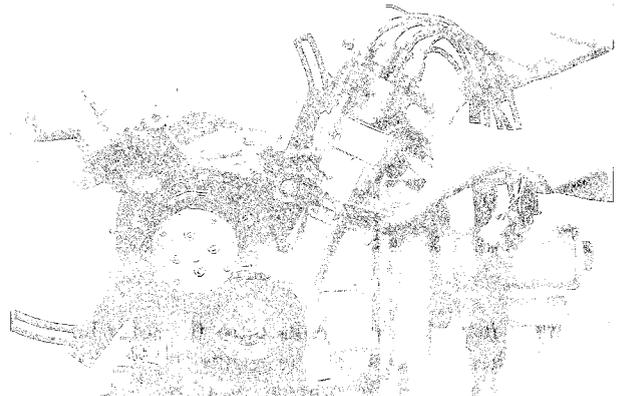


Fig. 1-4 Removing distributor

1-B-8. Removing Engine Mount

1. Remove the nuts attaching the engine mount to the front cover.
2. Remove the engine mount from the front cover.

1-B-9. Removing Oil Filter and Cover

1. Remove the nuts attaching the oil filter cover to the rear housing.
2. Remove the oil filter and cover assembly.
3. Remove the "O" rings from the cover.

1-B-10. Removing Water Pump

1. Remove the pulley for air conditioning compressor by removing the attaching bolts (if equipped).
2. Remove the nuts and bolts that attach the water pump to the front housing.
3. Remove the alternator and air pump straps, and then water pump.

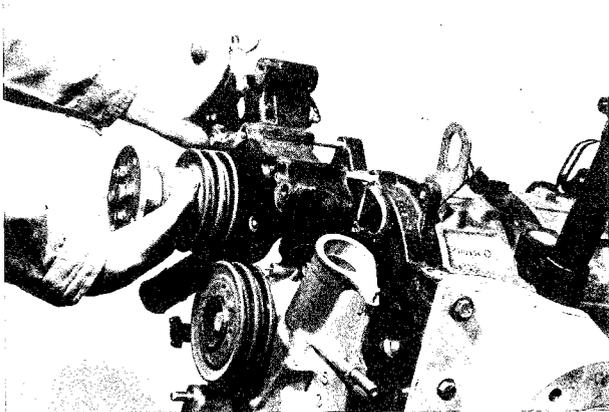


Fig. 1-5 Removing water pump

1-B-11. Removing Oil Pan and Oil Strainer

1. Invert the engine on the engine stand.
2. Remove the bolts attaching the oil pan, and remove the oil pan and gasket.
3. Remove the bolts attaching the oil strainer, and remove the oil strainer and gasket.

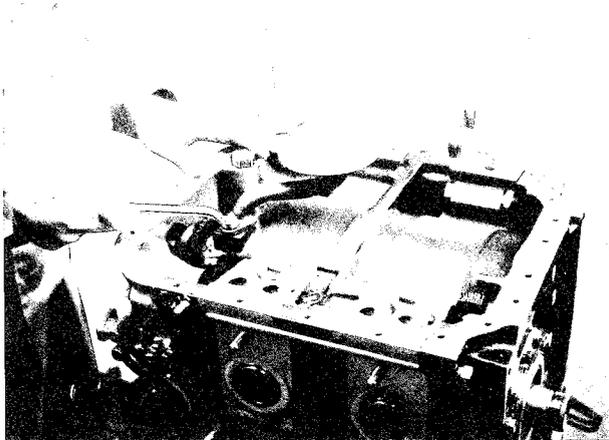


Fig. 1-6 Removing oil strainer

4. Apply identification marks onto the rotor housings, so that when reassembling the engine the rotor housing can be installed in its original position.

1-B-12. Removing Eccentric Shaft Pulley

1. Turn the engine on the engine stand so that the top of the engine is up.
2. On the engine equipped with manual transmission, attach the ring gear brake (49 1881 060) to the

flywheel.

On the engine equipped with automatic transmission, attach the counter weight brake (49 1881 055) to the counter weight.

3. Remove the eccentric shaft pulley bolt and remove the pulley.

1-B-13. Removing Front Cover

1. Turn the engine on the engine stand so that the front end of the engine is up.
2. Remove the front cover attaching bolts, and remove the front cover and gasket.
3. Remove the "O" ring from the oil passage on the front housing.

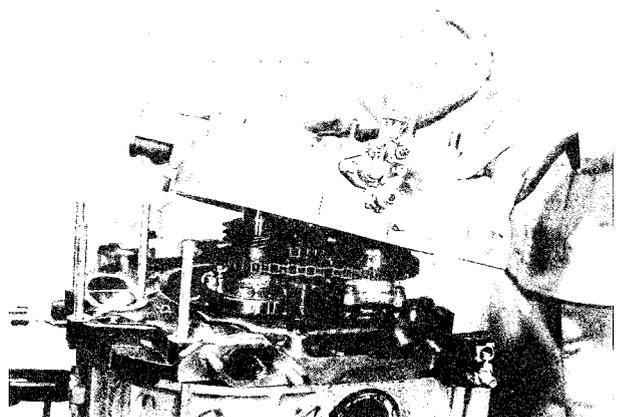


Fig. 1-7 Removing front cover

1-B-14. Removing Oil Pump Drive

1. Slide the distributor drive gear off the shaft.
2. Remove the nuts attaching the chain adjuster and remove the chain adjuster.
3. Straighten the tab of the lock washer and remove the nut and lock washer from the oil pump sprocket.
4. Slide the oil pump sprocket and eccentric shaft sprocket together with the drive chain off the eccentric shaft and oil pump shaft simultaneously.

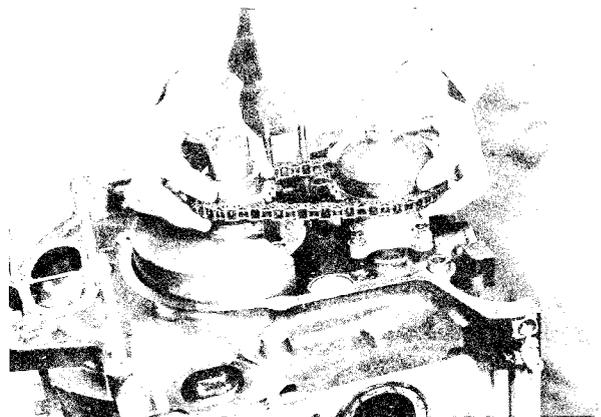


Fig. 1-8 Removing oil pump drive

1-B-15. Removing Balance Weight and Bearing Housing

1. Remove the key on the eccentric shaft.
2. Slide the balance weight, thrust washer and needle bearing off the shaft.

3. Remove the bolts attaching the bearing housing, and slide the bearing housing, needle bearing, spacer and thrust plate off the shaft.

1-B-16. Removing Oil Pump

1. Remove the key on the oil pump shaft.
2. Remove the oil pump attaching bolts, and remove the oil pump.

1-B-17. Removing Clutch and Flywheel (Manual Transmission)

1. Turn the engine on the engine stand so that the top of the engine is up.
2. Attach the ring gear brake (49 1881 060) to the flywheel.
3. Remove the clutch cover attaching bolts, and remove the clutch cover assembly and clutch disc.
4. Straighten the tab of the lock washer and remove the flywheel nut, using the wrench (49 0820 035).

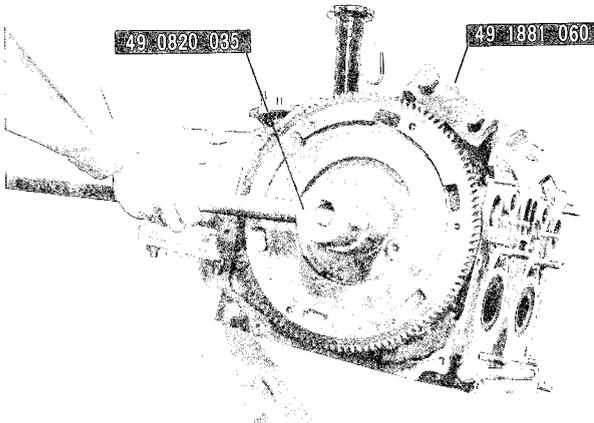


Fig. 1-9 Removing flywheel nut

5. Remove the flywheel by using the puller (49 0839 305A), turning the handle of the puller and lightly hitting the head of the puller.
6. Remove the key from the eccentric shaft.

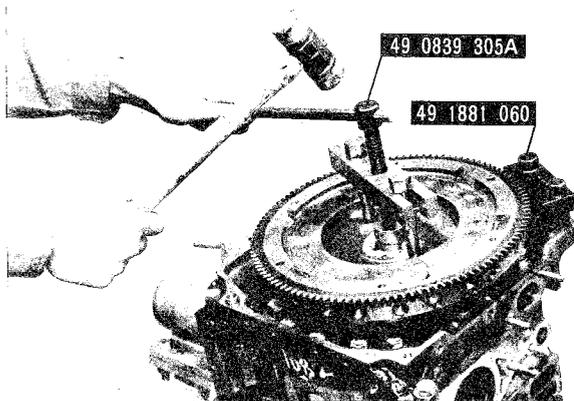


Fig. 1-10 Removing flywheel

1-B-18. Removing Drive Plate and Counter Weight (Automatic Transmission)

1. Attach the counter weight brake (49 1881 055) to the rear housing.

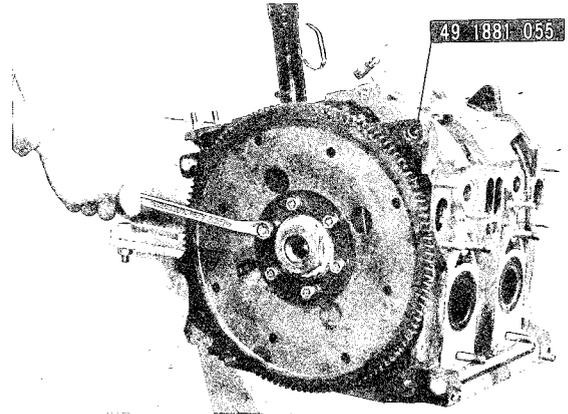


Fig. 1-11 Removing drive plate

2. Remove the drive plate attaching bolts and remove the drive plate.
3. Straighten the tab of the lock washer and remove the counter weight nut using the wrench (49 0820 035).

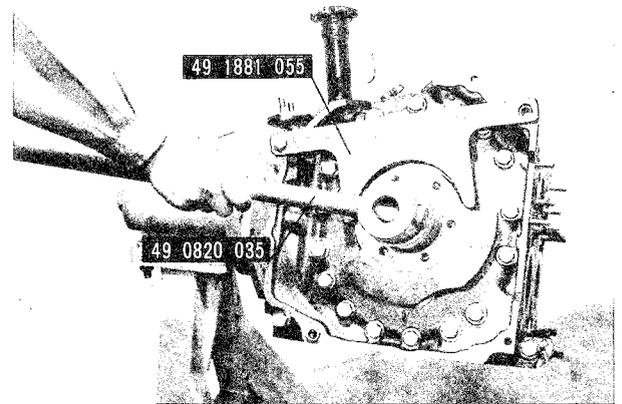


Fig. 1-12 Removing counter weight nut

4. Remove the counter weight by using the puller (49 0839 305A), turning the handle of the puller and lightly hitting the head of the puller.
5. Remove the key from the eccentric shaft.

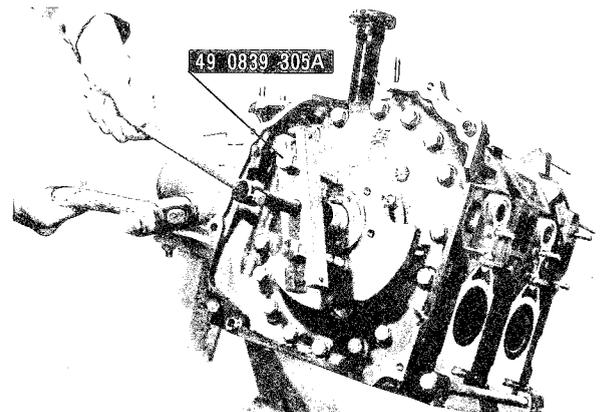


Fig. 1-13 Removing counter weight

1-B-19. Removing Rear Housing

1. Turn the engine on the engine stand so that the rear of the engine is up.

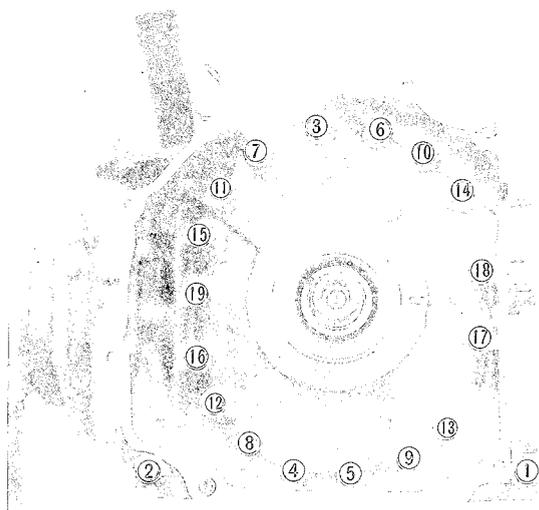


Fig. 1-14 Tension bolts loosening order

2. Loosen the tension bolts in the sequence shown in Fig. 1-14, and remove the tension bolts.

Note:

Do not loosen the tension bolts at one time. Perform the removal in two or three procedures.



Fig. 1-15 Loosening tension bolts

3. Lift the rear housing off the shaft.
4. Remove the seals stuck on the rotor sliding surface of the rear housing and place them back into their respective original positions.



Fig. 1-16 Removing rear housing

1-B-20. Removing Rear Rotor Housing

1. Remove the two sealing rubbers and "O" ring from the rear side of the rear rotor housing.
2. Attach the dowel puller (49 0813 215A), and pull the tubular dowels off the rear rotor housing while holding the rotor housing down by hand to prevent it from moving up.

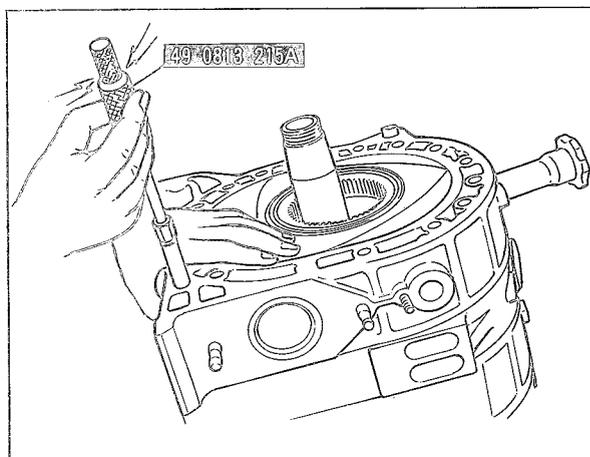


Fig. 1-17 Removing tubular dowel

3. Lift the rear rotor housing away from the rotor, being careful not to drop the apex seals on the rear rotor. Remove the two sealing rubbers and "O" ring from the front side of the rear rotor housing.

Note:

Discard the used sealing rubbers and "O" ring, then use new sealing rubbers and "O" ring.

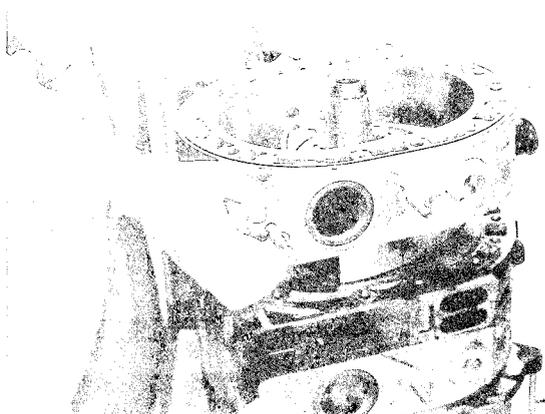


Fig. 1-18 Removing rear rotor housing

1-B-21. Removing Rear Rotor

1. Remove the side pieces, each apex seal and spring from the rear rotor and place them in the seal case (49 0813 250), in accordance with the numbers near each respective groove on the face of the rotor.
2. Remove the all corner seals, corner seal springs, side seals and side seal springs from the rear side of the rotor, and place them in the seal case.
3. Remove the rear rotor away from the eccentric shaft and place it internal gear side down on a clean rubber pad or cloth.

4. Remove each seal and spring on the other side of the rear rotor, and place them in the seal case, as shown in Fig. 1-19.

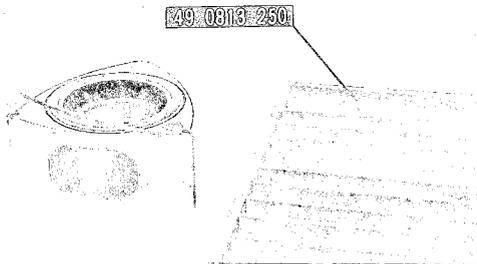


Fig. 1-19 Removing side seal

5. Place a suitable protector onto the inner oil seal lip to protect the oil seal lip and remove the outer oil seal with oil seal remover (49 0813 225), as shown in Fig. 1-20. Do not exert strong pressure at only one place to prevent deformation of the oil seal.

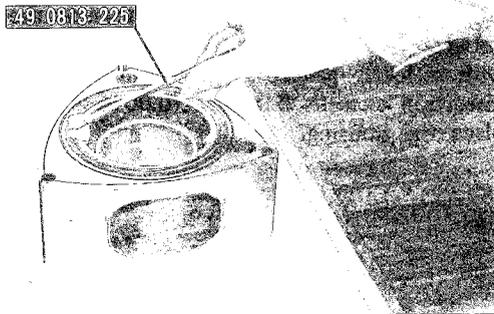


Fig. 1-20 Removing oil seal

6. Remove the inner oil seal with oil seal remover.

Note: Discard the used "O" rings and use a new "O" rings when the engine is reassembled.

7. Remove the oil seal springs from the each respective groove.

8. Remove the oil seals and springs on the other side of the rear rotor.

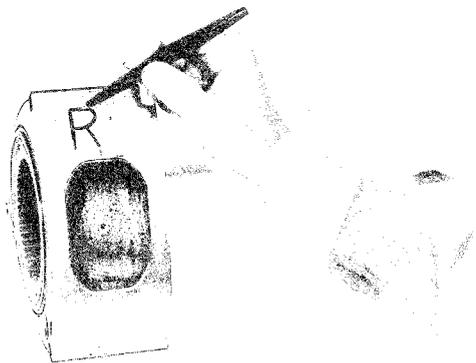


Fig. 1-21 Putting identification mark

9. Apply identification mark onto the rear rotor, so that when reassembling the engine the rotor can be installed in its original position.

1-B-22. Removing Intermediate Housing

1. Holding the intermediate housing down by hand, pull the tubular dowel off the intermediate housing using the dowel puller (49 0813 215A).

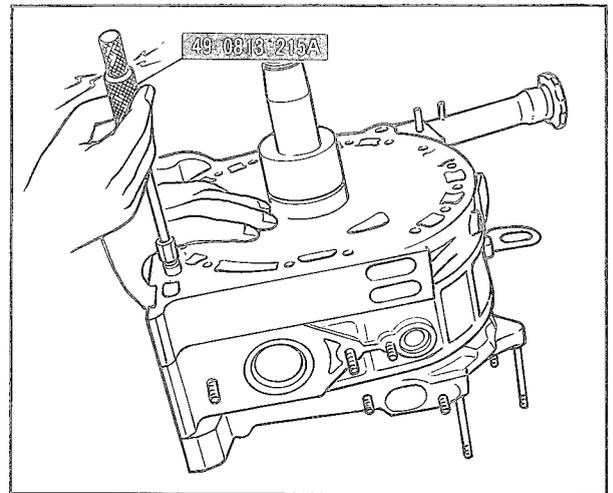


Fig. 1-22 Removing tubular dowel

2. Lift the intermediate housing off the shaft, being careful not to damage the shaft. The intermediate housing should be removed by sliding it beyond the rear rotor journal on the eccentric shaft while holding the intermediate housing up and at the same time pushing up the eccentric shaft.

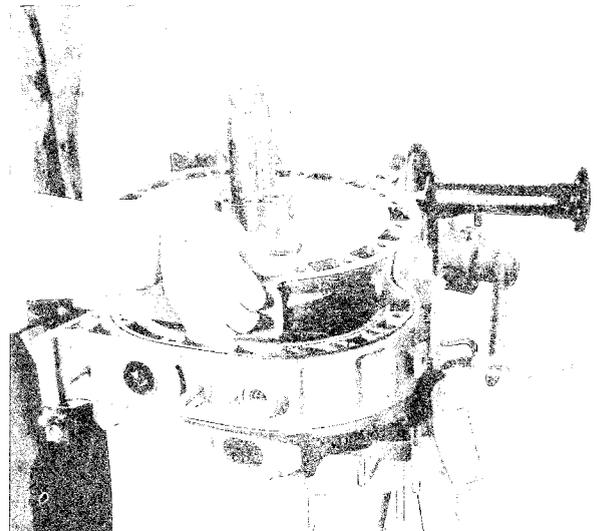


Fig. 1-23 Removing intermediate housing

1-B-23. Removing Eccentric Shaft

Remove the eccentric shaft being careful not to damage the rotor bearing and main bearing.

1-B-24. Removing Front Rotor Housing and Front Rotor

Remove the front rotor housing and the front rotor assembly referring to Par. 1-B-20 and 1-B-21.

1-C. INSPECTION AND REPAIR

1-C-1. Cleaning

a. Front, intermediate and rear housings

1. Remove all carbon on the housings with an extra-fine emery paper. If using a carbon scraper, be careful not to damage the finished surfaces of the housings.
2. Remove the sealing agent on the housings by using a cloth or a brush soaked in a solution of ketone or thinner.

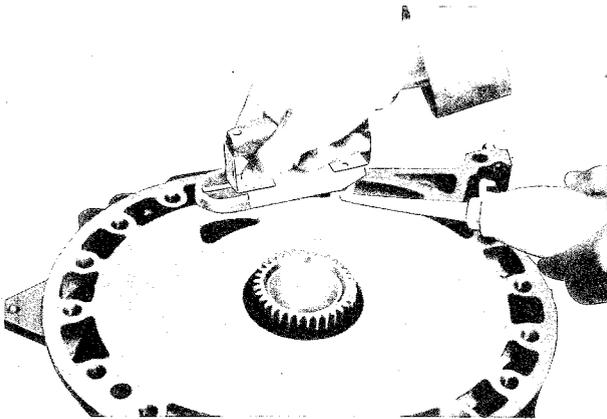


Fig. 1-24 Cleaning front housing

b. Rotor housing

Note:

Before cleaning, check for traces of gas or water leakage along the inner margin of each side face of the rotor housing.

1. Remove all carbon from the inner surface of the rotor housing by wiping with cloth. Soak the cloth in a solution of ketone or thinner if it is difficult to remove the carbon.
2. Remove all deposits and rust from the cooling water passages on the housing.
3. Remove the sealing agent by wiping with a cloth or brush soaked in a solution of ketone or thinner.

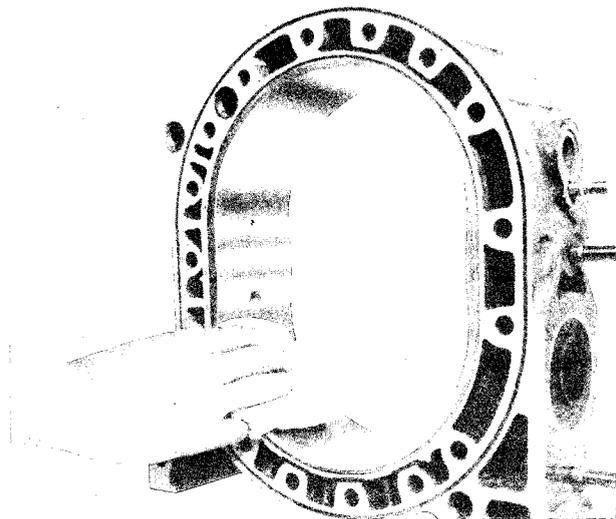


Fig. 1-25 Cleaning rotor housing

c. Rotor

Remove the carbon on the rotor by using a carbon remover or emery paper. Carbon in the seal grooves of the rotor should be removed with a carbon remover being careful not to damage the grooves. Wash the rotor in cleaning solution and dry by blowing with compressed air.

d. Apex seal, side piece and spring

Remove all carbon from the apex seal, side piece and spring, being careful not to damage the apex seal and side piece.

Never use emery paper as it will damage the apex seal and side piece. Wash them with cleaning solution.

e. Side seal and spring

Remove all carbon from the side seal and spring with a carbon remover.

f. Corner seal and spring

Remove the carbon from the corner seal and spring.

1-C-2. Inspecting Front, Intermediate and Rear Housings

1. Check for housing distortion by placing a straight edge on the housing surface. Measure the clearance between the straight edge and the housing surface with a feeler gauge, as shown in Fig. 1-26. If the distortion exceeds **0.04 mm (0.0016 in)**, reface or replace the housing.

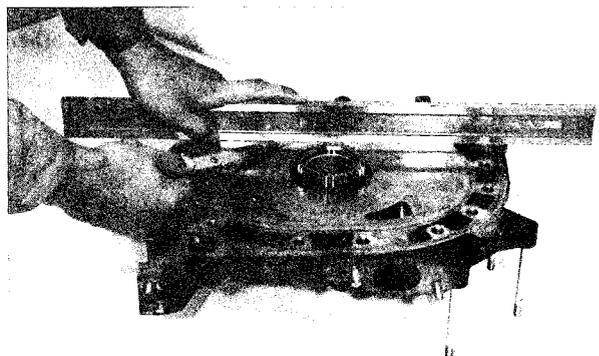
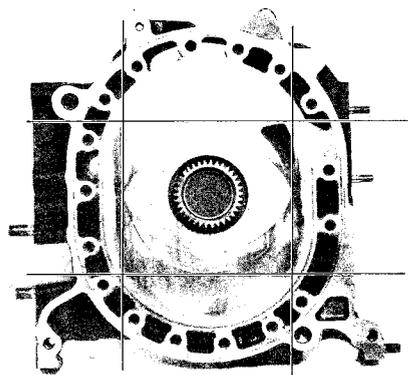


Fig. 1-26 Checking housing distortion

2. Check for wear on the rotor sliding surfaces of the housing and joint surfaces with rotor housing as shown in Fig. 1-27.

If the wear exceeds **0.10 mm (0.0039 in)**, reface or

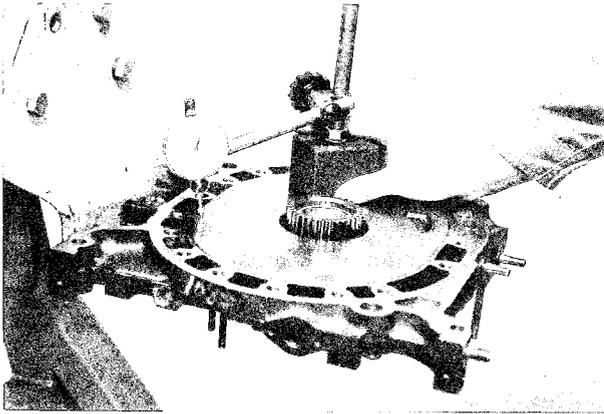


Fig. 1-27 Checking housing for wear

replace the housing.

Note:

The side housings (front housing, intermediate housing and rear housing) can be reused by grinding them if the required finish can be maintained.

1-C-3. Inspecting Front Stationary Gear and Main Bearing

1. Check the stationary gear for cracked, scored, worn or chipped teeth.
2. Check the main bearing for wear, scratching, flaking or any damage.
3. Check the main bearing clearance by measuring the inner diameter of the main bearing and outer diameter of the eccentric shaft main journal. The standard clearance is 0.04 ~ 0.07 mm (0.0016 ~ 0.0028 in). If the bearing clearance exceeds 0.10 mm (0.0039 in), replace the main bearing.

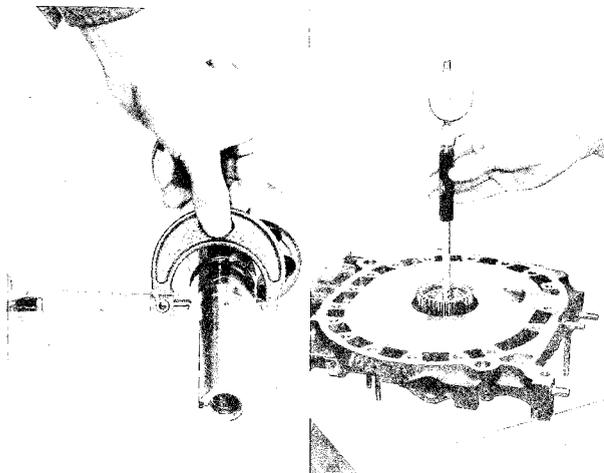


Fig. 1-28 Checking main bearing clearance

1-C-4. Replacing Front Main Bearing

1. Remove the stationary gear and main bearing assembly from the front housing, using the **main bearing replacer** (49 0813 235), as shown in Fig. 1-29.
2. Using the main bearing replacer without adaptor ring, press the main bearing out of the stationary gear.
3. Using the main bearing replacer with adaptor ring, and aligning the tang of the bearing and the slot of the stationary gear, press fit the main bearing

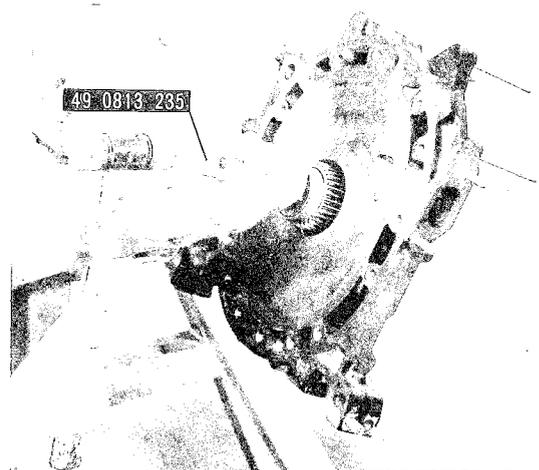


Fig. 1-29 Removing front stationary gear

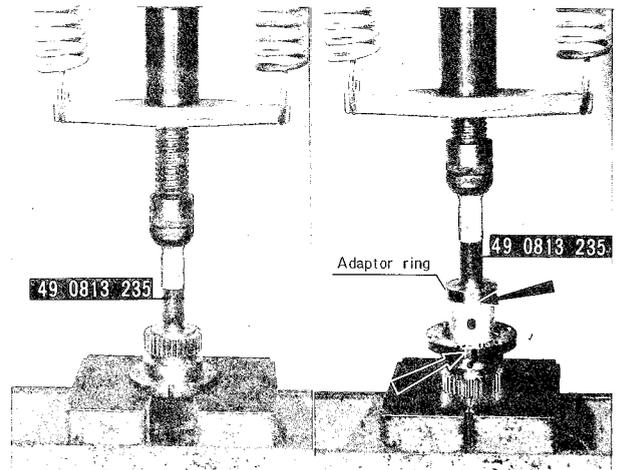


Fig. 1-30 Removing and installing main bearing

into the stationary gear until the adaptor touches the stationary gear flange.

4. Press in the stationary gear to the front housing with the main bearing replacer, aligning the slot of the stationary gear flange and the dowel pin on the housing, as shown in Fig. 1-31.

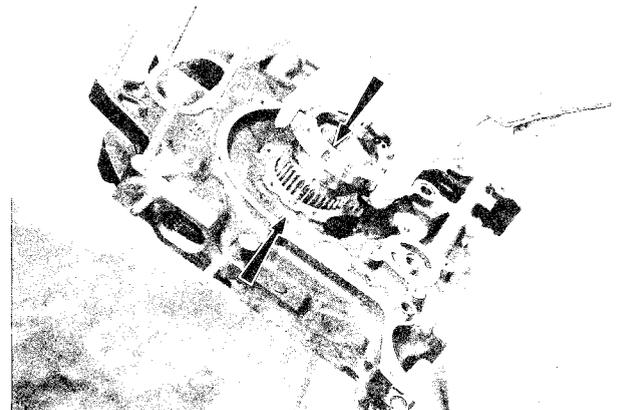


Fig. 1-31 Installing front stationary gear

1-C-5. Inspecting Rear Stationary Gear and Main Bearing

Check the rear stationary gear and main bearing according to Par. 1-C-3.

1-C-6. Replacing Rear Main Bearing

1. Remove the bolts attaching the stationary gear to the rear housing.
2. Using the main bearing replacer (49 0813 235), remove the stationary gear from the rear housing.



Fig. 1-32 Removing rear stationary gear

3. Check the "O" ring on the stationary gear for a damage. Replace the "O" ring if necessary.
4. Using the main bearing replacer without adaptor ring, press the main bearing out of the stationary gear.
5. Use the main bearing replacer with adaptor ring, and aligning the tang of the bearing and the slot of the stationary gear, press fit the main bearing into the stationary gear until the adaptor touches the stationary gear flange.
6. Apply a thin coat of vaseline on the "O" ring and place it in the groove of the stationary gear.
7. Apply sealing agent onto the stationary gear flange.
8. Install the stationary gear to the rear housing, being careful not to damage the "O" ring and aligning the slot of the stationary gear with the dowel pin on the rear housing.
9. Tighten the bolts attaching the stationary gear.

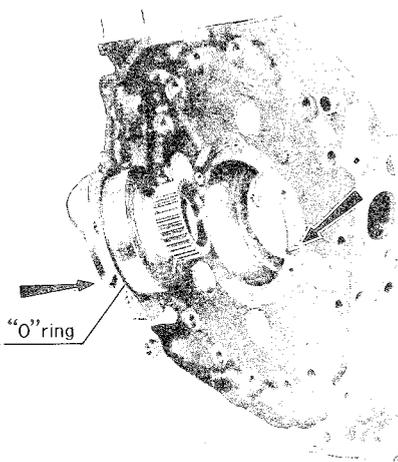


Fig. 1-33 Installing rear stationary gear

1-C-7. Inspecting Rotor Housing

1. Check the chromium plated surface on the rotor housing for scoring, flaking or any damage.

If any of these conditions exists excessively, replace the rotor housing.

2. Check the rotor housing width at points close to the trochoid surface by using a micrometer. The measurements should be taken at four points, as shown in Fig. 1-34.

If the difference between the value of point (A) and the minimum value among the points (B), (C) and (D) exceeds 0.06 mm (0.0024 in), the rotor housing should be replaced with a new one.

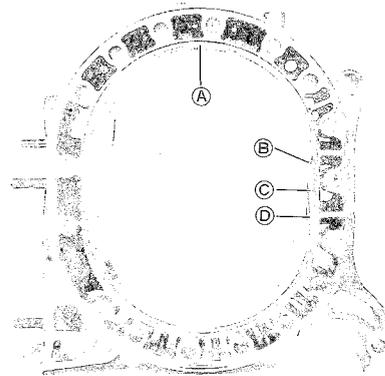


Fig. 1-34 Checking rotor housing width points



Fig. 1-35 Checking rotor housing width

1-C-8. Inspecting Rotor

1. Carefully inspect the rotor and replace if it is severely worn or damaged.
2. Check the internal gear for cracked, scored, worn or chipped teeth.
3. Check the clearance between the side housing and the rotor by measuring the rotor housing width and rotor width. The rotor width should be measured at three points, as shown in Fig. 1-36.

The difference between the maximum width of the rotor and the width of the point (A) of the rotor housing (see Fig. 1-34) should be within 0.10 ~ 0.21 mm (0.0039 ~ 0.0083 in).

If the clearance is more than the specification, replace the rotor assembly. If the clearance is less than the

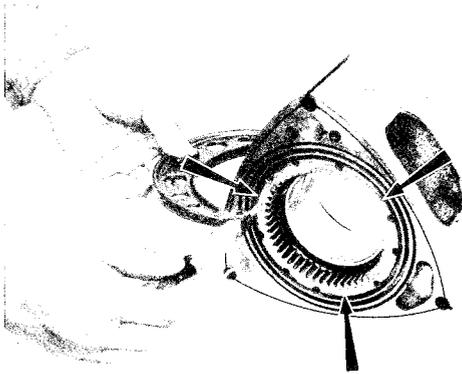


Fig. 1-36 Checking rotor width

specification, it indicates that the internal gear has come out, so strike the internal gear lightly with plastic hammer, being careful not to damage and recheck the clearance between the side housing and the rotor.

4. Check the corner seal bores for wear with the bar limit gauge (49 0839 165).

a) If neither end of the gauge go into the bore, use the original corner seal.

b) If the not-go-end of the gauge does not go into the bore while the go-end do, replace with a 0.03 mm (0.0012 in) oversize corner seal.

c) If both ends of the gauge go into the bore, replace the rotor.

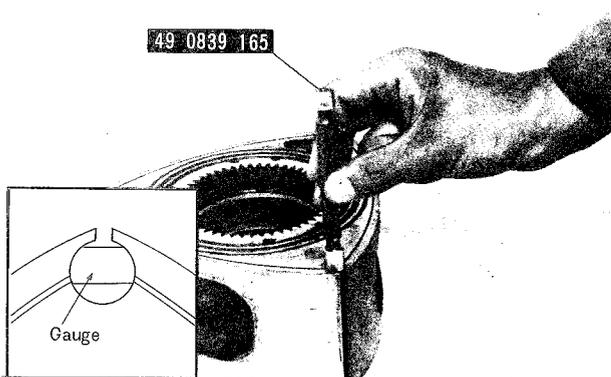


Fig. 1-37 Checking corner seal bore

1-C-9. Inspecting Rotor Bearing

1. Check the rotor bearing for wear, flaking, scoring

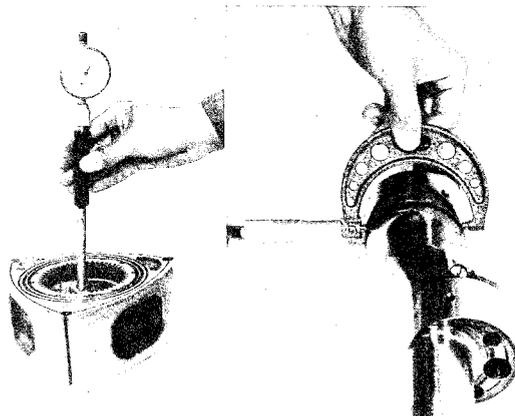


Fig. 1-38 Checking rotor bearing clearance

or any damage. If any of these conditions is found, replace the bearing.

2. Check the rotor bearing clearance by measuring the inner diameter of the rotor bearing and outer diameter of the eccentric shaft rotor journal, as shown in Fig. 1-38.

The standard clearance is 0.04 ~ 0.08 mm (0.0016 ~ 0.0031 in). Replace the bearing if it is more than 0.10 mm (0.0039 in).

1-C-10. Replacing Rotor Bearing

1. Place the rotor on the support so that the internal gear is facing downward. Using the rotor bearing replacer (49 0813 240) without adaptor ring, press the bearing out of the rotor, being careful not to damage the internal gear.

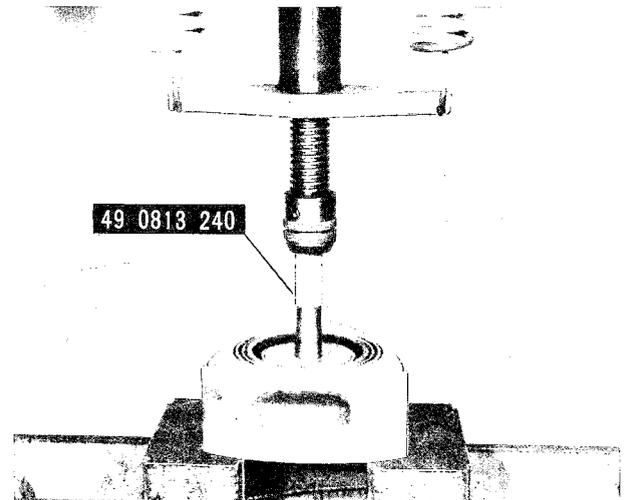


Fig. 1-39 Removing rotor bearing

2. Place the rotor on the support with internal gear faced upward. And place the new rotor bearing on the rotor so that the bearing lug is in line with the slot of the rotor bore.

3. Remove the screws attaching the adaptor ring to the replacer. Using the replacer and adaptor, press fit the new bearing until the bearing is flush with the rotor boss.

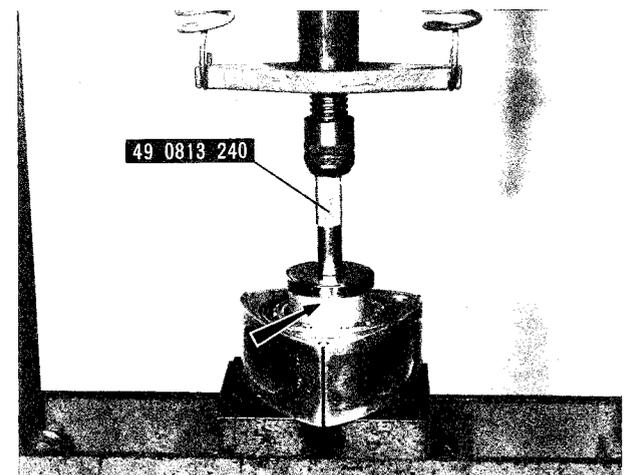


Fig. 1-40 Installing rotor bearing

1-C-11. Inspecting Rotor Oil Seal and Spring

1. Check the oil seal for wear or any damage. If the lip width of the oil seal is more than **0.8 mm (0.031 in)**, replace the oil seal.
2. Check the free movement of the oil seal in the rotor groove by pressing with finger.
3. Check the oil seal protrusion as shown in Fig. 1-41 and replace the oil seal spring if the protrusion is less than **0.5 mm (0.02 in)**.

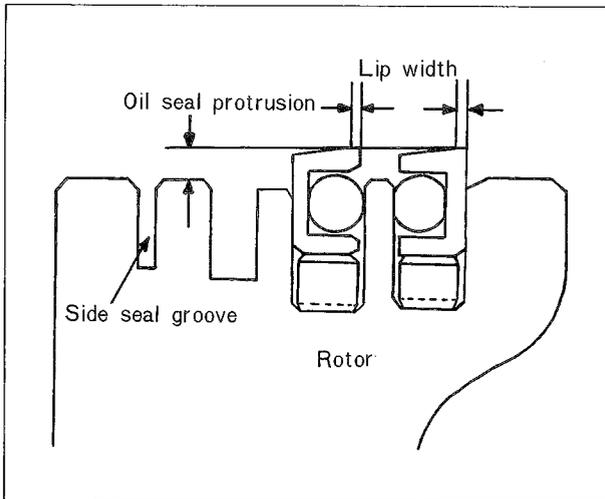


Fig. 1-41 Checking oil seal protrusion

1-C-12. Inspecting Apex Seal, Side Piece and Spring

1. Check the apex seal and side piece for wear, crack or any damage. If any of these conditions is found, replace the seal. Check the spring for wear.
2. Measure the height of the apex seal with a micrometer at two positions shown in Fig. 1-42. Replace if the height is less than **7.0 mm (0.276 in)**.

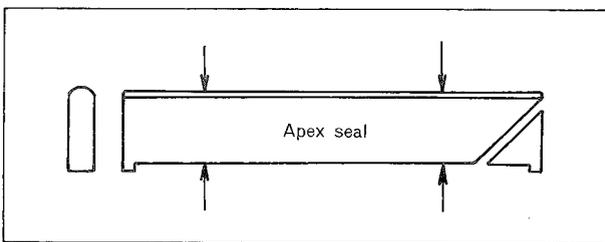


Fig. 1-42 Apex seal height



Fig. 1-43 Checking apex seal height

3. Check the clearance between the apex seal and the groove. To check the clearance, place the apex seal in its respective groove on the rotor and measure the clearance between the apex seal and the groove with a feeler gauge. The feeler gauge should be inserted until the tip of the gauge reaches the bottom of the groove. The standard clearance is **0.05 ~ 0.090 mm (0.0020 ~ 0.0035 in)**. If the clearance is more than **0.15 mm (0.006 in)**, replace the apex seal.



Fig. 1-44 Checking apex seal and groove

4. Check the clearance between the apex seal and side housing.

To check, measure the length of the apex seal with a micrometer. Compare the measured apex seal length with the width of (A) point of the rotor housing (see Fig. 1-34). The standard clearance is **0.13 ~ 0.17 mm (0.0051 ~ 0.0067 in)**.

If it is more than **0.30 mm (0.0118 in)**, replace the apex seal. If necessary, correct the apex seal length with emery paper.

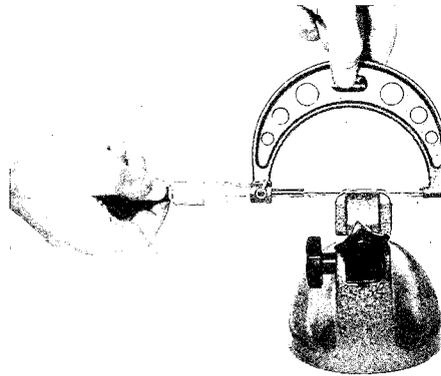


Fig. 1-45 Checking apex seal length

5. Check the free height of the apex seal spring as shown in Fig. 1-46. It should be more than **3.8 mm (0.15 in)**.

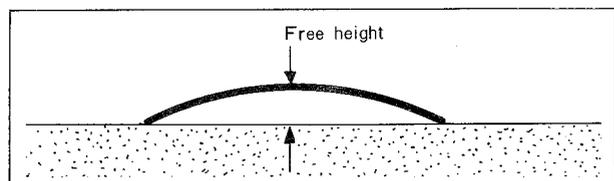


Fig. 1-46 Checking apex seal spring

1-C-13. Inspecting Side Seal and Spring

1. Check the free movement of the side seal in the rotor groove by pressing with finger.
2. Check the side seal protrusion from the rotor surface and replace the side seal spring if the protrusion is less than **0.5 mm (0.02 in)**.
3. Check the clearance between the side seal and the groove with a feeler gauge, as shown in Fig. 1-47. The standard clearance is **0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in)**. If the clearance exceeds **0.10 mm (0.0040 in)**, replace the side seal.

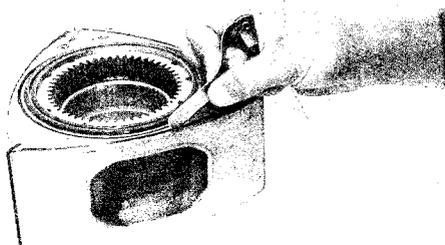


Fig. 1-47 Checking side seal clearance

4. Using a feeler gauge, check the clearance between the side seal and the corner seal with these seals installed on the rotor, as shown in Fig. 1-48. If the clearance exceeds **0.4 mm (0.016 in)**, replace the side seal.

When the side seal is replaced, adjust the clearance between the side seal and the corner seal by grinding the one end of the side seal along the round shape of the corner seal with a fine file so that the clearance will be **0.05 ~ 0.15 mm (0.002 ~ 0.006 in)**.

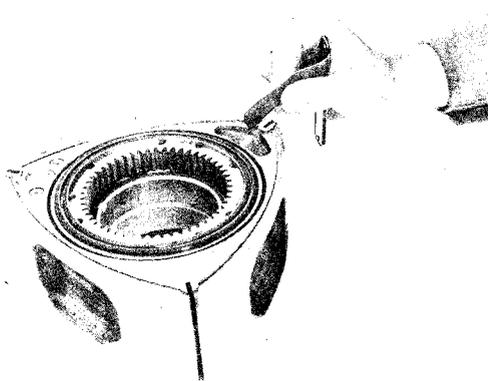


Fig. 1-48 Checking seal clearance

1-C-14. Inspecting Corner Seal and Spring

1. Check the corner seal for wear, crack or any damage. If any of these conditions is found, replace the seal. Check the spring for wear.
2. Check the free movement of the corner seal in the rotor groove by pressing with finger.
3. Check the corner seal protrusion from the rotor surface and replace the corner seal spring if the protrusion is less than **0.5 mm (0.02 in)**.

1-C-15. Inspecting Eccentric Shaft

1. Check the shaft for cracks, scratches, wear or any damage. Be sure that the oil passages are open.
2. Check the shaft for run-out. To check, mount the shaft on "V"-blocks and apply a dial indicator. Slowly rotate the shaft and note the reading on the indicator.

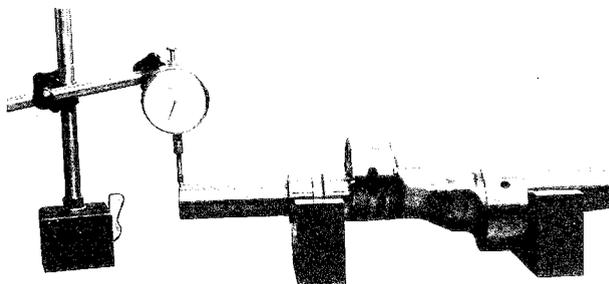


Fig. 1-49 Checking eccentric shaft for run-out

3. Check the blind plug in the shaft end for oil leakage or looseness. If any oil leakage is found, remove the blind plug with a hexagonal Allen key and replace the "O" ring.
4. The oil jets are installed in the eccentric shaft. The oil jets open when the number of engine revolutions increases and the oil pressure rises. Check for spring weakness, stick or damage of the steel ball.

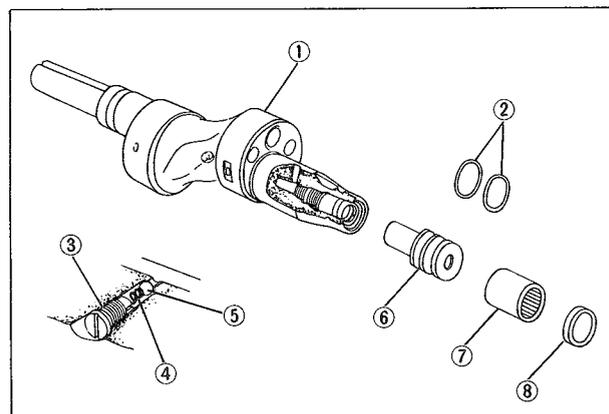


Fig. 1-50 Pilot bearing and oil jet

- | | |
|--------------------|------------------|
| 1. Eccentric shaft | 5. Steel ball |
| 2. "O" ring | 6. Blind plug |
| 3. Plug | 7. Pilot bearing |
| 4. Spring | 8. Oil seal |

1-C-16. Inspecting Needle Bearing

Check the needle bearing for wear or damage. Inspect the bearing housing and thrust plate for wear or any damage.

1-C-17. Inspecting Eccentric Shaft Front and Rear Oil Seals

Check the front oil seal fitted into the front cover and the rear oil seal fitted into the rear stationary gear.

If it is worn or damaged, replace the oil seal as follows:

1. Remove the oil seal by using a suitable tool.
2. Clean the oil seal mounting bore.
3. Position a new oil seal on its mounting bore and place a hardwood on the oil seal.

Then, install the oil seal while tapping the hardwood with a hammer until it is firmly seated.

Note:

- 1) Do not coat the outer surface of the oil seal with any lubricant or sealing agent.
- 2) Do not tap the oil seal directly with a hammer.

1-C-18. Checking Oil Pump Drive Chain and Sprockets

Check the oil pump drive chain for broken links. Check the eccentric shaft sprocket and oil pump sprocket for cracks and worn or damaged teeth. If any defects are found, replace with new parts.

1-C-19. Checking Chain Adjuster

Check the rubber pad on the chain adjuster for wear or damage and the adjuster spring for loss of tension. If they are defective, replace with a new adjuster assembly.

1-D. ENGINE ASSEMBLY

The procedures for assembling the engine when the engine is to be completely overhauled are as follows:

1-D-1. Installing Oil Seal

1. Place the rotor on a rubber pad or cloth.
2. Install the oil seal springs in their respective grooves on the rotor with each round edge of the spring fitted in the stopper hole in the oil seal grooves as shown in Fig. 1-51.

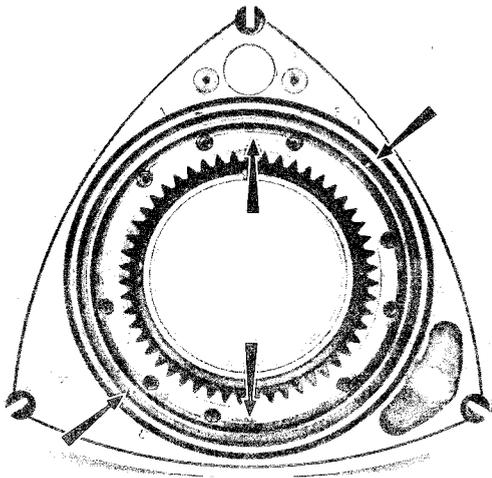


Fig. 1-51 Stopper hole of oil seal spring

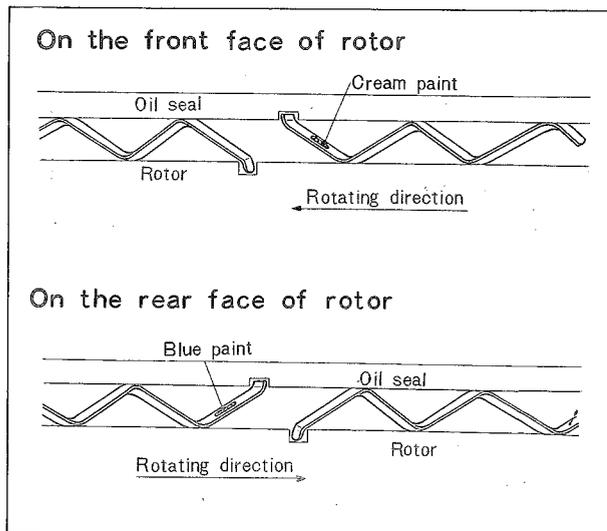


Fig. 1-52 Installing oil seal springs

The oil seal springs have been painted in cream or blue color. The cream-painted springs should be fitted on the front faces of both front and rear rotors. While the blue-painted springs should be fitted on the rear faces.

3. Install a new "O" ring in each oil seal.

4. Place the inner oil seal to the oil seal groove so that the square edge of the spring fits in the stopper notch of the oil seal.

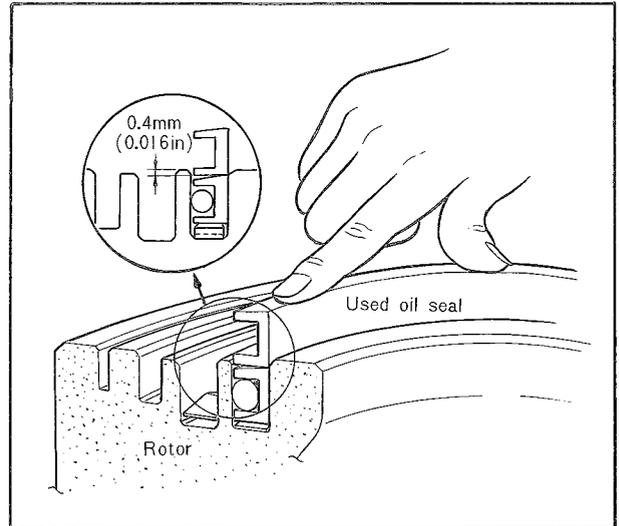


Fig. 1-53 Installing inner oil seal

5. Press the inner oil seal by using a used inner oil seal so that the lip surface of the oil seal sinks into a position approximately 0.4 mm (0.016 in) below the surface of the rotor, as shown in Fig. 1-53.

6. Place the outer oil seal to the oil seal groove so that the square edge of the spring fits in the stopper notch of the oil seal.

7. Push the oil seal slowly with fingers.

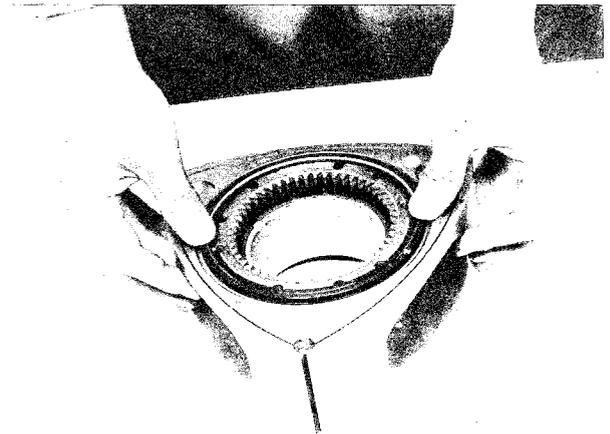


Fig. 1-54 Installing outer oil seal

Note:

- 1) When replacing the oil seal, confirm the smooth movement of oil seal by placing the oil seal on the oil seal spring in the groove before inserting the "O" ring.
- 2) Be careful not to deform the lip of the oil seal.

8. Apply sufficient engine oil onto each oil seal, and confirm the smooth movement of each oil seal by pressing the oil seal.

9. Install the oil seal springs and oil seals on the other side of the rotor.

1-D-2. Installing Front Side Seals

1. Place the front rotor on the rubber pad or cloth with the internal gear upward.

2. Install the apex seals without the spring into their respective grooves so that the side piece positions to the rear side of the rotor.

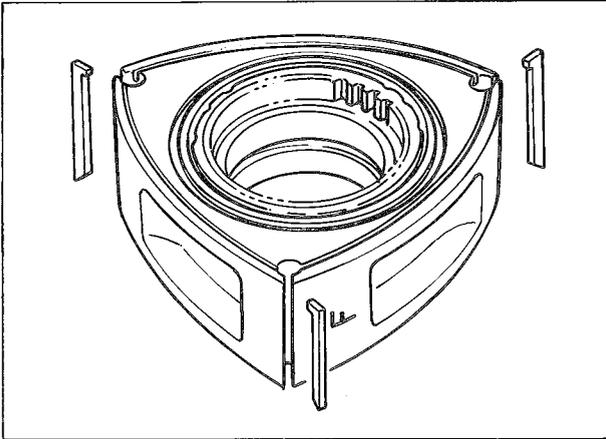


Fig. 1-55 Installing apex seal

3. Place the corner seal springs and corner seals into their respective grooves.
 4. Fit the side seal springs and side seals into their respective grooves, as shown in Fig. 1-56.
 5. Apply engine oil onto each seal, and confirm the smooth movement of each seal by pressing its head.

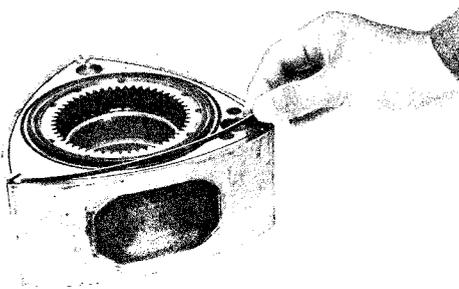


Fig. 1-56 Installing side seal

1-D-3. Installing Front Rotor

1. Mount the front housing on the engine stand.
 2. Apply engine oil onto the internal gear of the

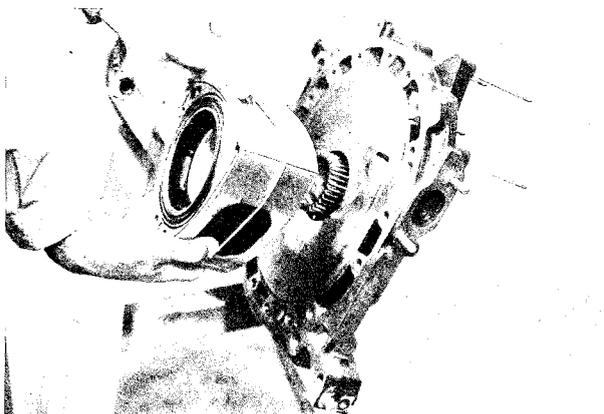


Fig. 1-57 Installing front rotor assembly

rotor.

3. Place the front rotor assembly on the front housing taking care not to drop the seals into the port.
 4. Mesh the internal gear and stationary gear so that one of the rotor apexes is set to any one of the four places shown in Fig. 1-58.

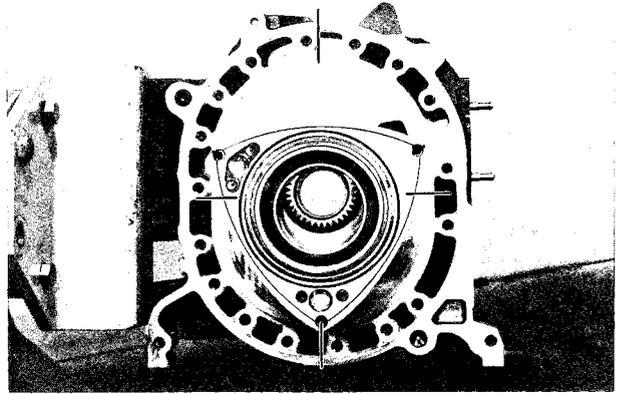


Fig. 1-58 Meshing internal gear

1-D-4. Installing Eccentric Shaft

1. Lubricate the front rotor journal and main journal on the shaft with engine oil.
 2. Insert the eccentric shaft, being careful not to damage the rotor bearing and main bearing.

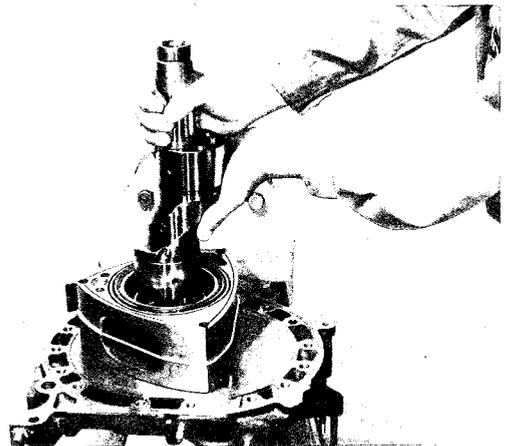


Fig. 1-59 Installing eccentric shaft

1-D-5. Installing Front Rotor Housing

1. Apply sealing agent onto the front side of the

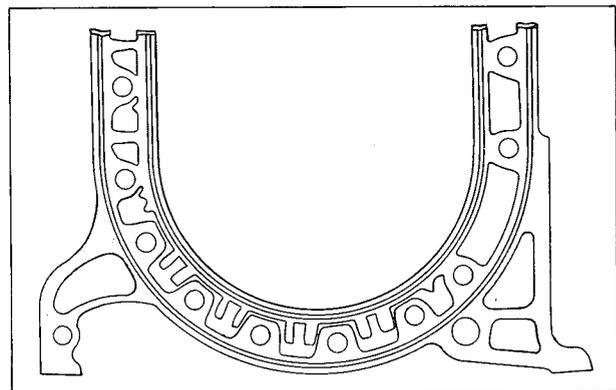


Fig. 1-60 Applying area of sealing agent

front rotor housing, as shown in Fig. 1-60.

2. Slightly apply vaseline onto new "O" ring and sealing rubbers to prevent them from coming off, and place the "O" ring and sealing rubbers on the front side of the front rotor housing.

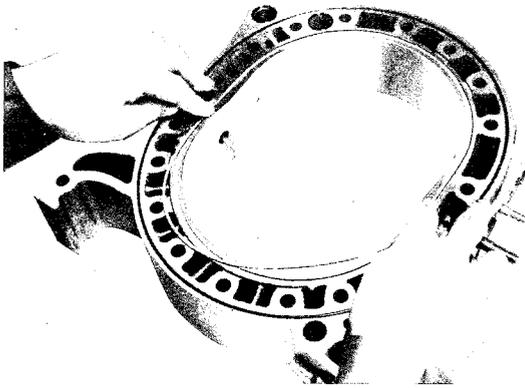


Fig. 1-61 Installing sealing rubber

Note:

1) The wider white line of the inner sealing rubber should face to combustion chamber and the seam of the sealing rubber should be placed at the position as shown in Fig. 1-62.

Do not stretch the sealing rubbers.

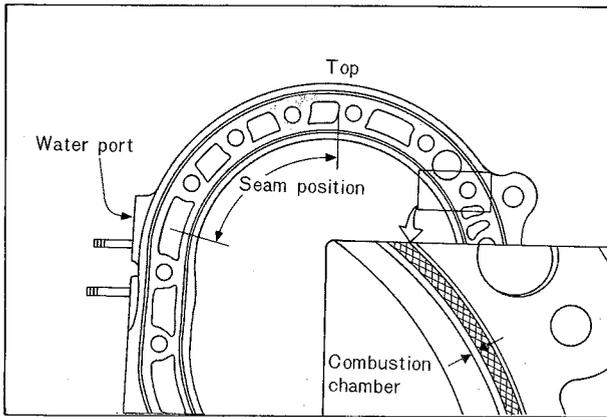


Fig. 1-62 Positioning inner sealing rubber

2) When engine overhauling, install the protector to behind of the inner sealing rubber, as shown in Fig. 1-63, to improve the durability of the sealing rubber.

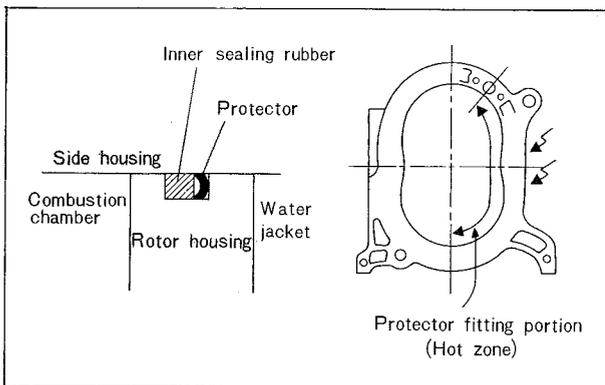


Fig. 1-63 Installing sealing rubber protector

3. Invert the front rotor housing and install it onto the front housing, being careful not to drop the sealing rubbers and "O" ring out of the grooves.

4. Apply engine oil onto the tubular dowels and insert the tubular dowels through the front rotor housing holes into the front housing holes, as shown in Fig. 1-64.

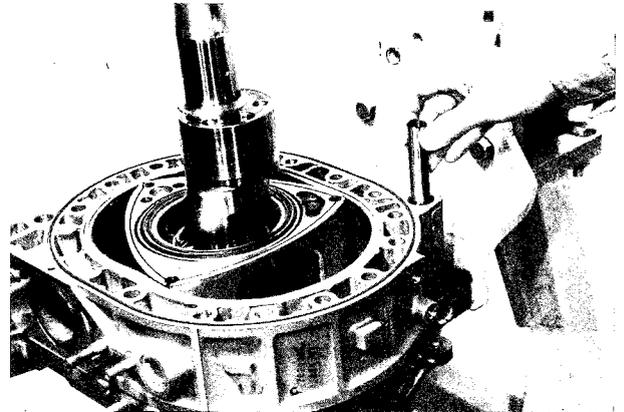


Fig. 1-64 Installing tubular dowel

1-D-6. Installing Rear Side Seals

1. Insert the each apex seal spring confirming the spring direction as shown in Fig. 1-65.

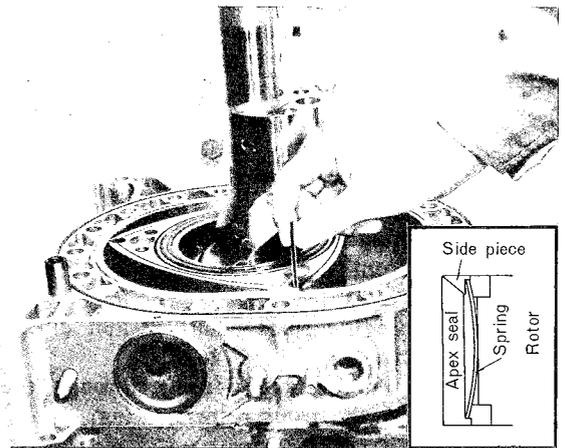


Fig. 1-65 Installing apex seal spring

2. Install the corner seal springs and corner seals into their respective grooves.

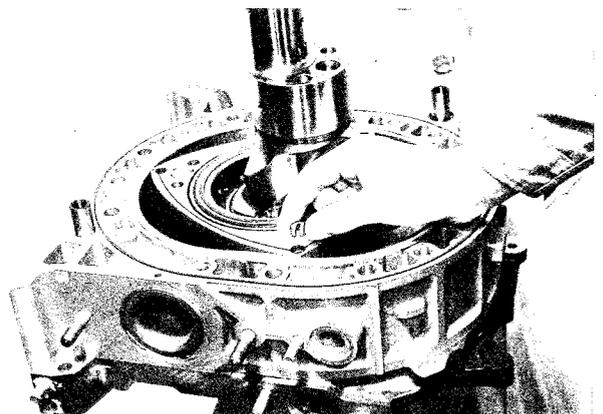


Fig. 1-66 Installing corner seal

3. Install the side seal springs and side seals into their respective grooves, as shown in Fig. 1-67.

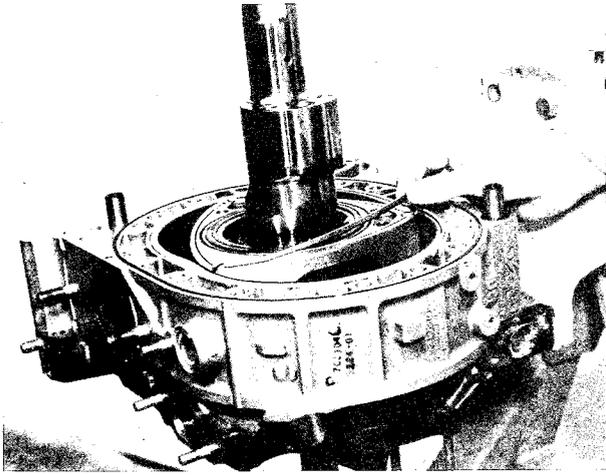


Fig. 1-67 Installing side seal

4. Fit the each side piece to its original position. And confirm that the spring should be set correctly on the side piece.

5. Apply engine oil onto each seal, and confirm the smooth movement of each seal by pressing its head.

6. Apply the sealing agent on the rear side of the front rotor housing, as instructed in Par. 1-D-5.

7. Place new "O" ring, sealing rubbers and protector on the rear side of the front rotor housing, as instructed in Par. 1-D-5.

8. Apply engine oil onto the sliding surface of the front rotor housing. And make sure that the front rotor housing is free from any foreign matter.

1-D-7. Installing Intermediate Housing

1. Turn the front housing so that the top of the housing inclines to upward.

2. Pull the eccentric shaft about 25 mm (1 in), but do not pull over 35 mm (1.4 in).

3. Install the intermediate housing through the eccentric shaft on the front rotor housing.

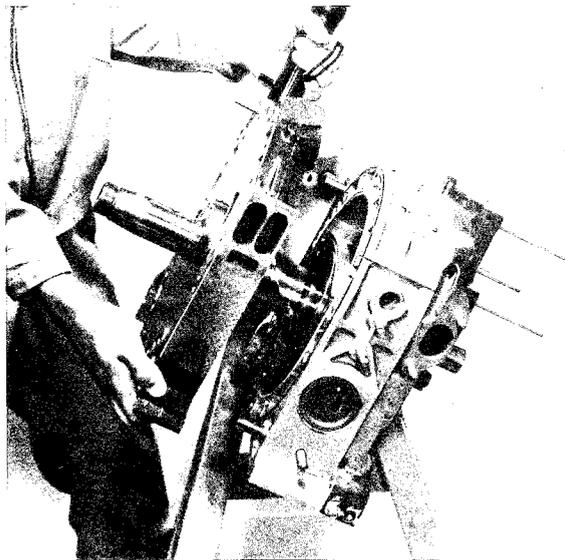


Fig. 1-68 Installing intermediate housing

1-D-8. Installing Rear Rotor and Rear Rotor Housing

1. Turn the engine on the engine stand so that the rear of the engine is up.

2. Install the rear rotor and rear rotor housing, referring to Par. 1-D-3, 1-D-5 and 1-D-6.

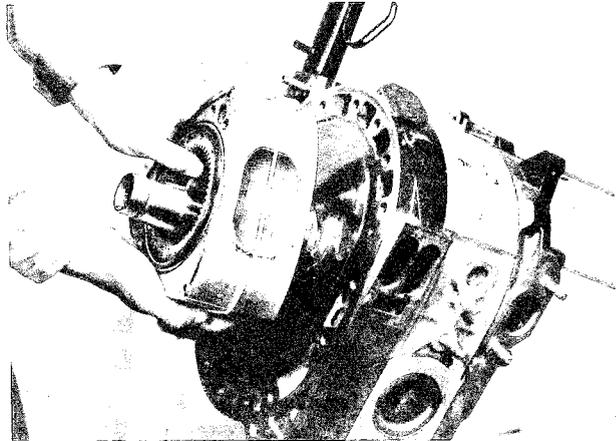


Fig. 1-69 Installing rear rotor assembly

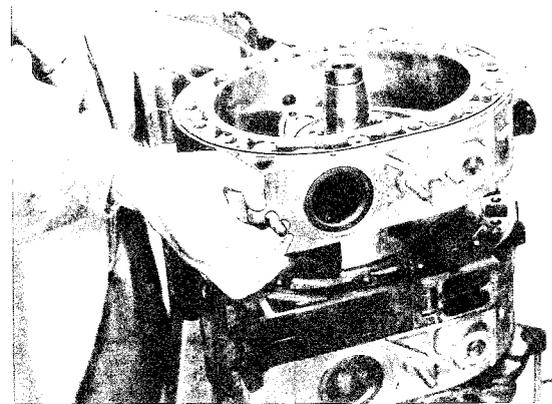


Fig. 1-70 Installing rear rotor housing

1-D-9. Installing Rear Housing

1. Apply sufficient engine oil onto the stationary gear and main bearing.

2. Install the rear housing on the rear rotor housing.

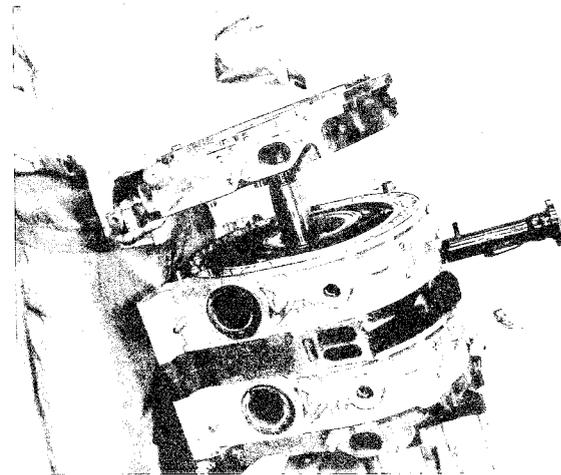


Fig. 1-71 Installing rear housing

1-D-10. Tightening Tension Bolts

1. Install a new sealing washer to each tension bolt.
2. Apply engine oil onto the thread of the bolt.
3. Fit the tension bolts and tighten the bolts in the order shown in Fig. 1-72. The specified torque is 3.2 ~ 3.8 m-k_g (23 ~ 27 ft-lb). Do not tighten the tension bolts at one time.
4. Turn the eccentric shaft and make sure that the rotation is light and smooth.

Note:

Replace the sealing washer in the tension bolt when the engine is overhauled.

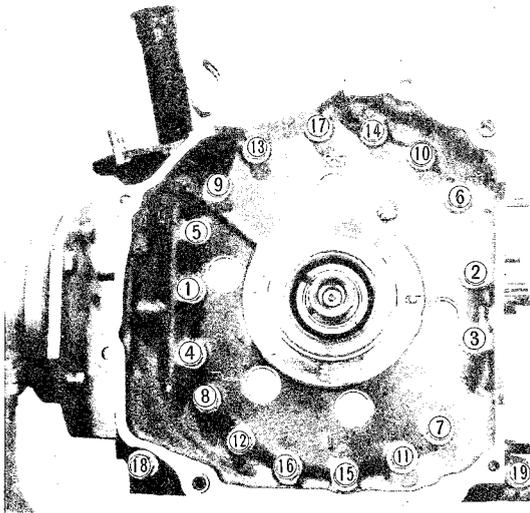


Fig. 1-72 Tension bolt tightening order

1-D-11. Installing Flywheel (Manual Transmission)

1. Turn the engine so that the top of the engine is up.
2. Apply engine oil to the oil seal in the rear housing.
3. Fit the key into keyway on the eccentric shaft.
4. Install the flywheel to the rear end of the eccentric shaft, aligning the keyway of the flywheel with the key.

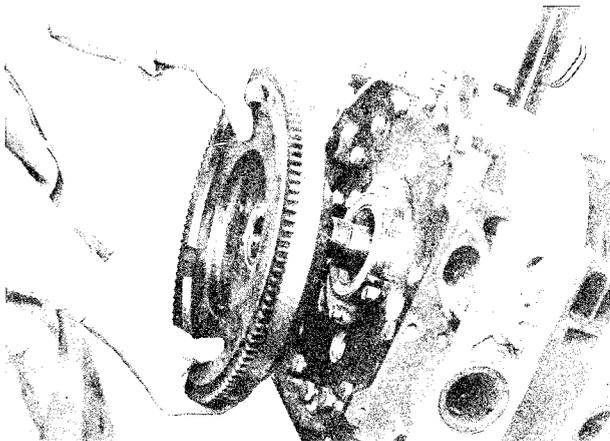


Fig. 1-73 Installing flywheel

5. Apply sealing agent to both sides of the flywheel lock washer and place it in position. Install the nut.
6. Install the ring gear brake (49 1881 060) and with the wrench (49 0820 035) tighten the nut to

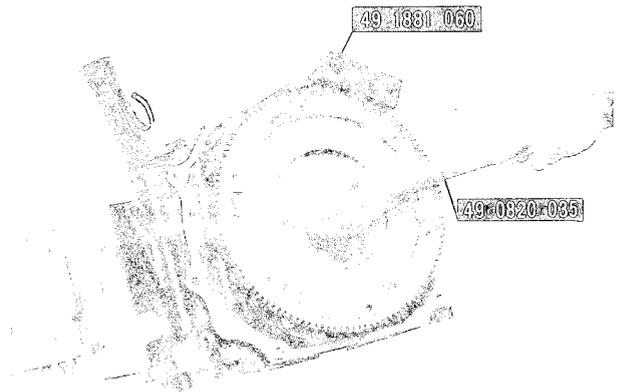


Fig. 1-74 Tightening flywheel nut

40.0 ~ 50.0 m-k_g (289 ~ 362 ft-lb).

7. Bend the tab of the lockwasher.
8. Install the clutch disc and clutch cover assembly on the flywheel, as described in Par. 6-D.

1-D-12. Installing Counter Weight (Automatic Transmission)

1. Turn the engine so that the top of the engine is up.
2. Apply engine oil to the oil seal in the rear housing.
3. Fit the key into keyway on the eccentric shaft.
4. Install counter weight to the rear end of the eccentric shaft, aligning the keyway of the counter weight with the key.

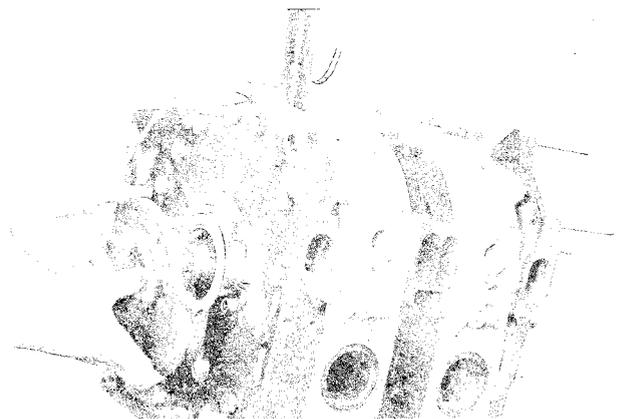


Fig. 1-75 Installing counter weight

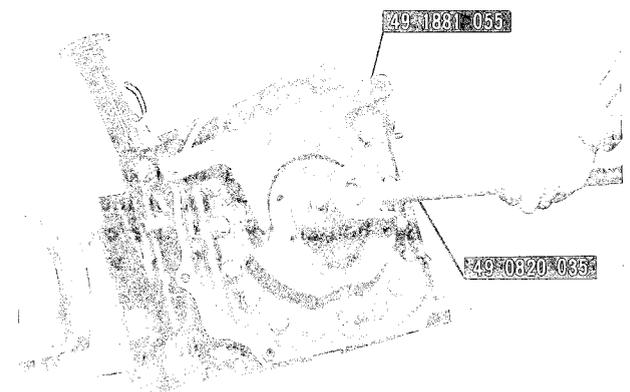


Fig. 1-76 Tightening counter weight nut

5. Apply sealing agent to both sides of the lock washer and place it in position. Install the nut.
6. Install the counter weight brake (49 1881 055) and with the wrench (49 0820 035) tighten the nut to 40.0 ~ 50.0 m-kG (289 ~ 362 ft-lb).
7. Bend the tab of the lockwasher.
8. Install the drive plate on the counter weight as shown in Fig. 1-77 and tighten the attaching bolts.

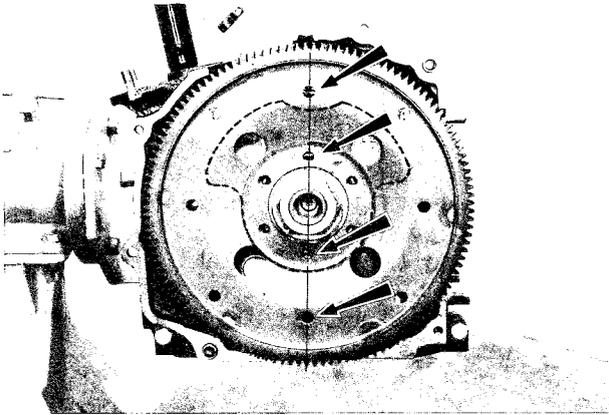


Fig. 1-77 Installing drive plate

1-D-13. Adjusting Eccentric Shaft End Play

1. Turn the engine on the engine stand so that the front of the engine is up.
2. Fit the thrust plate with the chamfer downward, and slide the spacer and needle bearing onto the eccentric shaft. Then apply sufficient engine oil onto them.
3. Place the bearing housing on the front housing. Tighten the attaching bolts.

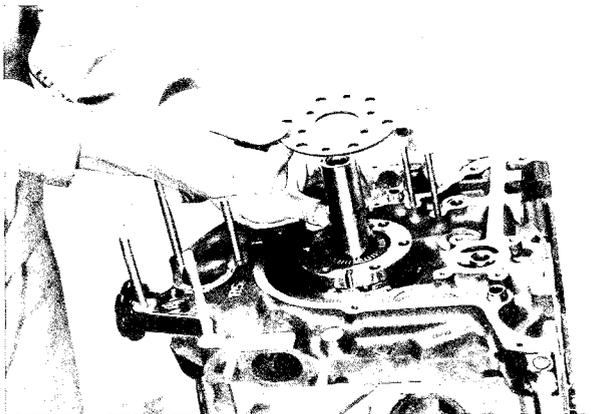


Fig. 1-78 Installing bearing housing

Note:

If the bearing housing has not been removed from the front housing, special care should be taken, when installing the spacer, so that the center of the needle bearing in the bearing housing comes to the center of eccentric shaft, and the spacer should be seated to the thrust plate.

4. Slide the needle bearing onto the shaft, and apply engine oil onto it.
5. Slide the balance weight together with the thrust washer onto the shaft.

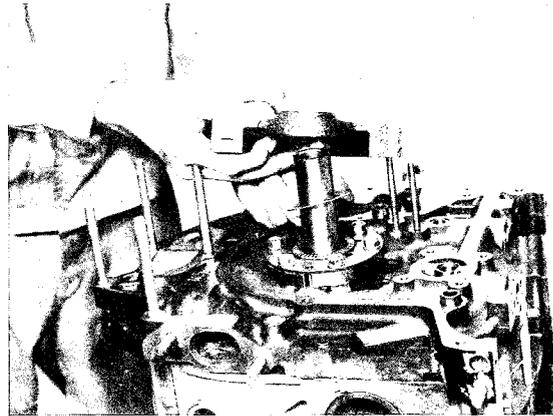


Fig. 1-79 Installing balance weight

6. Fit the key into keyway on the oil pump shaft.
7. Fit the oil pump drive chain onto the oil pump sprocket and eccentric shaft sprocket, and install them to the eccentric shaft and oil pump shaft, aligning the key and keyway.

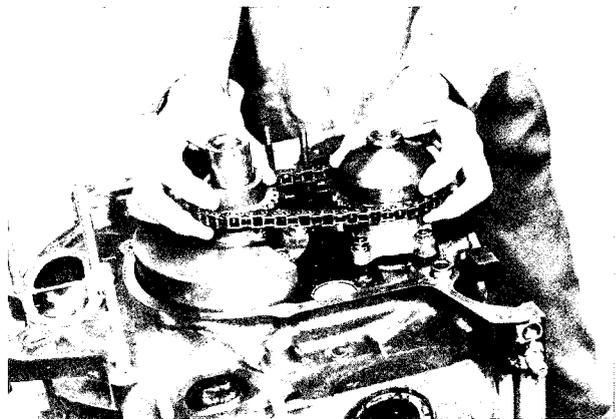


Fig. 1-80 Installing oil pump drive chain and sprockets

8. Aligning the keyways of the eccentric shaft sprocket and balance weight, and install the key.
9. Slide the distributor drive gear onto the eccentric shaft with "F" mark toward the front of engine.

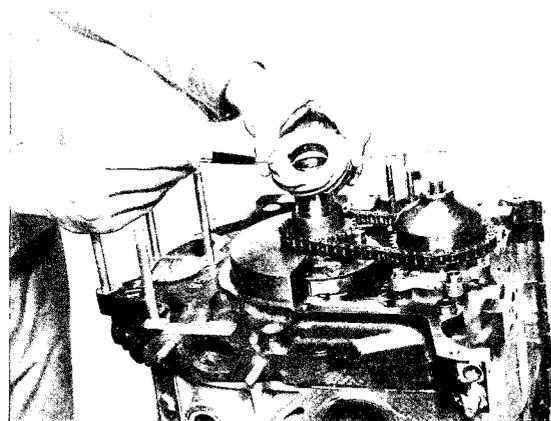


Fig. 1-81 Installing distributor drive gear

10. Install the eccentric shaft pulley onto the shaft aligning the keyway of the pulley with the key.
11. Install the pulley bolt and washer. Tighten the bolt to 10 ~ 12 m-kG (72 ~ 87 ft-lb).

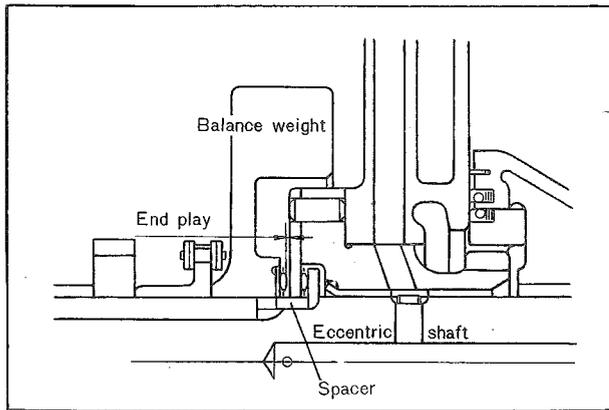


Fig. 1-82 Eccentric shaft end play

12. Turn the engine on the engine stand so that the top of the engine is up.

13. To check the eccentric shaft end play, position a dial indicator on the flywheel or the counter weight so as to contact the feeler with the rear housing as shown in Fig. 1-83.

Move the flywheel fore and aft, and note the reading of the indicator. The standard end play is 0.04 ~ 0.07 mm (0.0016 ~ 0.0028 in).

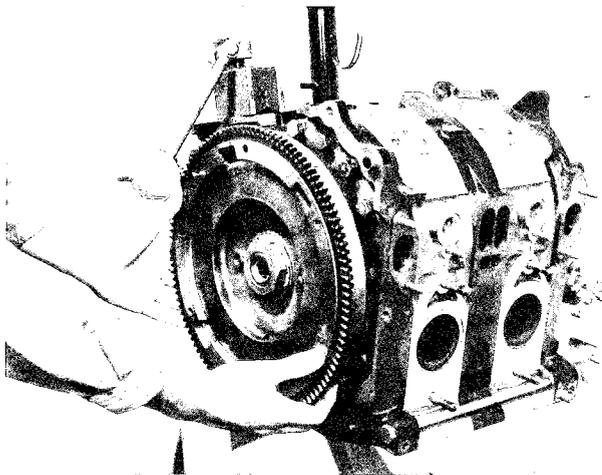


Fig. 1-83 Checking eccentric shaft end play

If the end play is more than 0.09 mm (0.0035 in), adjust it by grinding the spacer on a surface plate using an emery paper or by replacing the spacer with a thinner one.



Fig. 1-84 Adjusting spacer

If the end play is less than 0.04 mm (0.0016 in), replace with a thicker spacer.

The spacers are available in the following thicknesses:

Identification Mark	Thickness
X	8.08 ± 0.01 mm (0.3181 ± 0.004 in)
Y	8.04 ± 0.01 mm (0.3165 ± 0.004 in)
V	8.02 ± 0.01 mm (0.3158 ± 0.004 in)
Z	8.00 ± 0.01 mm (0.3150 ± 0.004 in)

14. If the end play is 0.04 ~ 0.09 mm (0.0016 ~ 0.0035 in), proceed as follows to install the oil pump chain adjuster.

1-D-14. Installing Oil Pump Chain Adjuster

1. Turn the engine on the engine stand so that the front of the engine is up.
2. Remove the eccentric shaft pulley.
3. Tighten the oil pump sprocket nut and bend the tab of the lock washer.
4. Place the chain adjuster in position and tighten the attaching nuts, then check the amount of protrusion of the chain adjuster as shown in Fig. 1-85. If the protrusion exceeds 12 mm (0.47 in), replace the adjuster or chain.

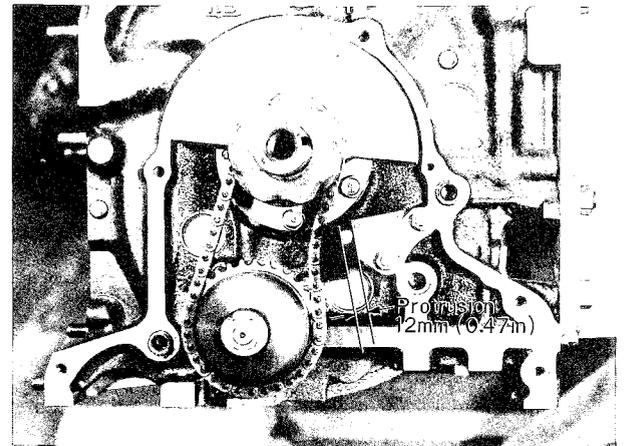


Fig. 1-85 Checking chain adjuster protrusion

5. Loosen the adjuster attaching nuts and install the guide plate. Tighten the attaching nuts securely.
6. Place a new "O" ring on the oil passage of the front housing.

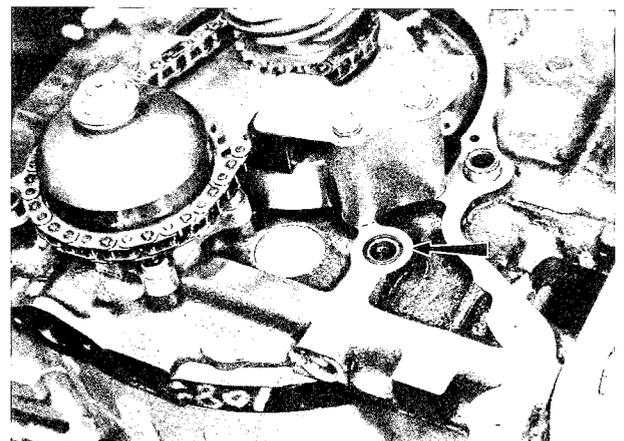


Fig. 1-86 Installing "O" ring



Fig. 1-87 Installing front cover

7. Place the gasket and front cover on the front housing, and tighten the attaching bolts.
8. Apply engine oil onto the oil seal in the front cover.
9. Install the eccentric shaft pulley onto the shaft and tighten the pulley bolt to 10 ~ 12 m-kg (72 ~ 87 ft-lb).

Note:

Use a new washer in the eccentric shaft pulley bolt when the pulley is removed.

1-D-15. Installing Oil Strainer and Oil Pan

1. Turn the engine on the engine stand so that the bottom of the engine is up.
2. Place the oil strainer gasket and strainer on the front housing and tighten the attaching bolts.
3. Cut off the excess gaskets along the mounting surface of the oil pan, as shown in Fig. 1-88.



Fig. 1-88 Cutting off excess gasket

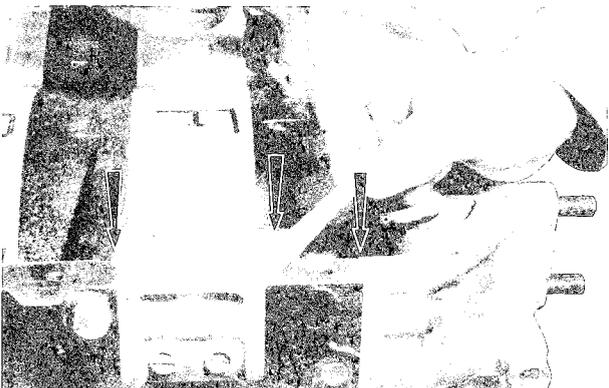


Fig. 1-89 Applying sealing agent

4. Apply the sealing agent onto the joints of each housing, as shown in Fig. 1-89.
5. Place the gasket and oil pan in position.
6. Install the bolts and tighten the bolts little by little in turn until the torque becomes 0.7 ~ 1.0 m-kg (5 ~ 7 ft-lb) evenly.

1-D-16. Installing Water Pump

1. Turn the engine on the engine stand so that the top of the engine is up.
2. Place the gaskets and water pump on the front housing, and tighten the attaching nuts evenly to 1.8 ~ 2.7 m-kg (13 ~ 20 ft-lb) in the sequence shown in Fig. 1-90.
3. Install the pulley for air conditioning compressor and tighten the attaching bolts (if equipped).

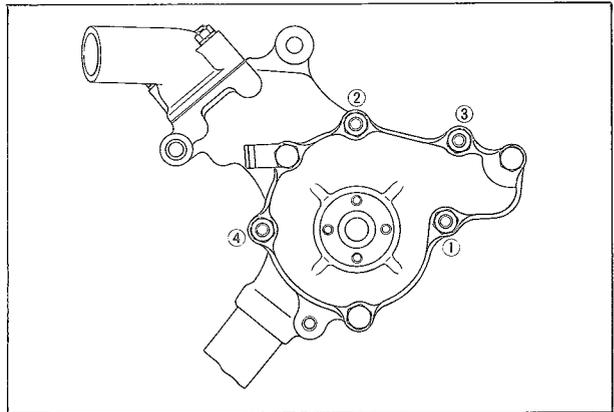


Fig. 1-90 Tightening order of water pump

1-D-17. Installing Distributor

1. Rotate the eccentric shaft in the direction of revolution until the leading timing mark (Yellow painted) on the eccentric shaft pulley aligns with the indicator pin on the front cover.
2. Align the tally marks on the distributor housing and driven gear as shown in Fig. 1-91.

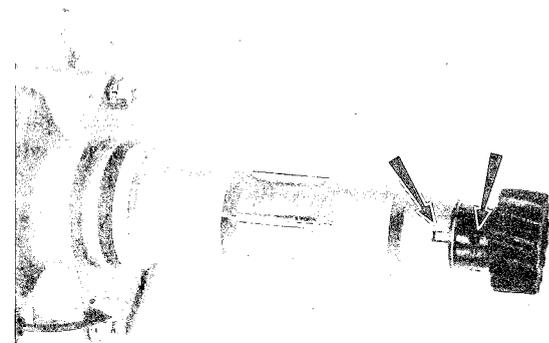


Fig. 1-91 Aligning tally marks

3. Install the distributor and lock nut.
4. Turn the distributor housing to the left until the contact points close. Then, turn it to the right and stop it when the leading contact points just start to separate. Tighten the lock nut.
5. Install the distributor rotor and cap.

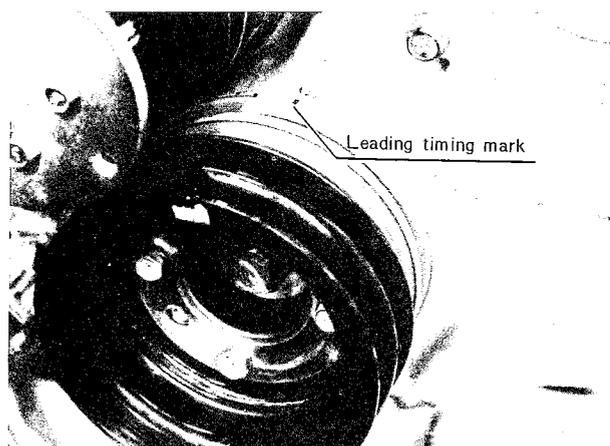


Fig. 1-92 Timing marks

1-D-18. Installing Thermal Reactor

1. Place the gasket in position.
2. Install the thermal reactor and tighten the attaching nuts to 3.0 ~ 5.5 m·kg (22 ~ 40 ft·lb).

1-D-19. Installing Inlet Manifold and Carburetor Assembly

1. Place the "O" rings and gasket in position.
2. Install the inlet manifold and carburetor assembly and tighten the attaching nuts.

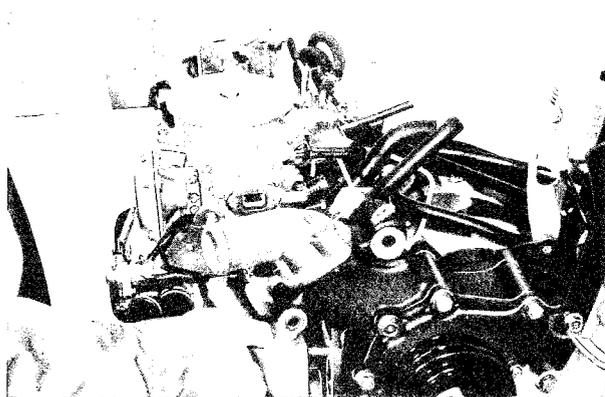


Fig. 1-93 Installing inlet manifold assembly

3. Connect the air outlet hose (thermal reactor ~ air control valve) to the air control valve.
4. Connect the oil hoses at the metering oil pump outlets.
5. Connect the metering oil pump connecting rod to the metering oil pump lever with washer and cotter pin.

1-D-20. Installing Alternator and Drive Belt

1. Place the alternator to the bracket with the bolt, and check the clearance as shown in Fig. 1-94. If the clearance is more than 0.15 mm (0.0059 in), adjust it by using the following adjust shim.

0.15 mm	(0.0059 in)
0.3 mm	(0.0118 in)
0.5 mm	(0.0197 in)

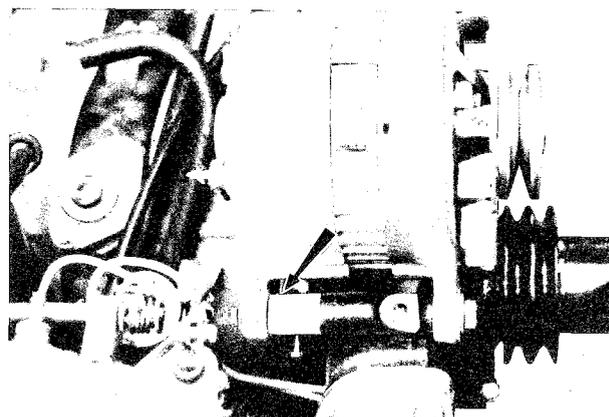


Fig. 1-94 Adjusting alternator fitting

2. Place the drive belt on the alternator pulley and install the alternator strap bolt.
3. Move the alternator toward or away from the engine until the correct tension is obtained. Correct adjustment will permit the belt to flex 15 ± 2 mm (0.60 ± 0.08 in) by pressing with thumb (10 kg : 22 lb) midway between the alternator pulley and eccentric shaft pulley.
4. Tighten the alternator mounting bolt.

1-D-21. Installing Air Pump and Drive Belt

1. Position the air pump to the mounting bracket and install the mounting bolt. Do not tighten.
2. Place the drive belt on the air pump and install the air pump strap bolt.
3. Move the air pump toward or away from the engine until the correct tension is obtained. Correct adjustment will permit the belt to flex 10 ± 1 mm (0.40 ± 0.04 in) by pressing with thumb (10 kg : 22 lb) midway between the water pump pulley and air pump pulley.
4. Tighten the air pump mounting bolt.

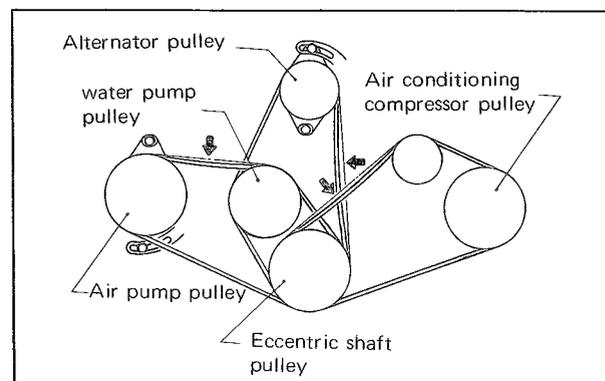


Fig. 1-95 Adjusting drive belts

1-D-22. Installing Oil Filter and Cover

1. Position the "O" rings to the cover.
2. Install the oil filter and cover assembly on to the rear housing and tighten the attaching nuts.

1-D-23. Installing Evapo Compensator Valve and Altitude Compensator (Federal, Canada)

1. Install the evapo compensator valve and altitude compensator to the engine, and tighten the bolts.

1

2. Connect the air hose to the evaporative line.
3. Connect the air hoses to the inlet manifold and carburetor.

1-D-24. Installing Deceleration Control Valve

1. Install the vacuum control valve and bracket to the engine, and tighten the bolts.

2. Connect the vacuum sensing tube to the inlet manifold.

3. Connect the air outlet hoses to the inlet manifold.

1-E. ENGINE INSTALLATION

Carry out the removing operation in the reverse order.

SPECIAL TOOLS

49 0107 680A	Engine stand	49 0813 250	Seal case
49 0839 000	Engine stand	49 0813 215A	Dowel puller
49 1114 005	Hanger	49 0813 225	Oil seal remover
49 1881 060	Ring gear brake	49 0813 235	Main bearing replacer
49 0820 035	Wrench	49 0813 240	Rotor bearing replacer
49 1881 055	Counter weight brake	49 0839 165	Bar limit guage
49 0839 305A	Puller		

EMISSION CONTROL SYSTEM

(Federal and Canada spec.)

EMISSION CONTROL SYSTEM.....	1A : 1
1A-A. MAINTENANCE PROCEDURE.....	1A : 1
1A-A-1. Air Pump.....	1A : 1
1A-A-2. Check Valve (Air Injection System).....	1A : 1
1A-A-3. Thermal Reactor.....	1A : 2
1A-A-4. Air Control Valve.....	1A : 2
1A-A-5. Deceleration Control Valve.....	1A : 3
1A-A-6. Altitude Compensator.....	1A : 5
1A-A-7. Evapo Compensator Valve.....	1A : 5
1A-A-8. Ignition Control System.....	1A : 5
1A-A-9. Retard Switch.....	1A : 7
1A-A-10. Kick-down Control System (car with automatic transmission only)..	1A : 7
1A-A-11. Heat Hazard Protective and Warning System.....	1A : 8
1A-A-12. Automatic Throttle Release System.....	1A : 9
1A-A-13. Control Unit.....	1A : 9
1A-A-14. Water Temperature Switch.....	1A : 9
1A-A-15. Idle Switch.....	1A : 10
1A-A-16. Choke Switch.....	1A : 11
1A-A-17. Choke Relay.....	1A : 11
1A-A-18. Ventilation Valve.....	1A : 12
1A-A-19. Charcoal Canister.....	1A : 12
1A-A-20. Evaporative Line.....	1A : 12
1A-A-21. Condense Tank.....	1A : 13
1A-A-22. Check Valve (Evaporative Emission Control System).....	1A : 13
1A-A-23. Hoses and Connections (All Systems).....	1A : 13
1A-B. TROUBLE CHECK GUIDE.....	1A : 14
1A-C. TROUBLE SHOOTING.....	1A : 21
SPECIAL TOOLS.....	1A : 26

EMISSION CONTROL SYSTEM

This section explains the procedures for checking, adjusting and replacing the parts of the emission control system.

1A-A. MAINTENANCE PROCEDURE

1A-A-1. Air Pump

a. Checking air pump

1. Check for cracks or damages on the body of the air pump and for looseness of the attaching bolts and nuts.
2. Check to see that the air pump belt tension is proper.
3. Run the engine at idle speed.
4. Check to see that the air hoses are free of air leaks.
5. Stop the engine.
6. Attach the air pump gauge set (49 2113 010A) as shown in Fig. 1A-1.

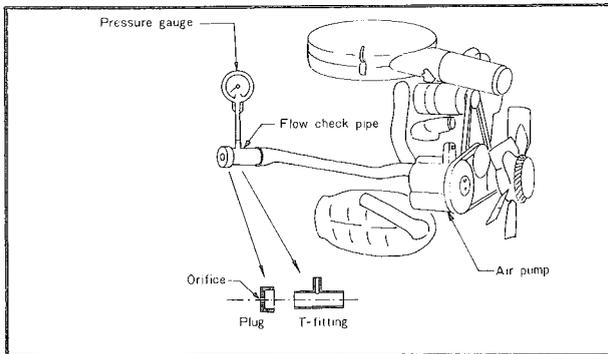


Fig. 1A-1 Checking air pump

7. Run the engine.
8. If the pressure gauge reading is not within the range of each of the following specifications, replace the air pump.

Manual transmission	more than 0.039 kg/cm ² (0.55 lb/in ²) at 800 rpm
Automatic transmission	more than 0.034 kg/cm ² (0.48 lb/in ²) at 750 rpm

b. Removing air pump

1. Remove the hot air duct for the air cleaner.
2. Disconnect the air inlet hose (air cleaner ~ air pump) and outlet hose (air pump ~ air control valve)

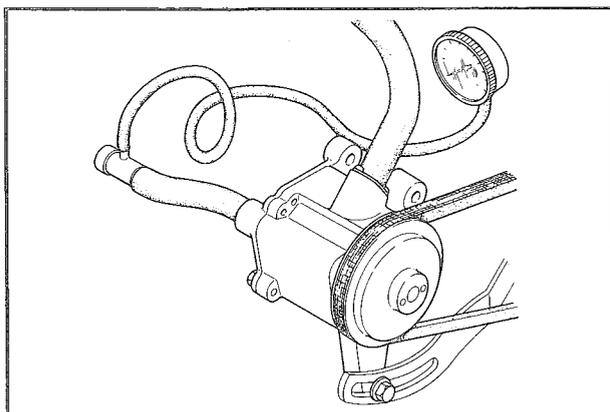


Fig. 1A-2 Air pump gauge set

from the air pump.

3. Remove the air pump mounting and adjusting bolts.
4. Remove the air pump drive belt and air pump.

c. Installing air pump

Follow the removal procedures in the reverse order.

d. Adjusting air pump drive belt

When a 10 kg (22 lb) pressure is given to a spot midway between the air pump pulley and water pump pulley, belt deflection should be 10 ± 1 mm (0.40 ± 0.04 in).

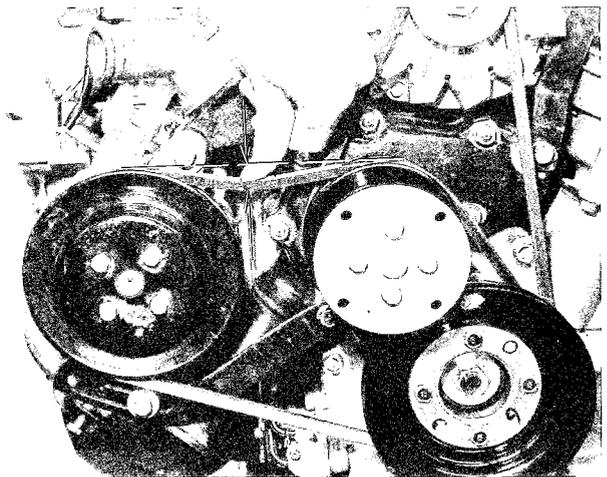


Fig. 1A-3 Adjusting pump belt tension

1A-A-2. Check Valve (Air Injection System)

a. Checking check valve

1. Disconnect the air hose (air pump ~ air control valve) from the air control valve.
2. Run the engine at 1,500 rpm.
3. Hold a finger over the inlet of the air control valve. If exhaust gas flow is felt, replace the check valve, spring and gasket.

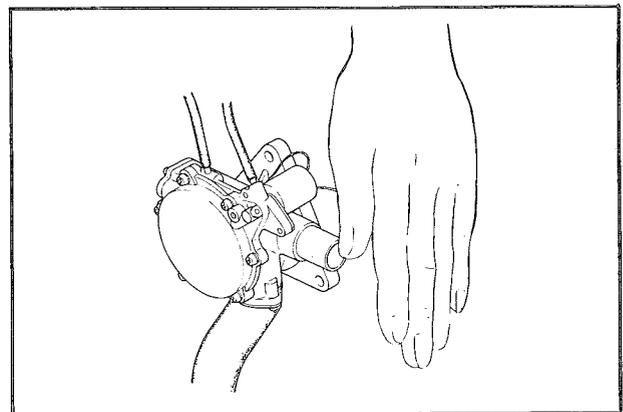


Fig. 1A-4 Checking check valve

b. Replacing check valve

1. Remove the air control valve, as described in Par. 1A-A-4.
2. Remove the gasket, valve and spring.
3. Install the check valve by following the removal

procedures in the reverse order.

1A-A-3. Thermal Reactor

a. Checking thermal reactor

1. Check to see that the appearance of the thermal reactor is not damaged or cracked by visual inspection or striking it with the hammer lightly.
2. Remove the air pipe (thermal reactor ~ air control valve) from the thermal reactor.
3. Check to see that the non-return valve works smoothly. If the foreign substance or sludge exists, remove it. If the sticking exists, replace the thermal reactor.

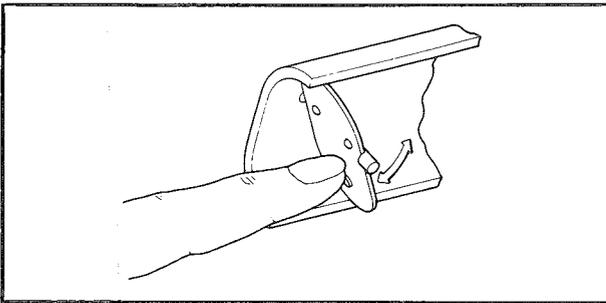


Fig. 1A-5 Checking non-return valve

4. Connect the air pipe to the thermal reactor.
5. Start the engine and keep it running at idle speed.
6. Make sure that most exhaust gas is not released from the tail of cooling air pipe. If the most exhaust gas releases, replace the thermal reactor.

b. Replacing thermal reactor

1. Remove the air control valve, as described in Par. 1A-A-4.
2. Remove the bolts attaching the heat insulator to the intake manifold and remove the heat insulator.
3. Raise the front of vehicle and support with stands.
4. Remove the bolts attaching the engine under cover and remove the cover.
5. Remove the bolts attaching the thermal reactor cover and remove the cover.

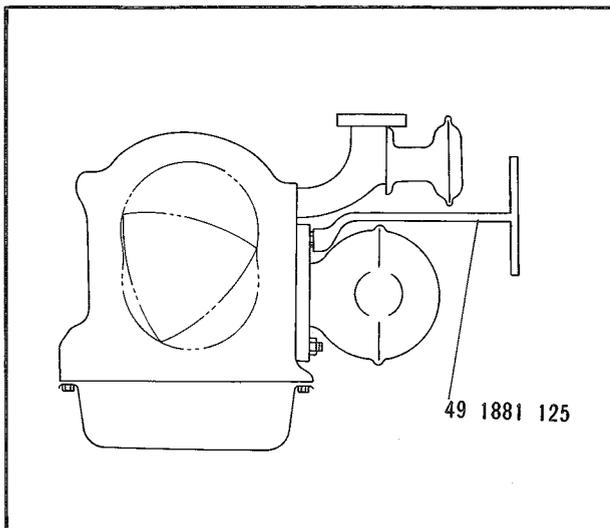


Fig. 1A-6 Removing thermal reactor

6. Disconnect the exhaust pipe from the thermal reactor.
7. Remove the nuts attaching the thermal reactor to the engine.

Note:

The upper nuts should be removed with the **thermal reactor remover** (49 1881 125).

8. Remove the thermal reactor.
9. Install the thermal reactor by following the removal procedures in the reverse order.

1A-A-4. Air Control Valve

a. Checking air control valve

1. Remove the air pipe (air control valve ~ thermal reactor) from the thermal reactor.

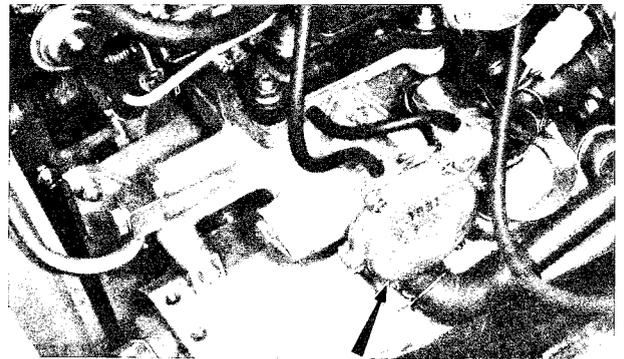


Fig. 1A-7 Air control valve

2. Remove the coupler from the solenoid of the air control valve. Apply the voltage (12V) of the battery directly on the coupler. Make sure that the clicking sound is audible from the solenoid on that occasion. If not, replace the solenoid.
3. Connect the coupler to the air control valve.
4. Start the engine and keep it running at idle speed. Make sure that the air hardly flows out of the air pipe.

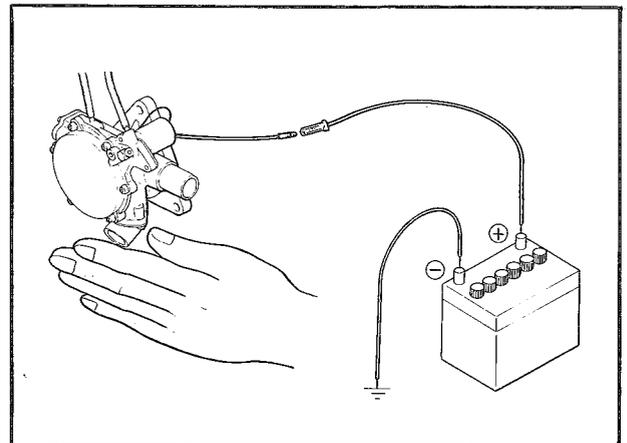


Fig. 1A-8 Checking air control valve

5. Remove the coupler from the solenoid of the air control valve. Apply the voltage (12V) of the battery directly on the coupler and make sure that the air flows out of the air pipe.

Note:

1. If a trouble is found in the above procedure 4, check every part according to Par. 1A-B. Trouble Check Guide.
2. If a trouble is found in the above procedure 5, replace the air control valve.

b. Checking signal of control unit

Manual transmission:

1. Remove the coupler from the solenoid of the air control valve and connect the voltmeter to the coupler.

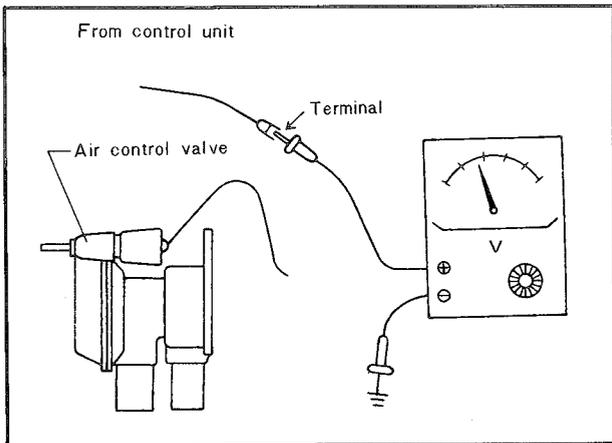


Fig. 1A-9 Checking signal of control unit (M/T)

2. Start the engine and keep it running at idle speed.
3. Make sure that the current is not flowing to the voltmeter at this time.
4. Gradually raise the engine speed and make sure that the current begins flowing to the voltmeter at $4,000 \pm 400$ rpm.
5. Make sure that the current begins flowing to the voltmeter when the idle switch is pushed with the engine speed kept at $2,000$ rpm.

Note:

If a trouble is found in the above procedures 3, 4 and 5, check every part according to Par. 1A-B. Trouble Check Guide.

Automatic Transmission:

1. Remove the coupler from the solenoid of the

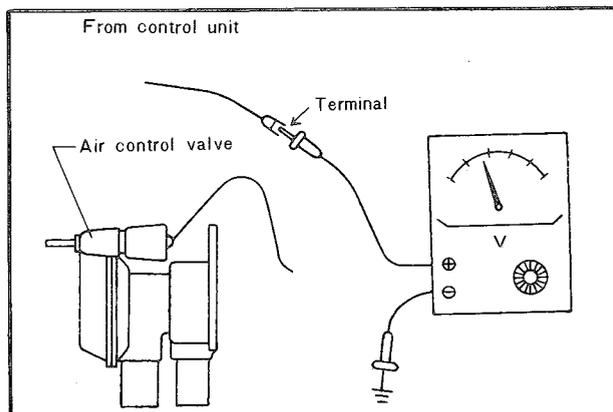


Fig. 1A-10 Checking signal of control unit (A/T)

- air control valve and connect the voltmeter to the coupler.
2. Remove the coupler from the water temperature switch and close both terminals in the coupler.

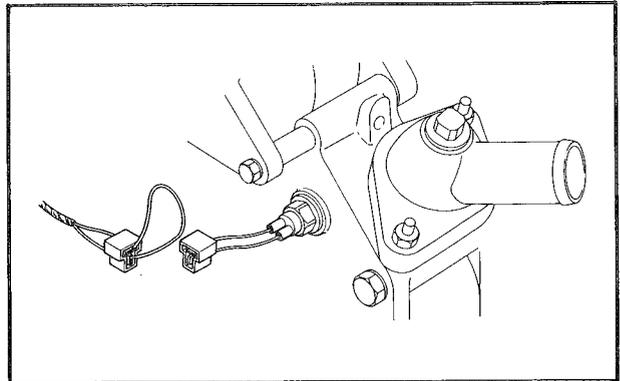


Fig. 1A-11 Closing both terminals

3. Start the engine and keep it running at idle speed. Make sure that the current is not flowing to the voltmeter at that time.
4. Keep the engine speed at $2,000$ rpm by adjusting the choke control knob.
5. Next, gradually raise the engine by operating the throttle speed and make sure that the current begins flowing to the voltmeter at $4,800 \pm 400$ rpm.
6. Push the choke control knob in to idle the engine.
7. Raise the engine speed from its idle speed by operating throttle and make sure that the current begins flowing to the voltmeter at $4,000 \pm 400$ rpm.
8. Make sure that the current begins flowing to the voltmeter when the idle switch is pushed with the engine speed kept at $2,000$ rpm.

Note:

If a trouble is found in the above procedures 3, 5, 7 and 8, check every part according to Par. 1A-B. Trouble Check Guide.

c. Replacing air control valve

1. Remove the hot air duct for the air cleaner.
2. Disconnect the air hose (air pump ~ air control valve) from the air control valve.
3. Disconnect the air hose (air control valve ~ thermal reactor) from the air control valve.
4. Disconnect the vacuum and atmospheric sensing tubes from the air control valve.
5. Disconnect the coupler from the air control valve.
6. Remove the nuts attaching the air control valve and remove the air control valve.
7. Install the air control valve by following the removal procedures in the reverse order.

1A-A-5. Deceleration Control Valve

a. Checking deceleration control valve

1. Disconnect the air hose (air cleaner ~ deceleration control valve) from the air cleaner.
2. Turn the ignition switch on.
3. Open and close repeatedly the terminal of each solenoid of the deceleration control valve, and make

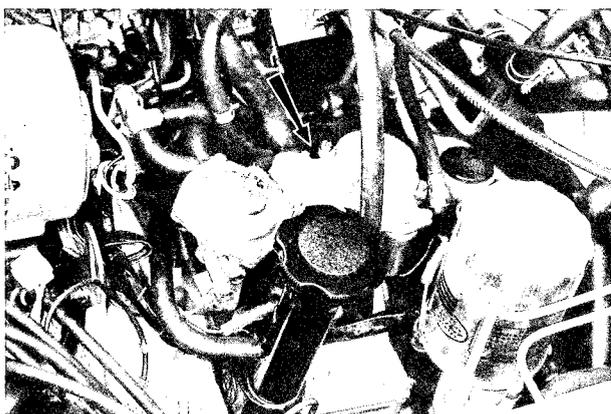


Fig. 1A-12 Deceleration control valve

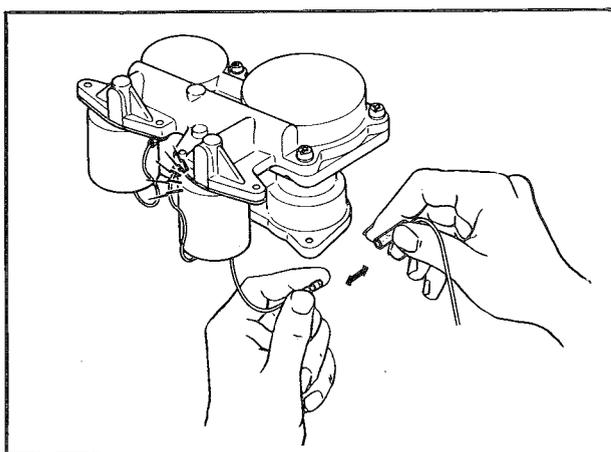


Fig. 1A-13 Checking solenoid

sure that the clicking sound from each solenoid is audible on that occasion.

4. Start the engine and keep it running at idle speed.
5. Close with the fingers the air hose removed in the above procedure 1 and make sure that the engine speed hardly varies.
6. Make sure that the air is drawn into the air hose removed in the above procedure 1 when the terminal of the solenoid for the coasting valve is removed. Check the anti-afterburn valve in the same procedure.
7. Close with the fingers three-fourth of the opening of the air hose removed in the above procedure 1. Raise the engine speed up to about 4,000 rpm rapidly

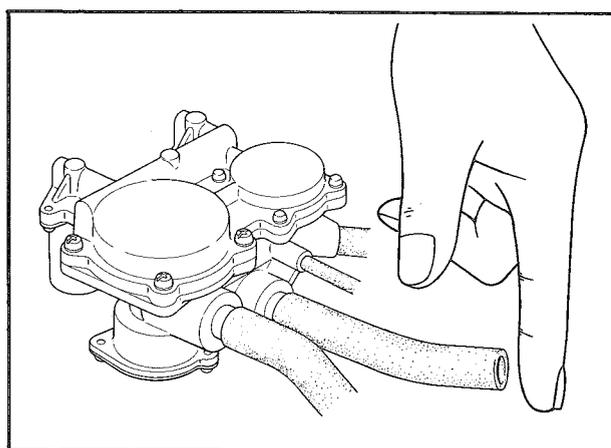


Fig. 1A-14 Checking deceleration control valve

and then release the acceleration abruptly. Make sure that the fingers feel a large amount of air being drawn into the air hose for **1 ~ 1.5 seconds** just after the engine speed begins to drop and afterwards feel less amount of air being drawn until the speed drops to 1,150 rpm.

Note:

1. If a trouble is found in the above procedures 3, 5 and 7, check every part according to Par. 1A-B. Trouble Check Guide.
2. If a trouble is found in the above procedure 6, replace the deceleration control valve.

b. Checking signal of control unit

1. Start the engine and keep it running at idle speed.
2. Remove the terminal of the solenoid for the coasting valve and apply the voltage (12V) of the battery directly on the terminal.
3. Remove the coupler of the idle switch and connect the voltmeter to the power lead of coasting valve solenoid. Make sure that the current begins to flow to the voltmeter when the engine speed is gradually dropped from 2,000 rpm to **1,150 ± 100 rpm** and continues to flow even when the speed is dropped to the idle speed. Record the engine speed at which the current begins to flow.

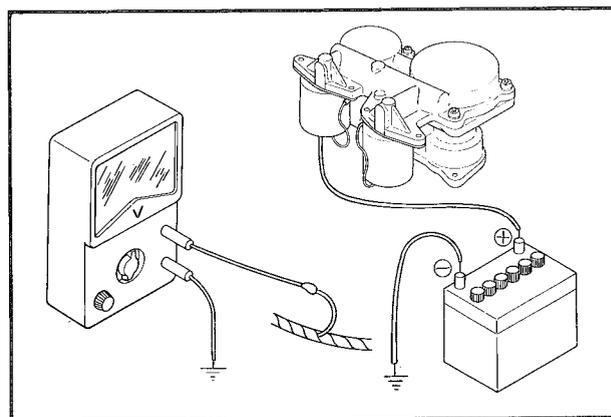


Fig. 1A-15 Checking signal of control unit

4. Gradually raise the engine speed from its idle speed and check the speed at which the current stops flowing to the voltmeter. Make sure that the difference between the said engine speed and that recorded in the above procedure 3 is **250 ± 70 rpm**.

Note:

If a trouble is found in the above procedures 3 and 4, replace the control unit.

c. Replacing deceleration control valve

1. Disconnect the hoses and lead wires from the deceleration control valve.
2. Remove the bolts attaching the deceleration control valve and remove the deceleration control valve.
3. Install the deceleration control valve by following the removal procedures in the reverse order.

1A-A-6. Altitude Compensator

a. Checking altitude compensator

1. Disconnect the hoses (carburetor ~ altitude compensator, altitude compensator ~ evapo compensator valve) from the altitude compensator.
 2. Start the engine and keep it running at idle speed.
 3. Close with the fingers the mouths of the altitude compensator from which the hoses indicated in the above procedure 1 are disconnected.
- If the engine speed drops on that occasion, the altitude compensator is in normal conditions.

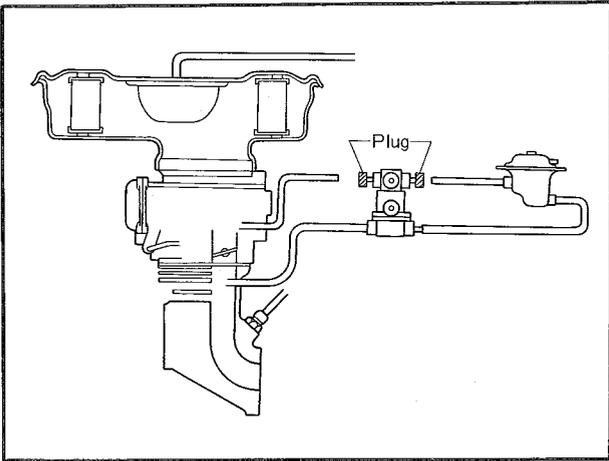


Fig. 1A-16 Checking altitude compensator

b. Replacing altitude compensator

1. Disconnect the hoses from the altitude compensator.
2. Remove the bolts attaching the altitude compensator and remove the altitude compensator.
3. Install the altitude compensator by following the removal procedures in the reverse order.

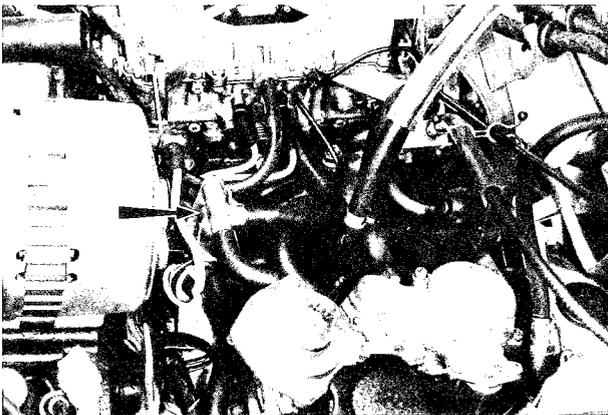


Fig. 1A-17 Altitude compensator

1A-A-7. Evapo Compensator Valve

a. Checking evapo compensator valve

1. Disconnect the hose (A) (altitude compensator ~

evapo compensator valve) from evapo compensator valve.

2. Disconnect the pressure sensing hose leading to the evapo compensator valve from the "T" joint.
3. Start the engine and keep it running at idle speed.
4. Close the inlet of the evapo compensator valve with the fingers and make sure that the engine speed hardly varies at that time.
5. Connect the hose (A) to the evapo compensator valve.
6. Put the mouth on the pressure sensing hose and blow. Make sure that the engine speed rises up on that occasion.

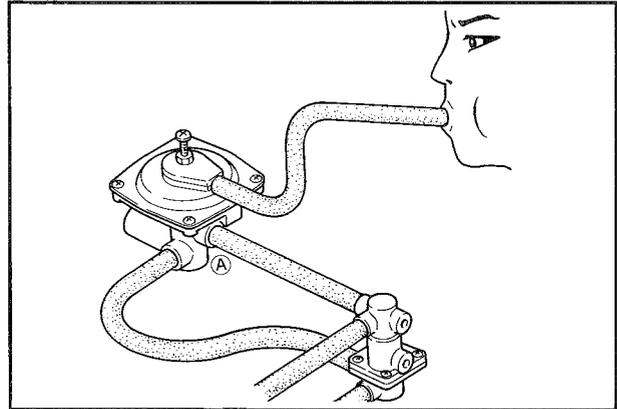


Fig. 1A-18 Checking evapo compensator valve

b. Replacing evapo compensator valve

1. Disconnect the hoses from the evapo compensator valve.
2. Remove the bolts attaching the evapo compensator valve and remove the evapo compensator valve.
3. Install the evapo compensator valve by following the removal procedures in the reverse order.

1A-A-8. Ignition Control System

In this item, inspect the operation of each of the idle switch, choke switch, control unit and retard switch relating to the ignition control system. If a trouble is found, check defective parts according to Par. 1A-B. Trouble Check Guide.

Note:

Before this inspection, warm up the engine sufficiently and make sure that the ignition timing is as specified.

a. Checking ignition control system (trailing side)

Manual transmission:

1. Connect a timing light to the high tension cord for the trailing spark plug of front rotor housing.
2. Start the engine.
3. Gradually drop the engine speed from 4,500 rpm and make sure that the timing light goes out when the engine speed drops to $4,000 \pm 400$ rpm.
4. Further drop the engine speed and make sure that the timing light goes on when the engine speed drops to $1,150 \pm 100$ rpm and is on even when it drops to the idle speed. Record the engine speed at which the light

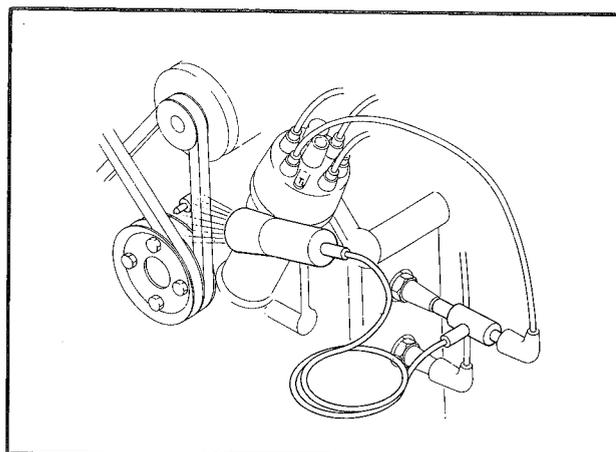


Fig. 1A-19 Timing light

goes on.

5. Raise again the engine speed from its idle speed and check the engine speed at which the timing light goes out. Make sure that the difference between the said engine speed and that recorded in the above procedure 4 is 250 ± 70 rpm.

6. Set the engine speed to **2,000 rpm** and make sure that the timing light goes on when the idle switch is pushed.

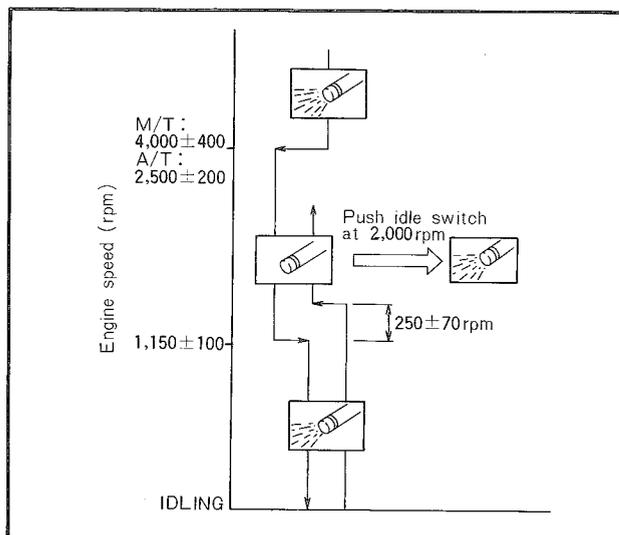


Fig. 1A-20 Checking signal of control unit

Automatic transmission:

1. Connect a timing light to the high tension cord for

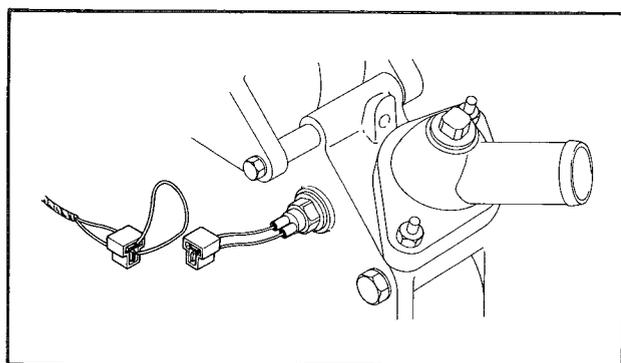


Fig. 1A-21 Closing both terminals

the trailing spark plug of front rotor housing.

2. Remove the coupler from the water temperature switch and close both terminals in the coupler.

3. Start the engine and set the engine speed to **2,000 rpm** by adjusting the choke control knob.

4. Gradually raise the engine speed by operating the throttle and make sure that the timing light goes on when it reaches to $4,800 \pm 400$ rpm.

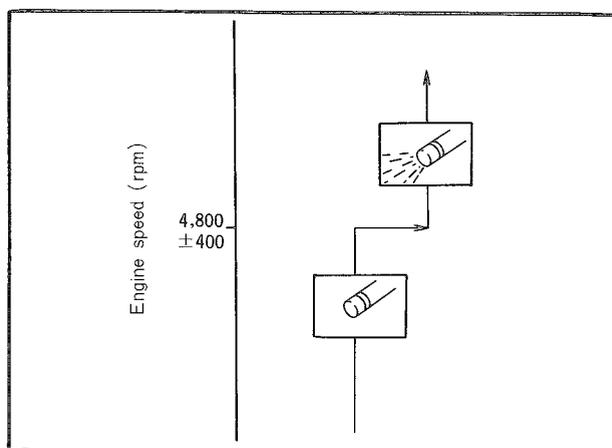


Fig. 1A-22 Checking signal of control unit

5. Push the choke control knob in.

6. Gradually drop the engine speed from 3,000 rpm and make sure that the timing light goes out when it drops to $2,500 \pm 200$ rpm.

7. Further drop the engine speed and make sure that the timing light goes on when the speed drops to $1,150 \pm 100$ rpm and is on even when it drops to the idle speed. Record the engine speed at which the light goes on.

8. Raise again the engine speed from its idle speed and check the engine speed at which the timing light goes out. Make sure that the difference between the said engine speed and that recorded in the above procedure 7 is 250 ± 70 rpm.

9. Set the engine speed to 2,000 rpm and make sure that the timing light goes on when the idle switch is pushed.

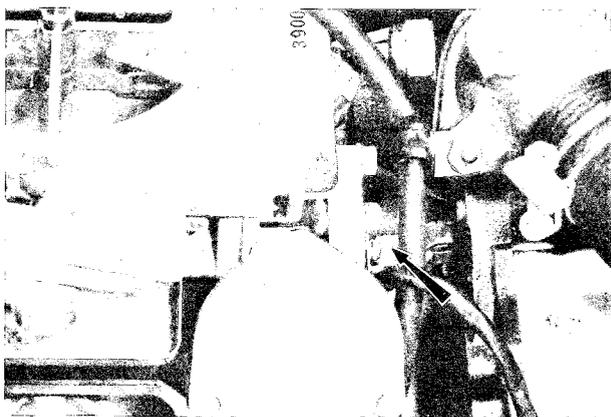


Fig. 1A-23 Idle switch

b. Checking ignition control system (leading side)

1. Connect a timing light to the high tension cord for the leading spark plug of front rotor housing.

2. Remove the coupler from the water temperature switch and close both terminals in the coupler.
3. Start the engine and set the engine speed to 2,000 rpm by adjusting the choke control knob.
4. Next, make sure that the timing indicator pin points between the yellow and red marks notched on the eccentric shaft pulley.

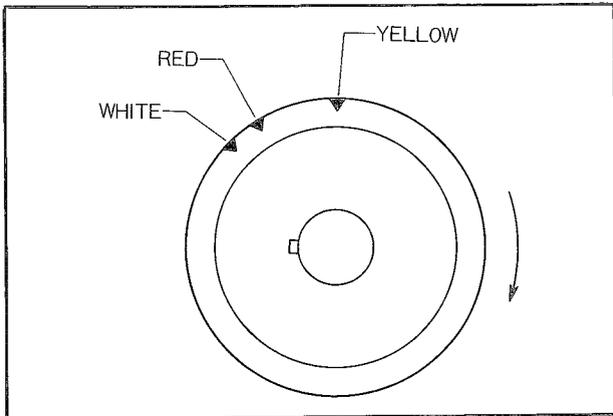


Fig. 1A-24 Eccentric shaft pulley

5. Make sure that the engine speed rises up by several hundred rpm when it is 120 ± 24 seconds since the engine was started.

1A-A-9. Retard Switch

a. Checking retard switch

1. Remove the coupler from retard switch.
2. Using the ohmmeter, make sure of continuity between the terminals (B) - (NC) in the coupler and of non-continuity between (B) - (NO).
3. Apply the voltage (12V) of the battery on (SD₁) terminal in the coupler, and ground (E) terminal.
4. Using the ohmmeter, make sure of continuity between the terminals (B) - (NO) in the coupler and of non-continuity between (B) - (NC).

Note:

If a trouble is found in the above check, replace the retard switch.

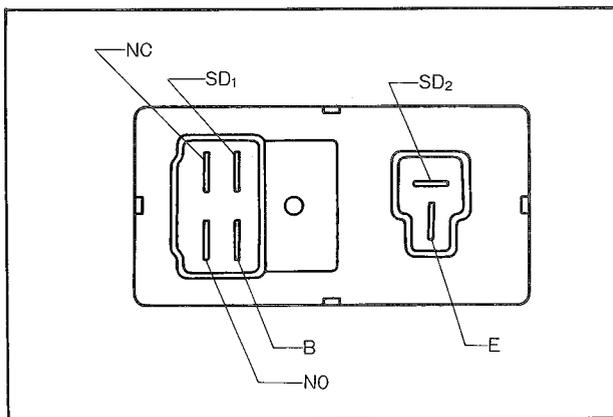


Fig. 1A-25 Checking retard switch

b. Replacing retard switch

1. Disconnect the couplers from the retard switch.

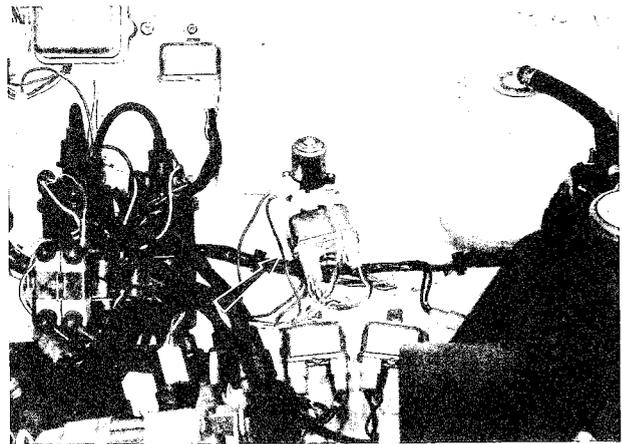


Fig. 1A-26 Retard switch

2. Remove the bolt attaching the retard switch and remove the switch.
3. Install the retard switch by following the removal procedures in the reverse order.

1A-A-10. Kick-down Control System

(car with automatic transmission only)

In this item, inspect the operation of each of the choke switch, control unit, kick-down switch and kick-down relay relating to the kick-down control system.

a. Checking kick-down control system

1. Disconnect the terminal from the kick-down solenoid and connect the voltmeter.

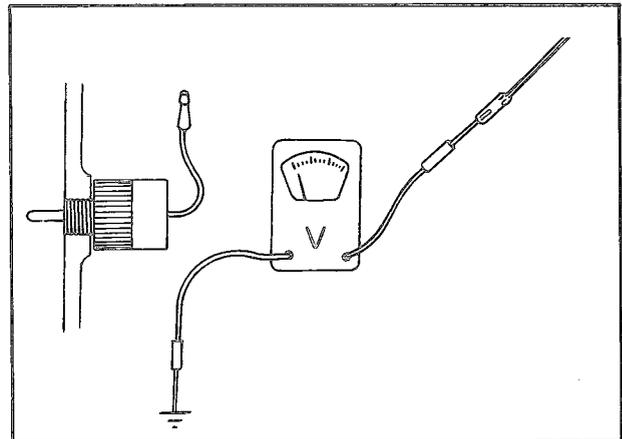


Fig. 1A-27 Kick-down switch

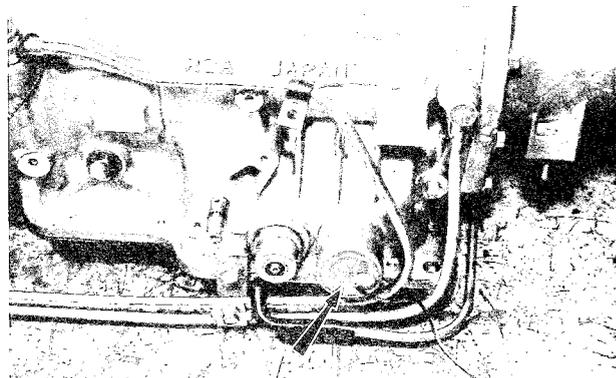


Fig. 1A-28 Kick-down solenoid

2. Start the engine and make sure that the current flows to the voltmeter when choke knob is pulled. If a trouble is found, check every part according to Par. 1A-B. Trouble Check Guide.

1A-A-11. Heat Hazard Protective and Warning System

a. Checking heat hazard protective and warning system

1. Turn the ignition switch on and make sure that the warning light is on.

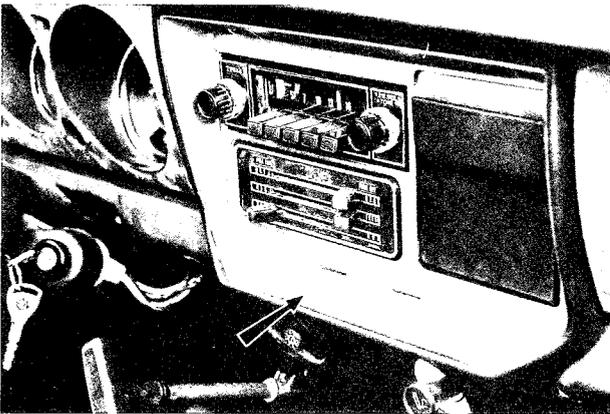


Fig. 1A-29 Heat hazard warning light

2. Remove the coupler from the heat hazard sensor and close both terminals in the coupler.

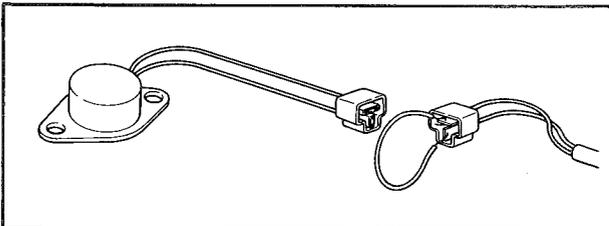


Fig. 1A-30 Closing both terminals

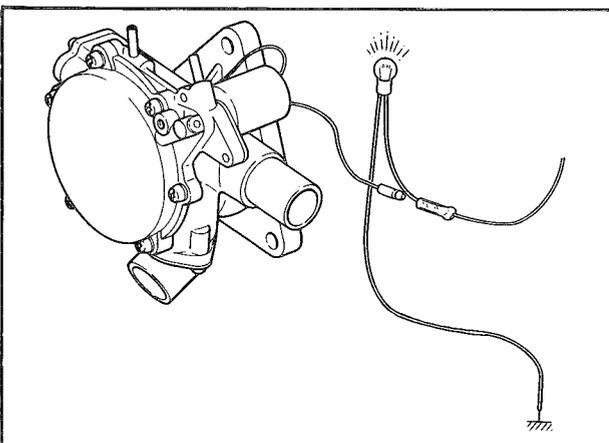


Fig. 1A-31 Checking warning system

3. Start the engine and keep it running at idle speed. Make sure that the warning light is on at this time. 4. Remove the coupler from the air control valve, connect the test lamp as shown in Fig. 1A-31.

and make sure that the current flows to it.

5. Connect a timing light to the high tension cord for the trailing spark plug of front rotor housing.

6. Make sure that the timing light is on when the engine speed is set to 2,000 rpm.

Note:

1. If a trouble is found in the above procedure 1, check every part according to Par. 1A-B. Trouble Check Guide.

2. If a trouble is found in the above procedures 3 and 4, check for breaking of the wire harness and faulty contact of the terminals in the coupler; in case they are in normal conditions, replace the control unit.

b. Checking heat hazard sensor

Inspect the operating temperature of the heat hazard sensor as follows:

1. Remove the heat hazard sensor.

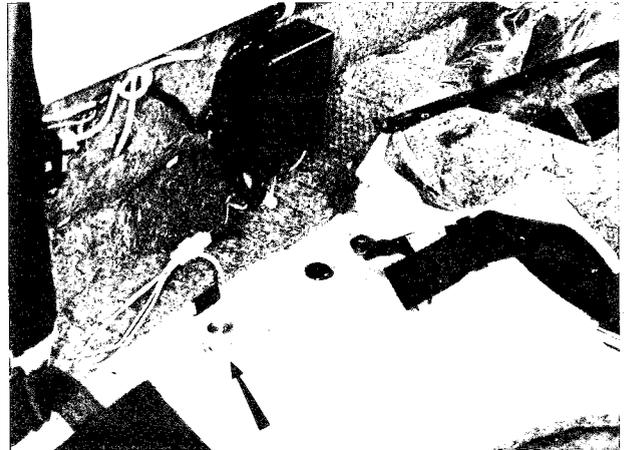


Fig. 1A-32 Heat hazard sensor

2. Wrap the sensor together with the thermometer in aluminum foil to prevent oil ingress.

3. Attach the test lamp to the sensor as shown in Fig. 1A-33. Submerge the wrapped sensor and thermometer in oil and gradually heat the oil.

4. Measure the temperature at which the lamp attached to the sensor lights up. The sensor should operate at $120 \pm 10^{\circ}\text{C}$ ($248 \pm 18^{\circ}\text{F}$). If the sensor should operate at a temperature deviating from the standard temperature, replace the sensor.

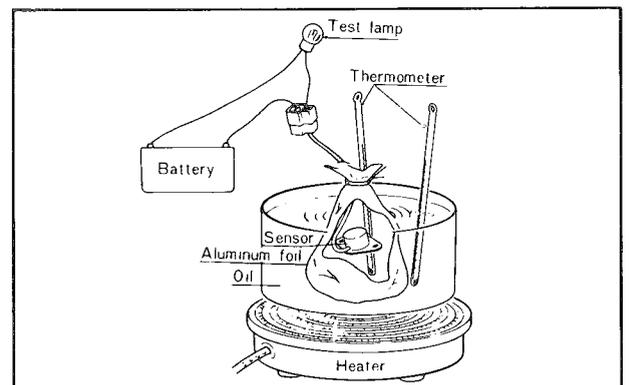


Fig. 1A-33 Checking sensor

Note:

Avoid heating the oil to more than 130°C (266°F).

c. Replacing heat hazard sensor

1. Remove the seat.
2. Disconnect the coupler from the heat hazard sensor.
3. Remove the screws attaching the heat hazard sensor and remove the sensor.
4. Install the heat hazard sensor by following the removal procedures in the reverse order.

1A-A-12. Automatic Throttle Release System

a. Checking automatic throttle release system

1. Make sure that the engine is cold.
- Pull the choke control knob out with the ignition switch off and make sure that the knob returns automatically. If the trouble is found, check choke wire and choke return spring, replace if necessary.

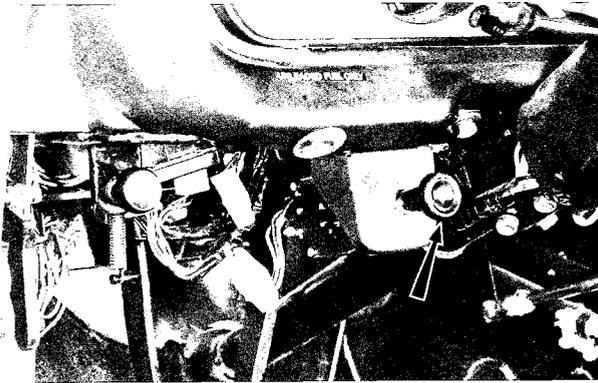


Fig. 1A-34 Choke control knob

2. Start the engine and set the engine speed to 2,000 rpm by adjusting the choke control knob. Warm up the engine under the above condition.
3. Make sure that the choke control knob returns automatically when the needle of the water temperature gauge indicates the point shown in Fig. 1A-35.

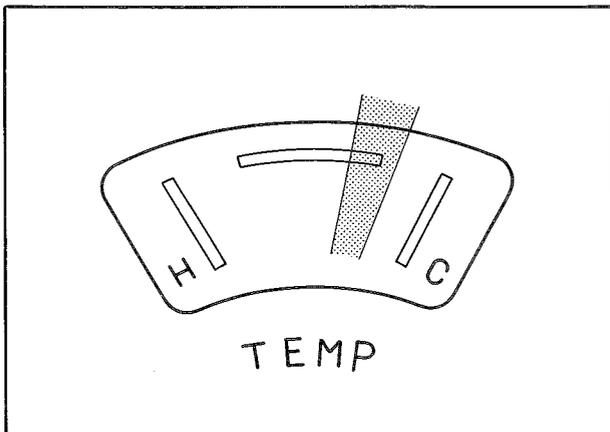


Fig. 1A-35 Position of gauge needle

Note:

If a trouble is found in the above procedure 3, check the water temperature switch.

1A-A-13. Control Unit

a. Checking control unit

The control unit controls the air control valve, deceleration control valve, ignition system, solenoid of the carburetor, and heat hazard warning system. So the checking procedure of the control unit is described together in the item of each part and each system.



Fig. 1A-36 Control unit

Warning:

1. When the fuse of the control unit is burnt out, use a 5-amp. fuse when replacing.



Fig. 1A-37 Fuse of control unit

2. If, in checking the signal of the control unit, there is any terminal in the coupler to which the signal does not come, check first for breaking of the wire harness and faulty contact of the terminal.
3. Do not use more than 3.4 watt lamp when checking the signal of the control unit, using test lamp.

1A-A-14. Water Temperature Switch

a. Checking operation of water temperature switch

1. Make sure that the engine is cold.
2. Remove the coupler from the water temperature switch, and make sure of continuity between both terminals in the coupler, using the ohmmeter.
3. Connect the coupler to the water temperature switch.

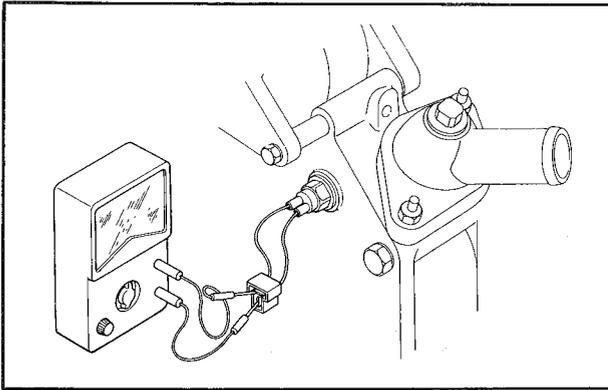


Fig. 1A-38 Checking water temperature switch

4. Fully warm up the engine.
5. Remove the coupler from the water temperature switch and make sure of non-continuity between both terminals in the coupler, using the ohmmeter.

Note:

If a trouble is found in the above procedures 2 and 5, replace the water temperature switch.

b. Checking operating temperature of water temperature switch

1. Remove the water temperature switch.

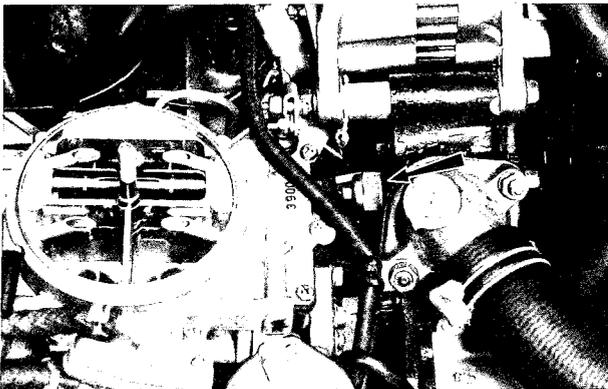


Fig. 1A-39 Water temperature switch

2. Place the water temperature switch in water with a thermometer and gradually heat the water.
3. Make sure, using the ohmmeter, that there is no continuity between both terminals in the coupler of the water temperature switch when the water temperature rises up to $60 \pm 7^\circ\text{C}$ ($140 \pm 13^\circ\text{F}$). If there is, replace the switch.

c. Replacing water temperature switch

1. Drain the coolant from the radiator by 1.7 l to reduce its level below the water temperature switch.
2. Remove the alternator and "V" belt if necessary.
3. Disconnect the coupler from the water temperature switch.
4. Loosen and remove the water temperature switch.
5. Install the water temperature switch by following the removal procedures in the reverse order.
6. Refill the radiator with the coolant. Check to see that the level of the subtank is proper, add the coolant if necessary.

1A-A-15. Idle Switch

a. Checking idle switch

1. Disconnect the coupler from the idle switch.
2. Start the engine and keep it running at idle speed.
3. Using the ohmmeter, make sure of continuity between the terminals (A) - (B) in the coupler and of non-continuity between (C) - (B).

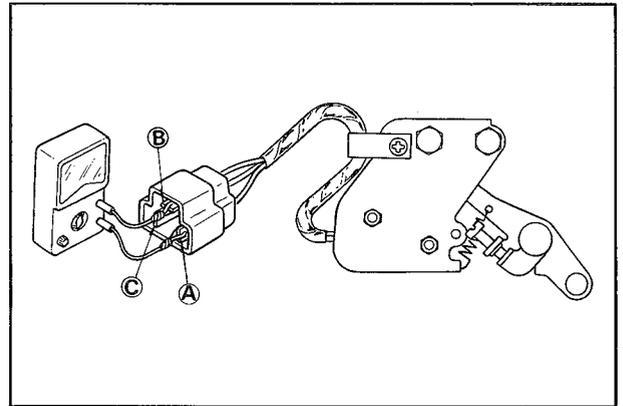


Fig. 1A-40 Checking idle switch

4. Next, gradually raise the engine speed up to $1,000 \pm 50$ rpm (with the gear selector lever in "N" range in case of the car with automatic transmission). Make sure that continuity between the terminals (A) - (B) stops but continuity between (C) - (B) begins.

Note:

If a trouble is found in the above procedures 3 and 4, adjust the idle switch or replace it.

b. Adjusting idle switch

Adjust the idle switch, using the adjusting screw, so as to turn from "ON" to "OFF" (between (A) terminal and (B) terminal) when the engine speed gradually raised up to $1,000 \pm 50$ rpm (with the gear selector lever in "N" range in case of the car with automatic transmission).

Note:

1. Turn the adjusting screw counter-clockwise when the setting revolution is higher than specified rpm.
2. Turn it clockwise when the setting revolution is lower than specified rpm.

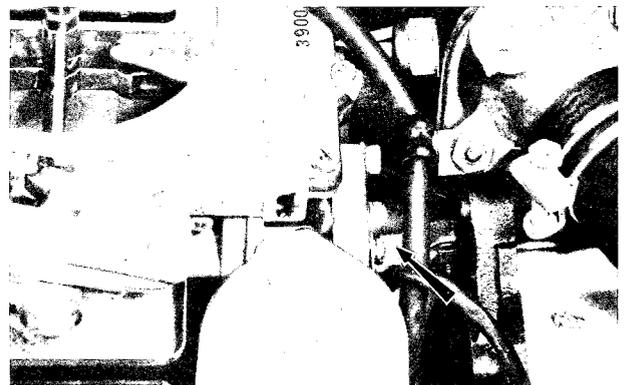


Fig. 1A-41 Idle switch

c. Replacing idle switch

1. Remove the air cleaner.
2. Disconnect the coupler from the idle switch.
3. Remove the bolts attaching the idle switch and remove the idle switch.
4. Install the idle switch by following removal procedures in the reverse order.

Note:

When the idle switch is replaced, be sure to adjust the new one.

1A-A-16. Choke Switch

a. Checking choke switch

1. Remove the coupler from the water temperature switch and close both terminals in the coupler.

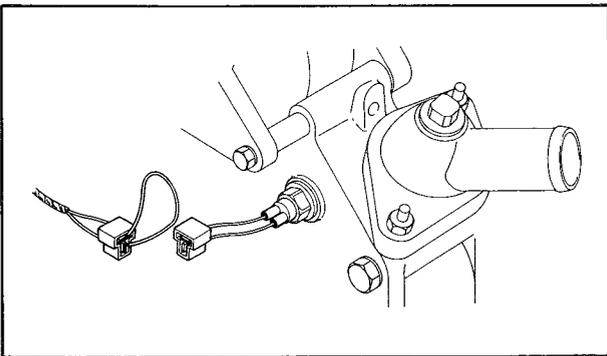


Fig. 1A-42 Closing both terminals

2. Pull the choke control knob out all the way and start the engine.
3. Make sure, using the voltmeter, that the current flows to the bimetal of the carburetor when the engine speed is set to 2,000 rpm by adjusting the choke control knob.

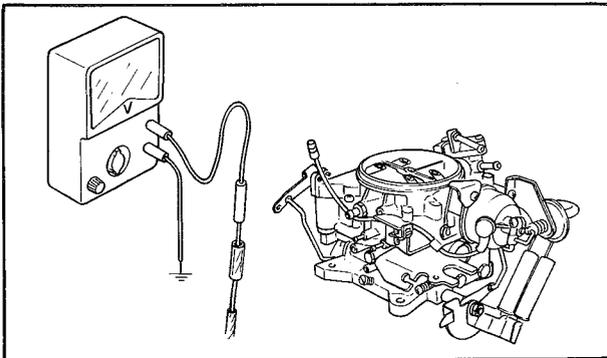


Fig. 1A-43 Checking choke switch

4. Push the choke control knob in to idle the engine.
5. Make sure, using the voltmeter, that current does not flow to the bimetal of the carburetor.

Note:

1. If a trouble is found in the above procedure 3, check the choke relay; in case the choke relay is in normal conditions, replace the choke switch.
2. If a trouble is found in the above procedure 5, replace the choke switch.

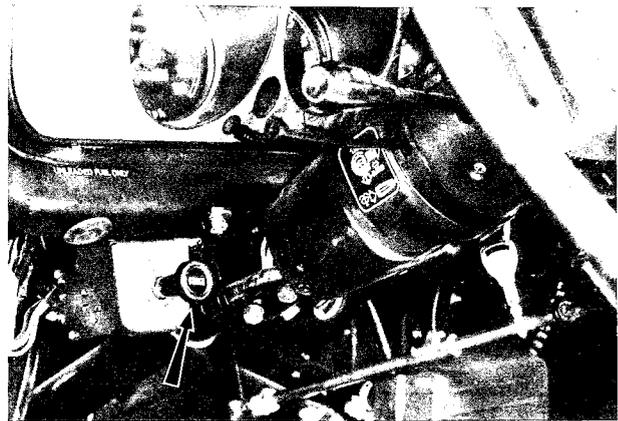


Fig. 1A-44 Choke switch

1A-A-17. Choke Relay

a. Checking choke relay

1. Disconnect the coupler from the choke relay.

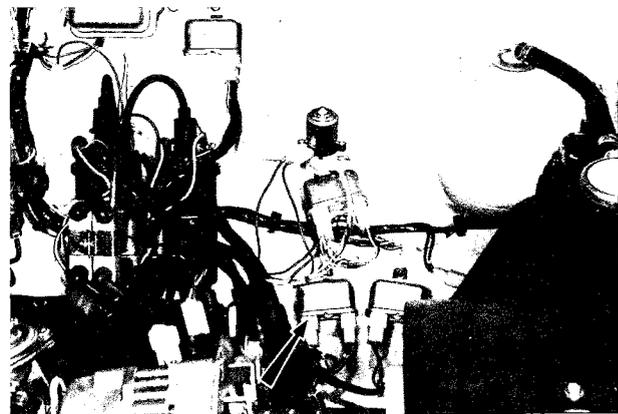


Fig. 1A-45 Choke relay

2. Using the ohmmeter, make sure of continuity between the terminals (B) - (NC) in the coupler and of non-continuity between (B) - (NO).

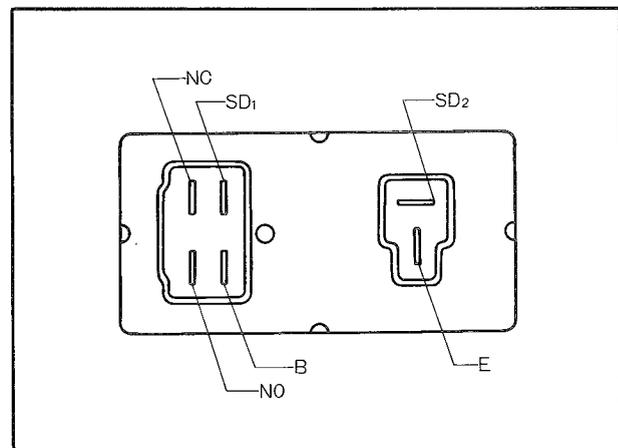


Fig. 1A-46 Checking choke relay

3. Apply the voltage (12V) of the battery on (SD₁) terminal in the coupler, and ground (E) terminal.
4. Using the ohmmeter, make sure of continuity between the terminals (B) - (NO) in the coupler and of non-continuity between (B) - (NC).

Note:

If a trouble is found in the above procedures 2 and 4, replace the choke relay.

1A-A-18. Ventilation Valve

a. Checking ventilation valve

1. Start the engine and keep it running at idle speed.
2. Disconnect the ventilation hose from the filler pipe.
3. Make sure that the engine speed drops when the evaporative hose is squeezed by hand as shown in Fig. 1A-47 and then the ventilation hose removed in the above procedure 2 is closed with the fingers. If the engine stalls on that occasion, replace the ventilation valve.

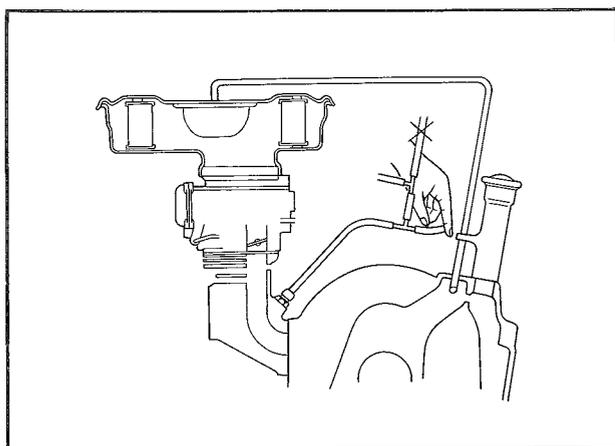


Fig. 1A-47 Checking ventilation valve

b. Replacing ventilation valve

1. Remove the deceleration control valve.
2. Disconnect the ventilation hose at the ventilation valve.
3. Loosen and remove the ventilation valve with the wrench (49 1011 120).

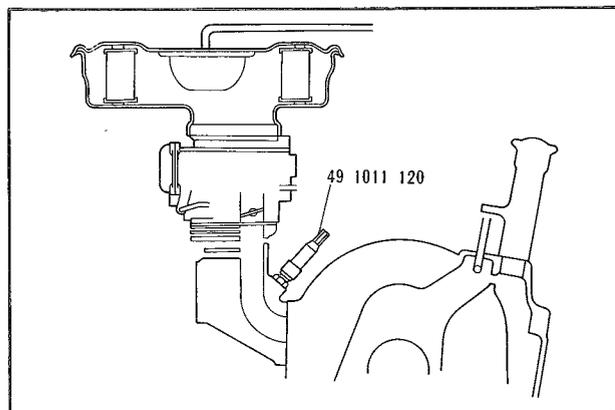


Fig. 1A-48 Removing ventilation valve

4. Install the ventilation valve by following the removal procedures in the reverse order.

1A-A-19. Charcoal Canister

a. Checking charcoal canister

1. Check by sight for stains of the charcoal canister

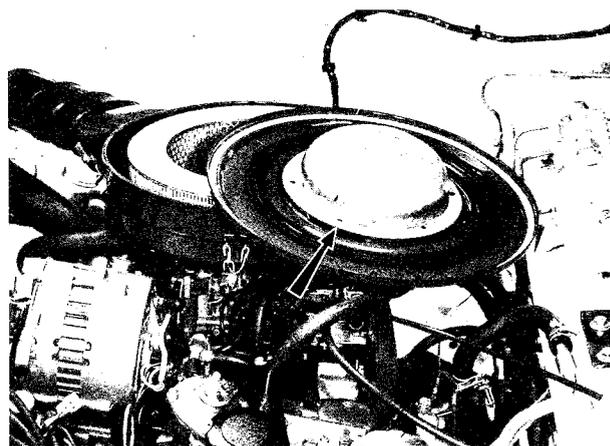


Fig. 1A-49 Charcoal canister

due to oil, etc. and for leakage of active carbon.

2. Install the vacuum gauge as shown in Fig. 1A-50 and check for clogging of the canister.

The vacuum gauge reading is as follows:

-60 ~ 0 mm-Hg/2,500 rpm

Note:

If a trouble is found in the above procedures 1 and 2, replace the canister and air cleaner cover assembly.

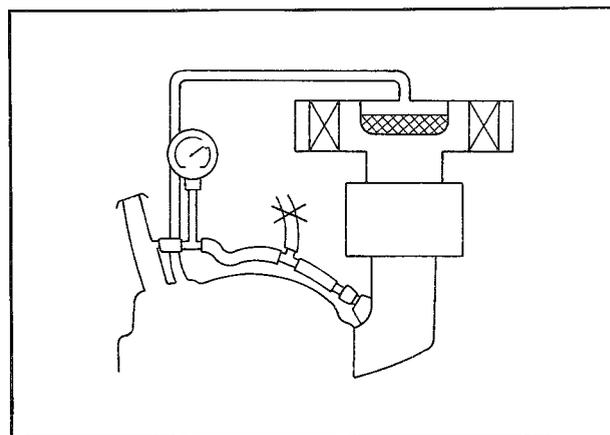


Fig. 1A-50 Checking charcoal canister

1A-A-20. Evaporative Line

a. Checking evaporative line

1. Disconnect the evaporative hose from the canister which is connected to the check valve.
2. Connect the disconnected hose to the "U" tube pressure gauge, as shown in Fig. 1A-51.
3. Apply compressed air gradually into the "U" tube pressure gauge so that the difference of water level should be $356 \pm 12 \text{ mm}$ ($14 \pm 0.5 \text{ in}$). After that, blind the inlet of the "U" tube pressure gauge.
4. Leave the "U" tube pressure gauge stand for five minutes, with the inlet blind. If the water level is within the hatched lines shown in Fig. 1A-51, the evaporative line is in good condition. If it is not within limits, inspect the following parts, and repair or replace as required.
 - (1) Leaky or loose hoses

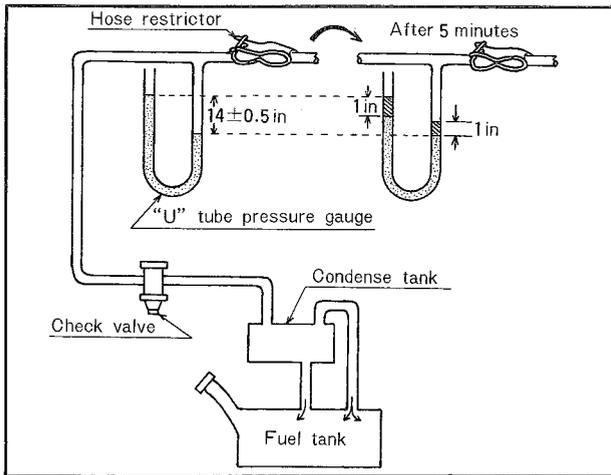


Fig. 1A-51 Checking evaporative line

- (2) Leaky condense tank
- (3) Leaky fuel tank
- (4) Leaky or loose fuel line
- (5) Leaky filler cap
- (6) Leaky fuel gauge unit

1A-A-21. Condense Tank

a. Replacing condense tank

1. Remove the condense tank cover.
2. Disconnect the hoses from the condense tank.
3. Remove the bolts attaching the condense tank and remove the condense tank.
4. Install the condense tank by following the removal procedures in the reverse order.

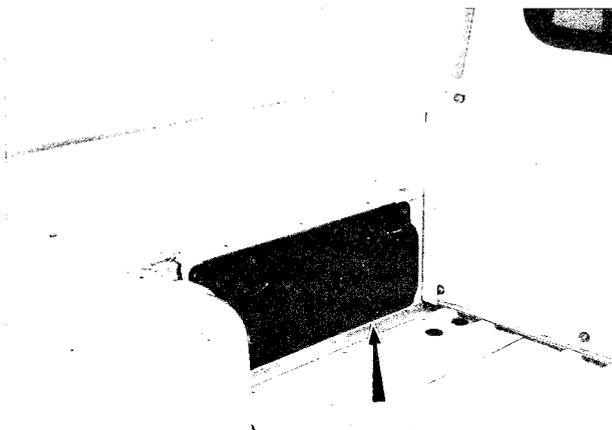


Fig. 1A-52 Condense tank

1A-A-22. Check Valve (Evaporative Emission Control System)

a. Checking check valve

1. Remove the check valve.
2. As shown in Fig. 1A-53, connect a pressure gauge to the passage to the condense tank and blind the other end by finger.
3. Blow through the valve. The valve should open with the pressure of more than 0.04 kg/cm^2 (0.57 lb/in^2).
4. Remove the pressure gauge and connect it to the passage to atmosphere.
5. Blow through the valve and if the valve opens with the pressure of more than 0.01 kg/cm^2 (0.14 lb/in^2), the valve is normal. If the valve does not operate properly, replace the valve.

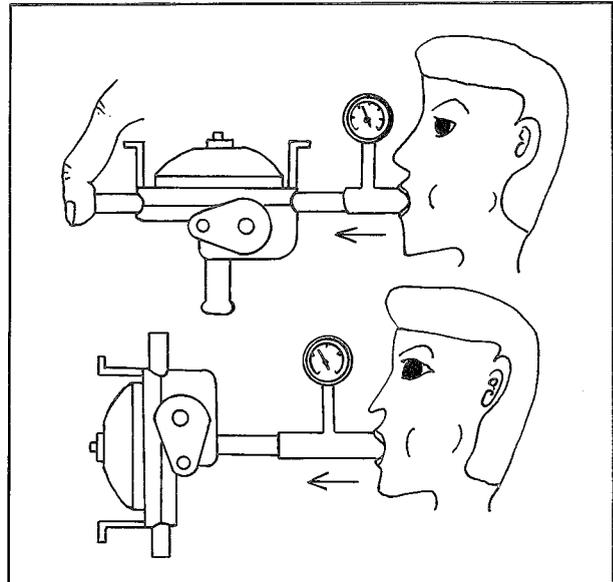


Fig. 1A-53 Checking check valve

b. Replacing check valve

1. Raise the rear end of the vehicle and support with stands.
2. Disconnect the hoses from the check valve.
3. Remove the bolts attaching the check valve and remove the check valve.
4. Install the check valve by following the removal procedures in the reverse order.


1A-A-23. Hoses and Connections (All Systems)

a. Inspecting hoses and connections


1. Inspect all hoses for deterioration, holes or cracks.
2. Check all hoses for improper connection.
3. If any defect is suspected, fit properly or replace if necessary.

1A-B. TROUBLE CHECK GUIDE


Trouble Check Guide should be used following instructions in Par. 1A-A. Maintenance Procedure.

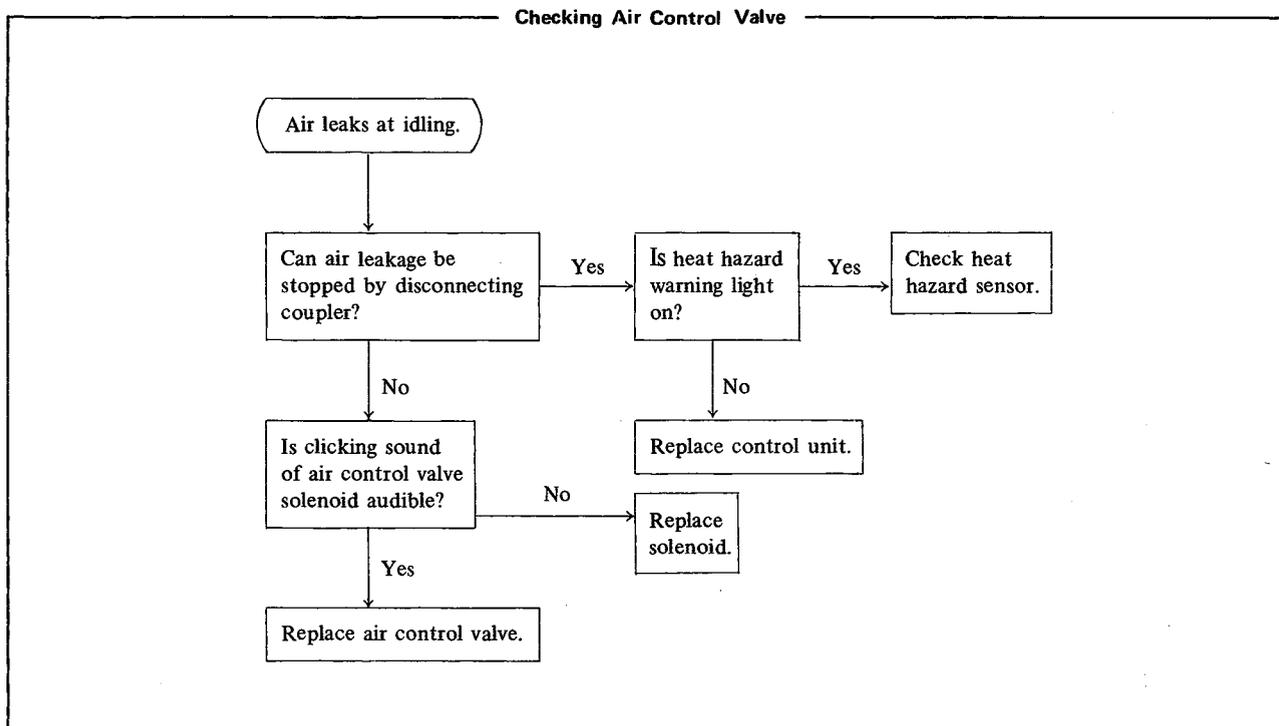AIR CONTROL VALVE

Checking Signal of Control Unit

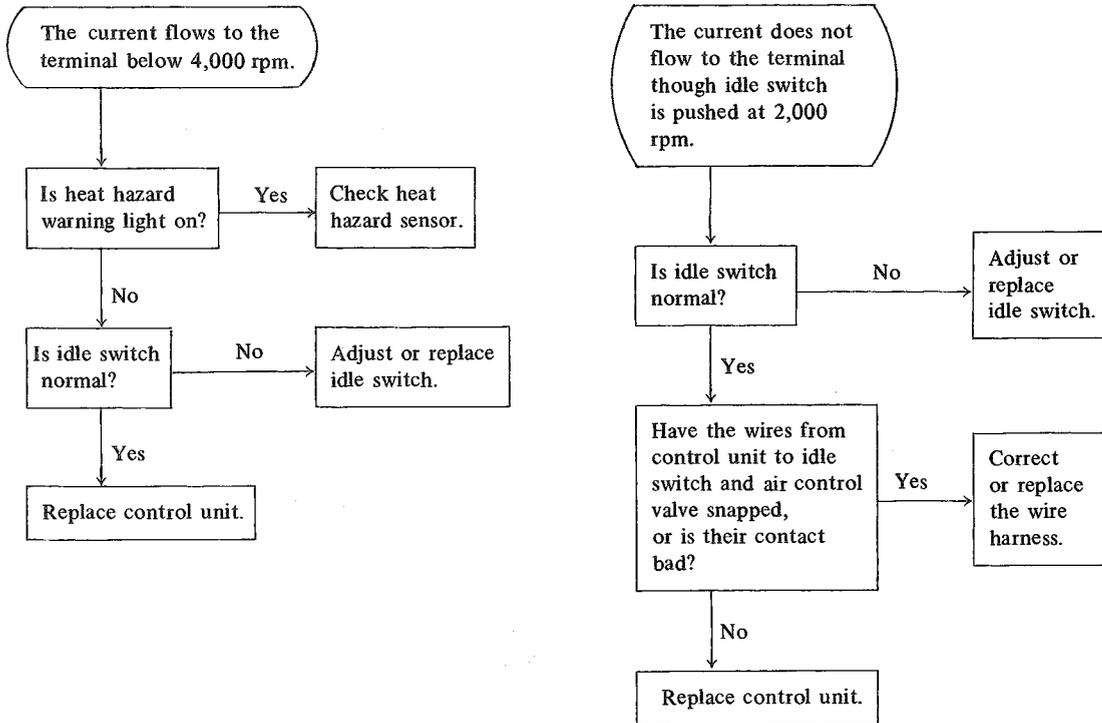


Only for automatic transmission

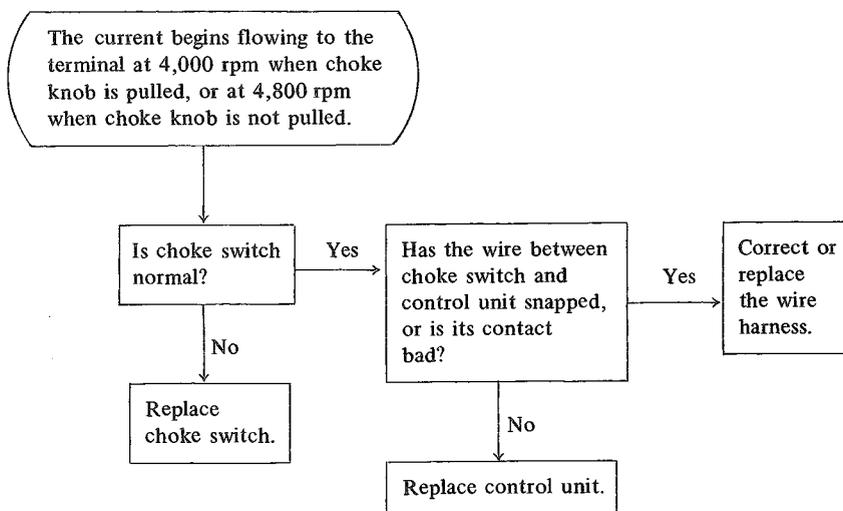


DECELERATION CONTROL VALVE

Checking Deceleration Control Valve

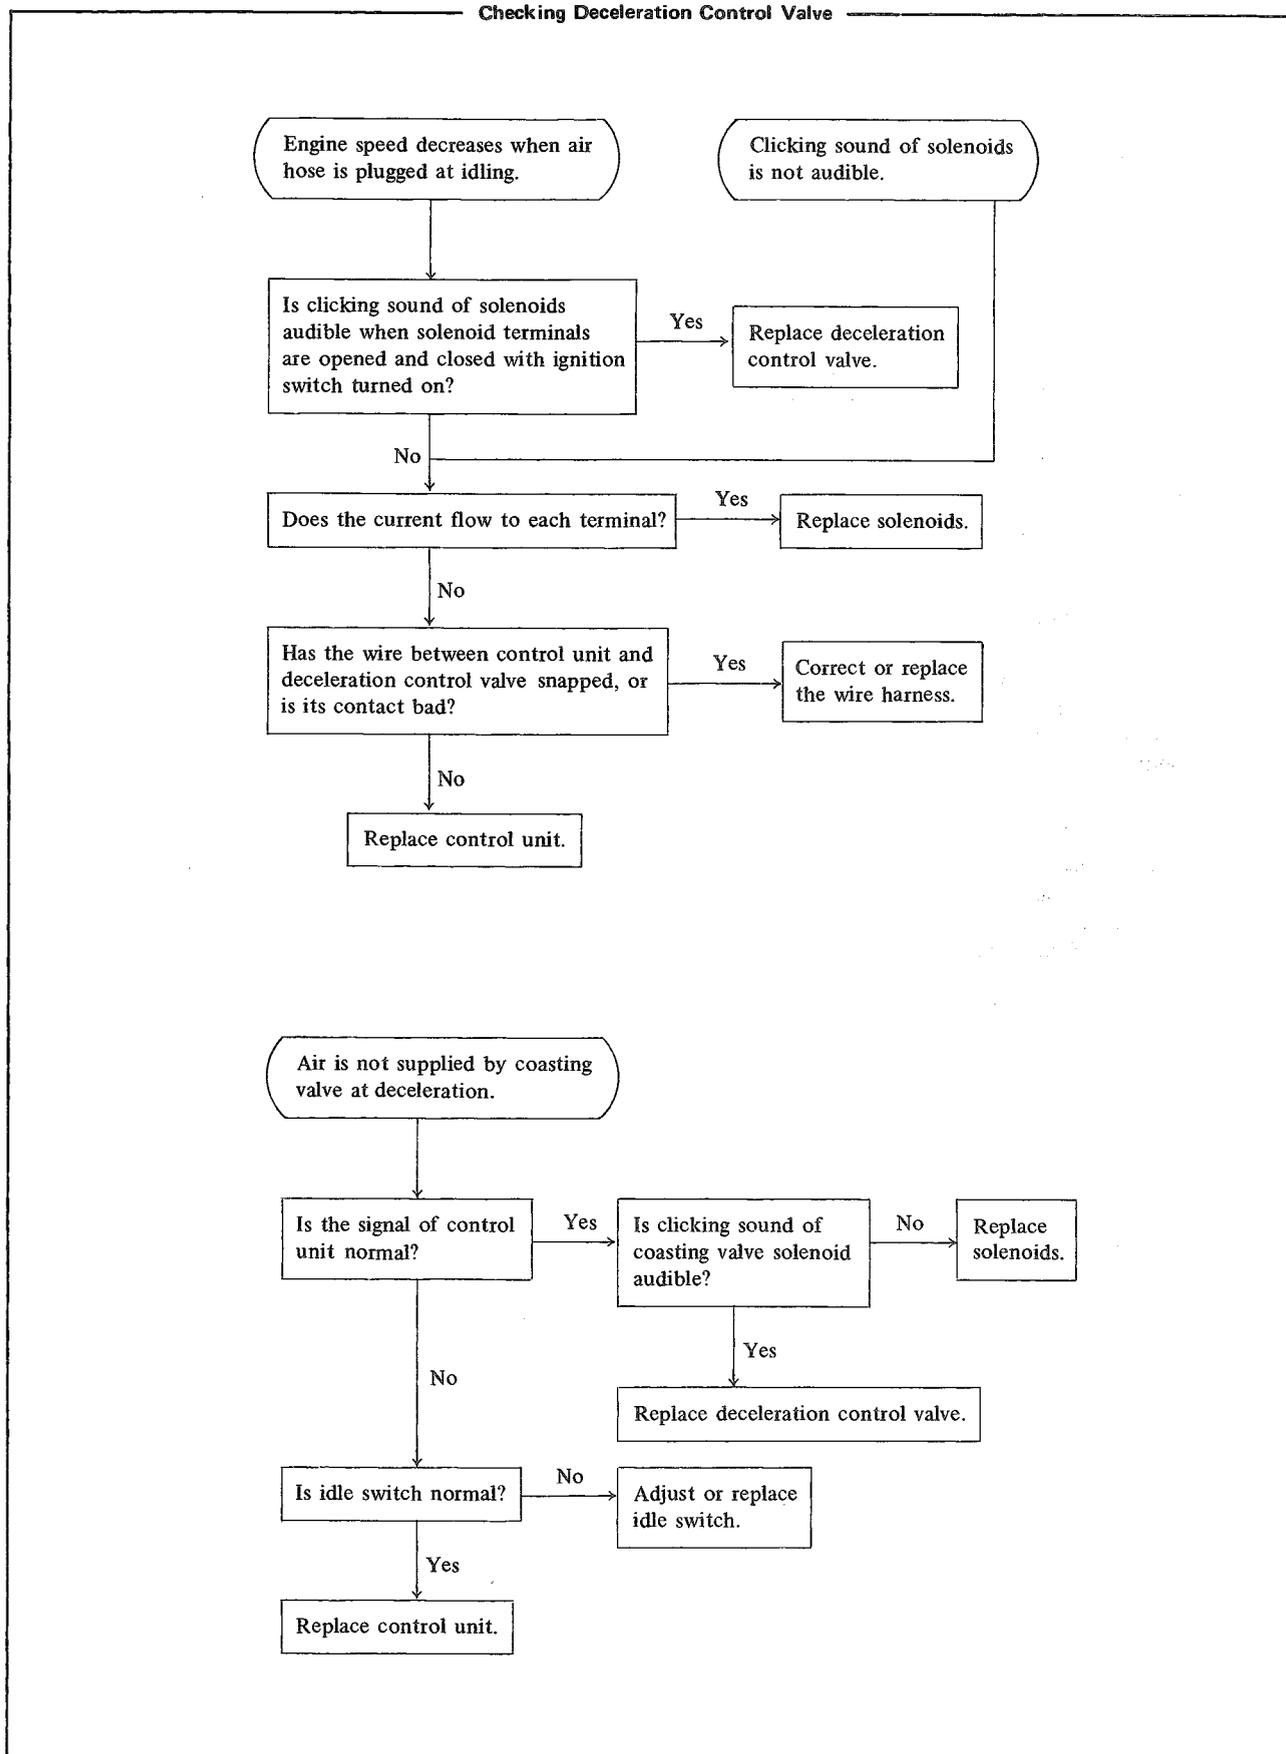


IGNITION CONTROL SYSTEM


Checking Trailing Side Ignition

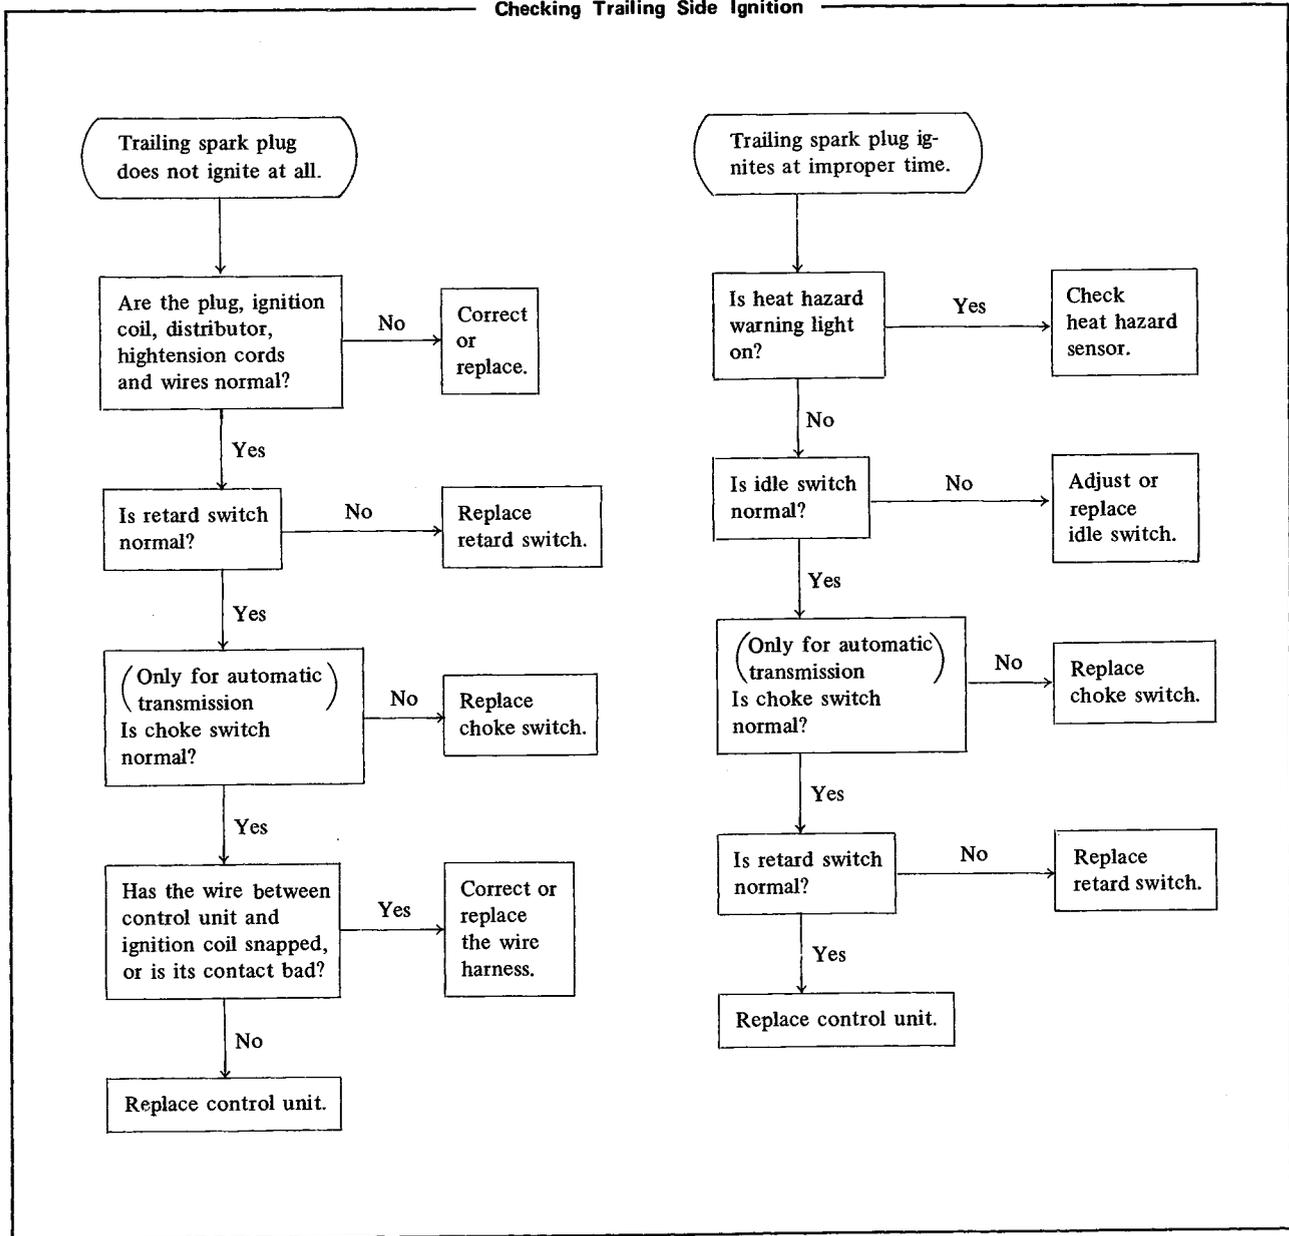

Checking Trailing Side Ignition

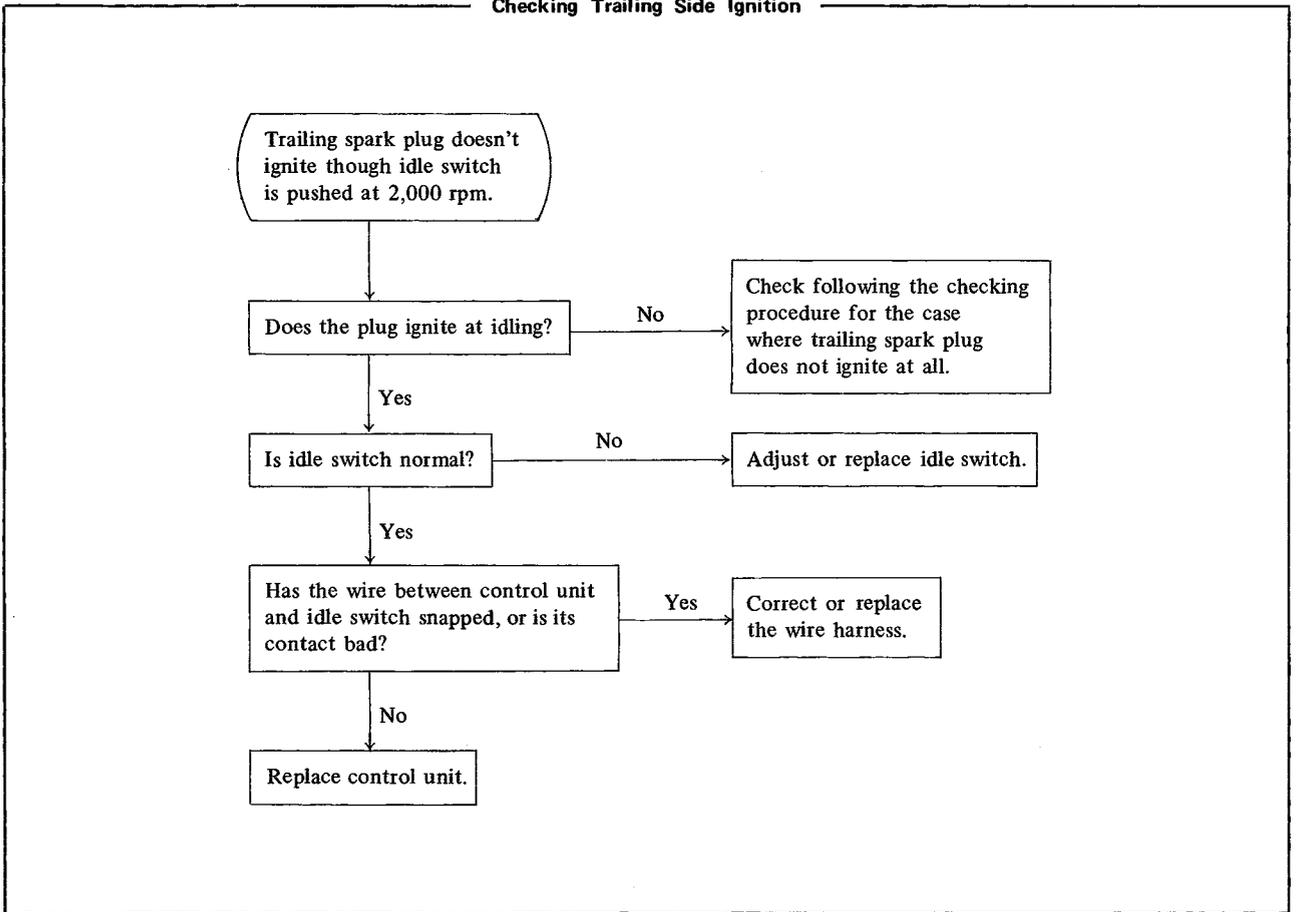


Checking Leading Side Ignition

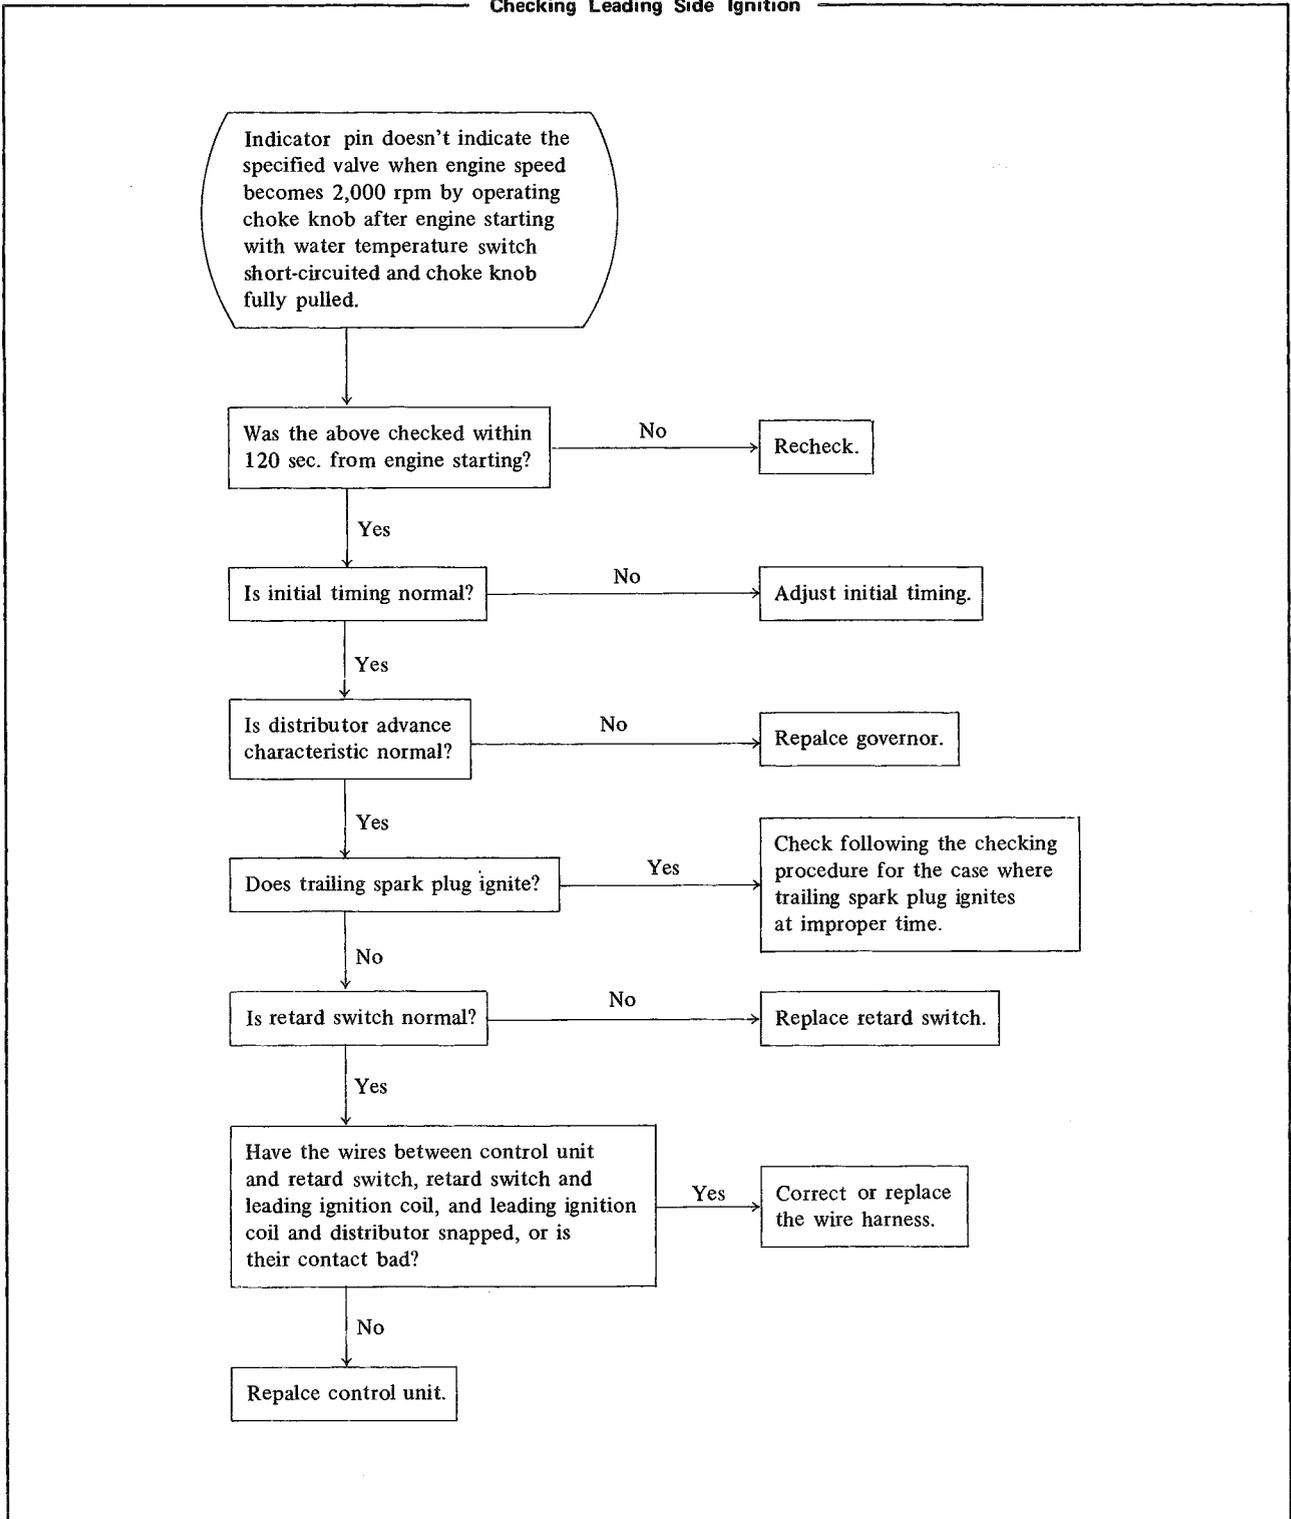


KICK-DOWN CONTROL SYSTEM

(only for automatic transmission)

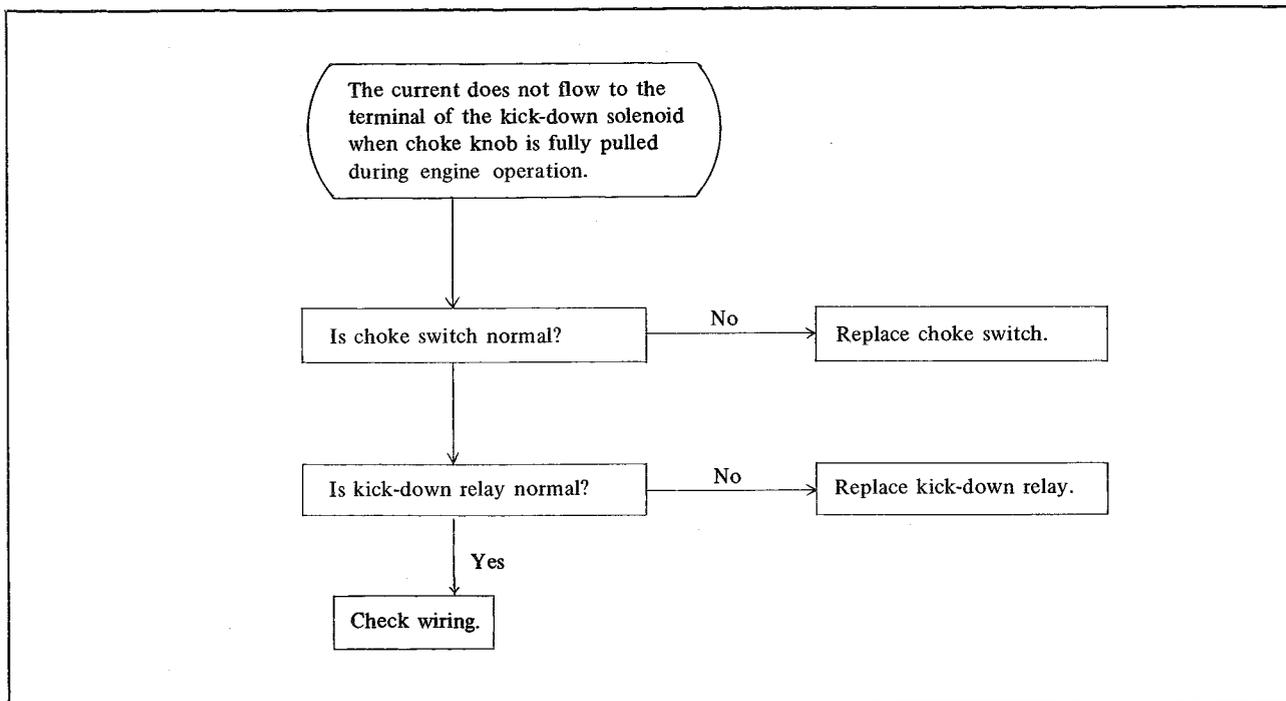

HEAT HAZARD PROTECTIVE AND WARNING SYSTEM

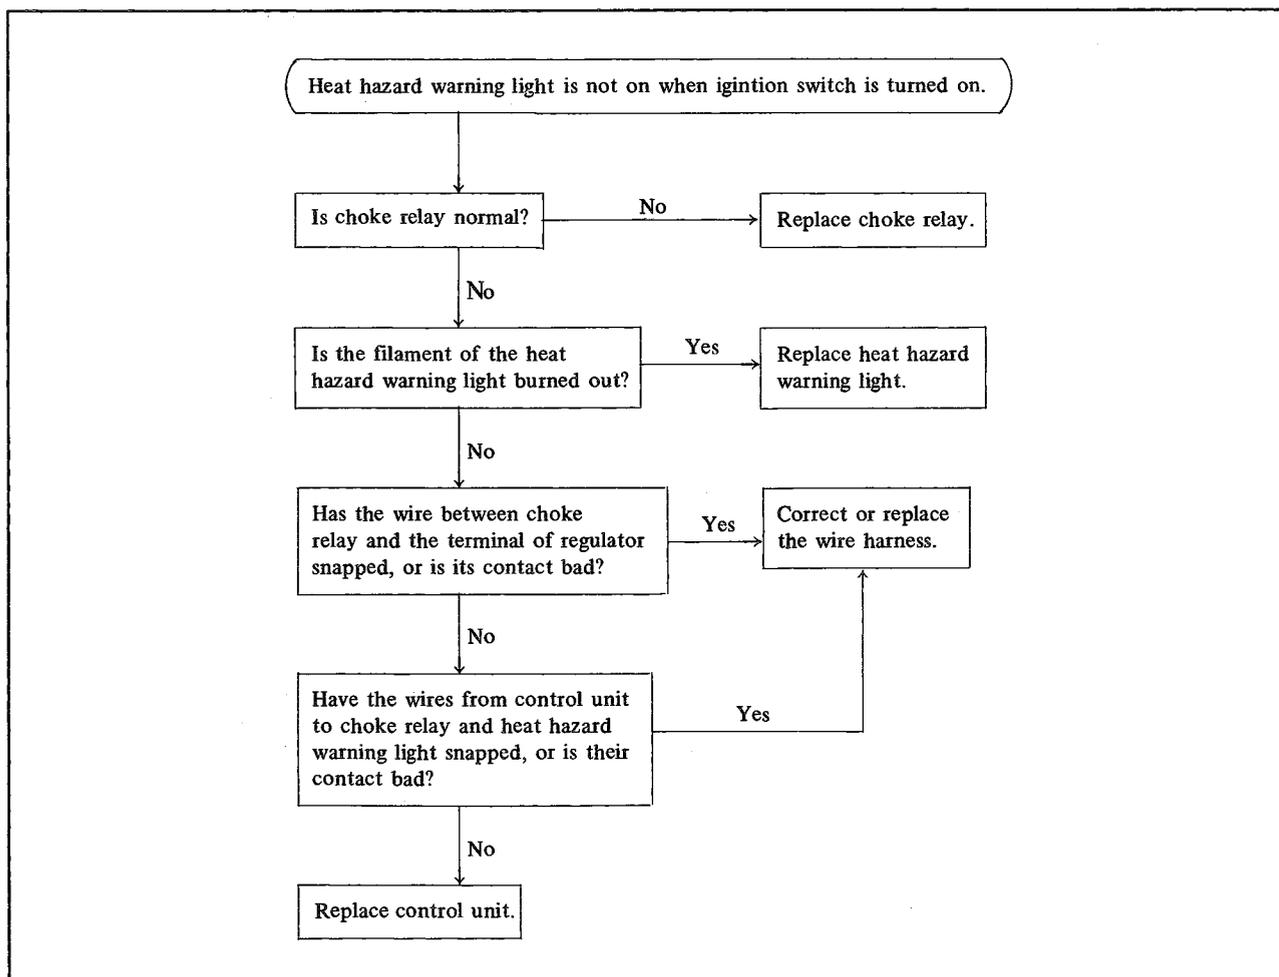

1A-C. TROUBLE SHOOTING

1A-C-1. Symptoms, Causes and Remedies

The possible faults and their remedies are listed in the following table. When the symptoms of troubles are detected, proper care must be taken immediately. (It would be better to check the ignition timing, spark plug and idle setting at first)

Symptoms and probable causes	Remedies
<p>1. Poor acceleration and poor engine power.</p> <ul style="list-style-type: none"> * The engine does not fully respond to the depression of the accelerator pedal. * The accelerative force is poor. * The climbing capacity is insufficient. * The max. speed can not be obtained. <p>A. Defect of air intake system</p> <ol style="list-style-type: none"> 1) Clogging of air cleaner 2) Defect of intake air temperature control valve <p>B. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper injection of carburetor accelerator pump 2) Clogging of carburetor jets 3) Improper opening of throttle valve and choke valve 4) Lack of fuel supply at high speed running <p>C. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Defect of ignition control system (control unit, retard switch etc.) 3) Burned or improperly adjusted distributor contact point 4) Fouling and excessive gap of spark plugs <p>D. Air leak from each hose and each valve</p> <p>E. Low compression pressure</p> <p>F. Collapse of exhaust system</p> <p>G. Defect of kick-down control system only in case of automatic transmission</p>	<p>Clean or replace See 4-F-2 Replace if necessary</p> <p>See 4-A-5 Adjust or replace Clean or replace Repair See 4-B Replace if necessary</p> <p>See 5-C-3, 5-C-5 Adjust See 1A-A-8 Replace if necessary See 5-C-1, 5-C-2 Adjust or replace See 5-E Clean or replace Repair or replace Repair Repair or replace See 1A-A-10</p>
<p>2. Rough engine idling and hard starting</p> <ul style="list-style-type: none"> * The idling speed cannot be lowered. * Too much engine vibration at idling. * The engine starting is too hard. * The engine stalls immediately even if it starts. <p>A. Defect of air intake system</p> <ol style="list-style-type: none"> 1) Clogging of air cleaner 2) Defect of intake air temperature control valve <p>B. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper idle setting 2) Clogging of carburetor jets 3) Clogging of fuel return passage 4) Improper seating of carburetor secondary throttle valve 5) Defect of choke system <p>C. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Defect of ignition control system (control unit etc.) 3) Burned or improperly adjusted distributor contact point 4) Fouling and excessive gap of spark plugs 5) Internal disconnection of ignition coils 6) Electric leak from hightension cords, distributor, ignition coils etc. <p>D. Defect of deceleration control valve or improper signal from control unit (Deceleration control valve is continuously opened.)</p> <p>E. Defect of altitude compensator</p> <p>F. Defect of evapo compensator valve</p> <p>G. Defect of ventilation valve</p>	<p>Clean or replace See 4-F-2 Replace if necessary</p> <p>See 4-A-1 Adjust Clean or replace Clean or replace Repair See 4-A-4 Adjust</p> <p>See 5-C-3, 5-C-5 Adjust See 1A-A-8 Replace if necessary See 5-C-1, 5-C-2 Adjust or replace See 5-E Clean or replace See 5-D Replace Prepair See 1A-A-5 Replace if necessary</p> <p>See 1A-A-6 Replace if necessary See 1A-A-7 Replace if necessary See 1A-A-18 Replace if necessary</p>

Symptoms and probable causes	Remedies
<p>H. Defect of secondary air control system (Secondary air is not injected properly.)</p> <ol style="list-style-type: none"> 1) Defect of air pump and/or "V" belt 2) Defect of air control valve 3) Improper signal from control unit <p>I. Air leak from each hose and each valve</p> <p>J. Low compression pressure</p> <p>K. Defect of sub-zero starting assist device (extremely cold weather)</p> <p>3. Improper fuel connection between slow and main zones (Flat Spot)</p> <p>* Shock is felt when depressing the accelerator pedal to accelerate from the low speed cruising condition.</p> <p>A. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper idle setting 2) Clogging of carburetor jets 3) Improper fuel level 4) Improper injection of carburetor accelerator pump <p>B. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Fouled spark plug 2) Burned or improperly adjusted distributor contact point <p>C. Defect of deceleration control valve or improper signal from control unit</p> <p>4. Improper fuel connection between primary and secondary zones</p> <p>* Shock is caused when accelerating from running at around 3,000 rpm by depressing the accelerator pedal fully.</p> <p>A. Serious clogging of air cleaner</p> <p>B. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Clogging of carburetor jets 2) Excessively low fuel level 3) Lack of fuel supply 4) Improper opening of carburetor secondary throttle valve <p>C. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Fouled spark plug 2) Burned or improperly adjusted distributor contact point <p>D. Defect of deceleration control valve or improper signal from control unit</p> <p>5. Abnormally large engine knocking</p> <p>A. Too poor fuel (Octane number is low)</p> <p>B. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition advance 2) Excessive ignition advance 3) Insufficient heat range or extreme gap erosion of spark plug <p>6. Pre-ignition or spit back</p> <p>* Large noises comes from the engine compartment at high speed running, e.g. on the free way, and the engine horse power falls.</p> <p>Note: If the car runs on under the condition mentioned above, the insulator of the spark plug is broken and bites into the combustion chamber, causing the vehicle to be inoperable.</p> <div style="margin-left: 20px;"> <p>A. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Excessive ignition advance 2) Insufficient heat range of spark plug 3) Excessive spark plug gap 4) Improper alignment of high tension cords <p>B. Insufficient metering oil</p> <p>C. Sticky apex seal</p> </div>	<p>See 1A-A-1 Replace if necessary</p> <p>See 1A-A-4 Replace if necessary</p> <p>See 1A-A-4 Replace if necessary</p> <p>Repair or replace</p> <p>Repair</p> <p>See 4-A-7 Replace if necessary</p> <p>See 4-A-1 Adjust</p> <p>Clean or replace</p> <p>See 4-A-3 Adjust</p> <p>See 4-A-5 Adjust, replace if necessary</p> <p>See 5-E Clean or replace</p> <p>See 5-C-1, 5-C-2 Adjust or replace</p> <p>See 1A-A-5 Replace if necessary</p> <p>Clean or replace</p> <p>Clean or replace</p> <p>See 4-A-3 Adjust</p> <p>See 4-B Replace if necessary</p> <p>Repair</p> <p>See 5-E Clean or replace</p> <p>See 5-C-1, 5-C-2 Adjust or replace</p> <p>See 1A-A-5 Replace if necessary</p> <p>See 5-C-3 Adjust</p> <p>See 5-C-5 Replace if necessary</p> <p>See 5-E Clean or replace</p> <p>See 5-C-5 Replace if necessary</p> <p>See 5-E Replace</p> <p>See 5-E Replace</p> <p>Correct</p> <p>Clean</p>

Symptoms and probable causes	Remedies
<p>7. Large car bucking (deceleration surging) * Large car bucking occurs at deceleration.</p> <p>A. Improper idle setting</p> <p>B. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Fouled spark plug 3) Burned or improperly adjusted distributor contact point <p>C. Defect of deceleration control valve or improper signal from control unit (Deceleration control valve does not operate properly at deceleration.)</p> <p>D. Defect of secondary air control system (Secondary air is not injected properly.)</p> <ol style="list-style-type: none"> 1) Defect of air pump and/or "V" belt 2) Defect of air control valve 3) Improper signal from control unit <p>E. Air leak from each hose and each valve</p>	<p>See 4-A-1 Adjust</p> <p>See 5-C-3, 5-C-5 Adjust or replace See 5-E Clean or replace See 5-C-1, 5-C-2 Adjust or replace See 1A-A-5 Replace if necessary</p> <p>See 1A-A-1 Adjust or replace See 1A-A-4 Replace if necessary See 1A-A-4 Replace if necessary Repair or replace</p>
<p>8. Afterburning (Back fire) * Extremely annoying afterburning occurs during deceleration. * Afterburning occurs when turning off the ignition switch.</p> <p>A. Improper idle setting</p> <p>B. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Fouled spark plug 3) Burned or improperly adjusted distributor contact point <p>C. Defect of deceleration control valve or improper signal from control unit (Deceleration control valve does not operate properly at deceleration or when ignition switch is turned off.)</p> <p>D. Defect of secondary air control system (Secondary air is not injected properly.)</p> <ol style="list-style-type: none"> 1) Defect of air pump and/or "V" belt 2) Defect of air control valve 3) Improper signal from control unit <p>E. Defect of altitude compensator</p> <p>F. Defect of evopo compensator valve</p> <p>G. Defect of ventifation valve</p> <p>H. Air leak from each hose and each valve.</p> <p>I. Gas leak from exhaust system</p>	<p>See 4-A-1 Adjust</p> <p>See 5-C-3, 5-C-5 Adjust or replace See 5-E Clean or replace See 5-C-1, 5-C-2 Adjust or replace See 1A-A-5 Replace if necessary</p> <p>See 1A-A-1 Adjust or replace See 1A-A-4 Replace if necessary See 1A-A-4 Replace if necessary See 1A-A-6 Replace if necessary See 1A-A-7 Replace if necessary See 1A-A-18 Replace if necessary Repair or replace Repair or replace</p>
<p>9. Overflow from carburetor</p> <p>A. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Dust fitting into needle valve 2) Improper seating of needle valve 3) Improper movement of float 4) Clogging of fuel return passage 5) Large fuel pressure of fuel pump 	<p>See 4-A-3 Clean See 4-A-3 Clean or replace See 4-A-3 Adjust or replace See 4-A-8 Clean or replace See 4-B Replace if necessary</p>
<p>10. The engine brake does not work even if the accelerator pedal is released * Even if the accelerator pedal is released when running, the engine brake does not work, which causes the overrunning and makes the driver uneasy.</p> <p>A. Clogging of air cleaner</p> <p>B. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper returning of carburetor primary throttle valve 2) Improper returning of carburetor secondary throttle valve <p>C. Defect of deceleration control valve (The opening period of anti-afterburn valve is too long.)</p>	<p>Clean or replace</p> <p>Repair Repair See 1A-A-5 Replace if necessary</p>

Symptoms and probable causes	Remedies
<p>11. Over heat</p> <ul style="list-style-type: none"> * Indicating "H" of the thermometer on the instrument panel denotes overheating. Running on with such an overheated engine may lead to serious damage of the engine. A. Defect of cooling system <ol style="list-style-type: none"> 1) Lack of coolant 2) Coolant leak from water pump, radiator, car heater, water hose etc. 3) Defect of fan drive 4) Defect of thermostat 5) Clogging of radiator B. Loosening or breakage of "V" belt C. Lack of engine oil D. Defect of water thermo switch for car cooler E. Defect of thermometer or heat gauge unit 	<p>Replenish Repair or replace if necessary Replace if necessary Replace if necessary Clean Adjust or replace Replenish if necessary Replace if necessary Replace if necessary</p>
<p>12. Improper operation of choke control knob</p> <ul style="list-style-type: none"> * Choke knob cannot remain pulled. * Choke knob does not return automatically. A. Defect of water temperature switch B. Defect of choke wire (electromagnet etc.) C. Defect of choke return spring 	<p>See 1A-A-14 Replace if necessary See 1A-A-12 Replace if necessary See 1A-A-12 Replace if necessary</p>
<p>13. Abnormal fast idle speed</p> <ul style="list-style-type: none"> * Fast idle speed is abnormally high or low. A. Defect of ignition system <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Defect of ignition control system (control unit, retard switch etc.) B. Defect of fuel system <ol style="list-style-type: none"> 1) Improper opening of carburetor throttle valve 2) Defect of choke system 	<p>See 5-C-3, 5-C-5 Adjust or replace See 1A-A-8 Replace if necessary</p> <p>Repair See 1A-A-12 Replace if necessary</p>
<p>14. Abnormal exhaust emission under proper procedure</p> <ul style="list-style-type: none"> A. Defect of air intake system <ol style="list-style-type: none"> 1) Serious clogging to air cleaner 2) Defect of intake air temperature control valve B. Defect of fuel system <ol style="list-style-type: none"> 1) Improper idle setting 2) Improper fuel level 3) Clogging of carburetor jets 4) Defect of choke system 5) Defect of power valve only in case of automatic transmission C. Defect of ignition system <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Defect of ignition control system (control unit etc.) 3) Burned or improperly adjusted distributor contact point 4) Fouled spark plug etc. D. Defect of secondary air control system <ol style="list-style-type: none"> 1) Defect of air pump and/or "V" belt 2) Defect of air control valve 3) Improper signal from control unit E. Defect of deceleration control valve or improper signal from control unit F. Defect of altitude compensator G. Defect of evapo compensator H. Defect of ventilation valve I. Defect of evaporative emission control system J. Defect of thermal reactor K. Air leak from each hose and each valve L. Defect of heat hazard sensor 	<p>Clean or replace See 4-F-2 Replace if necessary</p> <p>See 4-A-1 Adjust See 4-A-3 Adjust Clean or replace See 4-A-4 Adjust See 4-A-6 Replace if necessary</p> <p>See 5-C-3, 5-C-5 Adjust or replace See 1A-A-8 Replace if necessary See 5-C-1, 5-C-2 Adjust or replace See 5-E Clean or replace</p> <p>See 1A-A-1 Adjust or replace See 1A-A-4 Replace if necessary See 1A-A-4 Replace if necessary See 1A-A-5 Replace if necessary See 1A-A-6 Replace if necessary See 1A-A-7 Replace if necessary See 1A-A-18 Replace if necessary See 1A-A-20, 1A-A-21, 1A-A-22 Replace if necessary See 1A-A-3 Replace if necessary Repair or replace See 1A-A-11 Replace if necessary</p>

1A-C-2. Possible Troubles Caused by Defects of Each Device

Air control valve

- * Exhaust emission becomes unfavourable.
- * Rough engine idling
- * Afterburning
- * Car bucking (Deceleration surging)
- * Damage is liable to occur on reactor.

Deceleration control valve

- * Extremely annoying afterburning occurs during deceleration or after turning off the ignition switch.
- * Hard engine starting
- * Rough engine idling
- * Engine speed becomes high.
- * Exhaust emission becomes unfavourable.
- * Car bucking (Deceleration surging)
- * Flat spot occurs during driving.
- * Flat spot occurs during light acceleration from low speed running or deceleration condition.

Altitude compensator

- * Hard engine starting
- * Rough engine idling
- * Afterburning
- * Car bucking (Deceleration surging)
- * Exhaust emission becomes unfavourable.

Evapo compensator valve

- * Hard engine starting
- * Rough engine idling
- * Afterburning
- * Car bucking (Deceleration surging)
- * Exhaust emission becomes unfavourable.

Ventilation valve

- * Misfiring frequently occurs during idling
- * Rough engine idling
- * Afterburning
- * Car bucking (Deceleration surging)
- * Dilution of engine oil with gasoline increases.
- * Defective purging occurs in charcoal canister
- * Exhaust emission becomes unfavourable.

Air pump

- * Exhaust emission becomes unfavourable.
- * Noisy air pump

Power valve (Automatic transmission only)

- * Exhaust emission becomes unfavourable.
- * Poor acceleration

Kick-down switch (Automatic transmission only)

- * Improper operation of kick-down control system

Water temperature switch

- * Improper operation of automatic throttle release system
- * Improper operation of ignition control system

Idle switch

- * Improper operation of deceleration control valve
- * Improper operation of air control valve
- * Improper operation of ignition control system

Retard switch

- * Improper operation of ignition control system

Choke switch

- * Improper operation of choke system
- * Improper operation of kick-down control system (Automatic transmission only)
- * Improper operation of ignition control system (Automatic transmission only)
- * Improper operation of air control valve (Automatic transmission only)

Control unit

- * Improper operation of air control valve
- * Improper operation of deceleration control valve
- * Improper operation of ignition control system
- * Improper operation of heat hazard protective and warning system
- * Improper operation of power valve (Automatic transmission only)

Fuse of control unit

- * Hard strting, rough idling and large car knocking may be caused by leaving deceleration control valve open.

SPECIAL TOOLS

49 2113 010	Air pump gauge set
49 1881 125	Thermal reactor remover
49 1011 120	Ventilation valve wrench

EMISSION CONTROL SYSTEM

(California spec.)

EMISSION CONTROL SYSTEM	1B : 1
1B-A. MAINTENANCE PROCEDURE	1B : 1
1B-A-1. Air Pump	1B : 1
1B-A-2. Check Valve (Air Injection System).....	1B : 1
1B-A-3. Thermal Reactor.....	1B : 2
1B-A-4. Air Control Valve	1B : 2
1B-A-5. Deceleration Control Valve	1B : 4
1B-A-6. Altitude Compensator	1B : 5
1B-A-7. Ignition Control System	1B : 5
1B-A-8. No. 1 Retard Switch.....	1B : 6
1B-A-9. No. 2 Retard Switch.....	1B : 7
1B-A-10. Kick-down Control System (Car with automatic transmission only).....	1B : 7
1B-A-11. Heat Hazard Protective and Warning System.....	1B : 7
1B-A-12. Automatic Throttle Release System	1B : 8
1B-A-13. Control Unit.....	1B : 9
1B-A-14. Water Temperature Switch	1B : 9
1B-A-15. Idle Switch	1B : 10
1B-A-16. No. 1 Choke Switch.....	1B : 10
1B-A-17. No. 2 Choke Switch	1B : 11
1B-A-18. Choke Relay.....	1B : 11
1B-A-19. Ventilation Valve.....	1B : 11
1B-A-20. Charcoal Canister	1B : 12
1B-A-21. Evaporative Line.....	1B : 12
1B-A-22. Condense Tank.....	1B : 12
1B-A-23. Check Valve (Evaporative Emission Control System).....	1B : 13
1B-A-24. Hoses and Connections (All Systems).....	1B : 13
1B-B. TROUBLE CHECK GUIDE	1B : 14
1B-C. TROUBLE SHOOTING	1B : 21
SPECIAL TOOLS	1B : 27

1B

EMISSION CONTROL SYSTEM

This section explains the procedures for checking, adjusting and replacing the parts of the emission control system.

1B-A. MAINTENANCE PROCEDURE

1B-A-1. Air Pump

a. Checking air pump

1. Check for cracks or damages on the body of the air pump and for looseness of the attaching bolts and nuts.
2. Check to see that the air pump belt tension is proper.
3. Run the engine at idle speed.
4. Check to see that the air hoses are free of air leaks.
5. Stop the engine.
6. Attach the **air pump gauge set** (49 2113 010A) as shown in Fig. 1B-1.

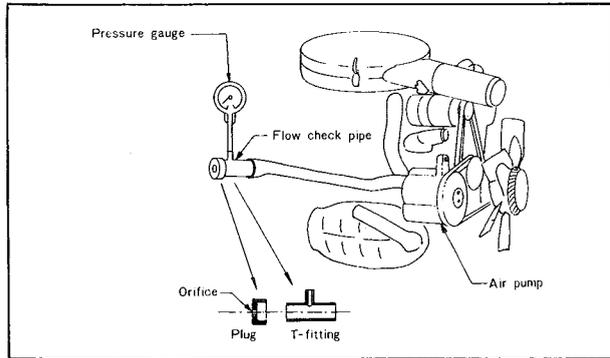


Fig. 1B-1 Checking air pump

7. Run the engine.
8. If the pressure gauge reading is not within the range of each of the following specifications, replace the air pump.

Manual transmission	more than 0.039 kg/cm ² (0.55 lb/in ²) at 800 rpm
Automatic transmission	more than 0.034 kg/cm ² (0.48 lb/in ²) at 750 rpm

b. Removing air pump

1. Remove the hot air duct for the air cleaner.
2. Disconnect the air inlet hose (air cleaner ~ air pump) and outlet hose (air pump ~ air control valve)

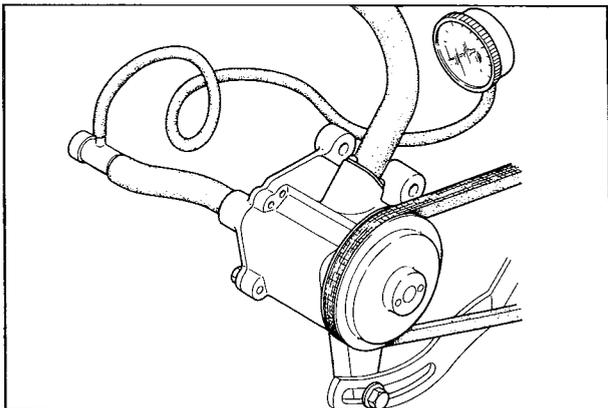


Fig. 1B-2 Air pump gauge set

from the air pump.

3. Remove the air pump mounting and adjusting bolts.
4. Remove the air pump drive belt and air pump.

c. Installing air pump

Follow the removal procedures in the reverse order.

d. Adjusting air pump drive belt

When a **10 kg (22 lb) pressure** is given to a spot midway between the air pump pulley and water pump pulley, belt deflection should be $10 \pm 1 \text{ mm}$ ($0.40 \pm 0.04 \text{ in}$).

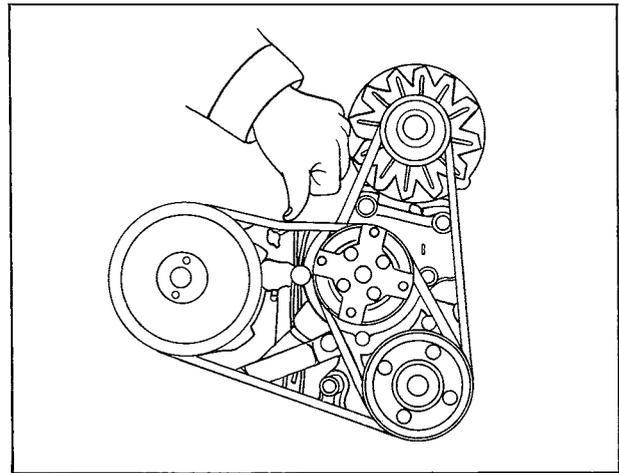


Fig. 1B-3 Adjusting belt tension

1B-A-2. Check Valve (Air Injection System)

a. Checking check valve

1. Disconnect the air hose (air pump ~ air control valve) from the air control valve.
2. Run the engine at 1,500 rpm.
3. Hold a finger over the inlet of the air control valve. If exhaust gas flow is felt, replace the check valve, spring and gasket.

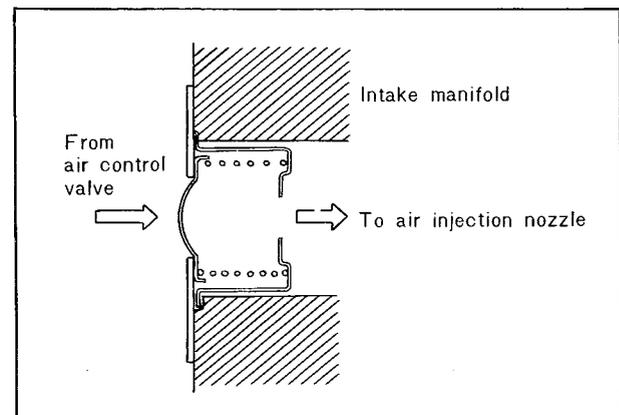


Fig. 1B-4 Check valve

b. Replacing check valve

1. Remove the air control valve, as described in Par. 1B-A-4.
2. Remove the gasket, valve and spring.
3. Install the check valve by following the removal

procedures in the reverse order.

1B-A-3. Thermal Reactor

a. Checking thermal reactor

1. Check to see that the appearance of the thermal reactor is not damaged or cracked by visual inspection or striking it with the hammer lightly.
2. Remove the air pipe (thermal reactor ~ air control valve) from the thermal reactor.
3. Check to see that the non-return valve works smoothly. If the foreign substance or sludge exists, remove it. If the sticking exists, replace the thermal reactor.

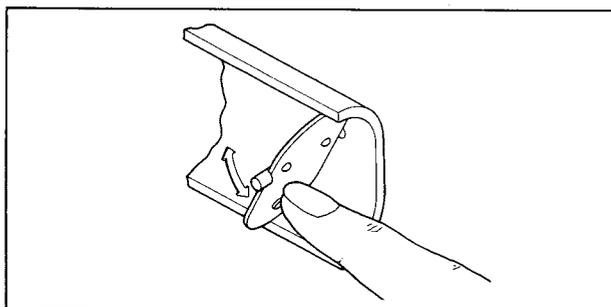


Fig. 1B-5 Checking non-return valve

4. Connect the air pipe to the thermal reactor.
5. Start the engine and keep it running at idle speed.
6. Make sure that most exhaust gas is not released from the tail of cooling air pipe. If the most exhaust gas releases, replace the thermal reactor.

b. Replacing thermal reactor

1. Remove the air control valve, as described in Par. 1B-A-4.
2. Remove the bolts attaching the heat insulator to the intake manifold and remove the heat insulator.
3. Raise the front of vehicle and support with stands.
4. Remove the bolts attaching the engine under cover and remove the cover.
5. Remove the bolts attaching the thermal reactor cover and remove the cover.

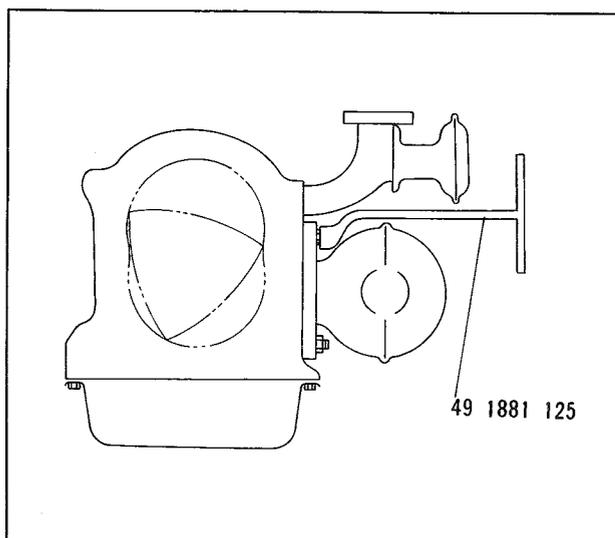


Fig. 1B-6 Removing thermal reactor

6. Disconnect the exhaust pipe from the thermal reactor.
7. Remove the nuts attaching the thermal reactor to the engine.

Note:

The upper nuts should be removed with the **thermal reactor remover** (49 1881 125).

8. Remove the thermal reactor.
9. Install the thermal reactor by following the removal procedures in the reverse order.

1B-A-4. Air Control Valve

a. Checking air control valve

1. Disconnect the coupler of the solenoids on the air control valve.
2. To check each solenoid for operation, connect each terminal in the coupler (to solenoids) to the battery as shown in Fig. 1B-7.

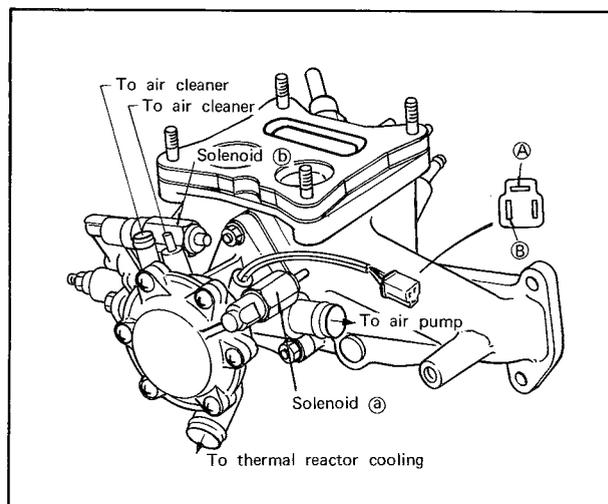


Fig. 1B-7 Checking solenoid

When the current is applied, the solenoid valve is operating properly if the clicking sound is audible from the solenoid.

If the solenoid valve does not operate properly, replace the solenoid.

3. Disconnect air pipe (thermal reactor ~ air control valve) at the thermal reactor.



Fig. 1B-8 Removing air pipe

1B

4. Disconnect air hose (air cleaner ~ air control valve) at the air cleaner.
5. Connect a tachometer to the engine.
6. Start the engine and run it at idle.
7. Check to see that the air hardly flows out from the air outlets (thermal reactor ~ air control valve and air cleaner ~ air control valve).
8. Connect (A) terminal (to solenoid (a)) to the battery and check to see that the air flows out of the air outlet (thermal reactor ~ air control valve).

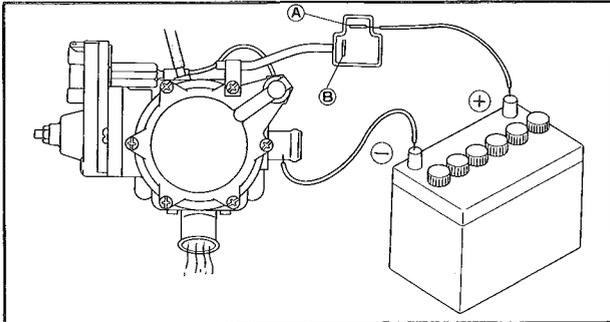


Fig. 1B-9 Checking air control valve

9. Connect (B) terminal (to solenoid (b)) to the battery and check to see that the air flows out of the air outlet (air cleaner ~ air control valve). If any defects are found, replace the air control valve.

b. Checking signal of control unit

1. Disconnect the coupler from the air control valve.
2. Connect the voltmeter to (A) terminal in the coupler.

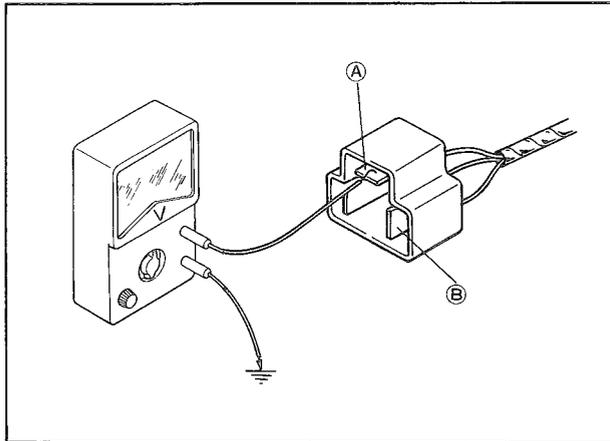


Fig. 1B-10 Checking signal of control unit

3. Start the engine and make sure that the current flows to the (A) terminal when the engine speed is more than $4,000 \pm 400$ rpm.

On the vehicle equipped with manual transmission, make sure that the current stops flowing to (A) terminal when the idle switch is pushed with the fingers.

4. Connect the voltmeter to (B) terminal in the coupler.
5. Make sure that the current stops flowing to (B) terminal when the engine speed is gradually dropped from 2,000 rpm to $1,150 \pm 100$ rpm. Record the engine speed at which the current stops flowing.
6. Gradually raise the engine speed from its idle speed and check the speed at which the current begins

flowing to (B) terminal. Make sure that the difference between the said engine speed and that recorded in the above procedure 5 is 150 ± 70 rpm.

7. Stop the engine.

8. Remove the coupler from the water temperature switch and close both terminals in the coupler.

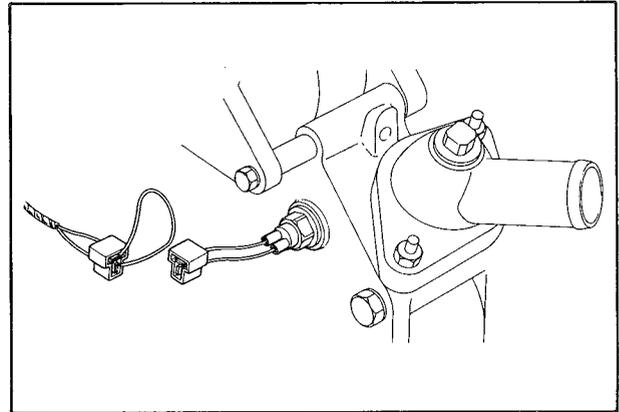


Fig. 1B-11 Closing both terminals

9. Pull the choke control knob out all the way and start the engine.

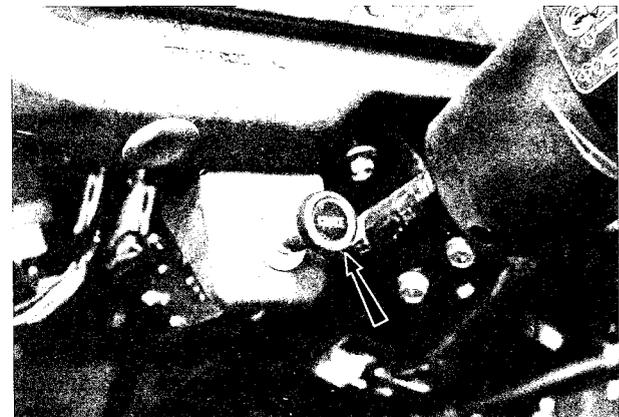


Fig. 1B-12 Choke control knob

10. Make sure that the current does not flow to (B) terminal when the engine speed is set to 2,000 rpm by adjusting the choke control knob.

Note:

- 1) This check should be completed within 130 seconds after the engine was started in the above procedure 9.
- 2) If a trouble is found in the above procedures 3, and 10, check every part according to Par. 1B-B. Trouble Check Guide.
- 3) If a trouble is found in the above procedures 5 and 6, replace the control unit.

c. Replacing air control valve

1. Remove the hot air duct for the air cleaner.
2. Disconnect the air hose (air pump ~ air control valve) from the air control valve.
3. Disconnect the air hoses (air control valve ~ thermal reactor and air control valve ~ air cleaner) from the air control valve.

4. Disconnect the atmospheric sensing tube from the air control valve.
5. Disconnect the coupler from the air control valve.
6. Remove the nuts attaching the air control valve and remove the air control valve.
7. Install the air control valve by following the removal procedures in the reverse order.

1B-A-5. Deceleration Control Valve

a. Checking deceleration control valve

1. Disconnect the air hose (air cleaner ~ deceleration control valve) from the air cleaner.
2. Turn the ignition switch on.
3. Open and close repeatedly the terminal of each solenoid of the deceleration control valve, and make sure that the clicking sound from each solenoid is audible on that occasion.

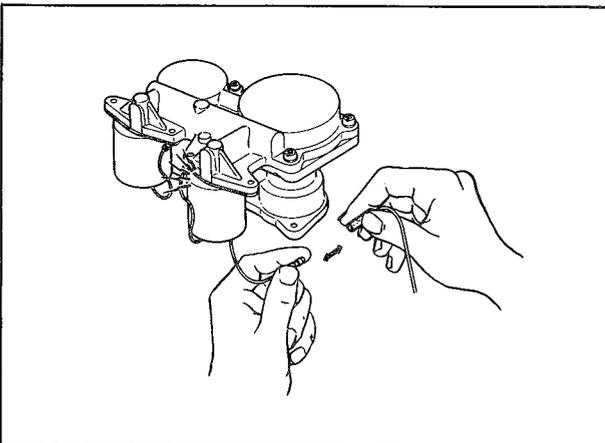


Fig. 1B-13 Checking solenoid

4. Start the engine and keep it running at idle speed.
5. Close with the fingers the air hose removed in the above procedure 1 and make sure that the engine speed hardly varies.
6. Make sure that the air is drawn into the air hose removed in the above procedure 1 when the terminal of the solenoid for the coasting valve is removed. Check the anti-afterburn valve in the same procedure.

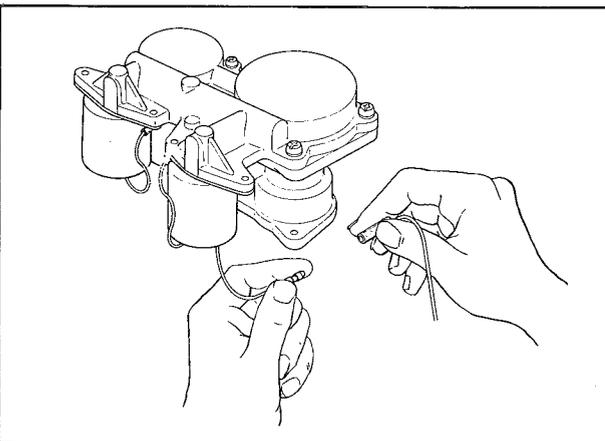


Fig. 1B-14 Checking solenoid

7. Close with the fingers three-fourth of the opening

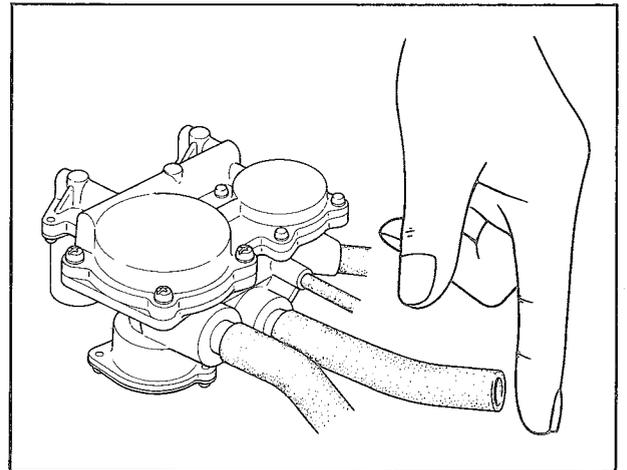


Fig. 1B-15 Checking deceleration control valve

of the air hose removed in the above procedure 1. Raise the engine speed up to about 4,000 rpm rapidly and then release the acceleration abruptly. Make sure that the fingers feel a large amount of air being drawn into the air hose for 1 ~ 1.5 seconds just after the engine speed begins to drop and afterwards feel less amount of air being drawn until the speed drops to 1,150 rpm.

It is only on the car with manual transmission that a small amount of air being drawn into the air hose is felt.

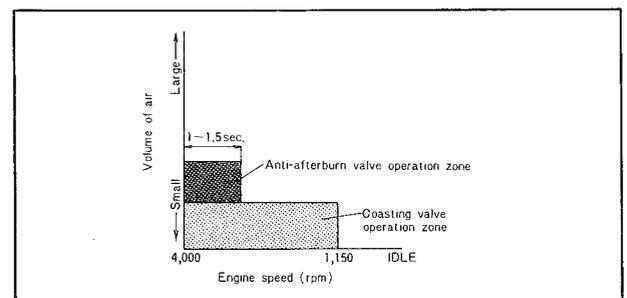


Fig. 1B-16 Volume of air

Note:

- 1) If a trouble is found in the above procedures 3, 5 and 7, check every part according to Par. 1B-B. Trouble Check Guide.
- 2) If a trouble is found in the above procedure 6, replace the deceleration control valve.

b. Checking signal of control unit

(car with manual transmission only)

1. Remove the terminal of the solenoid for the coasting valve and apply the voltage (12V) of the battery directly on the terminal.
2. Remove the coupler of the idle switch and connect the voltmeter to the power lead of the coasting valve solenoid. Make sure that the current begins to flow to the voltmeter when the engine speed is gradually dropped from 2,000 rpm to $1,150 \pm 100$ rpm and continues to flow even when the speed is dropped to the idle speed. Record the engine speed at which the current begins to flow.

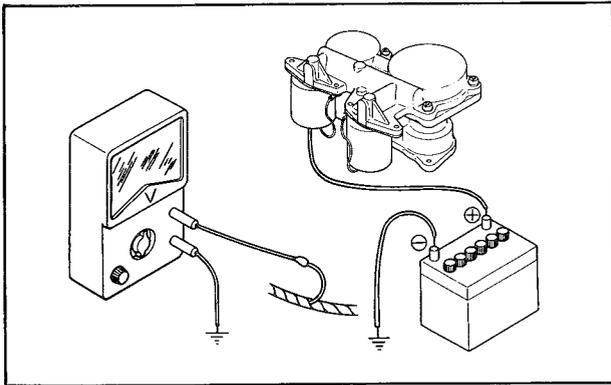


Fig. 1B-17 Checking signal of control unit

3. Gradually raise the engine speed from its idle speed and check the speed at which the current stops flowing to the voltmeter. Make sure that the difference between the said engine speed and that recorded in the above procedure 3 is 150 ± 70 rpm.

Note:

If a trouble is found in the above procedures 2 and 3, replace the control unit.

c. Replacing deceleration control valve

1. Disconnect the hoses and lead wires from the deceleration control valve.
2. Remove the bolts attaching the deceleration control valve and remove the deceleration control valve.
3. Install the deceleration control valve by following the removal procedures in the reverse order.

1B-A-6. Altitude Compensator

a. Checking altitude compensator

1. Disconnect the hose (carburetor ~ altitude compensator) from the altitude compensator.
 2. Start the engine and keep it running at idle speed.
 3. Close with the fingers the mouths of the altitude compensator from which the hoses indicated in the above procedure 1 are disconnected.
- If the engine speed drops on that occasion, the altitude compensator is in normal conditions.

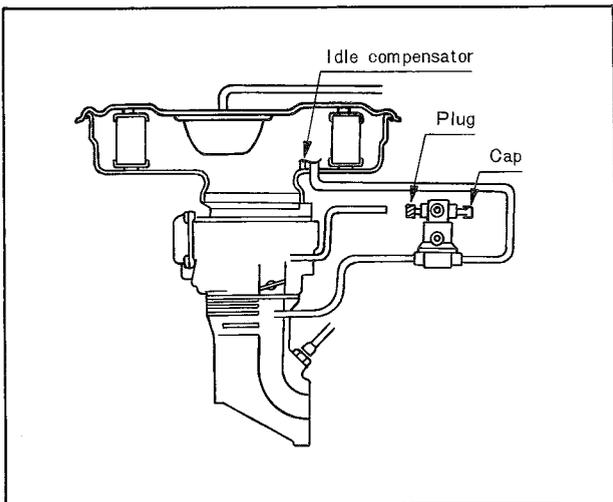


Fig. 1B-18 Checking altitude compensator

b. Replacing altitude compensator

1. Disconnect the hoses from the altitude compensator.
2. Remove the bolts attaching the altitude compensator and remove the altitude compensator.
3. Install the altitude compensator by following the removal procedures in the reverse order.

1B-A-7. Ignition Control System

In this item, inspect the operation of each of the idle switch, kick-down switch, No. 1 choke switch, No. 2 choke switch, control unit and No. 1 and No. 2 retard switches relating to the ignition control system. If a trouble is found, check defective parts according to Par. 1B-B. Trouble Check Guide.

Note:

Before this inspection, warm up the engine sufficiently and make sure that the ignition timing is as specified.

a. Checking ignition control system (trailing side)

1. Connect a timing light to the high tension cord for the trailing spark plug of the front rotor housing.
2. Start the engine.
3. Gradually drop the engine speed from 4,500 rpm.
4. Make sure that the timing light goes out when the engine speed drops to $4,000 \pm 400$ rpm.
5. Make sure that the timing light goes on again when the engine speed further drops to $1,150 \pm 100$ rpm. Record the engine speed at which the timing light goes on.
6. Drop the engine speed furthermore and make sure that the timing light is on when the engine speed is between $1,150 \pm 100$ rpm and idle speed.
7. Next, gradually raise the engine speed from its idle speed, and check the speed at which the timing light goes out. Make sure that the difference between the said engine speed and that recorded in the above procedure 5 is 150 ± 70 rpm.
8. Keep the engine speed at 2,000 rpm. (The timing light is off at this time.)

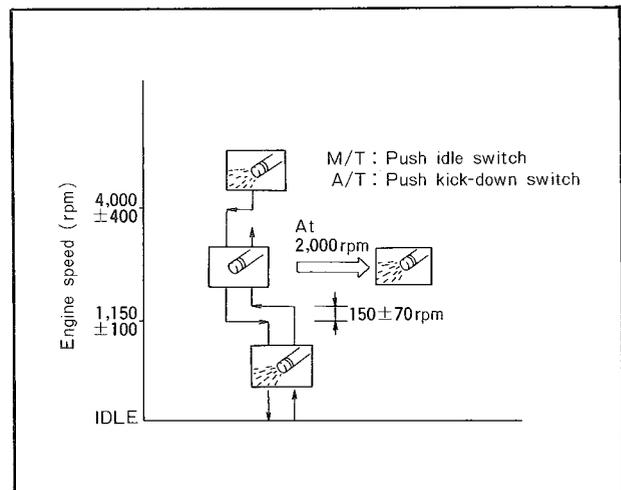


Fig. 1B-19 Checking ignition control system (trailing)

- (1) Manual transmission:
Make sure that the timing light goes on when the idle switch is pushed.

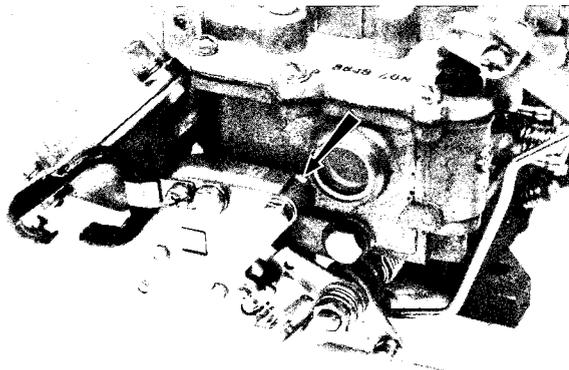


Fig. 1B-20 Idle switch

- (2) Automatic transmission:
Make sure that the timing light goes on when the kick-down switch is pushed.

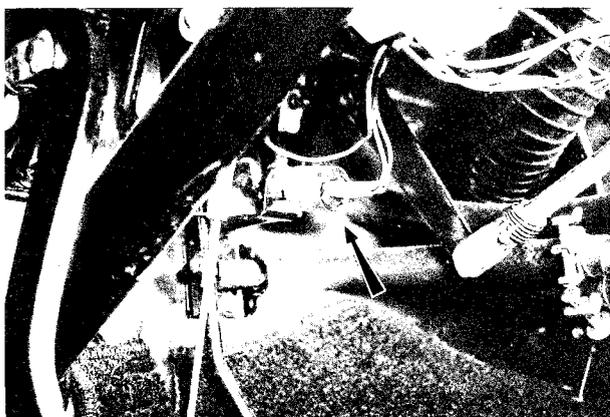


Fig. 1B-21 Kick-down switch

b. Checking ignition control system (leading side)

1. Connect a timing light to the high tension cord for the leading spark plug of the front rotor housing.
2. Remove the coupler from the water temperature switch and close both terminals in the coupler.

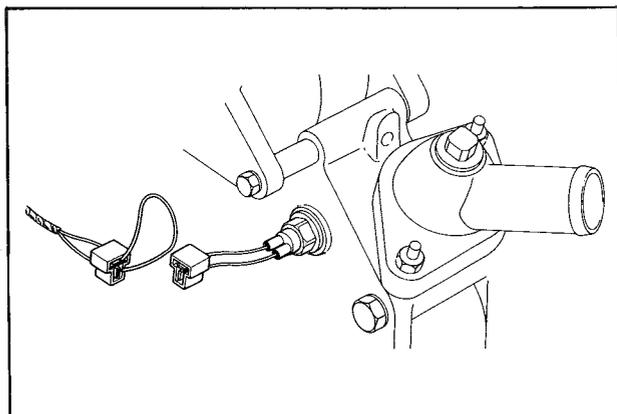


Fig. 1B-22 Closing both terminals

3. Pull the choke control knob out all the way and

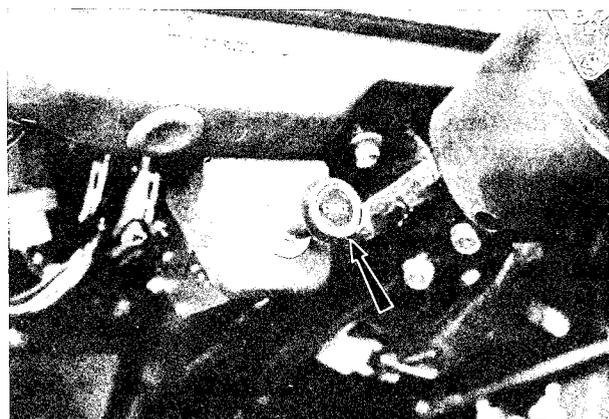


Fig. 1B-23 Choke control knob

start the engine.

4. Keep the engine speed at 2,000 rpm by adjusting the choke control knob.

Make sure that the timing indicator pin points between the yellow and red marks notched on the eccentric shaft pulley.

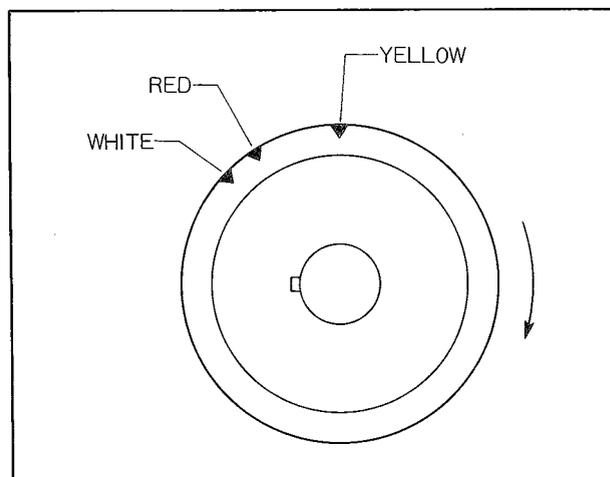


Fig. 1B-24 Eccentric shaft pulley

5. Make sure that the engine speed rises up by several hundred rpm when it is 130 ± 26 seconds since the engine was started.

1B-A-8. No. 1 Retard Switch

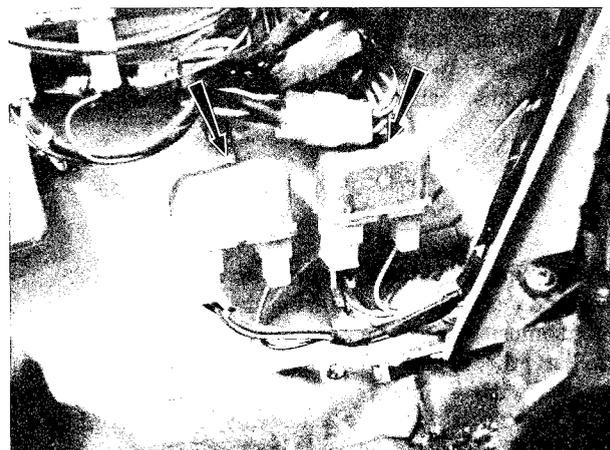


Fig. 1B-25 No. 1 and No. 2 retard switch

a. Checking No. 1 retard switch

1. Remove the coupler from No. 1 retard switch.
2. Using the ohmmeter, make sure of continuity between the terminals **(B)** - **(NC)** in the coupler and of non-continuity between **(B)** - **(NO)**.
3. Apply the voltage (12V) of the battery on **(SD₁)** terminal in the coupler, and ground **(E)** terminal.
4. Using the ohmmeter, make sure of continuity between the terminals **(B)** - **(NO)** in the coupler and of non-continuity between **(B)** - **(NC)**.

Note:

If a trouble is found in the above check, replace the No. 1 retard switch.

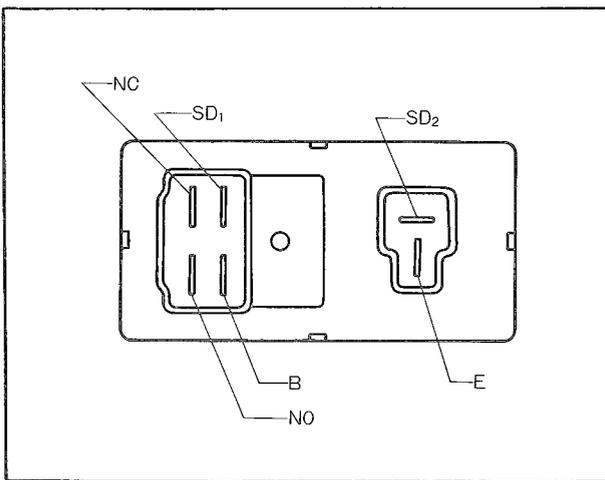


Fig. 1B-26 Checking No. 1 and No. 2 retard switch

b. Replacing No. 1 retard switch

1. Disconnect the couplers from the No. 1 retard switch.
2. Remove the bolt attaching the No. 1 retard switch and remove the switch.
3. Install the No. 1 retard switch by following the removal procedures in the reverse order.

1B-A-9. No. 2 Retard Switch

Both checking and replacing procedures of this switch are the same as those of the No. 1 retard switch.

1B-A-10. Kick-down Control System

(Car with automatic transmission only)

In this item, inspect the operation of each of the No. 1 choke switch, control unit, kick-down switch and kick-down relay relating to the kick-down control system.

a. Checking kick-down control system

1. Disconnect the terminal from the kick-down solenoid and connect the voltmeter.
2. Start the engine and make sure that the current flows to the voltmeter when choke knob is pulled. If a trouble is found, check every part according to Par. 1B-B. Trouble Check Guide.

1B-A-11. Heat Hazard Protective and Warning System

- ### a. Checking heat hazard protective and warning system
1. Turn the ignition switch on and make sure that the warning light is on.

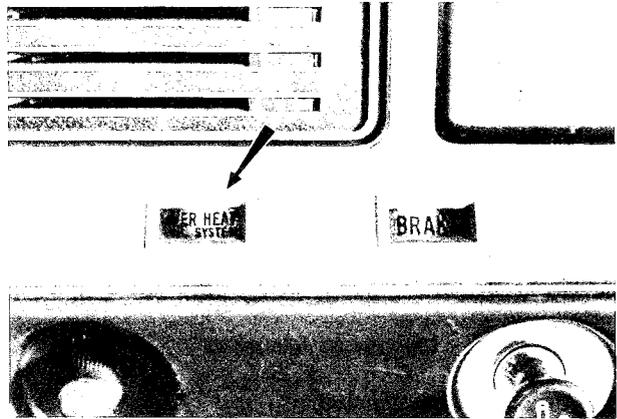


Fig. 1B-27 Heat hazard warning light

2. Remove the coupler from the heat hazard sensor and close both terminals in the coupler.

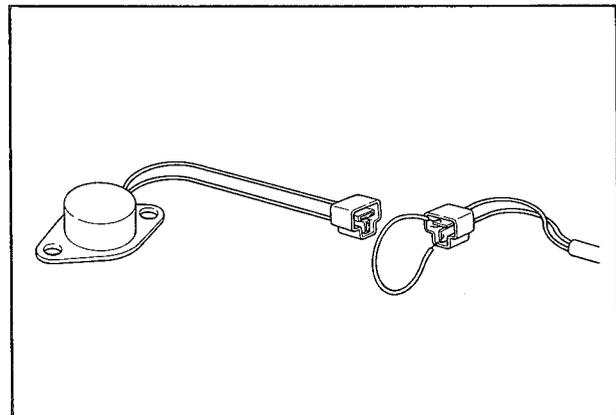


Fig. 1B-28 Closing both terminals

3. Start the engine and keep it running at idle speed.
4. Make sure that the warning light is on at this time.
5. Remove the coupler from the air control valve, connect the voltmeter to **(A)** terminal in the coupler and make sure that the current flows to it.

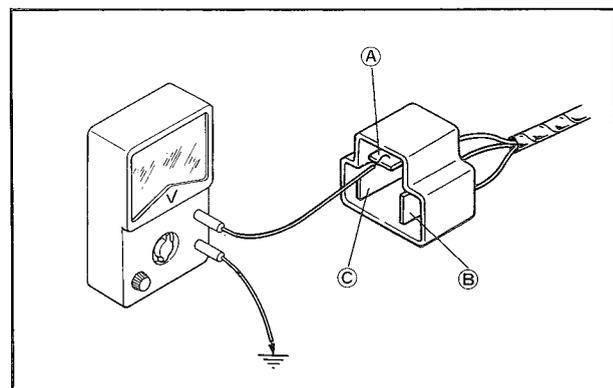


Fig. 1B-29 Connecting voltmeter

6. Connect a timing light to the high tension cord for the trailing spark plug of front rotor housing.
7. Make sure that the timing light is on when the engine speed is set to **2,000 rpm**.

Note:

- 1) If a trouble is found in the above procedure 1, check every part according to Par. 1B-B. Trouble Check Guide.
- 2) If a trouble is found in the above procedures 4 and 5, check for breaking of the wire harness and faulty contact of the terminals in the coupler; in case they are in normal conditions, replace the control unit.

b. Checking heat hazard sensor

Inspect the operating temperature of the heat hazard sensor as follows:

1. Remove the heat hazard sensor.
 2. Wrap the sensor together with the thermometer in aluminum foil to prevent oil ingress.
 3. Attach the test lamp to the sensor as shown in Fig. 1B-30.
- Submerge the wrapped sensor and thermometer in oil and gradually heat the oil.

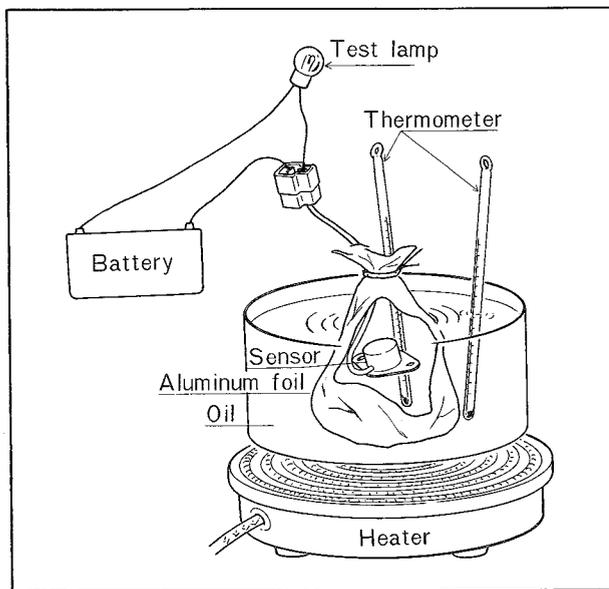


Fig. 1B-30 Checking sensor

4. Measure the temperature at which the lamp attached to the sensor lights up. The sensor should operate at $120 \pm 10^{\circ}\text{C}$ ($248 \pm 18^{\circ}\text{F}$). If the sensor should operate at a temperature deviating from the standard temperature, replace the sensor.

Note:

Avoid heating the oil to more than 130°C (266°F).

c. Replacing heat hazard sensor

1. Remove the seat.
2. Disconnect the coupler from the heat hazard sensor.
3. Remove the screws attaching the heat hazard sensor and remove the sensor.
4. Install the heat hazard sensor by following the removal procedures in the reverse order.

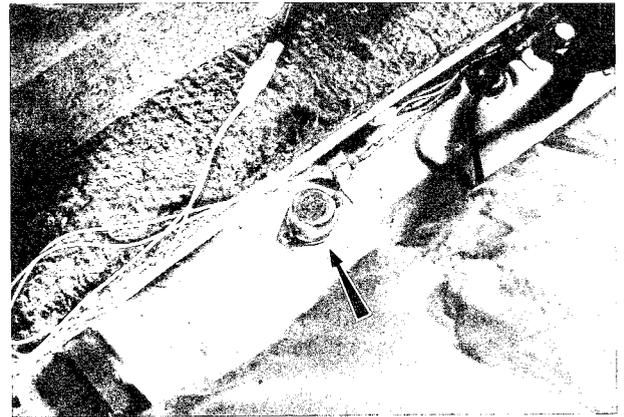


Fig. 1B-31 Hazard sensor

1B-A-12. Automatic Throttle Release System

a. Checking automatic throttle release system

1. Make sure that the engine is cold.
- Pull the choke control knob out all the way with the ignition switch off, and make sure that the knob returns automatically. If the trouble is found, check choke wire and choke return spring, replace if necessary.

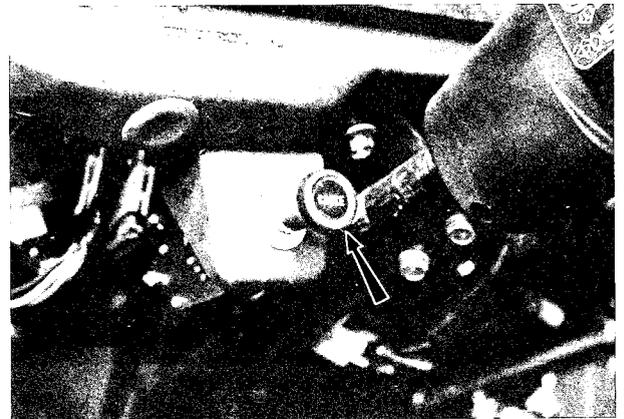


Fig. 1B-32 Choke control knob

2. Pull the choke control knob out all the way and start the engine.
3. Make sure that the choke control knob returns automatically when it is 30 ± 10 seconds since the engine was started.

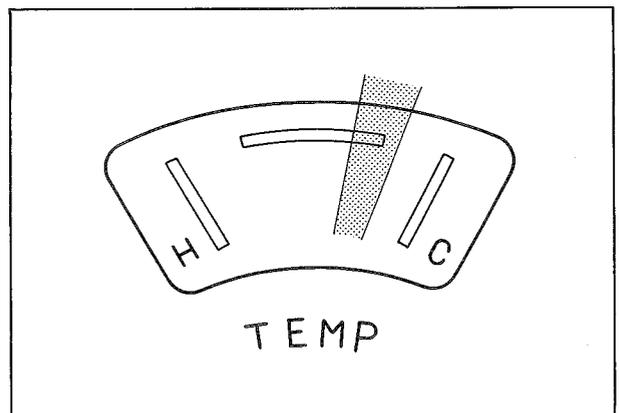


Fig. 1B-33 Position of gauge needle

4. Pull the choke control knob to set the engine speed to **2,000 rpm**.

Warm up the engine under the above condition.

5. Make sure that the choke control knob returns automatically when the needle of the water temperature gauge indicates the point shown in Fig. 1B-33.

Note:

- 1) If a trouble is found in the above procedure 3, replace the control unit.
- 2) If a trouble is found in the above procedure 5, check the water temperature switch.

1B-A-13. Control Unit

a. Checking control unit

The control unit controls the air control valve, deceleration control valve, ignition system, solenoid of the carburetor, automatic throttle release system, heat hazard warning system and kick-down control system. So the checking procedure of the control unit is described together in the item of each part and each system.



Fig. 1B-34 Control unit

Warning:

1. The choke warning light on the instrument panel goes on when the fuse of the control unit is burnt out. Use a **5-amp. fuse** when replacing.
2. If, in checking the signal of the control unit, there is any terminal in the coupler to which the signal does not come, check first for breaking of the wire harness and faulty contact of the terminal.

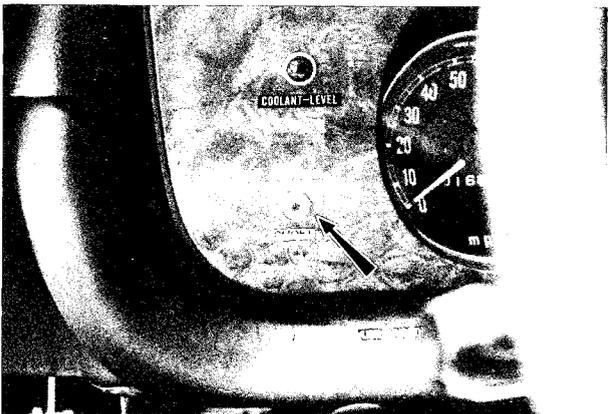


Fig. 1B-35 Choke warning light

3. **Do not use more than 3.4 watt lamp** when checking the signal of the control unit, using test lamp.

1B-A-14. Water Temperature Switch

a. Checking operation of water temperature switch

1. Make sure that the engine is cold.
2. Remove the coupler from the water temperature switch, and make sure of continuity between both terminals in the coupler, using the ohmmeter.

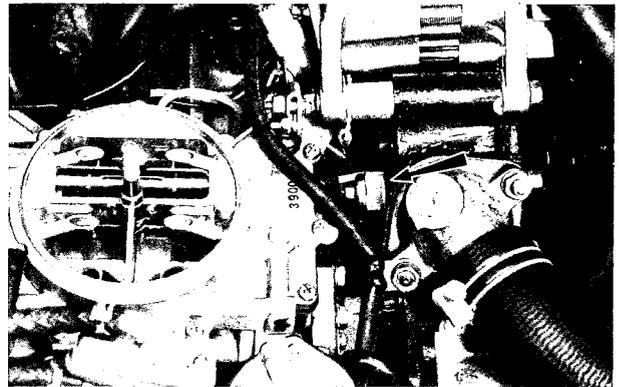


Fig. 1B-36 Water temperature switch

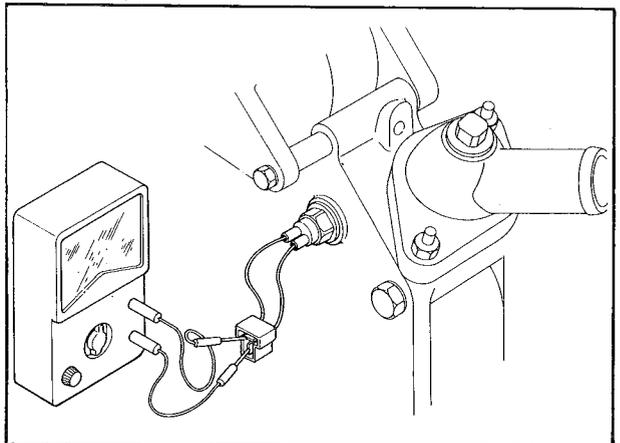


Fig. 1B-37 Checking water temperature switch

3. Connect the coupler to the water temperature switch.
4. Fully warm up the engine.
5. Remove the coupler from the water temperature switch and make sure of non-continuity between both terminals in the coupler, using the ohmmeter.

Note:

If a trouble is found in the above procedures 2 and 5, replace the water temperature switch.

b. Checking operating temperature of water temperature switch

1. Remove the water temperature switch.
2. Place the water temperature switch in water with a thermometer and gradually heat the water.
3. Make sure, using the ohmmeter, that there is no continuity between both terminals in the coupler of

the water temperature switch when the water temperature rises up to $67 \pm 6^\circ\text{C}$ ($153 \pm 11^\circ\text{F}$) (automatic transmission: $60 \pm 7^\circ\text{C}$ ($140 \pm 13^\circ\text{F}$)). If there is, replace the switch.

c. Replacing water temperature switch

1. Drain the coolant from the radiator by 1.7ℓ to reduce its level below the water temperature switch.
2. Remove the alternator and "V" belt if necessary.
3. Disconnect the coupler from the water temperature switch.
4. Loosen and remove the water temperature switch.
5. Install the water temperature switch by following the removal procedures in the reverse order.
6. Refill the radiator with the coolant. Check to see that the level of the subtank is proper, add the coolant if necessary.

1B-A-15. Idle Switch

a. Checking idle switch

1. Start the engine and keep it running at idle speed.
2. Disconnect the coupler from the idle switch.
3. Using the ohmmeter, make sure of continuity between the terminals (A) - (B) in the coupler and of non-continuity between (C) - (B).
4. Next, gradually raise the engine speed up to **1,000 ± 50 rpm** (with the gear shift lever in "N" range in case of the car with automatic transmission). Make sure that continuity between the terminals (A) - (B) stops but continuity between (C) - (B) begins.

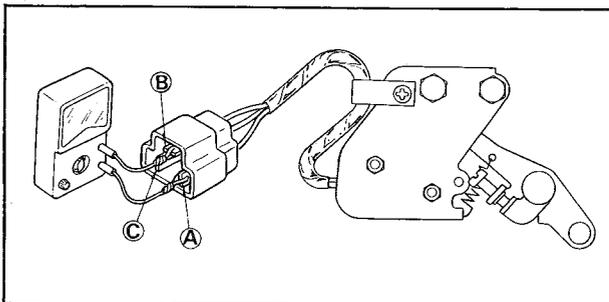


Fig. 1B-38 Checking idle switch

Note:

If a trouble is found in the above procedures 3 and 4, adjust or replace the idle switch.

b. Adjusting idle switch

Adjust the idle switch, using the adjusting screw, so as to turn from "ON" to "OFF" (between (A) terminals and (B) terminals) when the engine speed is gradually raised up to **1,000 ± 50 rpm** (with the gear selector lever in "N" range in case of the car with automatic transmission).

Note:

- 1) Turn the adjusting screw counter-clockwise when the setting revolution is higher than specified rpm.
- 2) Turn it clockwise when the setting revolution is lower than specified rpm.

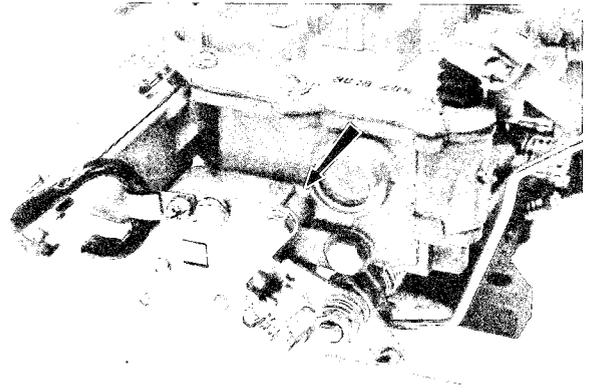


Fig. 1B-39 Idle switch

c. Replacing idle switch

1. Remove the air cleaner.
2. Disconnect the coupler from the idle switch.
3. Remove the bolts attaching the idle switch and remove the idle switch.
4. Install the idle switch by following removal procedures in the reverse order.

Note:

When the idle switch is replaced, be sure to adjust the new one.

1B-A-16. No. 1 Choke Switch

a. Checking No. 1 choke switch

1. Remove the coupler from the water temperature switch and close both terminals in the coupler.

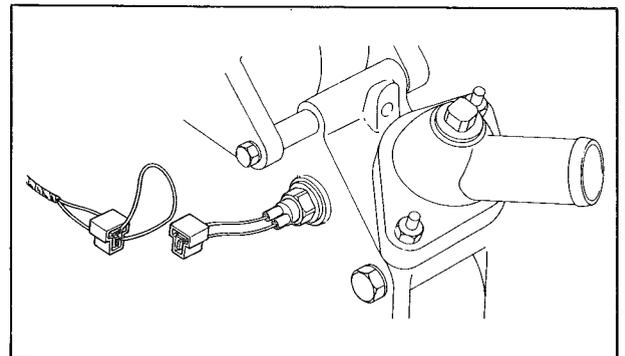


Fig. 1B-40 Closing both terminals

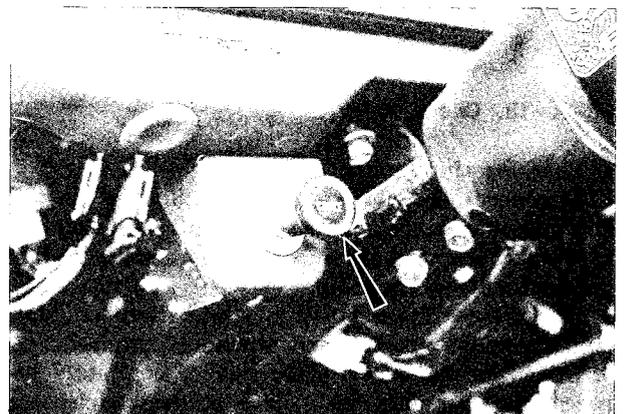


Fig. 1B-41 Choke control knob

1B

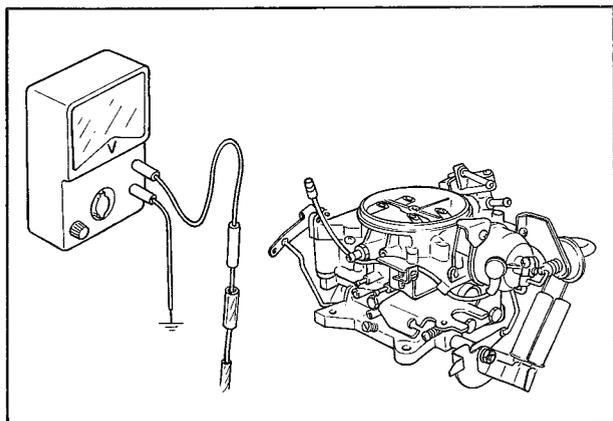


Fig. 1B-42 Checking No. 1 choke switch

2. Pull the choke control knob out all the way and start the engine.
3. Make sure, using the voltmeter, that the current flows to the bimetal of the carburetor when the engine speed is set to 2,000 rpm by adjusting the choke control knob.
4. Push the choke control knob in to idle the engine.
5. Make sure that the current does not flow to the bimetal of the carburetor.

Note:

- 1) If a trouble is found in the above procedure 3, check the choke relay; in case the choke relay is in normal conditions, replace the choke switch.
- 2) If a trouble is found in the above procedure 5, replace the No. 1 choke switch.

1B-A-17. No. 2 Choke Switch

a. Checking No. 2 choke switch

1. Turn the ignition switch on and make sure that the warning light is on.
2. Pull the choke control knob out all the way, and start the engine.
Make sure that the choke warning light is on at this time.
Next, make sure that the light goes out when the choke control knob is pushed in.

Note:

- If a trouble is found in the above procedures 1 and 2, replace the No. 2 choke switch.

1B-A-18. Choke Relay

a. Checking choke relay

1. Disconnect the coupler from the choke relay.
2. Using the ohmmeter, make sure of continuity between the terminals (B) - (NC) in the coupler and of non-continuity between (B) - (NO).
3. Apply the voltage (12V) of the battery on (SD₁) terminal in the coupler, and ground (E) terminal.
4. Using the ohmmeter, make sure of continuity between the terminals (B) - (NO) in the coupler and of non-continuity between (B) - (NC).

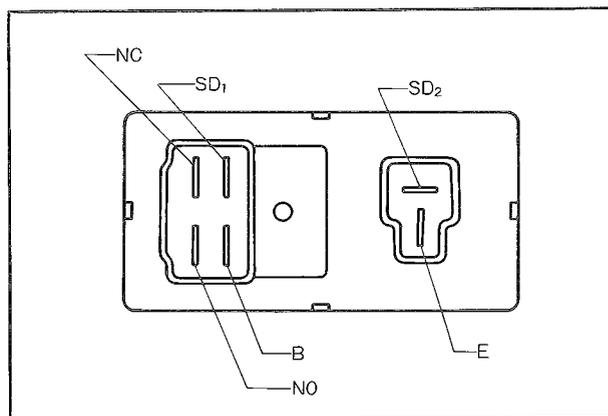


Fig. 1B-43 Checking choke relay

Note:

- If a trouble is found in the above procedures 2 and 4, replace the choke relay.

1B-A-19. Ventilation Valve

a. Checking ventilation valve

1. Start the engine and keep it running at idle speed.
2. Disconnect the ventilation hose from the filler pipe.
3. Make sure that the engine speed drops when the evaporative hose is squeezed by hand as shown in Fig. 1B-44 and then the ventilation hose removed in the above procedure 2 is closed with the fingers. If the engine stalls on that occasion, replace the ventilation valve.

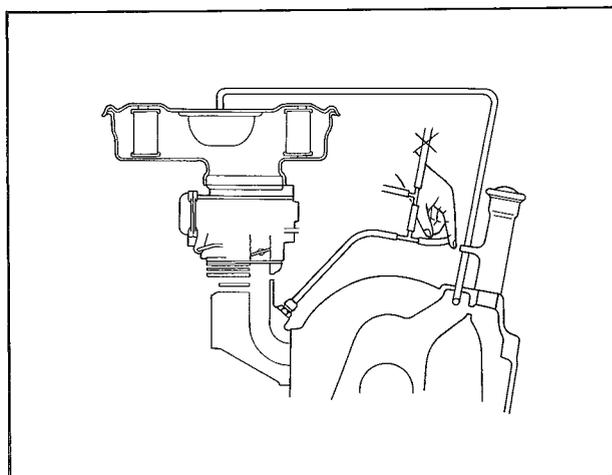


Fig. 1B-44 Checking ventilation valve

b. Replacing ventilation valve

1. Remove the deceleration control valve.
2. Disconnect the ventilation hose at the ventilation valve.
3. Loosen and remove the ventilation valve with the wrench (49 1011 120).
4. Install the ventilation valve by following the removal procedures in the reverse order.

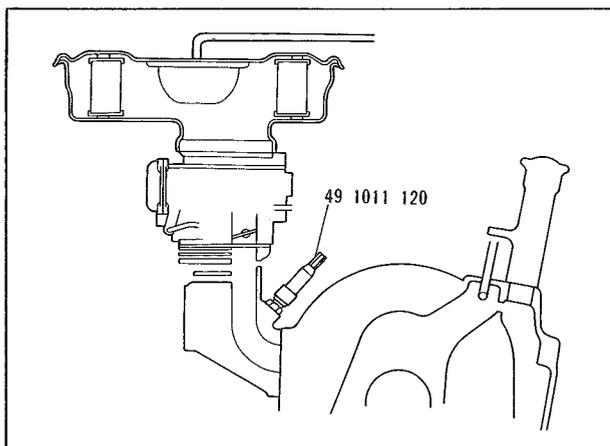


Fig. 1B-45 Removing ventilation valve

1B-A-20. Charcoal Canister

a. Checking charcoal canister

1. Check by sight for stains of the charcoal canister due to oil, etc. and for leakage of active carbon.
2. Install the vacuum gauge as shown in Fig. 1B-47, and check for clogging of the canister. The vacuum gauge reading is as follows:

- 60 ~ 0 mm-Hg/2,500 rpm

Note:

If a trouble is found in the above procedures 1 and 2, replace the canister and air cleaner cover assembly.

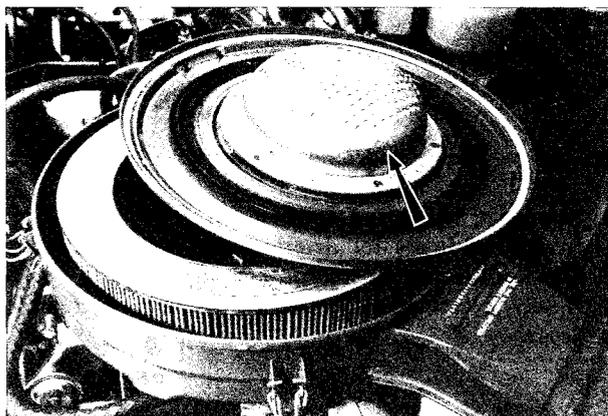


Fig. 1B-46 Charcoal canister

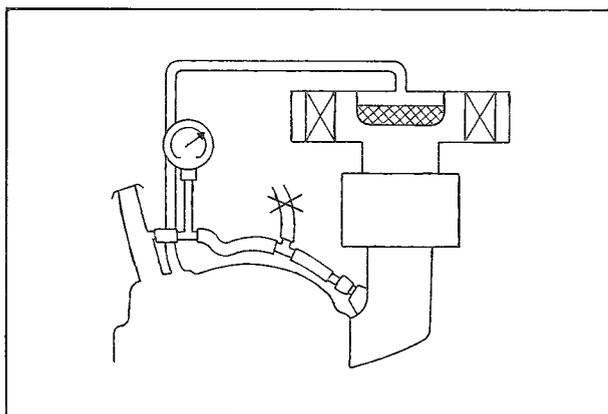


Fig. 1B-47 Checking charcoal canister

1B-A-21. Evaporative Line

a. Checking evaporative line

1. Remove the "T" joint from the evaporative hose and install the pressure gauge on the hose.
2. Disconnect the ventilation hose from the evapo compensator valve.
3. Apply compressed air gradually into the "U" tube pressure gauge so that the difference of water level should be $356 \pm 12 \text{ mm}$ ($14 \pm 0.5 \text{ in}$). After that, blind the inlet of the "U" tube pressure gauge.
4. Leave the "U" tube pressure gauge stand for five minutes, with the inlet blind. If the water level is within the hatched lines shown in Fig. 1B-48, the evaporative line is in good condition. If it is not within limits, inspect the following parts, and repair or replace as required.
 - (1) Leaky or loose hoses
 - (2) Leaky condense tank
 - (3) Leaky fuel tank
 - (4) Leaky or loose fuel line
 - (5) Leaky filler cap
 - (6) Leaky fuel gauge unit

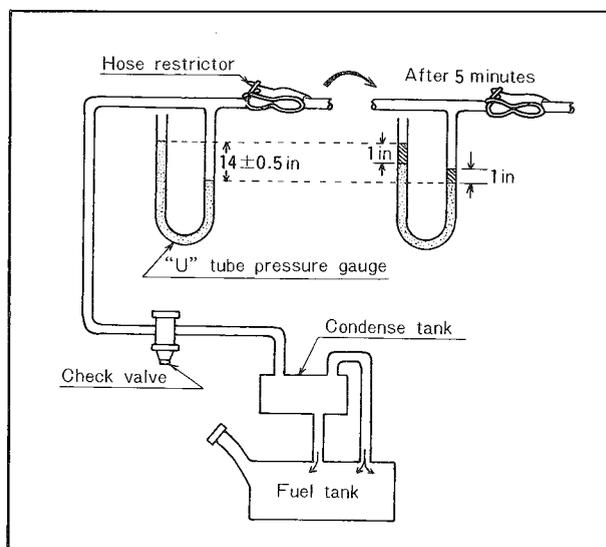


Fig. 1B-48 Checking evaporative line

1B-A-22. Condense Tank

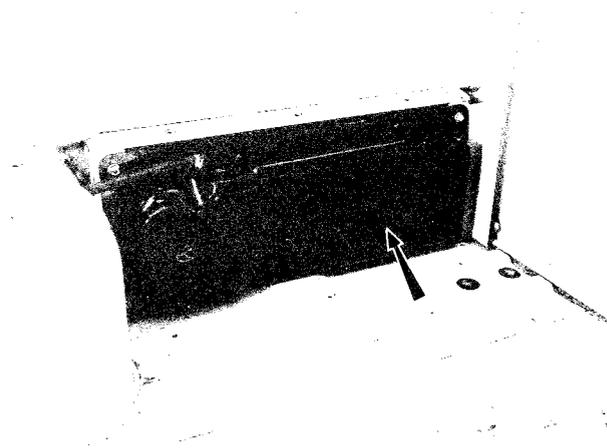


Fig. 1B-49 Condense tank

1B

a. Replacing condense tank

1. Remove the condense tank cover.
2. Disconnect the hoses from the condense tank.
3. Remove the bolts attaching the condense tank and remove the condense tank.
4. Install the condense tank by following the removal procedures in the reverse order.

1B-A-23. Check Valve (Evaporative Emission Control System)

a. Checking check valve

1. Remove the check valve.
2. As shown in Fig. 1B-50, connect a pressure gauge to the passage to the condense tank and blind the other end by finger.
3. Blow through the valve. The valve should open with the pressure of more than 0.04 kg/cm^2 (0.57 lb/in^2).

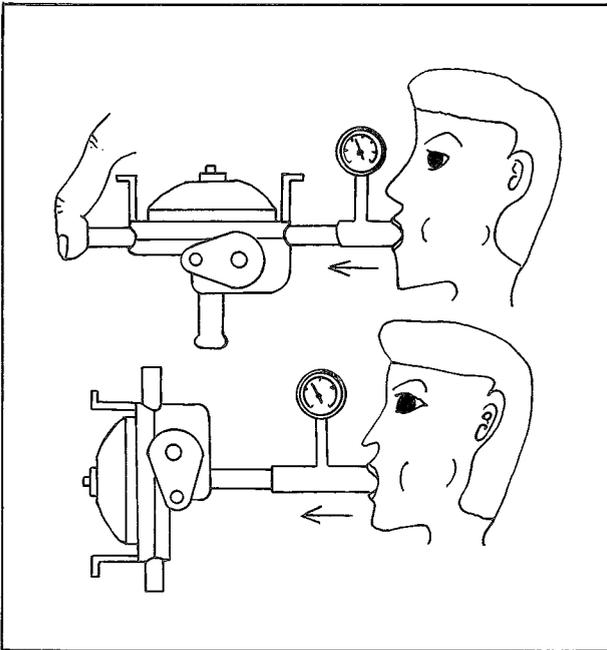


Fig. 1B-50 Checking check valve

4. Remove the pressure gauge and connect it to the passage to atmosphere.
5. Blow through the valve and if the valve opens with the pressure of more than 0.01 kg/cm^2 (0.14 lb/in^2), the valve is normal. If the valve does not operate properly, replace the valve.

Note: The test should be performed with the valve located horizontally. Otherwise the weight of the valve will move out of the position and cut the line.

b. Replacing check valve

1. Raise the rear end of the vehicle and support with stands.
2. Disconnect the hoses from the check valve.
3. Remove the bolts attaching the check valve and remove the check valve.
4. Install the check valve by following the removal procedures in the reverse order.

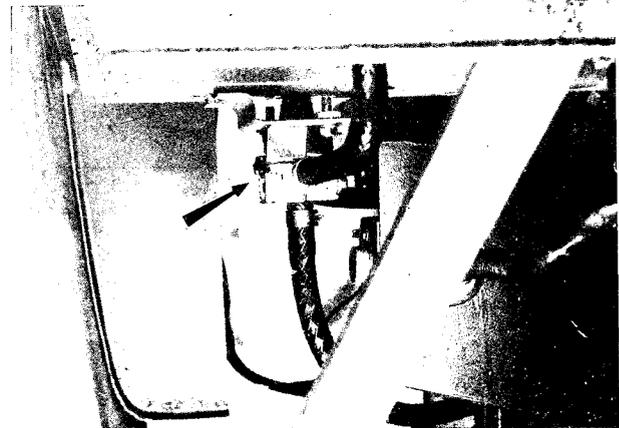


Fig. 1B-51 Check valve

1B-A-24. Hoses and Connections (All Systems)

a. Inspecting hoses and connections


1. Inspect all hoses for deterioration, holes or cracks.
2. Check all hoses for improper connection.
3. If any defect is suspected, fit properly or replace if necessary.

1B-B. TROUBLE CHECK GUIDE


Trouble Check Guide should be used following instructions in Par. 1B-A. Maintenance Procedure.

AIR CONTROL VALVE


Checking Air Control Valve

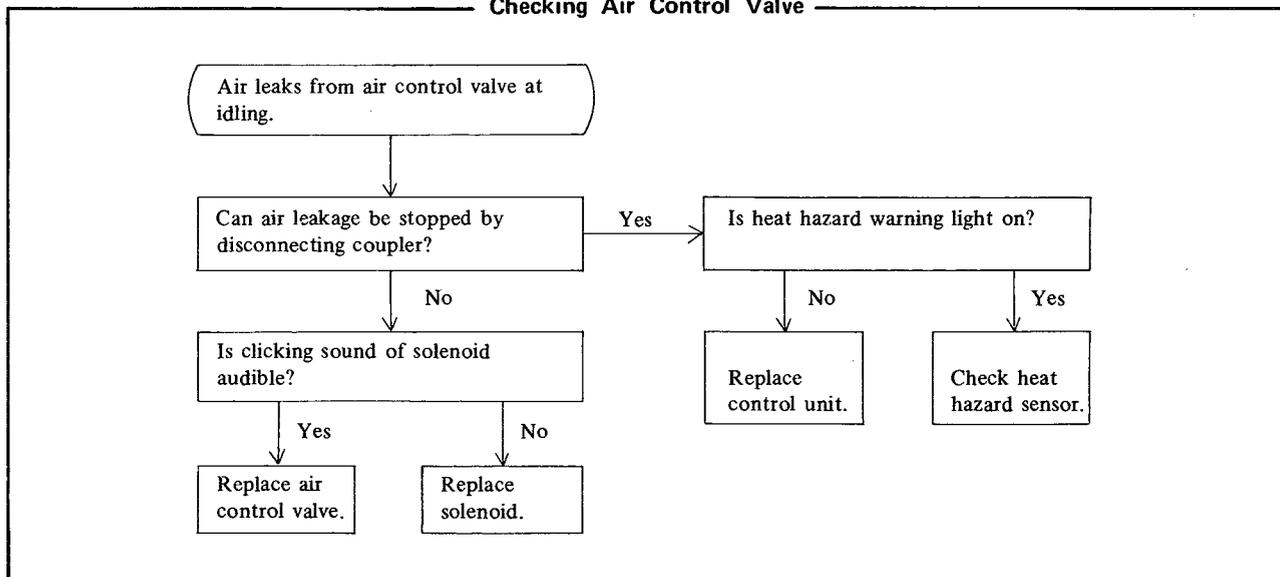


Checking Signal of Control Unit

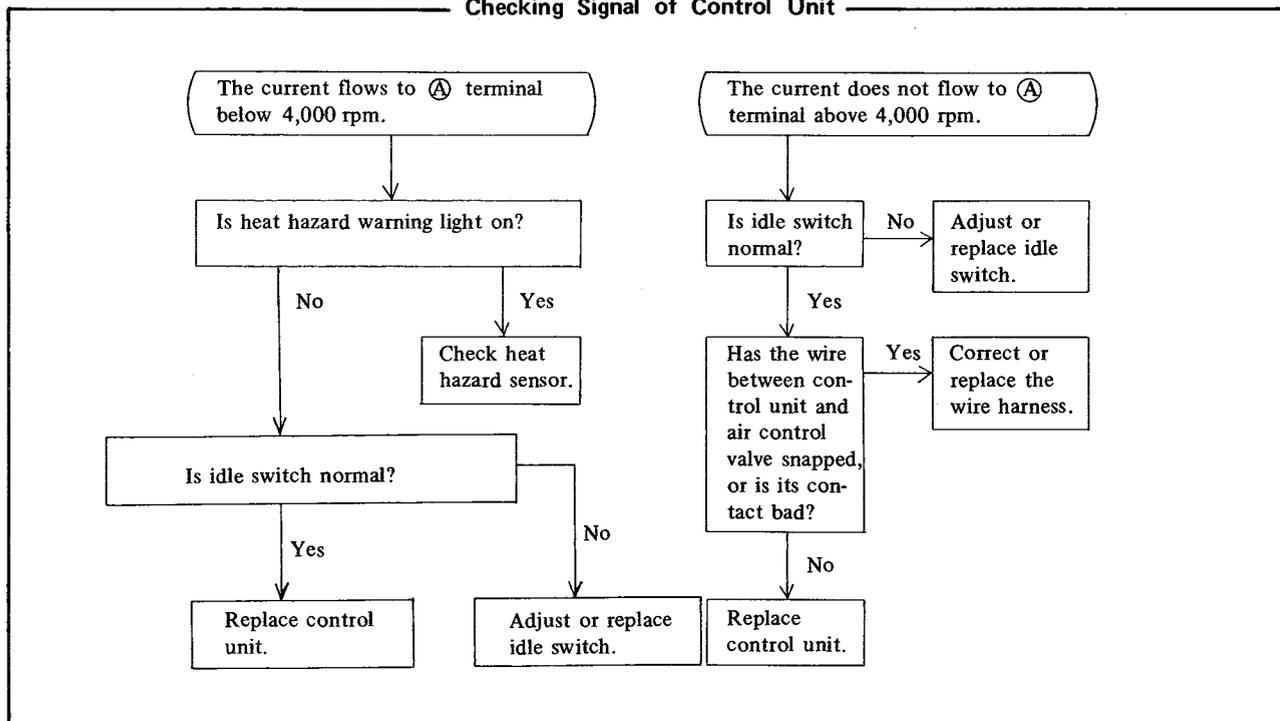

Checking Signal of Control Unit

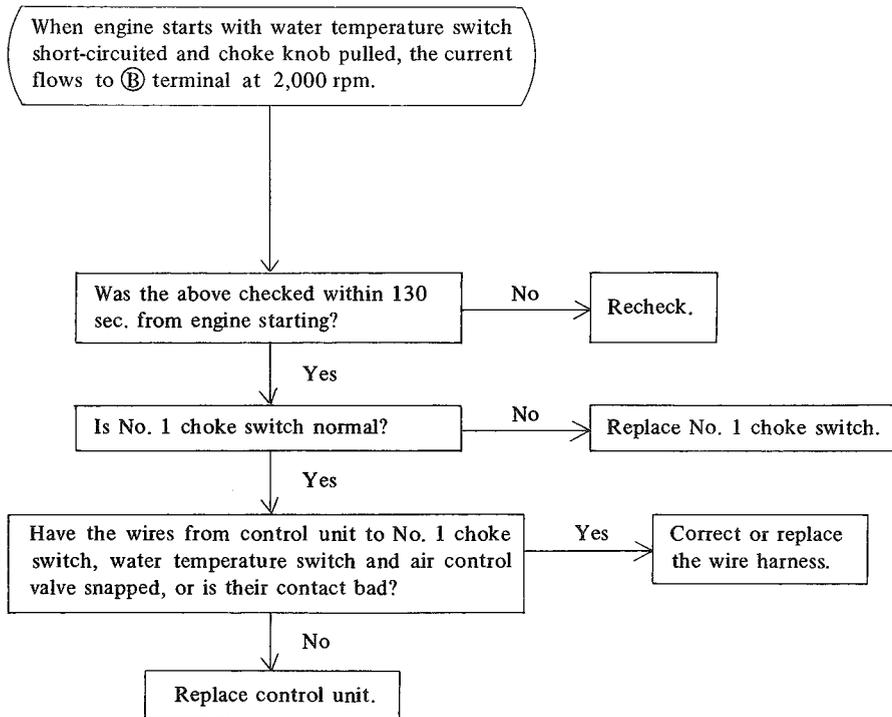


Only for manual transmission

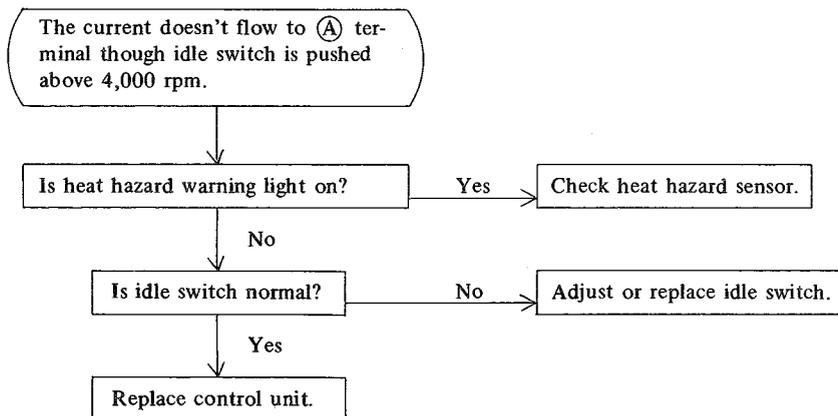


DECELERATION CONTROL VALVE

Checking Deceleration Control Valve

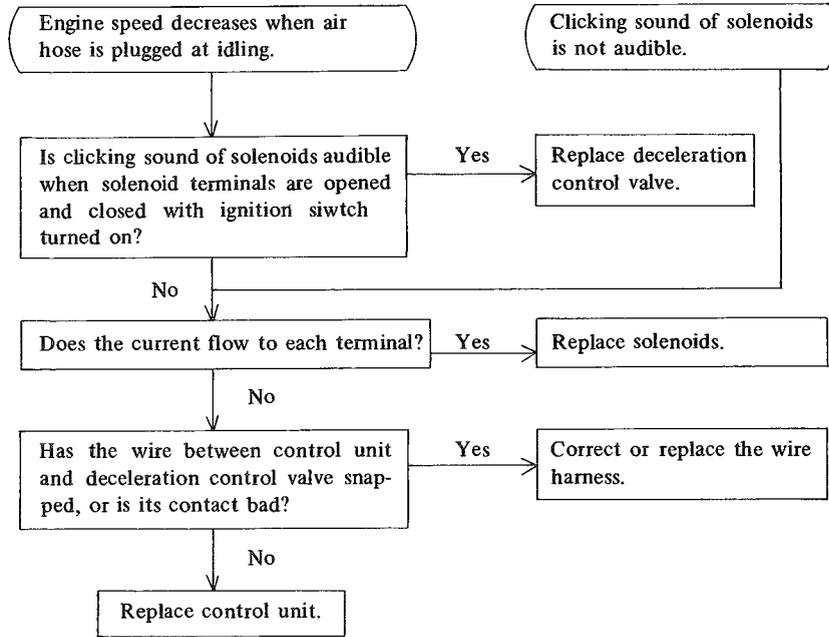


Only for manual transmission

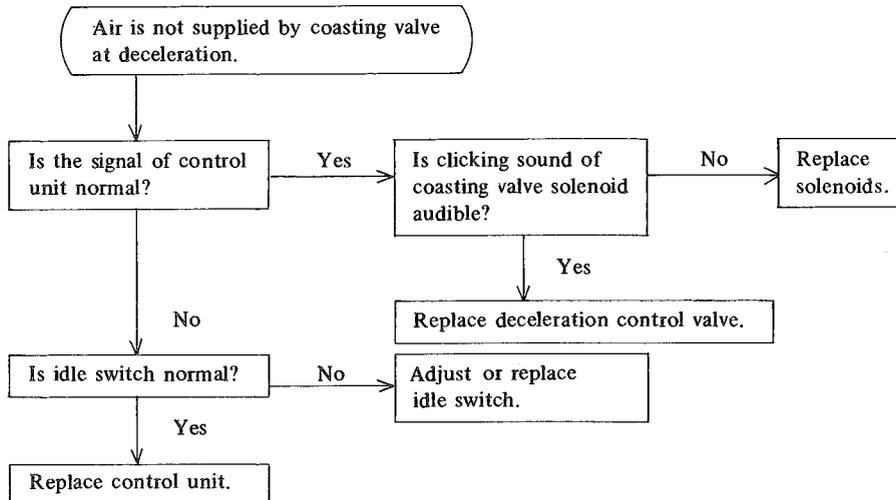


IGNITION CONTROL SYSTEM


Checking Trailing Side Ignition

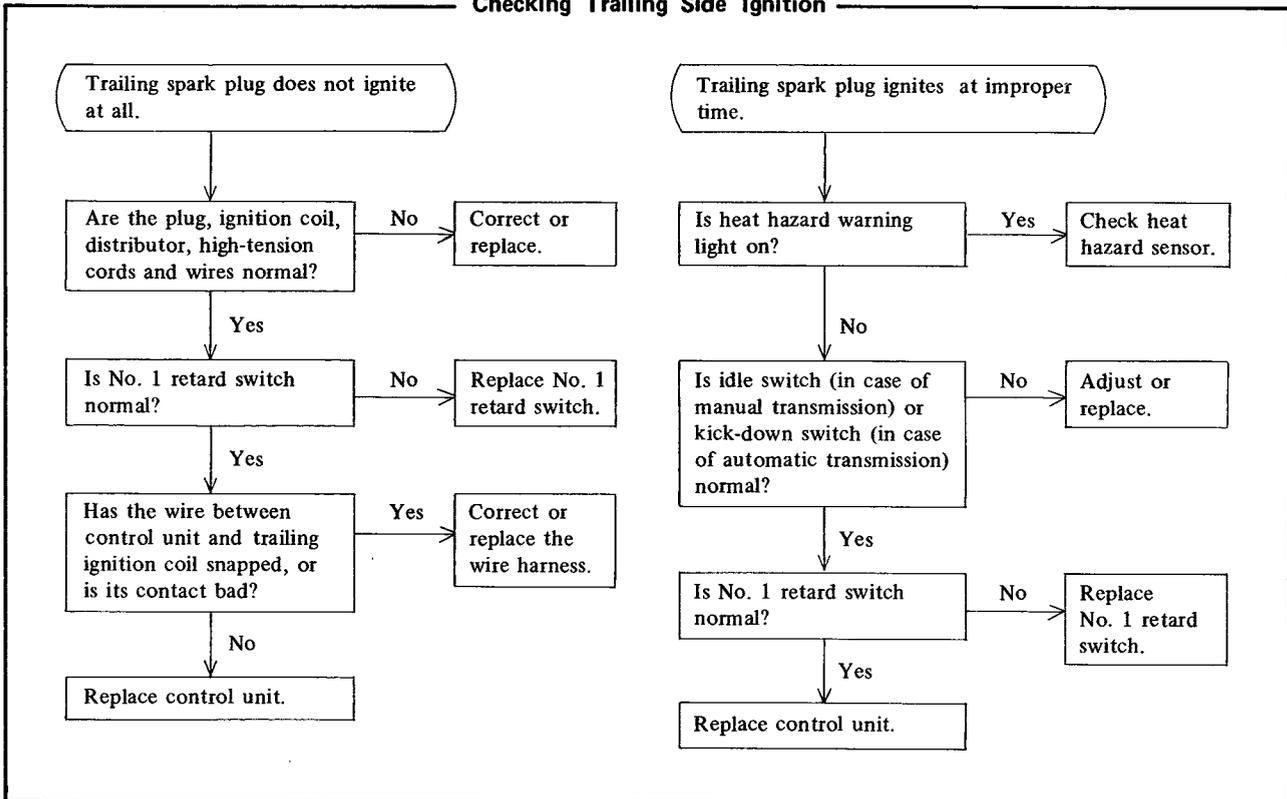


Checking Trailing Side Ignition

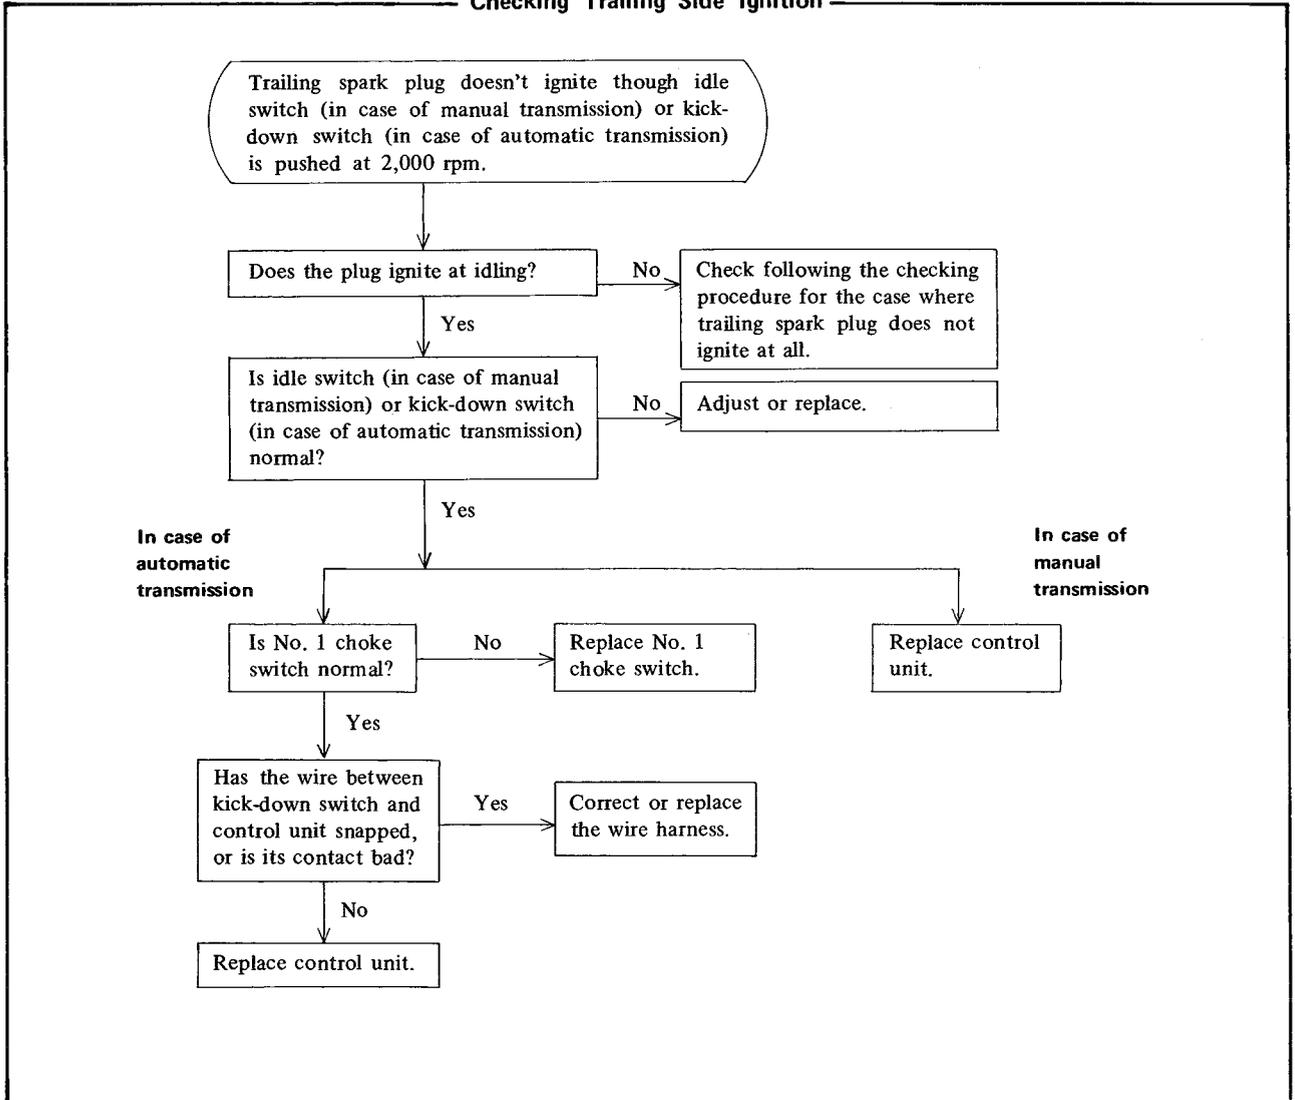


Checking Leading Side Ignition

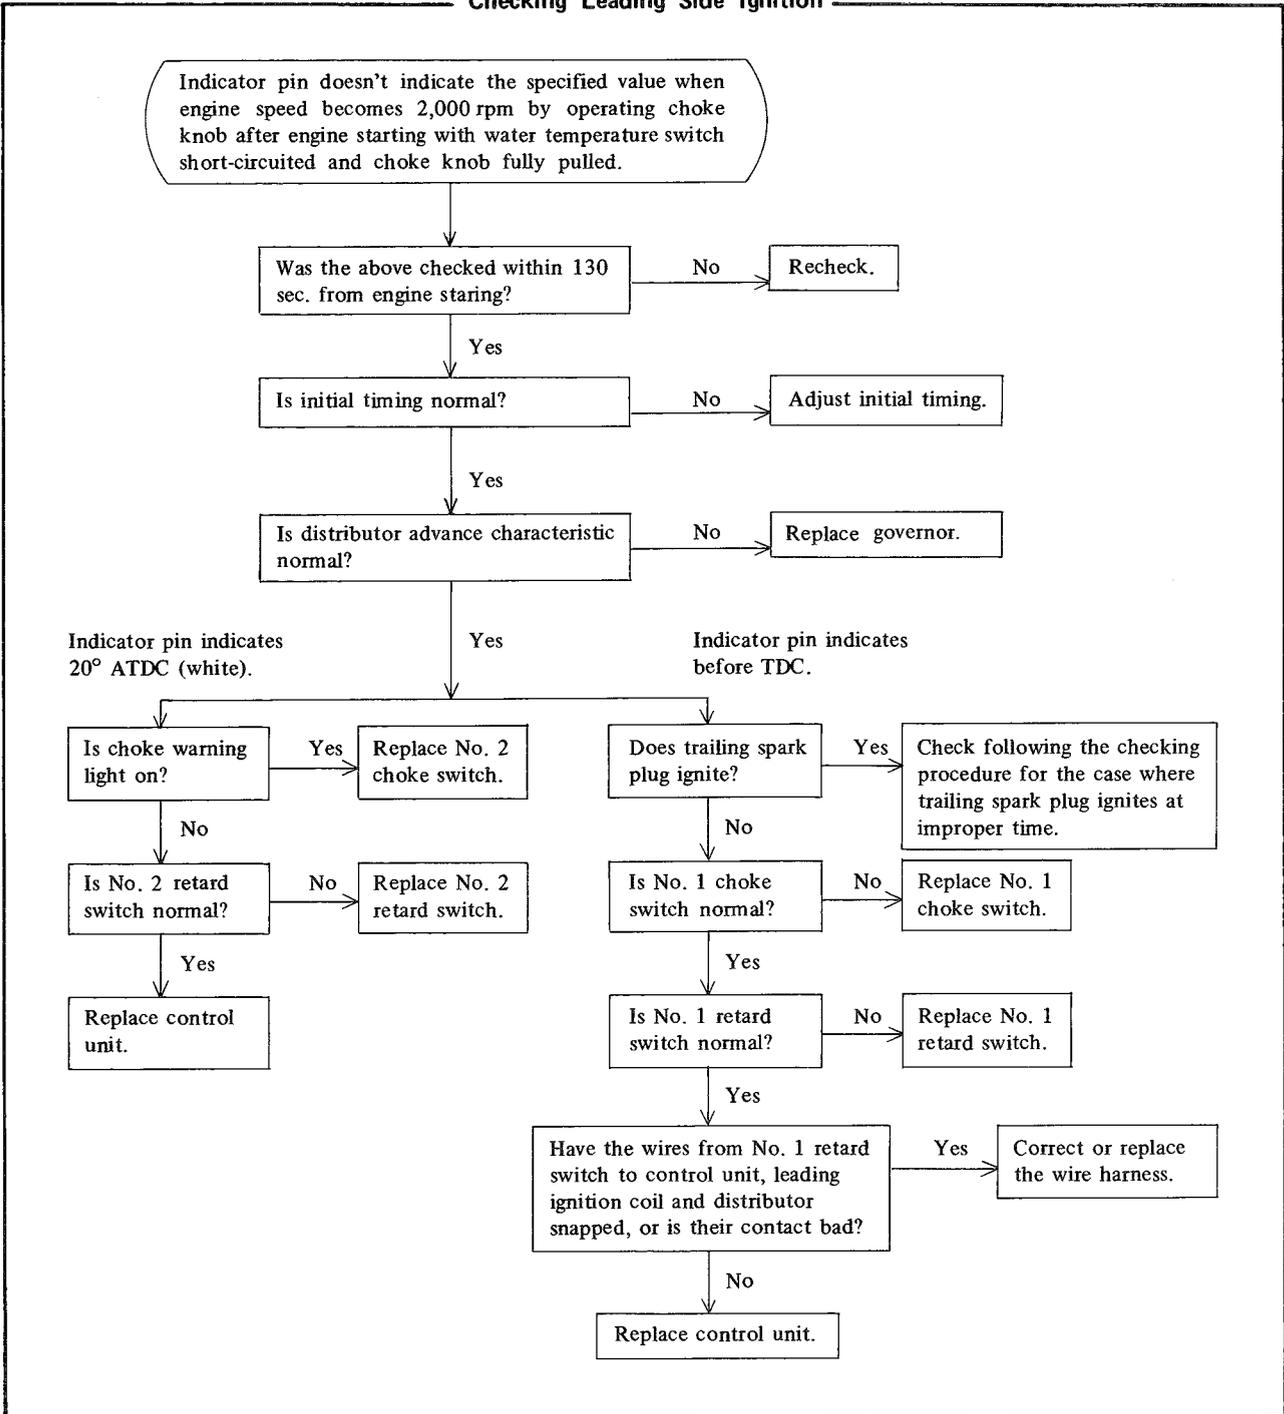

KICK-DOWN CONTROL SYSTEM
(only for automatic transmission)

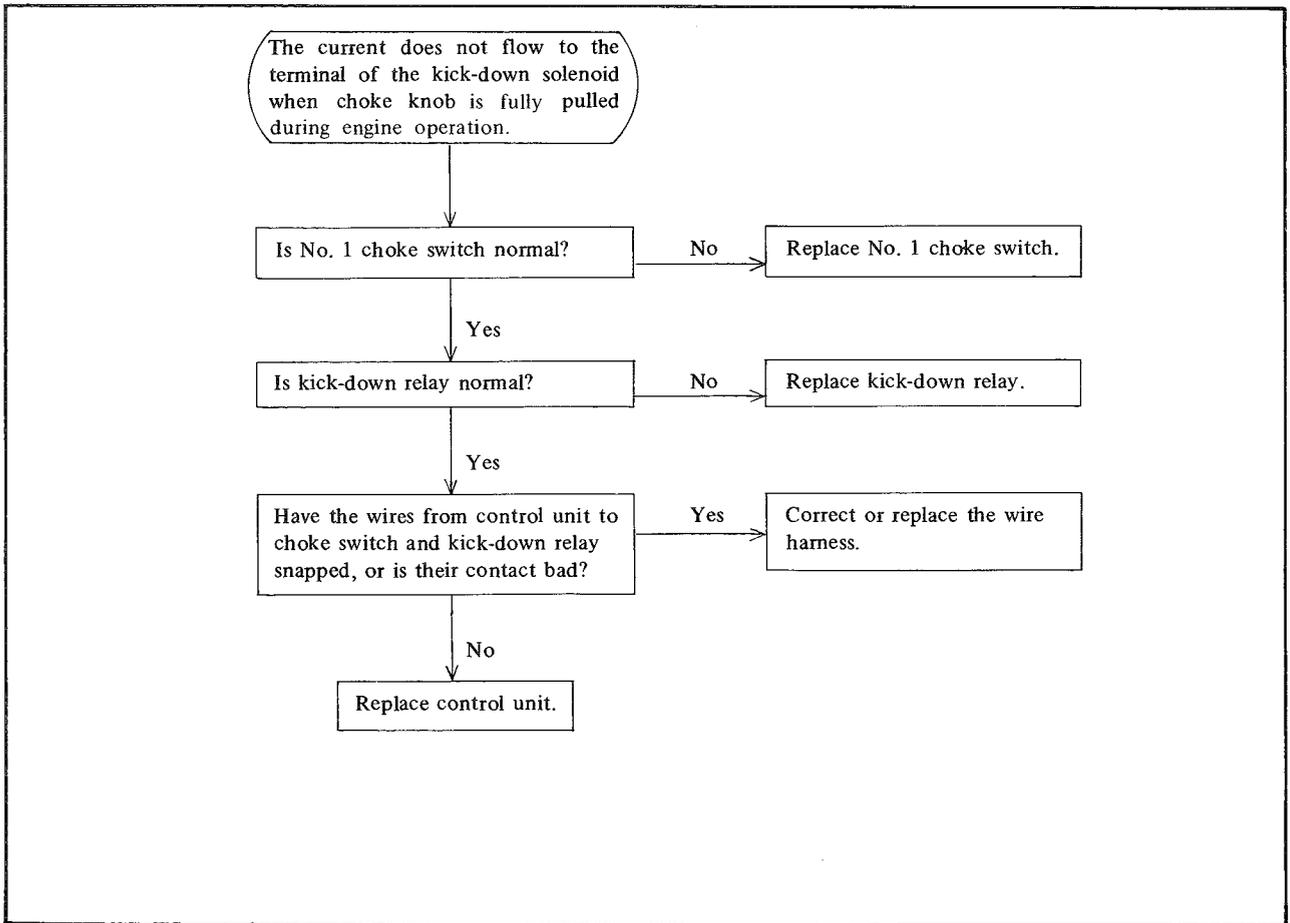

HEAT HAZARD PROTECTIVE AND WARNING SYSTEM

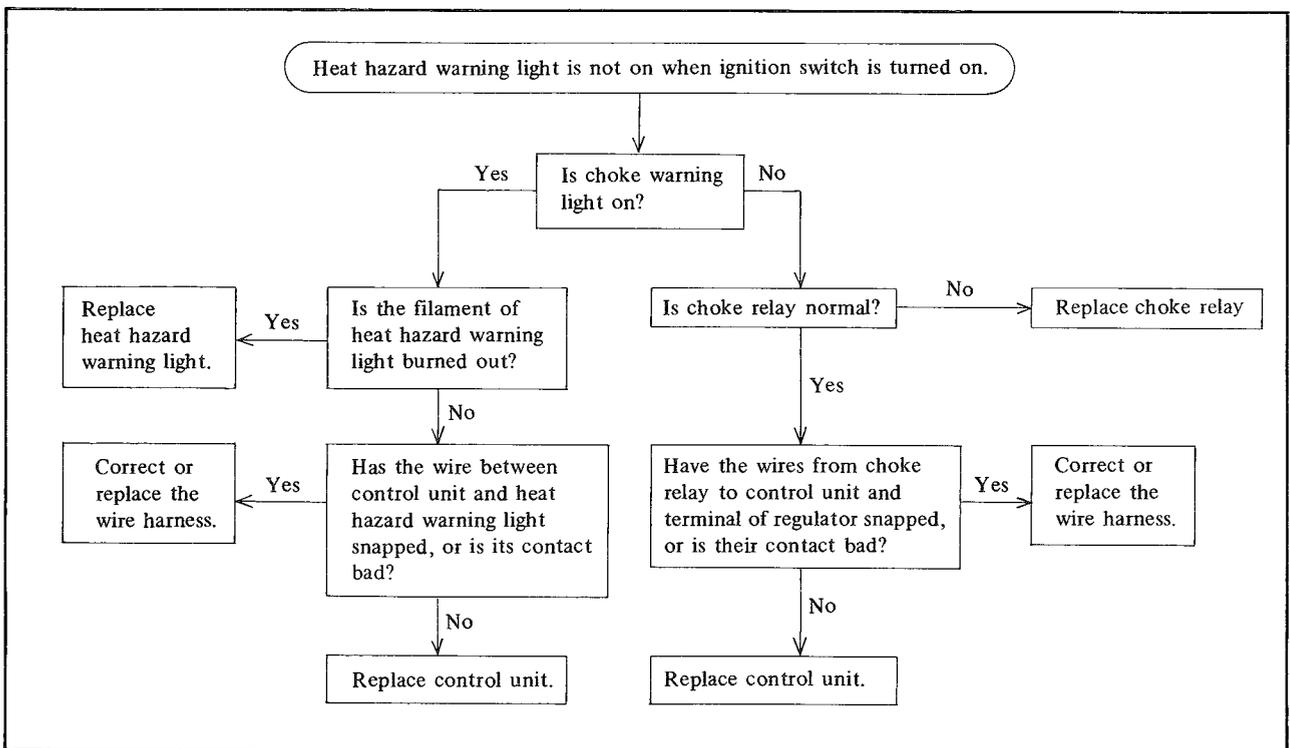

1B

1B-C. TROUBLE SHOOTING

1B-C-1. Symptoms, Causes and Remedies

The possible faults and their remedies are listed in the following table. When the symptoms of troubles are detected, proper care must be taken immediately. (It would be better to check the ignition timing, spark plug and idle setting at first.)

Symptoms and probable causes	Remedies
<p>1. Poor acceleration and poor engine power</p> <ul style="list-style-type: none"> * The engine does not fully respond to the depression of the accelerator pedal. * The accelerative force is poor. * The climbing capacity is insufficient. * The max. speed can not be obtained. <p>A. Defect of air intake system</p> <ol style="list-style-type: none"> 1) Clogging of air cleaner 2) Defect of intake air temperature control valve <p>B. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper injection of carburetor accelerator pump 2) Clogging of carburetor jets 3) Improper opening of throttle valve and choke valve 4) Lack of fuel supply at high speed running <p>C. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Defect of ignition control system (control unit, retard switch etc.) 3) Burned or improperly adjusted distributor contact point 4) Fouling and excessive gap of spark plugs <p>D. Air leak from each hose and each valve</p> <p>E. Low compression pressure</p> <p>F. Collapse of exhaust system</p> <p>G. Defect of kick-down control system only in case of automatic transmission</p>	<p>Clean or replace See 4-J Replace if necessary</p> <p>See 4-A-1. c. Adjust or replace Clean or replace Repair See 4-E-1 Replace if necessary</p> <p>See 5-F-1, 5-F-3 Adjust See 1B-A-7 Replace if necessary See 5-F-2, 5-F-6. c. Adjust or replace See 5-E Clean or replace</p> <p>Repair or replace Repair Repair or replace See 1B-A-10</p>
<p>2. Rough engine idling and hard starting</p> <ul style="list-style-type: none"> * The idling speed cannot be lowered. * Too much engine vibration at idling. * The engine starting is too hard. * The engine stalls immediately even if it starts. <p>A. Defect of air intake system</p> <ol style="list-style-type: none"> 1) Clogging of air cleaner 2) Defect of intake air temperature control valve <p>B. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper idle setting 2) Clogging of carburetor jets 3) Clogging of fuel return passage 4) Improper seating of carburetor secondary throttle valve 5) Defect of choke system 6) Defect of richer or improper signal from control unit only in case of manual transmission (Richer is continuously opened) <p>C. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Defect of ignition control system (control unit etc.) 3) Burned or improperly adjusted distributor contact point 4) Fouling and excessive gap of spark plugs 5) Internal disconnection of ignition coils 6) Electric leak from high tension cords, distributor, ignition coil etc. <p>D. Defect of deceleration control valve or improper signal from control unit (Deceleration control valve is continuously opened)</p>	<p>Clean or replace See 4-J Replace if necessary</p> <p>See 4-A-1. a. Adjust Clean or replace Clean or replace Repair See 4-A-1. f. Adjust See 4-C-1 Replace if necessary</p> <p>See 5-F-1, 5-F-3 Adjust See 1B-A-7 Replace if necessary See 5-F-2, 5-F-6. c. Adjust or replace See 5-E Clean or replace See 5-H Replace Repair</p> <p>See 1B-A-5 Replace if necessary</p>

Symptoms and probable causes	Remedies
E. Defect of altitude compensator F. Defect of ventilation valve G. Defect of secondary air control system (Secondary air is not injected properly) 1) Defect of air pump and/or "V" belt 2) Defect of air control valve 3) Improper signal from control unit H. Air leak from each hose and each valve I. Low compression pressure	See 1B-A-6 Replace if necessary See 1B-A-19 Replace if necessary See 1B-A-1 Replace if necessary See 1B-A-4 Replace if necessary See 1B-A-4 Replace if necessary Repair or replace Repair
3. Improper fuel connection between slow and main zones (Flat Spot)	
* Shock is felt when depressing the accelerator pedal to accelerate from the low speed cruising condition.	
A. Defect of fuel system 1) Improper idle setting 2) Clogging of carburetor jets 3) Improper fuel level 4) Improper injection of carburetor accelerator pump B. Defect of ignition system 1) Fouled spark plug 2) Burned or improperly adjusted distributor contact point C. Defect of deceleration control valve or improper signal from control unit	See 4-A-1. a. Adjust Clean or replace See 4-A-1. d. Adjust See 4-A-1. e. Adjust, replace if necessary See 5-E Clean or replace See 5-F-2, 5-F-6. c. Adjust or replace See 1B-A-5 Replace if necessary
4. Improper fuel connection between primary and secondary zones	
* Shock is caused when accelerating from running at around 3,000 rpm by depressing the accelerator pedal fully.	
A. Serious clogging of air cleaner B. Defect of fuel system 1) Clogging of carburetor jets 2) Excessively low fuel level 3) Lack of fuel supply 4) Improper opening of carburetor secondary throttle valve C. Defect of ignition system 1) Fouled spark plug 2) Burned or improperly adjusted distributor contact point D. Defect of deceleration control valve or improper signal from control unit	Clean or replace Clean of replace See 4-A-1. d. Adjust See 4-E-1 Replace if necessary Repair See 5-E Clean or replace See 5-F-2, 5-F-6. c. Adjust or replace See 1B-A-5 Replace if necessary
5. Abnormally large engine knocking	
A. Too poor fuel (Octane number is low) B. Defect of ignition system 1) Improper ignition timing 2) Excessive ignition advance 3) Insufficient heat range or extreme gap erosion of spark plug	See 5-F-3 Adjust See 5-F-1 Replace if necessary See 5-E Clean or replace
6. Pre-ignition or spit back	
* Large noises come from the engine compartment at high speed running, e.g. on the free way, and the engine horsepower falls.	
NOTE: If the car runs on under the condition mentioned above, the insulator of the spark plug is broken and bites into the combustion chamber, causing the vehicle to be inoperable.	

Symptoms and probable causes	Remedies
<div style="display: flex; justify-content: space-between;"> <div style="width: 15%;"> <p>Pre-ignition</p> <p>Spit-back</p> </div> <div style="width: 85%;"> <p>A. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Excessive ignition advance 2) Insufficient heat range of spark plug 3) Excessive spark plug gap 4) Improper alignment of high tension cords <p>B. Insufficient metering oil</p> <p>C. Sticky apex seal</p> </div> </div>	<p>See 5-F-1 Replace if necessary</p> <p>See 5-E Replace</p> <p>See 5-E Replace</p> <p>Correct</p> <p>Clean</p>
<p>7. Large car bucking (deceleration surging)</p> <p>* Large car bucking occurs at deceleration.</p> <p>A. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper idle setting 2) Defect of richer or improper signal from control unit only in case of manual transmission (Richer does not operate properly at deceleration) <p>B. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Fouled spark plug 3) Burned or improperly adjusted distributor contact point <p>C. Defect of deceleration control valve or improper signal from control unit (Deceleration control valve does not operate properly at deceleration)</p> <p>D. Defect of secondary air control system (Secondary air is not injected properly)</p> <ol style="list-style-type: none"> 1) Defect of air pump and/or "V" belt 2) Defect of air control valve 3) Improper signal from control unit <p>E. Air leak from each hose and each valve</p>	<p>See 4-A-1. a. Adjust</p> <p>See 4-C-1 Replace if necessary</p> <p>See 5-F-1, 5-F-3 Adjust or replace</p> <p>See 5-E Clean or replace</p> <p>See 5-F-2, 5-F-6. c. Adjust or replace</p> <p>See 1B-A-5 Replace if necessary</p> <p>See 1B-A-1 Adjust or replace</p> <p>See 1B-A-4 Replace if necessary</p> <p>See 1B-A-4 Replace if necessary</p> <p>Repair or replace</p>
<p>8. Afterburning (Back fire)</p> <p>* Extremely annoying afterburning occurs during deceleration.</p> <p>* Afterburning occurs when turning off the ignition switch.</p> <p>A. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Improper idle setting 2) Defect of richer or improper signal from control unit only in case of manual transmission (Richer does not operate properly at deceleration) <p>B. Defect of ignition system</p> <ol style="list-style-type: none"> 1) Improper ignition timing and ignition advance 2) Fouled spark plug 3) Burned or improperly adjusted distributor contact point <p>C. Defect of deceleration control valve or improper signal from control unit (Deceleration control valve does not operate properly at deceleration or when ignition switch is turned off.)</p> <p>D. Defect of secondary air control system (Secondary air is not injected properly)</p> <ol style="list-style-type: none"> 1) Defect of air pump and/or "V" belt 2) Defect of air control valve 3) Improper signal from control unit <p>E. Defect of altitude compensator</p> <p>F. Defect of ventilation valve</p> <p>G. Air leak from each hose and each valve</p> <p>H. Gas leak from exhaust system</p>	<p>See 4-A-1. a. Adjust</p> <p>See 4-C-1 Replace if necessary</p> <p>See 5-F-1, 5-F-3 Adjust or replace</p> <p>See 5-E Clean or replace</p> <p>See 5-F-2, 5-F-6. c. Adjust or replace</p> <p>See 1B-A-5 Replace if necessary</p> <p>See 1B-A-1 Adjust or replace</p> <p>See 1B-A-4 Replace if necessary</p> <p>See 1B-A-4 Replace if necessary</p> <p>See 1B-A-6 Replace if necessary</p> <p>See 1B-A-19 Replace if necessary</p> <p>Repair or replace</p> <p>Repair or replace</p>
<p>9. Overflow from carburetor</p> <p>A. Defect of fuel system</p> <ol style="list-style-type: none"> 1) Dust biting into needle valve 	<p>See 4-A-1. d. Clean</p>

Symptoms and probable causes	Remedies
2) Improper seating of needle valve 3) Improper movement of float 4) Clogging of fuel return passage 5) Large fuel pressure of fuel pump	See 4-A-1. d. Clean or replace See 4-A-1. d. Adjust or replace Clean or replace See 4-E-1 Replace if necessary
10. The engine brake does not work even if the accelerator pedal is released. * Even if the accelerator pedal is released when running, the engine brake does not work, which causes the overrunning and makes the driver uneasy.	
A. Clogging of air cleaner B. Defect of fuel system 1) Improper returning of carburetor primary throttle valve 2) Improper returning of carburetor secondary throttle valve C. Defect of deceleration control valve (The opening period of anti-afterburn valve is too long.)	Clean or replace Repair Repair See 1B-A-5 Replace if necessary
11. Overheat * Indicating "H" of the thermometer on the instrument panel denotes overheating. Running on with such an overheated engine may lead to serious damage of the engine.	
A. Defect of cooling system 1) Lack of coolant 2) Coolant leak from water pump, radiator, car heater, water hose etc. 3) Defect of fan drive 4) Defect of thermostat 5) Clogging of radiator B. Loosening or breakage of "V" belt C. Lack of engine oil D. Defect of water thermo switch for car cooler E. Defect of thermometer or heat gauge unit	Replenish Repair or replace if necessary Replace if necessary Replace if necessary Clean Adjust or replace Replenish if necessary Replace if necessary Replace if necessary
12. Improper operation of choke control knob * Choke knob cannot remain pulled. * Choke knob does not return automatically.	
A. Defect of choke relay B. Defect of water temperature switch C. Defect of control unit D. Defect of choke wire (electromagnet, choke switch etc.) E. Defect of choke return spring	See 1B-A-18 Replace if necessary See 1B-A-14 Replace if necessary See 1B-A-13 Replace if necessary See 1B-A-8, 1B-A-9, 1B-A-12 Replace if necessary See 1B-A-12 Replace if necessary
13. Abnormal fast idle speed * Fast idle speed is abnormally high or low.	
A. Defect of No. 1 choke switch and/or No. 2 choke switch. B. Defect of ignition system 1) Improper ignition timing and ignition advance 2) Defect of ignition control system (control unit, No. 2 retard switch etc.) C. Defect of fuel system 1) Improper opening of carburetor throttle valve 2) Defect of choke system	See 1B-A-8, 1B-A-9 Replace if necessary See 5-F-1, 5-F-3 Adjust or replace See 1B-A-7 Replace if necessary Repair See 1B-A-12 Replace if necessary

Ventilation valve

- * Misfiring frequently occurs during idling.
- * Rough engine idling
- * Afterburning
- * Car bucking (deceleration surging)
- * Dilution of engine oil with gasoline increases.
- * Defective purging occurs in charcoal canister.
- * Exhaust emission becomes unfavourable.

Air pump

- * Exhaust emission becomes unfavourable.
- * Noisy air pump

Richer (Manual transmission only)

- * Exhaust emission becomes unfavourable
- * Rough engine idling
- * Afterburning
- * Car bucking (deceleration surging)

Power valve (Automatic transmission only)

- * Exhaust emission becomes unfavourable.
- * Poor acceleration

Kick-down switch (Automatic transmission only)

- * Improper operation of kick-down control system

Water temperature switch

- * Improper operation of automatic throttle release system
- * Improper operation of ignition control system
- * Improper operation of air control valve

Idle switch (Manual transmission only)

- * Improper operation of deceleration control valve
- * Improper operation of ignition control system
- * Improper operation of air control valve
- * Improper operation of richer

No. 1 retard switch

- * Improper operation of ignition control system

No. 2 retard switch

- * Improper operation of ignition control system

No. 1 choke switch

- * Improper operation of automatic throttle release system
- * Improper operation of ignition control system
- * Improper operation of air control valve
- * Improper operation of kick-down control system (Automatic transmission only)
- * Improper operation of choke system

No. 2 choke switch

- * Improper operation of automatic throttle release system
- * Improper operation of ignition control system

Control unit

- * Improper operation of deceleration control valve

1B

- * Improper operation of air control valve
- * Improper operation of ignition control system
- * Improper operation of fuel system (Richer or power valve)
- * Improper operation of automatic throttle release system
- * Improper operation of heat hazard protective and warning system
- * Improper operation of kick-down control system (Automatic transmission only)

Fuse of control unit

- * Hard starting, rough idling and large car knocking may be caused by leaving deceleration control valve open.

SPECIAL TOOLS

49 2113 010	Air pump gauge set
49 1881 125	Thermal reactor remover
49 1011 120	Ventilation valve wrench

LUBRICATING SYSTEM

DESCRIPTION.....	2 : 1
2-A. LUBRICATING CIRCUIT.....	2 : 1
2-B. OIL PRESSURE REGULATOR.....	2 : 1
2-C. OIL LEVEL SENSOR.....	2 : 2
2-C-1. Removing Oil Level Sensor.....	2 : 2
2-C-2. Checking Oil Level Sensor.....	2 : 2
2-C-3. Installing Oil Level Sensor.....	2 : 2
2-D. CHECKING OIL PRESSURE.....	2 : 2
2-E. OIL PRESSURE CONTROL VALVE.....	2 : 2
2-E-1. Checking Oil Pressure Control Valve.....	2 : 3
2-F. OIL COOLER.....	2 : 3
2-F-1. Checking Oil Cooler.....	2 : 3
2-F-2. Checking By-pass Valve.....	2 : 3
2-G. OIL PUMP.....	2 : 3
2-G-1. Disassembling Oil Pump.....	2 : 3
2-G-2. Checking Oil Pump.....	2 : 3
2-G-3. Assembling Oil Pump.....	2 : 4
2-H. OIL FILTER.....	2 : 5
2-H-1. Replacing Oil Filter.....	2 : 5
2-I. METERING OIL PUMP.....	2 : 5
2-I-1. Measuring Oil Discharge.....	2 : 5
2-I-2. Adjusting Metering Oil Pump.....	2 : 6
2-J. OIL PAN.....	2 : 6
2-J-1. Removing Oil Pan.....	2 : 6
2-J-2. Checking Oil Pan.....	2 : 6
2-J-3. Installing Oil Pan.....	2 : 6
SPECIAL TOOL.....	2 : 6

DESCRIPTION

Oil is circulated under pressure by a rotor type pump. The pump is mounted on the front housing and driven by the chain via eccentric shaft.

A full flow type oil filter is mounted on the rear housing.

The oil capacity is 6.4 liters (6.8 U. S. quart, 5.6 Imp. quart).

2-A. LUBRICATING CIRCUIT

1. The oil pump which is driven by the eccentric shaft, draws up the oil from the oil pan through the strainer and sends it to the oil cooler through the pressure control valve.

2. The oil from the oil cooler is forced to the oil filter through the oil pressure regulator.

3. The oil that has been filtered by the oil filter is forced to the front main bearing through the tubular dowel and to the rear main bearing through the passage of the rear housing.

4. The oil that has passed through the oil holes of the bearings, lubricate the front and rear main bearings and enters the oil passage provided in the eccentric shaft.

5. The oil passing through the eccentric shaft passage lubricates the rotor bearings.

6. Needle bearings which are provided in front of

the front housing are lubricated by the oil forced through the little hole led to the oil passage of the eccentric shaft and the oil coming after lubricating the front main bearing.

7. The eccentric shaft is equipped with two oil jets. The oil in the passage of the eccentric shaft is injected through the oil jets into the front and rear rotors and cools the rotors.

8. Stationary gears and internal gears are lubricated by the oil coming after cooling the rotors and after lubricating the main bearings.

9. The oil passing through the tubular dowel is sent to the front cover and led to the metering oil pump.

10. From the metering oil pump, the oil is forced to the carburetor and is supplied into the combustion chambers together with the air-fuel mixture to lubricate the apex seals, corner seals, side seals and housings.

2-B. OIL PRESSURE REGULATOR

The oil pressure regulator is provided on the rear housing. When the engine revolution becomes high and excessive oil pressure develops in the system, the pressure regulator opens to relieve the pressure and to send the excess oil to the oil pan. Thus, the oil pressure is maintained within the maximum pressure of 5.0 kg/cm² (71.1 lb/in²).

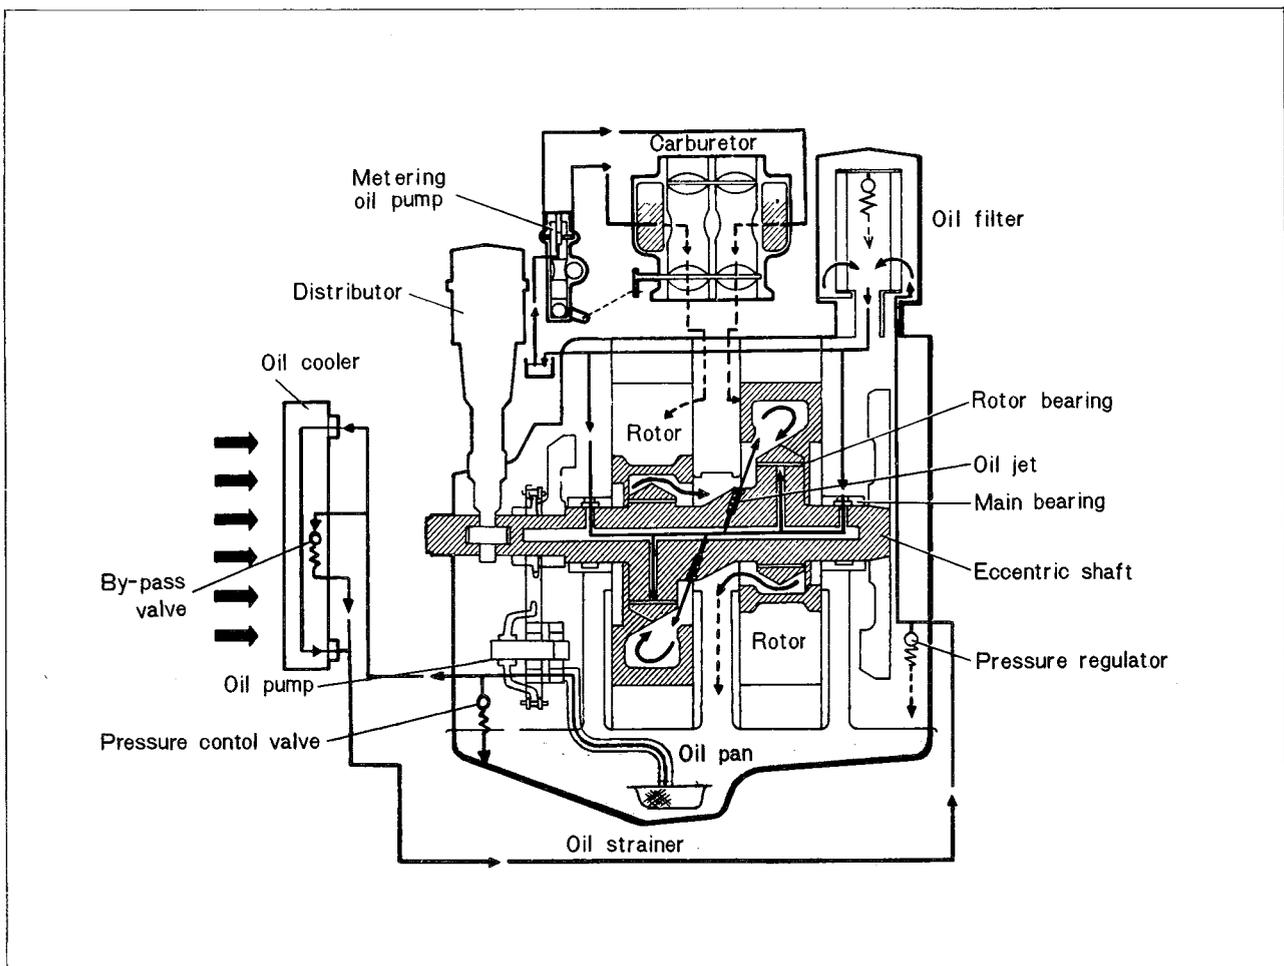


Fig. 2-1 Lubricating circuit

2-C. OIL LEVEL SENSOR

The oil level sensor which is fitted to the oil pan is connected to the oil level warning lamp with the wiring. While the engine is running, if the engine oil level goes down to around "L" mark of the dipstick gauge, the warning lamp lights up to warn necessity of the engine oil replenishment.

Therefore, when the warning lamp goes on, immediate check should be made.

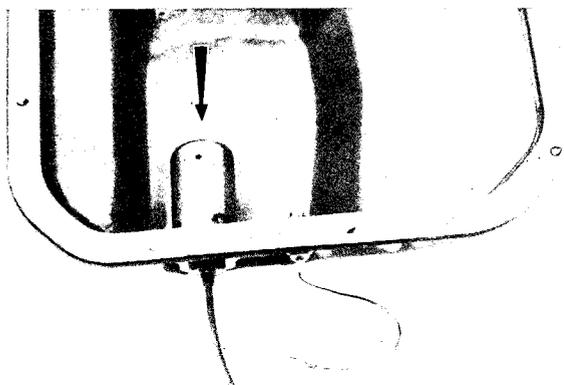


Fig. 2-2 Oil level sensor

2-C-1. Removing Oil Level Sensor

1. Remove the drain plug, and drain the engine oil from the oil pan. Refit the drain plug after draining.
2. Disconnect the coupler from the oil level sensor.
3. Remove the screws attaching the oil level sensor to the oil pan, and remove the oil level sensor.

2-C-2. Checking Oil Level Sensor

1. Clean the oil chamber.
2. Check the oil chamber with finger that deposits aren't piled up and the oil hole isn't clogged.
3. Connect the circuit tester to the level sensor as shown in Fig. 2-3, and check the continuity by moving the float up and down.

When the float is on the upper side, the circuit tester should not show any continuity, and when moved to the lower side, it should show a continuity of the circuit. If it is found not to be so, replace the oil level sensor.

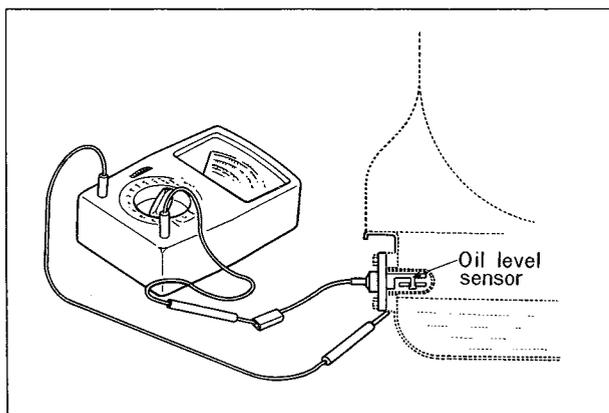


Fig. 2-3 Checking oil level sensor

2-C-3. Installing Oil Level Sensor

Follow the removal procedures in the reverse order.

Fill the oil in the engine. Run the engine and check to see that the oil is not leaking from the joining faces of the level sensor.

2-D. CHECKING OIL PRESSURE

1. Remove the blind plug on the rear housing and connect the **oil pressure gauge** (49 0187 280) instead.
2. Warm up the engine to the normal operating temperature.
3. Run the engine at **3,000 rpm** and take a reading of the gauge.
4. Run the engine at idle speed and take a reading of the gauge.

The normal oil pressure at idle is about 1.0 ~ 3.8 kg/cm² (14 ~ 54 lb/in²).

If the oil pressure is less than 1.0 kg/cm² (14 lb/in²), check the following points.

- 1) Ensure that the oil level is between the "F" and "L" of the dipstick gauge.
- 2) Check the oil filter for clog. If it exists, replace the filter cartridge, referring to Par. 2-H-1.
- 3) Check the oil pump, as described in Par. 2-G-2.

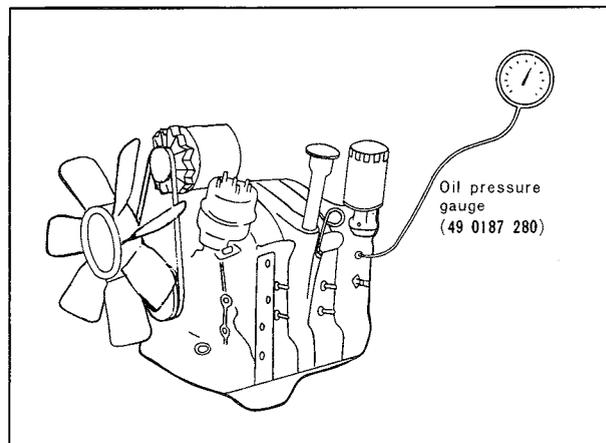


Fig. 2-4 Checking oil pressure

2-E. OIL PRESSURE CONTROL VALVE

The oil pressure control valve mounted on the front cover sends the surplus oil back to the oil pan when

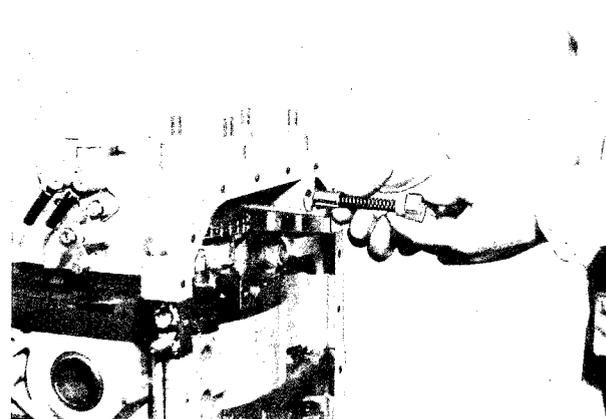


Fig. 2-5 Oil pressure control valve

the pressure exceeds 11 kg/cm² (156 lb/in²) in order to prevent the oil cooler and the oil hose from damage by the exceeding pressure which is generated at the starting in the very cold weather.

2-E-1. Checking Oil Pressure Control Valve

Remove the cap of the pressure control valve from the front cover as shown in Fig. 2-5.

Examine the spring and the plunger for corrosion or any damage. If it is severe, replace with new ones. Measure the free length and replace with new spring if these are not in the specification.

The free length of the spring is 73 mm (2.87 in).

2-F. OIL COOLER

The rotor is cooled by the lubricating oil, and the oil cooler is employed to cool the oil.

The oil cooler is of the corrugated fin type like a water radiator and is mounted under the radiator through insulation rubber. The oil cooler is made of aluminum which has outstanding cooling efficiency. The by-pass valve is provided in the oil cooler in order to prevent drop of oil supply which is caused by the resistance of the oil cooler in the cold weather and regulate the temperature of the oil circulating in the engine. The oil is sent directly to the engine without passing through the oil cooler when the difference of the oil pressure of inlet and outlet pipes is more than 3.56 kg/cm² (50.7 lb/in²) at 70°C (158°F) and/or the temperature of the oil is under 60°C (140°F).

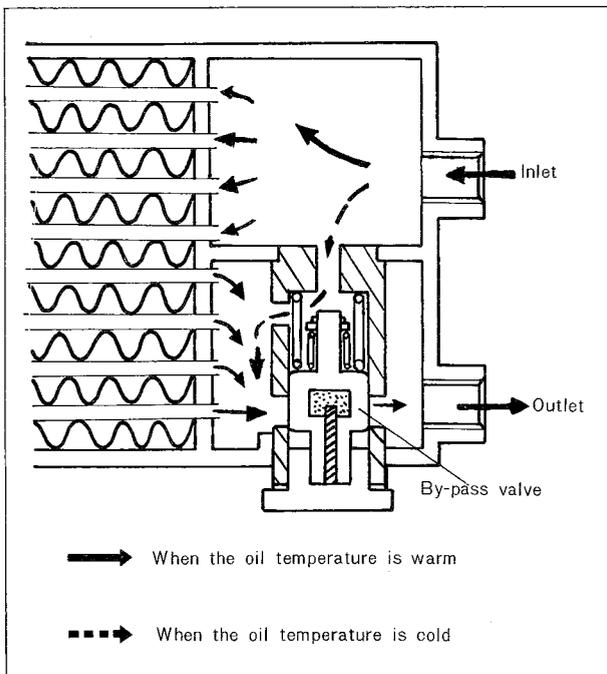


Fig. 2-6 By-pass valve

2-F-1. Checking Oil Cooler

Visually inspect the oil cooler for damage, crack and leakage.

If any defects are found, repair it by aluminum welding.

2-F-2. Checking By-pass Valve

1. Remove the cap nut and pull out the by-pass valve.

2. Soak the by-pass valve in hot oil of 75°C ~ 80°C (167°F ~ 176°C). If the protrusion of piston is more than 5 mm (0.2 in), the by-pass valve is normal. (Fig. 2-7)

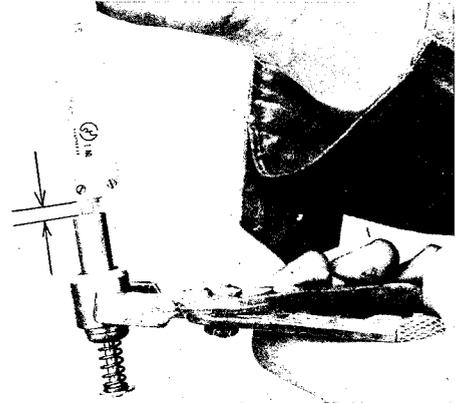


Fig. 2-7 Checking by-pass valve

2-G. OIL PUMP

The oil pump is of a rotor type based on the trochoid curve and consists of the parts as shown in Fig. 2-12. The feeding capacity is 5.0 liters/min. (5.3 U.S. quarts/min, 4.4 Imp. quarts/min.) at 1,000 rpm of engine revolution.

2-G-1. Disassembling Oil Pump

1. Remove the oil pump from the front housing.

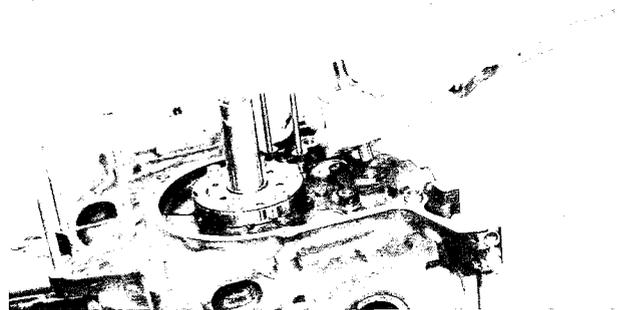


Fig. 2-8 Removing oil pump

2. Remove the snap ring from the shaft, and remove the rear rotors and key.

3. Remove the middle plate attaching screw and remove the middle plate.

4. Remove the front rotors and key from the shaft.

2-G-2. Checking Oil Pump

1. Check the clearance between the lobes of the rotors with a feeler gauge, as shown in Fig. 2-9.

If the clearance is **more than 0.15 mm (0.006 in)**, replace both rotors.

The standard clearance is 0.01 ~ 0.09 mm (0.0004 ~ 0.0035 in).



Fig. 2-9 Checking rotor clearance

2. Check the clearance between the outer rotor and the pump body with a feeler gauge, as shown in Fig. 2-10.

If the clearance is **more than 0.30 mm (0.012 in)**, replace the rotor or body. The standard clearance is 0.2 ~ 0.25 mm (0.008 ~ 0.010 in).



Fig. 2-10 Checking outer rotor clearance

3. Check the end float of the rotors. Place a straight edge across the pump body and measure the clearance between the rotor and the straight edge with a feeler gauge, as shown in Fig. 2-11.

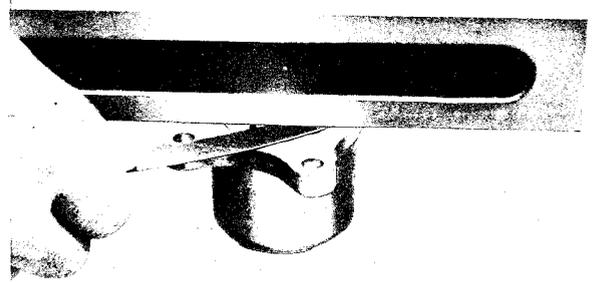


Fig. 2-11 Checking end float

Then place a straight edge across the mating surface of the front housing and measure the clearance between the straight edge and the front housing.

If the end float is **0.15 mm (0.006 in) or more**, correct the pump cover by grinding.

The standard end float is 0.03 ~ 0.13 mm (0.001 ~ 0.005 in).

2-G-3. Assembling Oil Pump

1. Clean all parts thoroughly.
2. Attach the key of the front side rotor to the shaft.
3. Install the front side inner rotor to the shaft so as to align the key groove of the inner rotor with the key on the shaft.
4. Install the inner rotor and shaft assembly and the outer rotor into the body so that the tally marks on the rotors go toward the front housing.

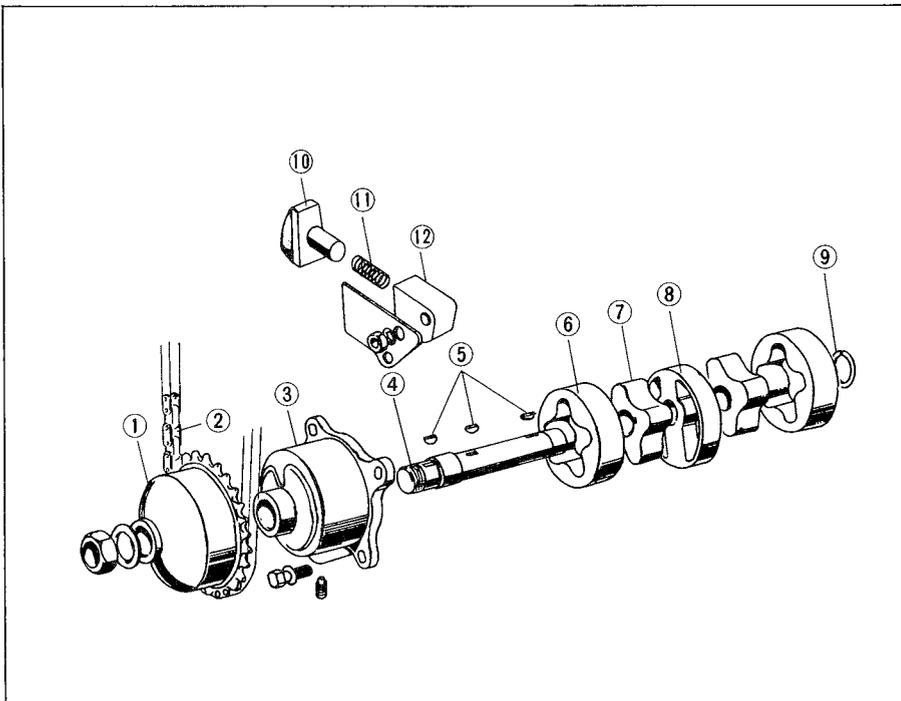


Fig. 2-12 Oil pump components

1. Oil pump sprocket
2. Oil pump drive chain
3. Pump body
4. Shaft
5. Keys
6. Outer rotor
7. Inner rotor
8. Middle plate
9. Snap ring
10. Chain adjuster
11. Spring
12. Body

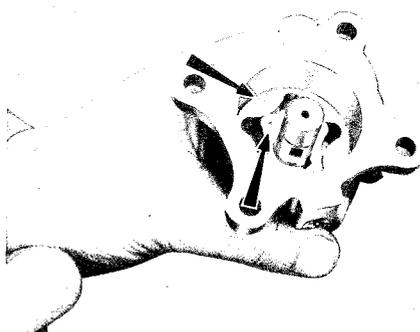


Fig. 2-13 Installing rotors

5. Install the middle plate into the body. Install the set screw to the body so that the screw aligns the recess portion of the middle plate.

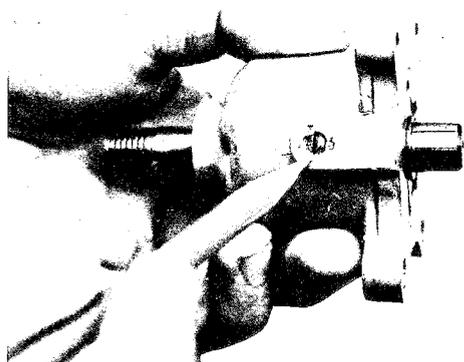


Fig. 2-14 Tightening middle plate

6. Attach the key of the rear side rotor to the shaft.
7. Install the rear side inner rotor and outer rotor into the body so that the tally marks on the rotors go toward the front housing.
8. Fit the snap ring on the shaft.

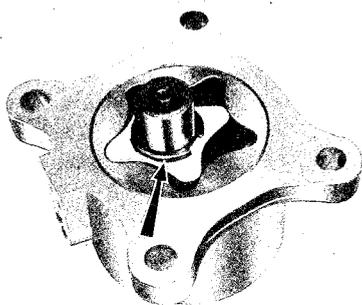


Fig. 2-15 Fitting snap ring

9. Prime the oil pump with engine oil before installing it on the engine.
10. Mount the oil pump assembly on the front housing and fix it with the bolts. Rotate the shaft by hand to see whether it rotates smoothly.

2-H. OIL FILTER

The oil filter is of a cartridge type. The element of the filter is sealed in the container as a unit.

The oil filter is provided with a relief valve.

If the oil filter clogs due to impurities in oil and the filtering resistance reaches 0.8 to 1.2 kg/cm² (11 to 17 lb/in²), the oil can not pass through the element. However, the oil pushes the relief valve open and unfiltered oil is supplied to the engine. The element should be replaced at intervals, following the maintenance schedule.

2-H-1. Replacing Oil Filter

1. Remove the oil filter cartridge with a suitable wrench.
2. **Apply oil onto the oil seal** on a new filter cartridge.
3. Install the cartridge onto the cover and tighten the cartridge **fully by hand**.
4. Start the engine and check that the joints are not leaking. Top up with oil if necessary.

2-I. METERING OIL PUMP

The plunger type metering oil pump is mounted on the front cover and driven by the distributor drive gear. The metering oil pump which is driven by the distributor drive gear, measures the oil from the oil passage in the front cover and sends it to the carburetor through the hoses. Then, the oil is discharged to the working chambers through the venturies to lubricate the gas seals.

2-I-1. Measuring Oil Discharge

Before measuring the oil discharge, check the metering oil pump for leaks.

1. Disconnect the connecting rod at the metering oil pump lever and remove the washer.
2. Warm up the engine to the normal operating temperature.
3. Disconnect two metering oil hoses at the carburetor.
4. Connect a tachometer. Run the engine at **2,000 rpm** and put the oil hoses in the measuring cylinder as shown in Fig. 2-16.

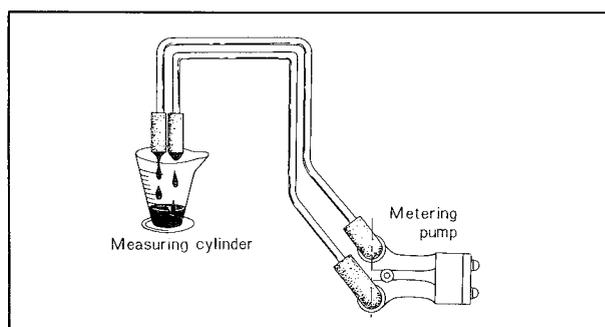


Fig. 2-16 Checking oil discharge

5. Stop the engine after **6 minutes** and check the amount of oil discharge. If it is not within the specification, adjust the metering oil pump.

2.0 ~ 2.5 cc/6 min.
at 2,000 rpm

Note:

As lubricating oil is not being supplied to the gas seals while the measurements are being taken, a proper amount of clean engine oil should be added into the carburetor.

5. Disconnect a tachometer. Connect the rod to the metering oil pump lever with a cotter pin.
6. Connect the two metering oil hoses to the carburetor.

2-1-2. Adjusting Metering Oil Pump

If the adjustment is necessary, proceed as follows:

1. Loosen the lock nut of the adjusting screw.
2. Adjust the adjusting screw until the proper oil discharge is obtained. When the adjusting screw is screwed in, the amount of oil discharge increases while the amount of oil discharge decreases when the screw is screwed out. The amount of oil discharge alters by approx. 0.2 ~ 0.3 cc/6 min./2,000 rpm per one turn of the adjusting screw.

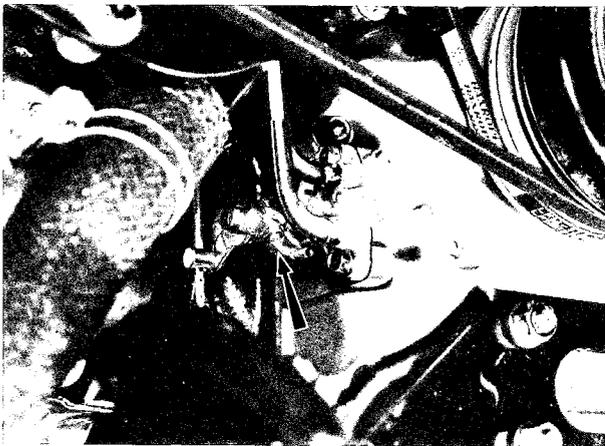


Fig. 2-17 Adjusting screw of metering oil pump

3. After adjusting is completed, tighten the lock nut.
4. Check the clearance between the pump lever and the washer as shown in Fig. 2-18. The clearance should be 0 ~ 1.0 mm (0 ~ 0.04 in). If necessary, adjust it by using a suitable washer.

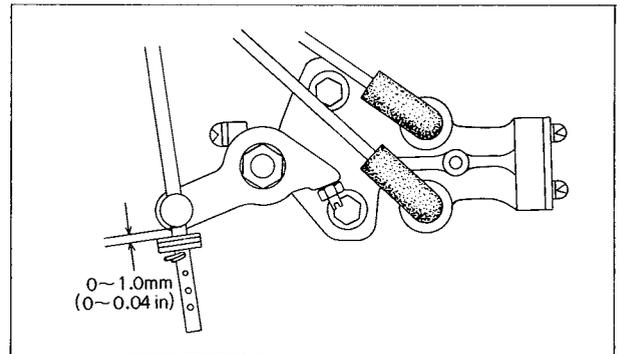


Fig. 2-18 Connecting rod setting

2-J. OIL PAN**2-J-1. Removing Oil Pan**

1. Raise the vehicle on the hoist.
2. Drain the engine oil.
3. Remove the bolts attaching the engine under cover, and remove the engine under cover.
4. Disconnect the coupler at the oil level sensor.
5. Disconnect the coupler from the oil thermo unit (Federal and Canada).
6. Remove the bolts attaching the oil pan, and remove the oil pan.

2-J-2. Checking Oil Pan

Scrape any dirt or metal particles from the inside of the oil pan. Wash the oil pan in a solvent and dry it with compressed air.

Check the oil pan for cracks, damaged drain plug threads. Inspect for damage (uneven surface) at the bolt holes caused by over torqueing the bolts. Straighten surfaces as required. Repair any damage, or replace the oil pan if repairs can not be made satisfactorily.

2-J-3. Installing Oil Pan

Follow the removal procedures in the reverse order. Fill the oil in the engine. Run the engine and check to see that the oil is not leaking from the joining faces of the oil pan.

SPECIAL TOOL

49 0187 280

Oil pressure gauge



COOLING SYSTEM

DESCRIPTION	3	: 1
3-A. COOLANT CIRCUIT	3	: 1
3-B. ANTI-FREEZE SOLUTION	3	: 1
3-C. CLEANING COOLING SYSTEM	3	: 1
3-D. COOLING SYSTEM PRESSURE TEST	3	: 2
3-E. RADIATOR	3	: 2
3-E-1. Checking Radiator	3	: 2
3-E-2. Removing Radiator	3	: 2
3-E-3. Installing Radiator	3	: 2
3-F. EXPANSION TANK	3	: 3
3-F-1. Replacing Expansion Tank	3	: 3
3-G. THERMOSTAT	3	: 3
3-G-1. Removing Thermostat	3	: 3
3-G-2. Checking Thermostat	3	: 3
3-G-3. Installing Thermostat	3	: 3
3-H. WATER PUMP	3	: 3
3-H-1. Checking Water Pump on Car	3	: 3
3-H-2. Removing Water Pump	3	: 3
3-H-3. Disassembling Water Pump	3	: 4
3-H-4. Inspecting Water Pump	3	: 4
3-H-5. Assembling Water Pump	3	: 4
3-H-6. Installing Water Pump	3	: 5
3-I. FAN DRIVE	3	: 5
3-I-1. Fan Drive Test	3	: 5
3-I-2. Replacing Fan Drive Clutch	3	: 5
3-J. COOLANT LEVEL SENSOR	3	: 5
3-J-1. Checking Coolant Level Sensor	3	: 6
3-J-2. Replacing Coolant Level Sensor	3	: 6
SPECIAL TOOL	3	: 6

DESCRIPTION

The cooling system consists of a corrugated fin type radiator, expansion tank, centrifugal water pump, wax pellet type thermostat and a seven-blade fan.

The radiator and the expansion tank are connected by hose. When engine is overheated, the coolant in the radiator flows out and led into the expansion tank through the hose. The coolant is then returned to the radiator by negative pressure which builds up in the cooling system when the engine cools down. The coolant should be replaced at intervals, following the maintenance schedule.

3-A. COOLANT CIRCUIT

The water pump, which is driven by a belt from the eccentric shaft, delivers the coolant from the radiator to the front housing.

The coolant circulates from the front housing through the water passages provided in each housing to the rear housing. From the rear housing, the coolant is returned to the front housing.

When the engine is cold, the thermostat is closed and the coolant in the housing does not circulate back into the radiator. As the coolant circulates only between the housings, this enables the engine to warm up quickly.

Once the engine is warmed up, this opens the thermostat and the coolant is then circulated to the radiator

through the thermostat.

The coolant in the radiator is cooled by the fan and the air stream caused by the travel of the vehicle and is then circulated to the housings.

3-B. ANTI-FREEZE SOLUTION

The high quality ethylene glycol anti-freeze which is suitable for aluminum engine is used in the cooling system.

Use recommended mixture of 50% anti-freeze solution (Ethylene glycol base for aluminum engine) and 50% water.

For proper system protection in regions where the temperature goes below 20°F, add the amount of ethylene glycol base coolant recommended by the coolant manufacturer. However, be careful so that the proportion of ethylene glycol anti-freeze contained in the coolant may not exceed 60%; higher proportion than that only has a bad effect upon the engine.

Note:

Always use soft water (demineralized water) in the cooling system.

3-C. CLEANING COOLING SYSTEM

The cooling system should be flushed at intervals, following the maintenance schedule.

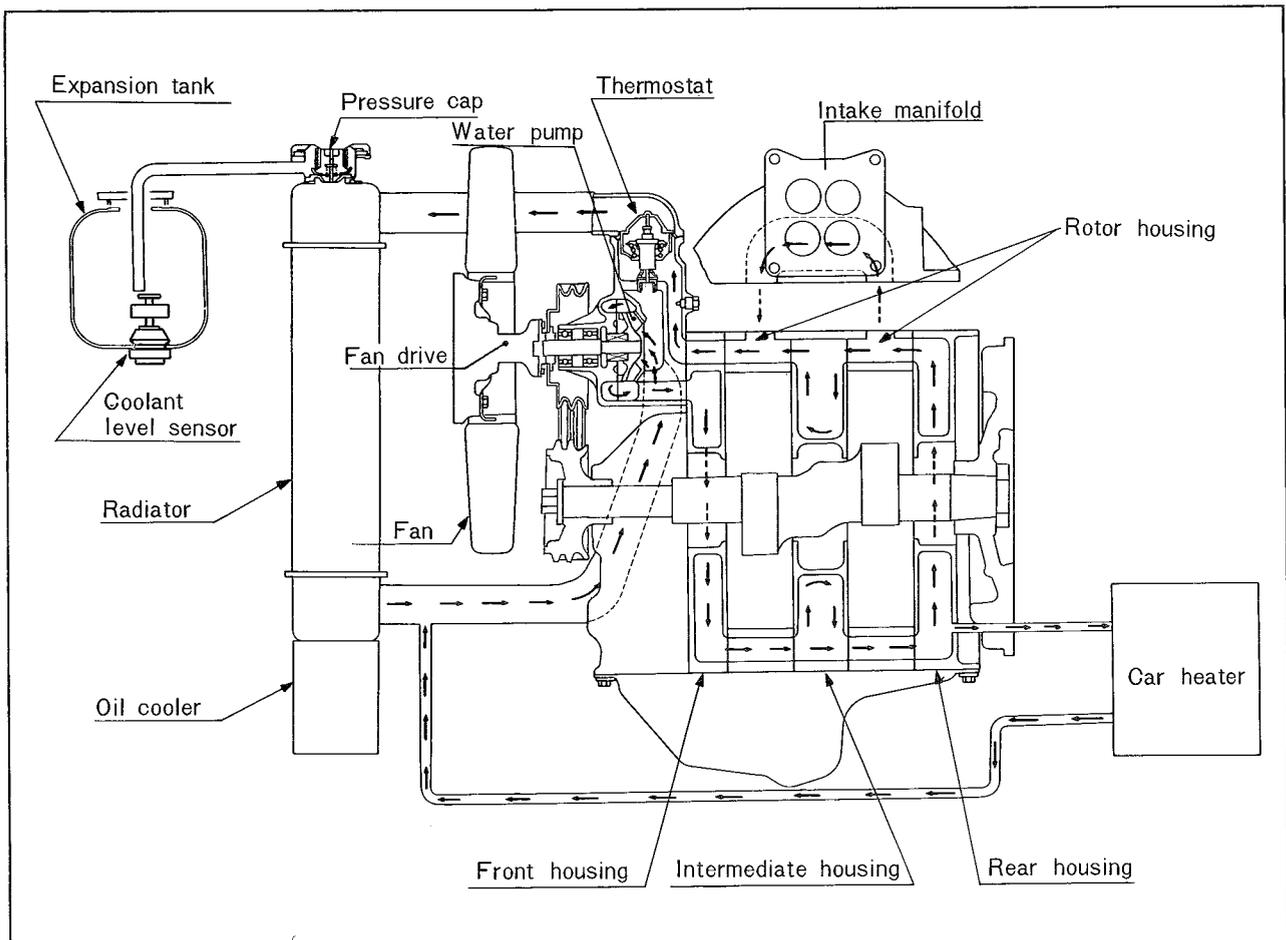


Fig. 3-1 Cooling circuit

The flushing procedures are as follows:

1. Remove the radiator cap. Open the drain plugs and drain the coolant.
2. Close the drain plugs and supply clean soft water (demineralized water).

Note:

If necessary, use cleaning solution to loosen the rust and scale, according to the instructions given by the maker of the cleaning solution.

3. Run the engine for about one hour, keeping the normal operating temperature.
4. Drain the coolant completely and flush clean water through the cooling system in the direction opposite to the normal coolant flow. This action causes the water to get behind the corrosive deposits and force them out.
5. Fill the cooling system with a mixture of clean soft water (demineralized water) and anti-freeze solution or anti-corrosive solution according to the season and maker's instruction.

Note:

During a complete refill of the cooling system, always operate the engine until it reaches normal operating temperature to bleed air from the system. Then, let the system cool, check the coolant level, and add coolant as necessary to the specified level.

3-D. COOLING SYSTEM PRESSURE TEST

Carefully check the radiator and cooling system for leaks by using a radiator cap tester.

Refill the coolant full in the radiator and "FULL" mark in the expansion tank.

Run the engine until it reaches normal operating temperature. With the engine running and tester installed, pump up the system to approximately 0.9 kg/cm² (13 lb/in²) and observe the gauge.

Note:

Never allow the pressure to build up to more than 1.0 kg/cm² (14 lb/in²).

If pressure drops rapidly, visually inspect all external parts for leaks. If no external leaks appear and pressure continues to drop, inspect the engine oil to determine whether or not coolant is leaking into the rotor housing due to a cracked rotor housing or leaking sealing rubbers.

3-E. RADIATOR

The radiator is of the corrugated fin type and the pressure cap is provided on the radiator.

The expansion tank and the radiator are connected by the hose.

The pressure in the cooling system increases the boiling point of the coolant and prevents overheating and reduces overflow losses.

When the pressure in the cooling system exceeds 0.9 kg/cm² (13 lb/in²), the pressure valve opens.

A vacuum release valve is employed to prevent undesirable vacuum build-up when the system cools down.

Note:

To remove the radiator pressure cap when the coolant temperature is high or boiling, place a cloth on the pressure cap and turn counter-clockwise one step. Keep it in this position until all pressure is released. Then, turn the cap further until it can be removed. To install the cap, place in position and turn it clockwise as far as it will go.

3-E-1. Checking Radiator

1. Examine the radiator carefully for leaks. If any leakage should be discovered, however small it may be, repair completely by soldering, etc.
2. Clean the exterior of the radiator core by blowing out with compressed air.
3. Check the pressure cap rubber gasket. Replace the pressure cap if the rubber gasket is damage.
4. Check the pressure cap function. To check, first wet the cap rubber gasket to insure an air tight seal and then attach a tester to the cap. The specified pressure is 0.9 kg/cm² (13 lb/in²).

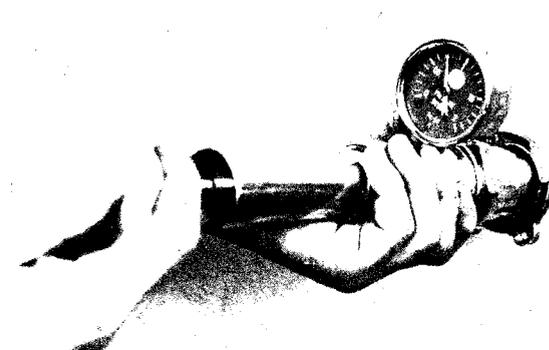


Fig. 3-2 Checking radiator pressure cap

3-E-2. Removing Radiator

1. Drain the cooling system.
2. Remove the cooling fan and fan drive attaching bolts, and remove the fan and fan drive as an assembly.
3. Loosen the hose clamps and disconnect the radiator upper hose and radiator lower hose from the radiator. Disconnect the heater hose at the radiator.
4. On the vehicle equipped with automatic transmission, disconnect the oil hoses for cooling at the radiator.
5. Remove the brackets holding the oil cooler to the radiator.
6. Remove the radiator mounting bolts. Carefully remove the radiator.
7. Remove the radiator shroud attaching bolts and remove the radiator shroud from the radiator.

3-E-3. Installing Radiator

Follow the removal procedures in the reverse order. Fill the cooling system with a mixture of clean soft water (demineralized water) and anti-freeze solution or anti-corrosive solution according to the

season and maker's instruction.

3-F. EXPANSION TANK

3-F-1. Replacing Expansion Tank

Check the expansion tank for crack, damage and leakage.

To replace, proceed as follows:

1. Disconnect the water hose (radiator to expansion tank) at the expansion tank cap.
2. Remove the expansion tank from the bracket.
3. Install the expansion tank in the reverse order of removing.

3-G. THERMOSTAT

The cooling system is designed to provide adequate cooling. However, the thermostat is necessary to provide quick warming up and to prevent over cooling.

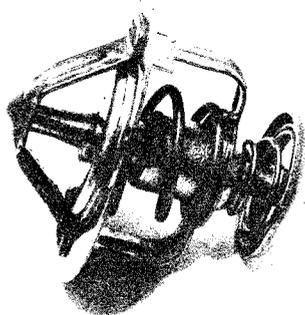


Fig. 3-3 Thermostat

3-G-1. Removing Thermostat

1. Drain the cooling system.
2. Remove the air cleaner.
3. Loosen the hose clamp and disconnect the radiator upper hose from the thermostat cover.
4. Remove the nuts attaching the thermostat cover to the water pump and remove the cover.
5. Lift out the thermostat from the water pump.

3-G-2. Checking Thermostat

To test the thermostat, place it in water with a thermometer and heat up the water gradually and check the temperature when the thermostat starts to open and when it opens fully. And also, measure the lift height when the thermostat is fully opened. If the reading shows a large difference from the standard specifications, replace with a new thermostat.

The specifications of the thermostat are shown in the following table.

Starts to open	$88^{\circ}\text{C} \pm 1.5^{\circ}\text{C}$ ($190^{\circ}\text{F} \pm 2.7^{\circ}\text{F}$)
Fully opens at	100°C (212°F)
Lift	8 ~ 10 mm (0.315 ~ 0.394 in)

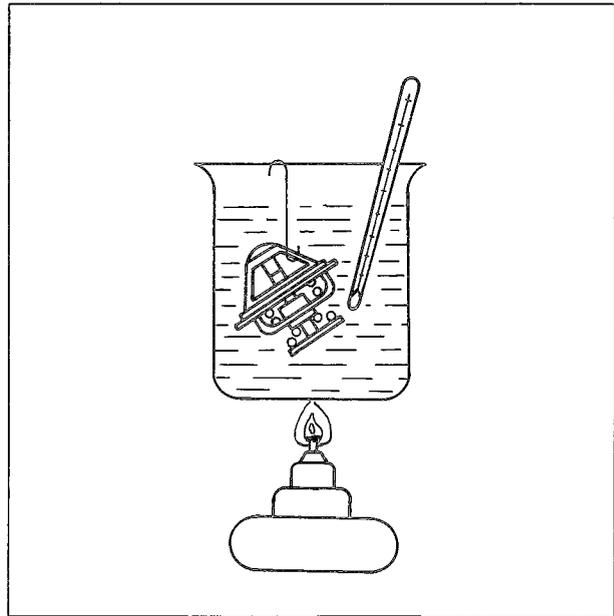


Fig. 3-4 Checking thermostat

3-G-3. Installing Thermostat

Follow the removal procedures in the reverse order. Fill the cooling system with a mixture of clean soft water (demineralized water) and anti-freeze solution or anti-corrosive solution according to the season and maker's instruction.

3-H. WATER PUMP

The water pump employs a centrifugal impeller. In the pump body, the shaft is supported with two bearings. The impeller is fitted to the rear end of the shaft. The seal assembly prevents water leakage.

3-H-1. Checking Water Pump on Car

Check the water pump for leaks and excessive end play or looseness of the shaft and bearings. If there is evidence of excessive play when the fan blades are manually moved up and down, it shows that the bearings are rough.

If water leaks from the hole located on the pump body, it indicates defective seal necessitating overhaul of the pump.

3-H-2. Removing Water Pump

1. Drain the cooling system.
2. Remove the air cleaner.
3. Disconnect the coupler from the water temperature switch.
4. Remove the alternator and disengage the "V" belt.
5. Remove the air pump and disengage the "V" belt.
6. Loosen the hose clamp and disconnect the radiator upper hose from the thermostat cover.
7. Loosen the hose clamp and disconnect the radiator lower hose from the water pump body.
8. Remove the cooling fan and fan drive attaching bolts, and remove the fan and fan drive as an assembly.
9. Remove the radiator upper shroud from the radiator.
10. Remove the nuts attaching the water pump and remove the water pump assembly.

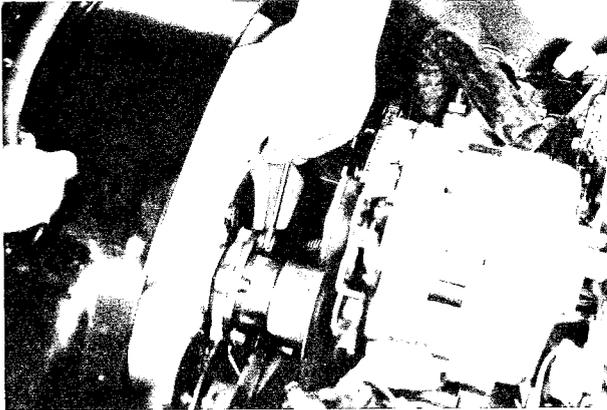


Fig. 3-5 Removing fan drive assembly

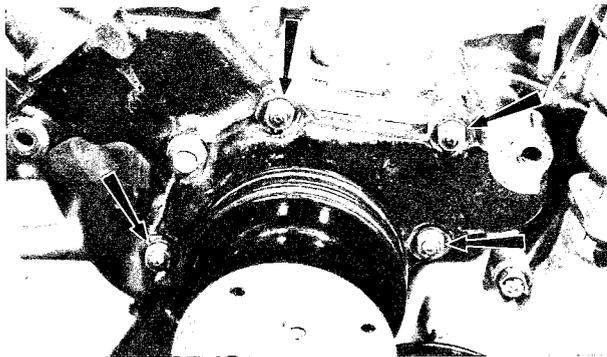


Fig. 3-6 Removing pump body attaching nuts

3-H-3. Disassembling Water Pump

1. Attach the **water pump pulley adapter** (49 1975 145) on to the pulley boss and tighten the four bolts firmly.
2. Support the water pump pulley adapter on the press. Press the water pump shaft slowly and remove the pulley boss from the water pump shaft.

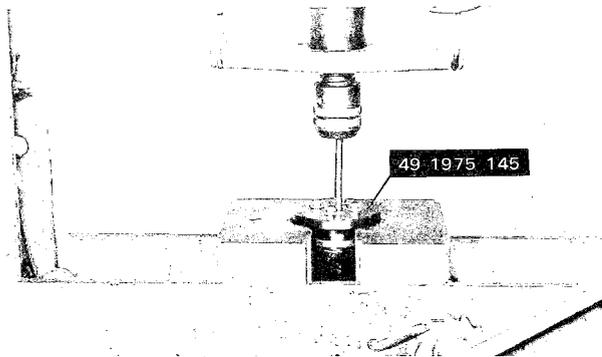


Fig. 3-7 Removing pulley boss

3. Remove the snap ring.
4. Support the pump body and apply pressure to the rear end of the shaft to press the shaft, spacer and bearing assembly out through the front of the pump body.
5. Remove the impeller.
6. Remove the seal assembly from the pump body.
7. Remove the bearings and spacer from the shaft with a suitable puller.

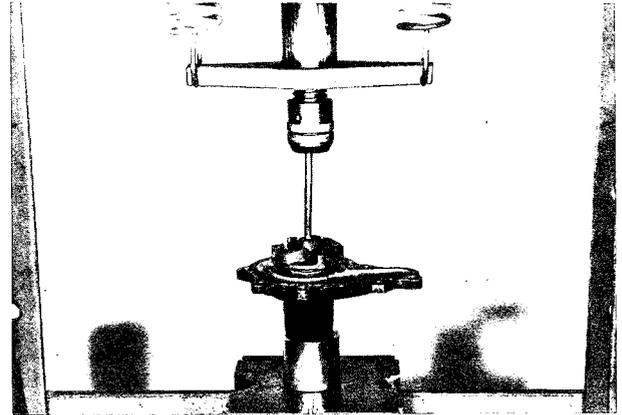


Fig. 3-8 Removing impeller

3-H-4. Inspecting Water Pump

1. Inspect the bearing for roughness or excessive end play. Remove any rust or scale from the bearing shaft with an emery cloth. The bearing should be wrapped in cloth while removing the rust or scale to prevent emery dust from entering the bearing.
2. Inspect the seat for seal on the impeller for pit marks or scoring. If the seat for the seal is scored or pitted, the impeller should be replaced.
3. Inspect the water pump body and the impeller for cracks and wear. Replace if defective.

3-H-5. Assembling Water Pump

1. Install the stop ring into the groove on the shaft.
2. Place the dust seal plate on the shaft.
3. Drive the baffle plate onto the taper of the shaft.
4. Install the shaft into the body.
5. Press in the bearing with the sealed side rearward.
6. Place the spacer on the bearing and fill grease.
7. Install the bearing with the sealed side forward until the snap ring can be installed.
8. Install the snap ring.



Fig. 3-9 Installing snap ring

9. Press the water pump pulley adapter and pulley boss onto the pump shaft until it contacts with the bearing inner race as shown in Fig. 3-10.
10. Install the seal assembly into the body.
11. Press the impeller onto the shaft until it is flush with the end of the shaft as shown in Fig. 3-11.

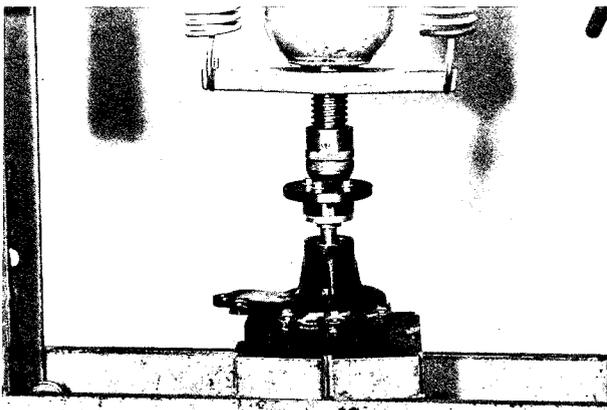


Fig. 3-10 Installing pulley boss

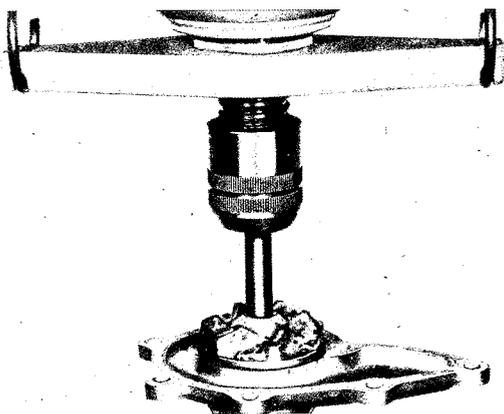


Fig. 3-11 Installing impeller

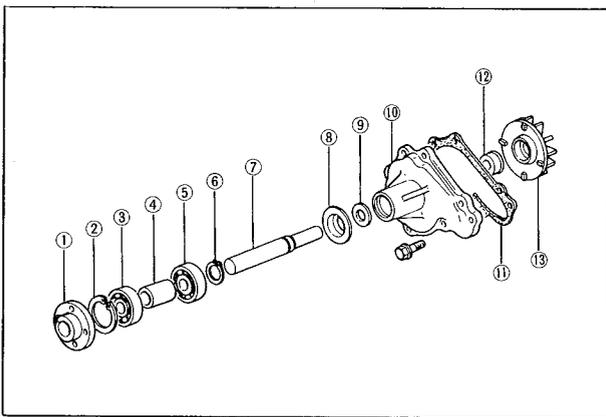


Fig. 3-12 Water pump components

- | | | |
|----------------|-----------------|-------------------|
| 1. Pulley boss | 6. Stop ring | 11. Gasket |
| 2. Snap ring | 7. Shaft | 12. Seal assembly |
| 3. Bearing | 8. Dust seal | 13. Impeller |
| 4. Spacer | 9. Baffle plate | |
| 5. Bearing | 10. Pump body | |

3-H-6. Installing Water Pump

Install the water pump in the reverse order of removing, noting the following points

1. Tighten the water pump attaching nuts evenly to 1.8 ~ 2.7 m-kg (13 ~ 20 ft-lb) sequence shown in Fig. 3-13.
2. Adjust the alternator and air pump "V" belts tension, as described in Par. 1-D-20 and 1-D-21.
3. Fill the cooling system with a mixture of clean

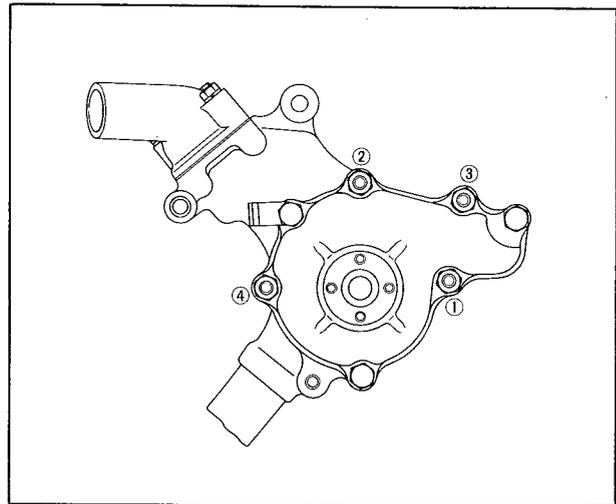


Fig. 3-13 Tightening order of water pump attaching nuts

soft water (demineralized water) and anti-freeze solution or anti-corrosive solution according to the season and maker's instruction.

3-I. FAN DRIVE

The fan drive clutch is provided to reduce the loss of the horse power and the fan noise at a high speed under full load.

It is basically a temperature-controlled fluid coupling that regulates fan speed according to the temperature of the air coming through the radiator core and flowing around the bimetal control valve located on the forward face of the clutch.

3-I-1. Fan Drive Test

1. Using a suitable marker, mark the cooling fan.
2. Connect a tachometer to the engine.
3. Warm up the engine until it reaches the normal operating temperature.
4. Adjust the engine speed to 4,000 rpm.
5. Using a stroboscope in accordance with the manufacturer's instruction, read the fan speed.

If the fan speed is not within the specification, replace the fan drive clutch with a new one and perform the test again.

3-I-2. Replacing Fan Drive Clutch

1. Remove the attaching bolts and remove the fan and fan drive as an assembly.
2. Remove the attaching bolts and separate the fan from the fan drive.
3. Assemble the fan and fan drive, and install the fan and fan drive assembly in the reverse order of removing.

3-J. COOLANT LEVEL SENSOR

The coolant level sensor which is fitted to the expansion tank is connected to the coolant level warning lamp with the wiring.

While the engine is running, if the coolant level in the expansion tank goes down lower than "LOW"

mark, the warning lamp lights up to warn necessity of the engine coolant replenishment.

3-J-1. Checking Coolant Level Sensor

1. Disconnect the coupler of the sensor.
2. Connect the circuit tester to the coupler and check the continuity by moving the float up and down as shown in Fig. 3-14.

When the float is below "LOW" mark, the tester should show a continuity while the tester should not show any continuity when the float is above "LOW" mark.

If it is found not to be so, replace the coolant level sensor.

3-J-2. Replacing Coolant Level Sensor

1. Remove the expansion tank, as described in Par. 3-F-1.
2. Drain the coolant in the expansion tank and replace the coolant level sensor.


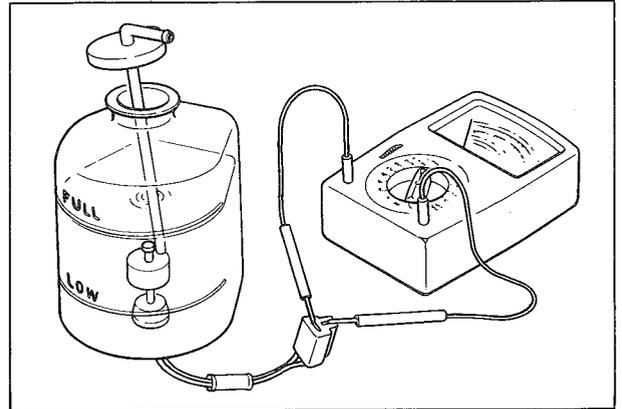


Fig. 3-14 Checking coolant level sensor

3. Install the expansion tank in the reverse order of removing.
4. Fill the coolant in the expansion tank until the "FULL" mark.

SPECIAL TOOL

49 1975 145	Water pump pulley adaptor
-------------	---------------------------



FUEL SYSTEM

DESCRIPTION	4 : 1
4-A. CABURETOR	4 : 1
4-A-1. Adjustment	4 : 1
4-A-2. Removing Carburetor	4 : 4
4-A-3. Disassembling Carburetor	4 : 4
4-A-4. Inspecting Carburetor	4 : 7
4-A-5. Assembling Carburetor	4 : 7
4-A-6. Installing Carburetor	4 : 8
4-B. CARBURETOR LINKAGE	4 : 8
4-B-1. Carburetor Linkage	4 : 8
4-B-2. Accelerator Linkage	4 : 8
4-C. ENRICHMENT SYSTEM	4 : 8
4-C-1. Richer Solenoid (California with Manual Transmission)	4 : 8
4-C-2. Power Valve (Automatic Transmission)	4 : 9
4-D. SUB-ZERO STARTING ASSIST DEVICE (FEDERAL, CANADA)	4 : 9
4-D-1. Sub-zero Starting Assist Fluid	4 : 10
4-D-2. Checking Sub-zero Starting Assist Device	4 : 10
4-D-3. Checking Oil Thermo Unit	4 : 10
4-E. FUEL PUMP	4 : 10
4-E-1. Testing Fuel Pump	4 : 10
4-E-2. Replacing Fuel Pump	4 : 10
4-F. FUEL FILTER	4 : 10
4-G. FUEL LINE	4 : 11
4-H. FUEL TANK	4 : 11
4-I. AIR CLEANER	4 : 11
4-J. INTAKE AIR TEMPERATURE CONTROL VALVE	4 : 11
4-K. IDLE COMPENSATOR (CALIFORNIA)	4 : 11
SPECIAL TOOL	4 : 11

DESCRIPTION

The fuel system consists of the carburetor, fuel pump, fuel filter, fuel tank, fuel line, accelerator linkage, air cleaner and sub-zero starting assist device (The sub-zero starting assist device is equipped with Federal and Canada vehicles only). By the suction of the fuel pump, the fuel flows through the fuel line into the fuel filter. The fuel passes through the filter element from the outside to the inside of the element. During this fuel flow, the filter element cleans out all the dirt. The fuel pump is producing a constant controlled pressure, and the fuel volume required for engine operation. The fuel supplied by the fuel pump flows passing through the fuel hose into the carburetor.

The carburetor mixes the air and fuel in varying proportions for different operating conditions. As the air passes through the carburetor before entering the engine, fuel is supplied into the engine through the various circuits of the carburetor.

The air cleaner operates primarily to remove dust and dirt from the air which is drawn into the carburetor and then into the engine.

4-A. CARBURETOR

4-A-1. Adjustment

a. Idle adjustment (California)

Note:

- Apply the parking brake and block the wheels.
- While warming up the engine and adjusting the engine idle, open the bonnet and supply the additional cooling air by placing the fan in front of the engine.
- Switch off the accessories such as an air conditioner, etc.
- Remove the fuel filler cap to avoid the influence of evaporative gas.

Idle speed

- Connect a tachometer to the engine.
- Warm up the engine until the temperature gauge shows the normal operating temperature. Then, operate the engine at 2,000 rpm without load for 3 minutes.

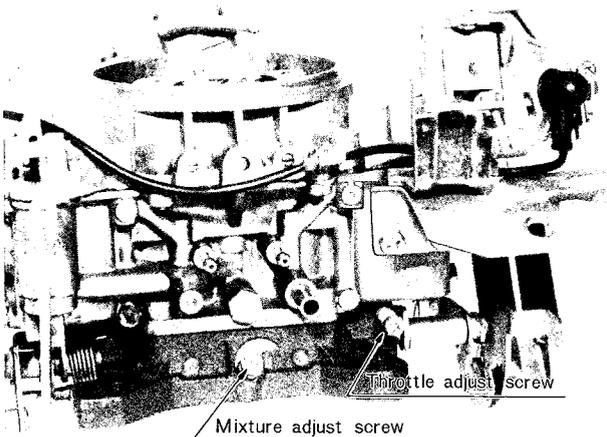


Fig. 4-1 Adjusting idle speed

3. Check the carburetor float level as described in this paragraph.

4. On the vehicle equipped with automatic transmission, place the selector lever to "D" position.

5. Adjust the idle speed to the specified idle speed by turning the throttle adjust screw.

6. Connect an exhaust gas analyzer to the vehicle and read CO concentration in accordance with the manufacturer's instruction.

7. Make sure that the CO concentration is lower than 0.1% and engine operation is stable. If not, adjust the idle mixture.

Specified idle speed:

Manual transmission	800 $\begin{smallmatrix} +50 \\ -0 \end{smallmatrix}$ rpm
Automatic transmission	750 $\begin{smallmatrix} +50 \\ -0 \end{smallmatrix}$ rpm

Idle mixture

- Adjust the idle speed.
- Adjust CO concentration to about 0% by turning the mixture adjust screw.
- Turn mixture adjust screw counter-clockwise until CO increases to 0.5%.
- Turn mixture adjust screw clockwise until CO first reaches 0.1%.
(CO shows little change after reaching 0.1% even if mixture adjust screw is turned clockwise continuously.)
- Turn mixture adjust screw further in the same direction by 1/4 turn from that position.
- If the idle speed shifts from the specified idle speed as the result of the above, adjust the idle speed by turning the mixture adjust screw and repeat the Step 1 to 5.

CO concentration	Less than 0.1%
------------------	----------------

b. Idle adjustment (Federal and Canada)

Note:

- Apply the parking brake and block the wheels.
- While warming up the engine and adjusting the engine idle, open the bonnet and supply the additional cooling air by placing the fan in front of the engine.
- Switch off the accessories such as an air conditioner, etc.
- Remove the fuel filler cap to avoid the influence of evaporative gas.

Idle speed

- Connect a tachometer to the engine.
- Warm up the engine until the temperature gauge shows the normal operating temperature. Then, operate the engine at 2,000 rpm without load for 3 minutes.
- Check the carburetor float level as described in this paragraph.
- On the vehicle equipped with automatic transmission, place the selector lever to "D" position.
- Adjust the idle speed to the specified idle speed by turning the air adjust screw.
- Connect an exhaust gas analyzer to the vehicle and read CO concentration in accordance with the manufacturer's instruction.

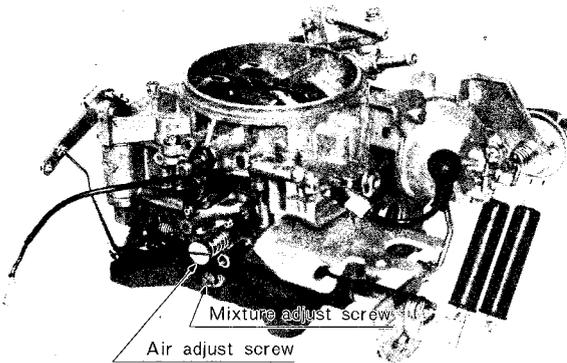


Fig. 4-2 Adjusting idle speed

7. Make sure that the CO concentration is lower than 0.5% and engine operation is stable. If not, adjust the idle mixture.

Specified idle speed:

Manual transmission	800 $\begin{smallmatrix} +50 \\ -0 \end{smallmatrix}$ rpm
Automatic transmission	750 $\begin{smallmatrix} +50 \\ -0 \end{smallmatrix}$ rpm

Idle mixture

1. Adjust the idle speed.
2. Adjust CO concentration to about 0% by turning mixture adjust screw.
3. Turn mixture adjust screw clockwise until CO increases to nearly 1%.
4. Then turn mixture adjust screw counter-clockwise slowly until CO reaches 0.5% in decreasing manner. (Do not overturn mixture adjust screw lest CO should become lower than 0.5% and increase to 0.5% again.)
5. Turn mixture adjust screw further in the same direction by 1 turn for manual transmission and 1/2 turn for automatic transmission from that position.

On Canada vehicles, turn mixture adjust screw further in the same direction by 3/4 turn for manual transmission and 1/4 turn for automatic transmission from that position.

6. If the idle speed shifts from the specified idle speed as the result of the above, adjust the idle speed by turning the mixture adjust screw and repeat the Step 1 to 5.

CO concentration	Less than 0.5%
------------------	----------------

c. Fast idle adjustment

To check the fast idle speed, proceed as follows:

1. Connect a tachometer to the engine.
2. Warm up the engine to the normal operating temperature and stop the engine.
3. With the choke knob fully pulled, start the engine. If the engine speed reaches specified speed within about 10 seconds after starting, the fast idle is satisfactory.

If it is not within the specification, adjust the fast idle as follows:

- 1) Remove the carburetor from the engine.

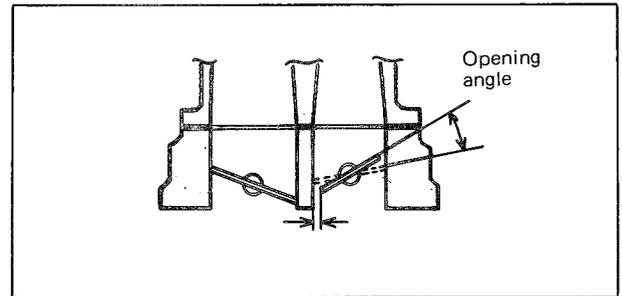


Fig. 4-3 Throttle valve clearance

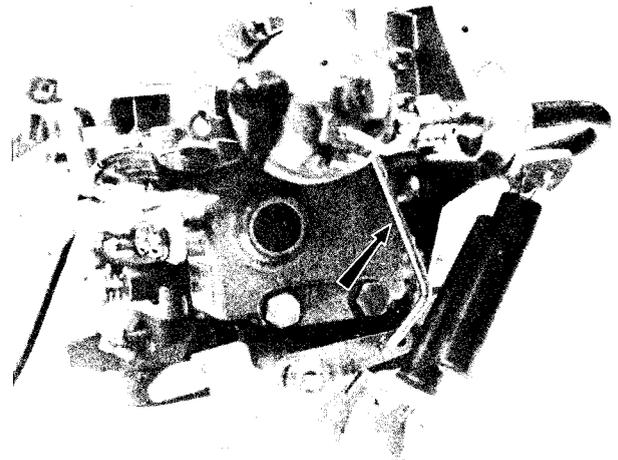


Fig. 4-4 Adjusting fast idle

- 2) With the choke valve fully closed, measure the clearance between the primary throttle valve and the wall of the throttle.

Fast idle speed:

	Fast idle speed	Specified clearance
California	3,000 ~ 3,500 rpm	1.94 ± 0.15 mm (0.08 ± 0.006 in)
Federal Canada	2,800 ~ 3,500 rpm	1.65 ± 0.2 mm (0.06 ± 0.008 in)

- 3) If the clearance is not within specification, bend the fast idle rod until the proper clearance is obtained.

d. Float level adjustment

1. With engine operating, check the fuel level in each fuel bowl sight glass.

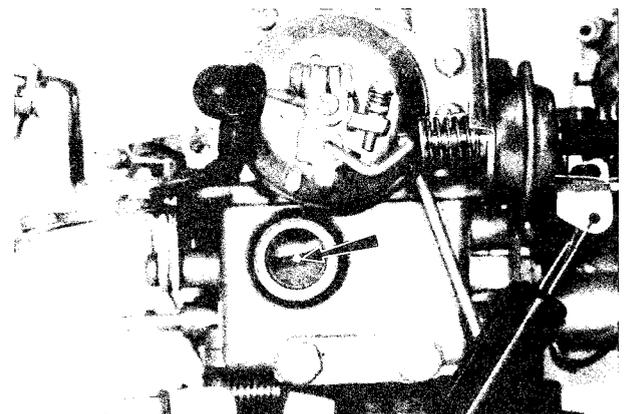


Fig. 4-5 Fuel sight glass

2. If the fuel level is not within the specified mark in the sight glass, remove the air horn from the carburetor.

3. Invert the air horn on a stand and lower the float until the float seat lip just contacts the needle valve.

4. Measure the clearance (H) between the float and the air horn gasket. This clearance should be $8.5 \pm 1 \text{ mm}$ ($0.33 \pm 0.04 \text{ in.}$). If the clearance is not within specifications, bend the float seat lip until the proper clearance is obtained.

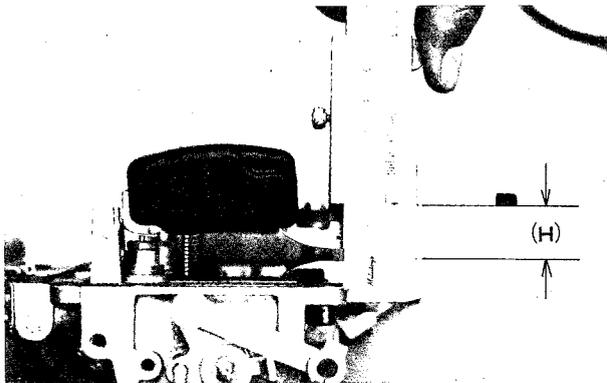


Fig. 4-6 Checking float level

5. Turn the air horn to the normal position and allow the float to lower by its own weight.

6. Measure the distance (L) between the bottom of float and the air horn gasket. The distance should be $52 \pm 0.5 \text{ mm}$ ($2.05 \pm 0.02 \text{ in.}$).

If the distance is not within specifications, bend the float stopper until the proper distance is obtained.

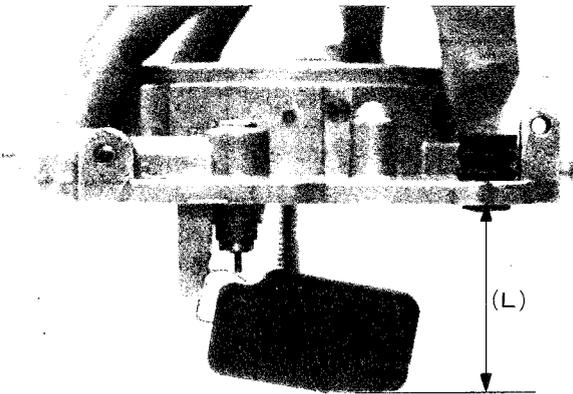


Fig. 4-7 Checking float drop

7. Install the air horn to the carburetor.

8. Operate the engine and make sure that the fuel level is to the specified mark in each sight glass.

e. Accelerator pump inspection

1. Place the vehicle on a level ground.

2. Remove the air cleaner.

3. Set the burette at the fuel inlet of the carburetor and fill it with fuel as shown in Fig. 4-8.

4. Fully operate the throttle lever several times and make sure that the fuel is discharged from the discharge nozzles of the accelerating pump.

5. Set the fuel level in the burette at 300 mm (11.8

in) above the fuel inlet.

6. Fully operate the throttle lever ten times according to the cycle as shown in Fig. 4-9, by means of the throttle lever or accelerator pedal and check the amount of discharge by reading the decrease of fuel in the burette.

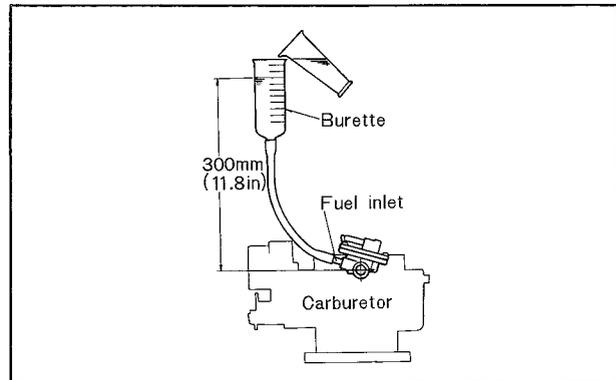


Fig. 4-8 Checking fuel discharge

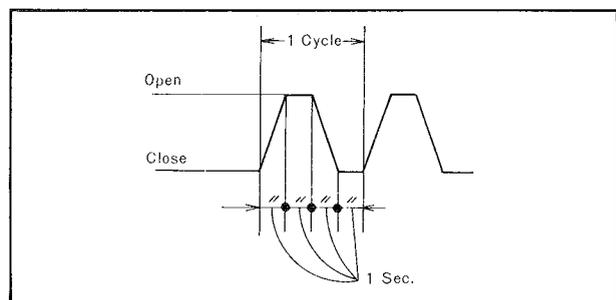


Fig. 4-9 Test pattern

7. The specified amount of fuel discharge is 6.8 ~ 9.2 cc per 10 strokes.

If the discharge amount is not within specifications, check the accelerator pump piston and etc.

f. Adjustment of choke valve opening angle

1. Remove the air cleaner.

2. Disconnect the vacuum sensing tube from the vacuum diaphragm and connect the vacuum sensing tube from the distributor test machine to vacuum diaphragm.

3. Apply the vacuum of more than 400 mm-Hg (15.7 in-Hg) to vacuum diaphragm.

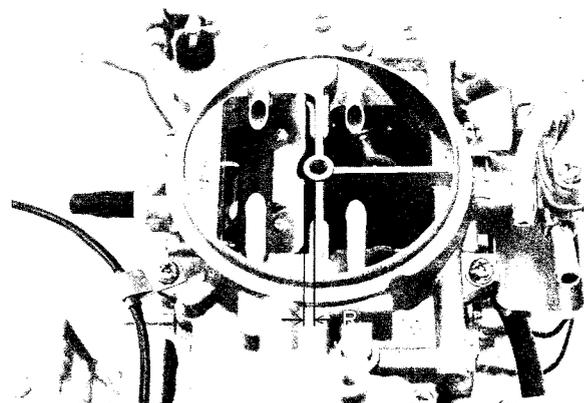


Fig. 4-10 Checking choke valve clearance

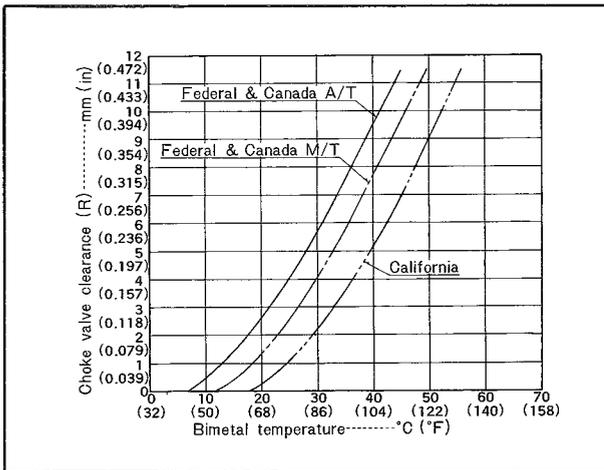


Fig. 4-11 Choke valve clearance

4. Fully pull out the choke lever link and keep its position by wire.
5. Check the clearance (R) as shown in Fig. 4-10.
6. Measure the temperature around the bimetal and compare with the specifications shown in Fig. 4-11. If the clearance is not within specifications, adjust the adjusting screw until the proper clearance is obtained.

Note: After this adjustment is completed, the clearance between the stopper and bimetal spring lever will be within specifications.

Specifications:

California	5.9 ± 0.2 mm (0.232 ± 0.008 in)
Federal, Canada manual transmission	9.2 ± 0.2 mm (0.362 ± 0.008 in)
Federal, Canada automatic transmission	11.7 ± 0.2 mm (0.708 ± 0.008 in)

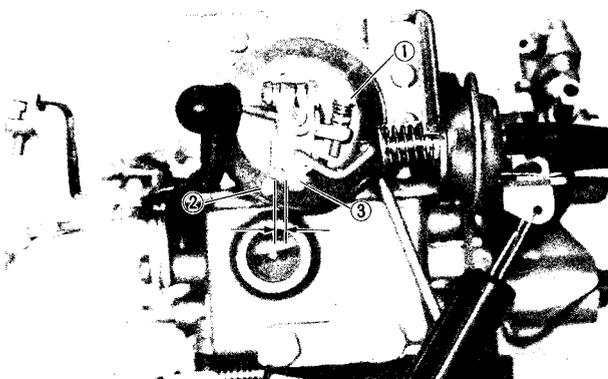


Fig. 4-12 Adjusting bimetal spring

1. Adjusting screw
2. Stopper
3. Bimetal spring lever

4-A-2. Removing Carburetor

1. Disconnect the negative cable at the battery.
2. Disconnect all hoses from the air cleaner. Remove the air cleaner.
3. Disconnect the accelerator cable and the choke cable at the carburetor.
4. Disconnect the wire connector of the carburetor

heater.

5. Remove the sub-zero starting assist hose at the carburetor (Federal and Canada only).
6. Remove the metering oil pump hoses at the carburetor.
7. Disconnect the metering oil pump rod at the connecting lever.
8. Disconnect the coupler of the idle switch (except California vehicle equipped with automatic transmission).
9. Disconnect the wire connector of the power valve solenoid (Automatic transmission only).
10. On California vehicle equipped with manual transmission, disconnect the wire connector of the richer solenoid.
11. Remove the fuel pipe and fuel return pipe at the carburetor.
12. Remove the nuts that attach the carburetor and remove the carburetor from the engine.

4-A-3. Disassembling Carburetor

a. Bimetal spring housing assembly (Semi-automatic choke)

1. Disconnect the vacuum sensing tube.
2. Remove the carburetor heater wire from the air horn.
3. Remove two screws attaching the bimetal spring housing to the air horn and remove the bimetal housing.

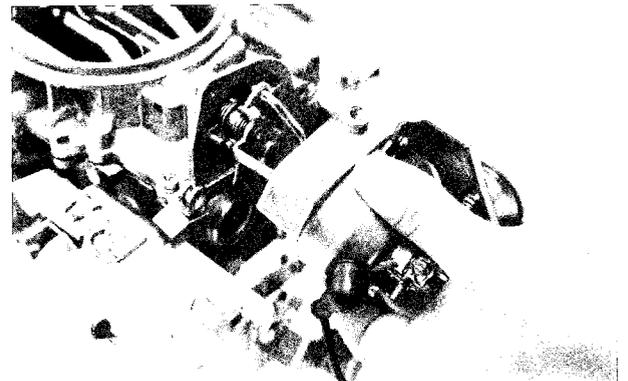


Fig. 4-13 Removing bimetal housing

b. Air horn

1. Remove the spring bracket attaching screws, and remove the bracket and throttle return springs.

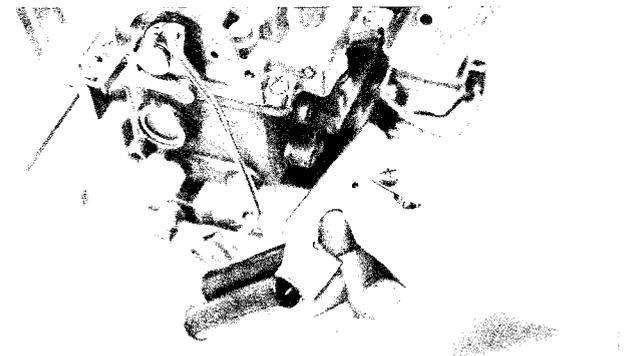


Fig. 4-14 Removing throttle return springs

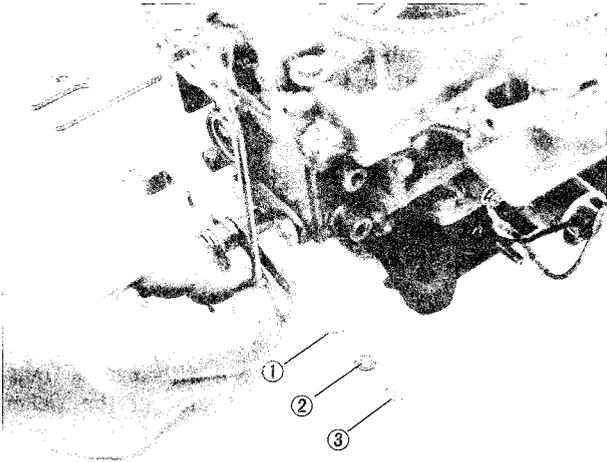


Fig. 4-15 Removing choke connecting rod
 1. Split pin 2. Washer 3. Spring

2. Disconnect the choke connecting rod by removing the split pin, washer and spring.
 3. Disconnect the accelerating pump connecting rod from the accelerating pump lever.
 4. Remove the fuel inlet fitting bracket attaching screw.
 Remove the fuel inlet fitting attaching bolt and remove the fuel inlet fitting, filter and packings.

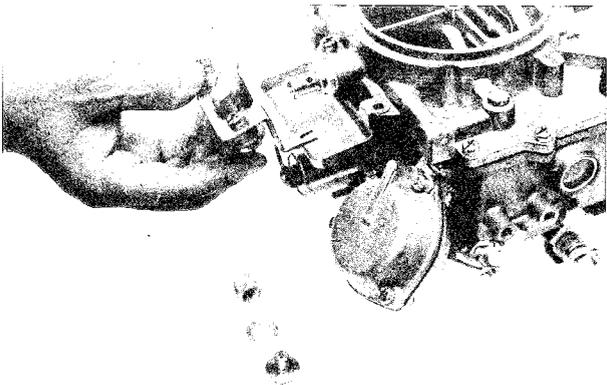


Fig. 4-16 Removing fuel inlet fitting

5. Remove the screws that attaches the air horn to the main body and lift the air horn off the main body.



Fig. 4-17 Removing air horn

6. Invert the air horn, pull the float retaining pin and remove the float.
 7. Remove the hair clip that retains the needle valve assembly, and remove the needle valve assembly, packing and filter.
 8. Remove the accelerating pump lever attaching screw and remove the accelerating pump lever.
 Remove the accelerating pump piston and spring assembly.
 9. Remove the primary slow air bleeds.

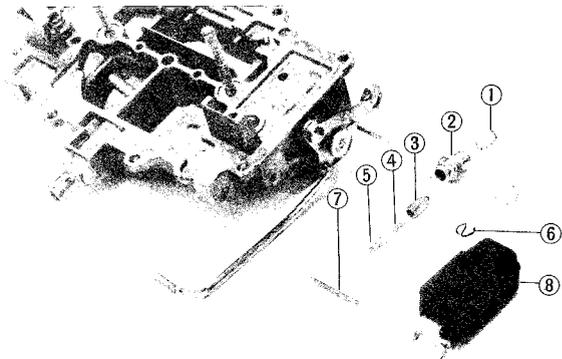


Fig. 4-18 Removing float and needle valve

- | | |
|-----------------------|------------------|
| 1. Filter | 5. Valve stem |
| 2. Fuel inlet fitting | 6. Clip |
| 3. Needle valve | 7. Retaining pin |
| 4. Spring | 8. Float |

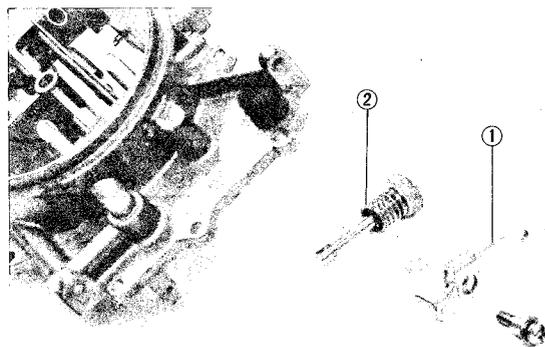


Fig. 4-19 Removing accelerating pump

1. Accelerating pump lever
2. Pump piston and spring assembly

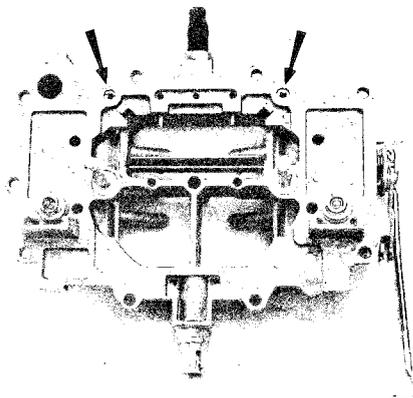


Fig. 4-20 Primary slow air bleeds

c. Main body

1. Turn the main body upside down and catch the spring, retainer and accelerating pump discharge ball.

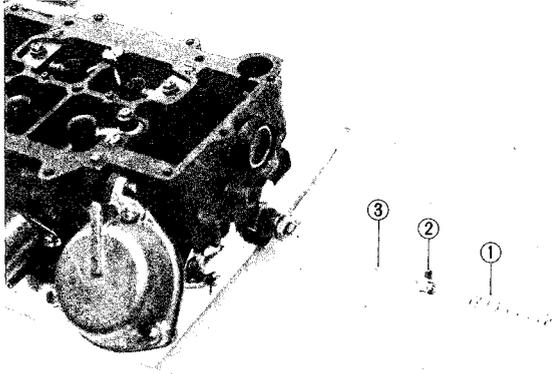


Fig. 4-21 Removing accelerator pump discharge ball
 1. Spring 3. Discharge ball
 2. Retainer

2. Remove the bolts attaching the idle switch to the main body and remove the idle switch. (except California vehicle equipped with automatic transmission)


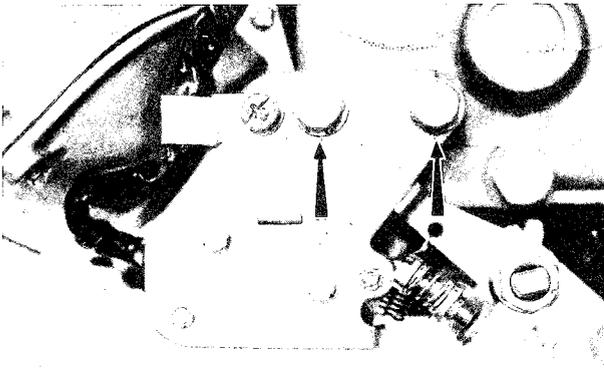


Fig. 4-22 Removing idle switch (except California A/T)

Fig. 4-23 Jets and air bleeds
 (Car with manual transmission)

1. Richer solenoid (Calif. only)
2. No. 2 secondary slow air bleed
3. No. 1 secondary slow air bleed and secondary slow jet
4. Secondary main air bleed and emulsion tube
5. Primary main air bleed and emulsion tube
6. Primary slow jet
7. Accelerator injection nozzle, weight and ball
8. Richer air bleed
9. Secondary main jet
10. Blind plug
11. Primary main jet
12. Vacuum jet
13. Mixture adjust screw

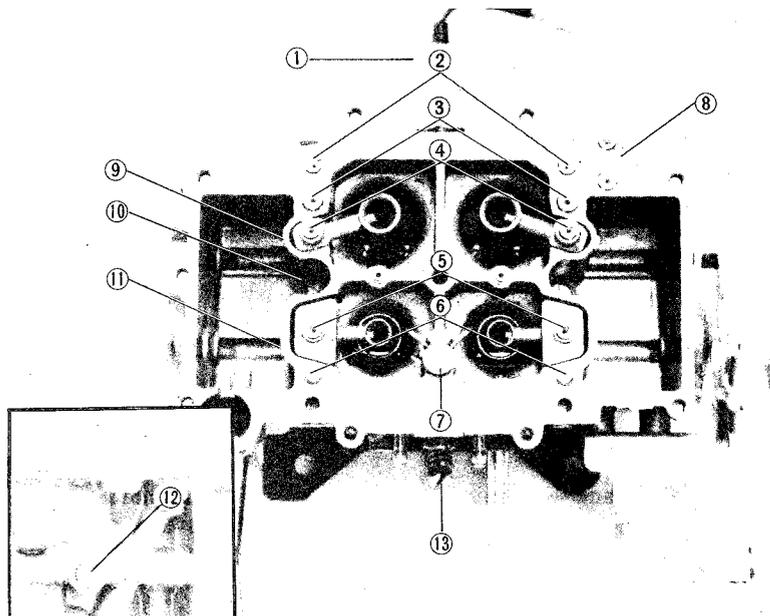

3. Disconnect the diaphragm connecting rod at the throttle lever.
 Remove the diaphragm chamber attaching screws and remove the diaphragm chamber.

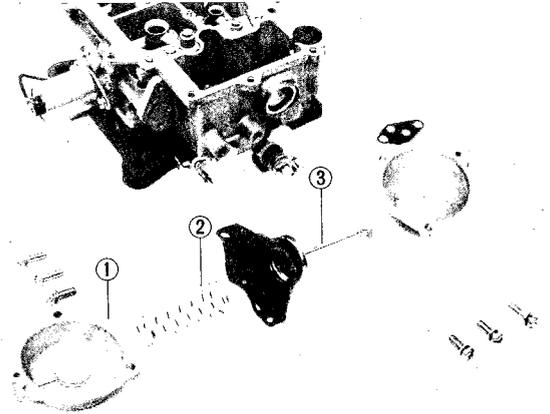


Fig. 4-24 Removing diaphragm chamber
 1. Diaphragm cover 3. Diaphragm and rod assembly
 2. Return spring

4. Remove the throttle body to main body screws from the bottom of the throttle body and separate the two bodies.
 5. Remove the all jets and air bleeds from the main body.

Note the size of all jets and air bleeds so they may be installed in the correct position.

6. Remove the accelerating pump injection nozzle, weight and ball from the main body.
 7. On vehicle equipped with automatic transmission, remove the power jet with a **screw-driver** (49 0118 870A), as shown in Fig. 4-26.
 8. On vehicle equipped with automatic transmission, remove the power valve solenoid from the main body.

Fig. 4-25 Jets and air bleeds
(Car with automatic transmission)

1. Power valve solenoid
2. No. 2 secondary slow air bleed
3. No. 1 secondary slow air bleed and secondary slow jet
4. Secondary main air bleed and emulsion tube
5. Vacuum passage
6. Primary main air bleed and emulsion tube
7. Primary slow jet
8. Accelerator injection nozzle, weight and ball
9. Secondary main jet
10. Power jet
11. Primary main jet
12. Vacuum jet
13. Mixture adjust screw

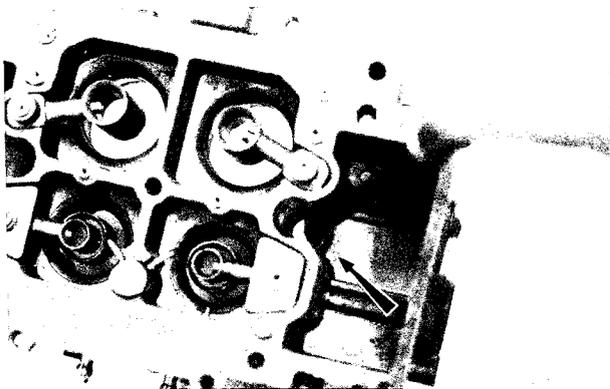
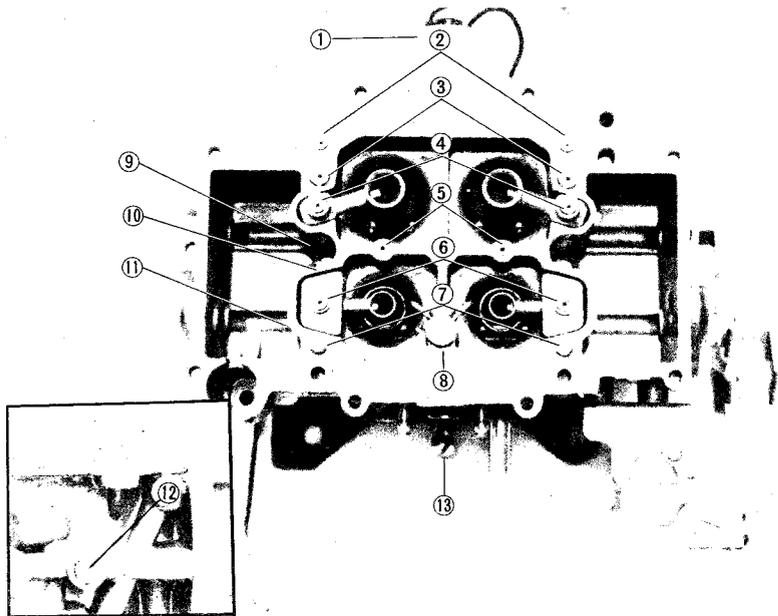


Fig. 4-26 Removing power jet

d. Throttle body

1. On California vehicle equipped with manual transmission, remove the richer solenoid from the throttle body.
2. Remove the attaching screws of the throttle valves and remove the throttle valves and shaft.
3. Tap the venturi from the bottom of the throttle body and remove the venturi.

Note: Do not remove the throttle valve and shaft, venturi and choke valve and shaft except when they have to be replaced because of wear or damage.

4-A-4. Inspecting Carburetor

1. Thoroughly clean all parts in clean solvent and dry with compressed air. Especially, blow out all passages of the carburetor carefully.
2. Inspect the air horn, main body and throttle body for cracks and breakage.
3. Inspect the choke shaft and the throttle shaft for wear. Worn throttle shaft allows air to enter into the combustion chamber and the mixture at low speed becomes lean.
4. Examine all jets and air bleeds for clog. If it exists, clean in solvent and blow with compressed air. **Never**

use a wire. A wire may enlarge the hole or passage, changing the calibration of the carburetor.

5. Inspect the pump plunger cup. Replace the plunger if it is worn or damaged.
6. Inspect the valves for accelerator pump if they operate properly.
7. Check the power piston for proper operation. To check, breath in and out from the hole at the center of the air horn and check air leak, and smooth piston movement.
8. Check the float needle and seat for wear.
9. Check the float for damage.
10. Inspect the air adjust screw (throttle adjust screw for California vehicle) and mixture adjust screw for burrs or ridges.
11. Check the diaphragm for damage.
12. On the vehicle equipped with automatic transmission, check the power valve solenoid for operation. To check, connect the solenoid to the battery. When current is applied to the solenoid, the valve stem should be come out from the valve body. If the valve does not operate properly, replace the solenoid.
13. On California vehicle equipped with manual transmission, check the richer solenoid for operation. To check, connect the solenoid to the battery. When current is applied to the solenoid, the valve stem should be pulled in to the valve body. If the valve does not operate properly, replace the solenoid.
14. Discard the old gaskets and use new gaskets when reassembling.
15. Check the throttle return springs for damage.

4-A-5. Assembling Carburetor

To assemble, follow the disassembly procedures in the reverse order with the following cautions.

1. Discard the old gaskets and use new ones.
2. Make sure that all parts are in good condition and clean.
3. Both the primary and secondary systems have their

respective parts which are of a shape. Therefore, when installing, care should be taken so as not to mistake one for the other.

4. When connecting the accelerator pump rod and choke connecting rod to their respective lever, use the specified holes as shown in Fig. 4-27 and Fig. 4-28.

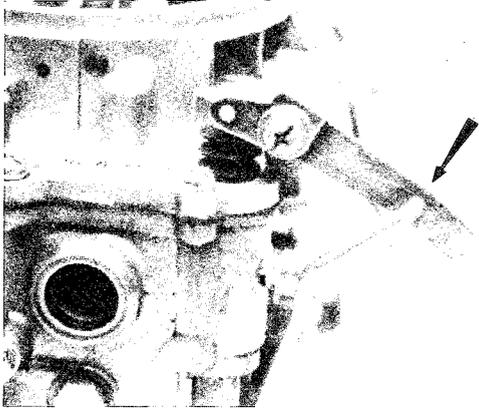


Fig. 4-27 Specified hole of accelerator pump lever

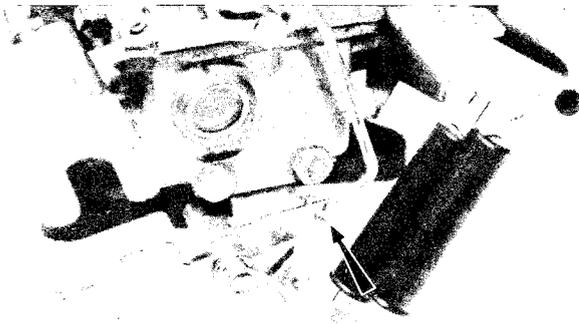


Fig. 4-28 Specified hole of choke lever

5. When installing the bimetal spring housing to the main body, fit the choke shaft lever to the bimetal spring and accurately by means of closing the choke valve and pulling the vacuum diaphragm shaft.

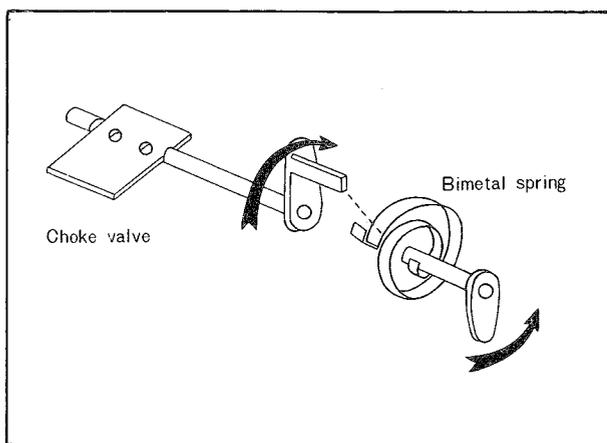


Fig. 4-29 Installing diaphragm housing

4-A-6 Installing Carburetor

Install the carburetor in the reverse order of removing.

4-B. CABURETOR LINKAGE

4-B-1. Carburetor Linkage

Check the secondary system linkage, accelerator pump linkage and choke linkage for operation.

Examine the choke control for free operation.

4-B-2. Accelerator Linkage

a. Checking accelerator linkage

Inspect the accelerator linkage for proper installation. Remove the air cleaner and, with the accelerator fully depressed, observe the position of the carburetor throttle valves. They should be vertical (wide open position).

Check the accelerator to ensure there is sticking or binding and for full return.

b. Adjusting accelerator cable

1. Check the accelerator pedal position.

The accelerator pedal height should be 58 mm (2.3 in) lower than the brake pedal height.

If necessary, adjust the nut (A) to obtain the correct position.

2. Check the free play of the cable at the carburetor. It should be 1 ~ 3 mm (0.04 ~ 0.12 in). If the free play is not within the specifications, adjust by the nut (B).

3. Depress the accelerator pedal all the way down to the floor and check to see that the throttle valves are wide open.

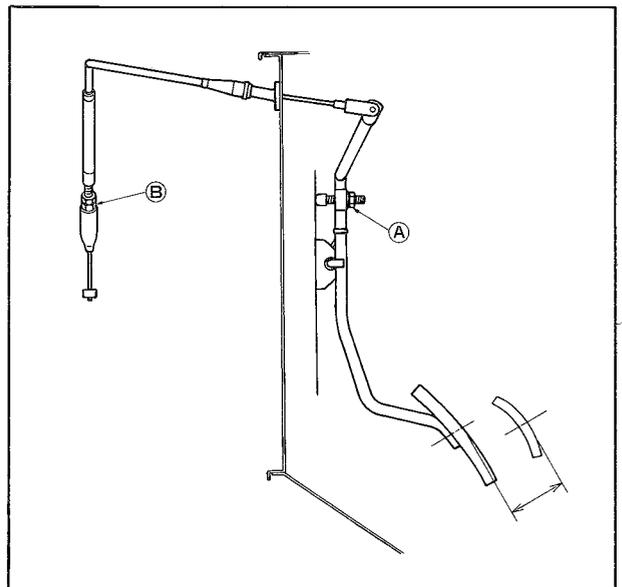


Fig. 4-30 Adjusting accelerator cable

4-C. ENRICHMENT SYSTEM

4-C-1. Richer Solenoid (California with Manual Transmission)

a. Checking richer solenoid

1. Connect a tachometer to the engine.

2. Warm up the engine and keep it idling.

Note: Check to see the engine does not hunt.

3. Disconnect the bullet connector from the richer solenoid.

Connect the solenoid lead to the battery and check to see the engine hunts.

4. Connect the voltmeter to connector (from the control unit).

Set the engine speed to 2,000 rpm with throttle and check to see that the current flows when the idle switch is pushed toward the idle position.

5. Disconnect the coupler of the idle switch.

6. Disconnect the bullet connector from the coasting valve of the deceleration control valve and connect the solenoid lead to the battery.

7. Increase the engine speed to 2,000 rpm.

Slowly decrease the engine speed and record the engine speed at which the current stops flowing. The engine speed should be at $1,150 \pm 100$ rpm.

8. Slowly increase the engine speed from idle and check the engine speed at which the current begins flowing. The difference between the engine speeds recorded in Steps 7 and 8 should be 150 ± 70 rpm.

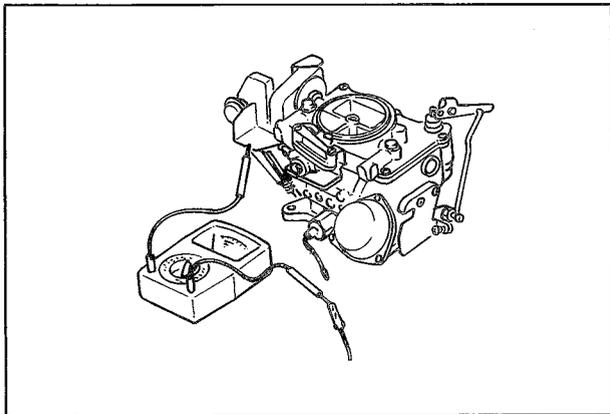


Fig. 4-31 Checking richer solenoid

4-C-2. Power Valve (Automatic Transmission)

a. Checking power valve solenoid

1. Connect a tachometer to the engine.
2. Connect an exhaust gas analyzer to the vehicle.
3. Disconnect the coupler of the air control valve and connect (A) terminal (to solenoid) to the battery. Connect a jumper wire to the ends of separated

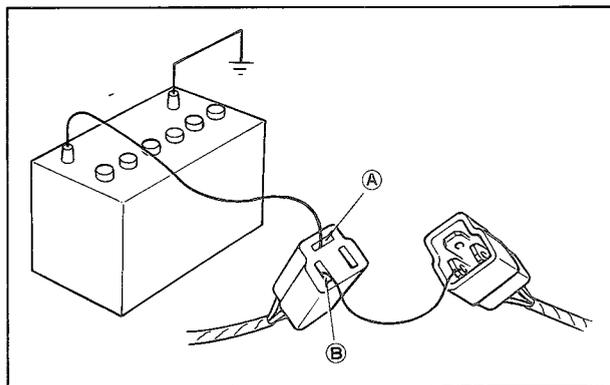


Fig. 4-32 Connecting jumper wire

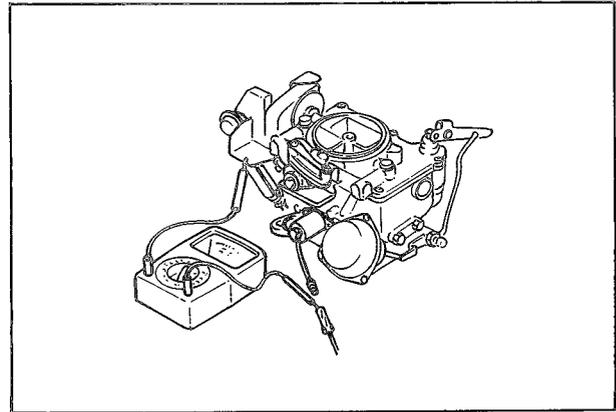


Fig. 4-33 Checking power valve solenoid

couplers as shown in Fig. 4-32.

4. Disconnect the bullet connector from the power valve solenoid.

5. Start the engine and set the engine speed to 2,000 rpm with throttle.

Connect the power valve solenoid lead to the battery and check to see the CO density varies.

6. Connect a voltmeter to the power valve solenoid coupler (from the control unit).

7. Increase the engine speed from idle and check to see that the current stops flowing when the engine speed is more than $2,500 \pm 200$ rpm.

On California vehicles, conduct the following tests:

8. Stop the engine. Disconnect the coupler of the

water temperature switch and connect a jumper wire to both terminals in the coupler (from control unit).

9. With the choke knob fully pulled, start the engine and check to see the current flows at any engine speed within 130 ± 26 seconds after engine was started.

4-D. SUB-ZERO STARTING ASSIST DEVICE (FEDERAL, CANADA)

This is the device for increasing the starting ability of the engine in extreme cold. When the ignition key is turned to the position of "START" under the circumstances where the temperature is below -18°C (0°F), a certain amount of starting assist fluid is supplied into the carburetor by a pump.

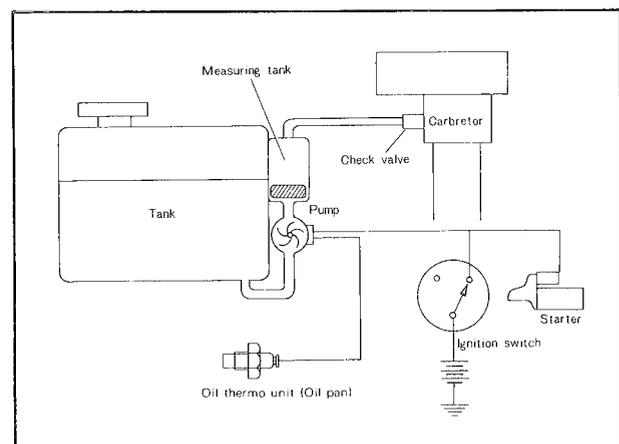


Fig. 4-34 Sub-zero starting assist system

4-D-1. Sub-zero Starting Assist Fluid

The mixture proportion of starting assist fluid should be 90% of high quality ethylene glycole anti-freeze solution plus 10% of water.

4-D-2. Checking Sub-zero Starting Assist Device

1. Make sure that there is sufficient starting assist fluid in the tank. Replenish if necessary.
2. Disconnect the coupler of (S) terminal connected to the starter magnetic switch. This is to prevent the engine from revolving when the ignition key is turned to "START".
3. Remove the air cleaner cover.
4. Turn the ignition key to the position of "START" and make sure that the starting assist fluid does not spouts out from the nozzles of the carburetor. [Ambient temperature should be above -18°C (0°F)]

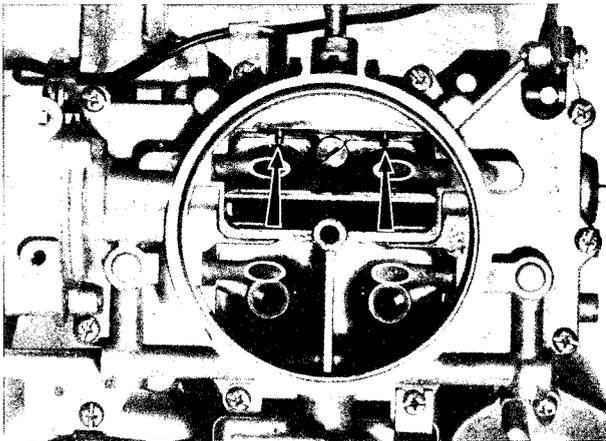


Fig. 4-35 Sub-zero discharge nozzle

5. Disconnect the lead wire at the oil thermo unit on the oil pan and earth the disconnected lead wire to the body.

6. Turn the ignition key to the position of "START" with the air bleeding button of the tank kept pushed and make sure that the starting assist fluid spouts out from the nozzles of the carburetor.

4-D-3. Checking Oil Thermo Unit

The oil thermo unit is in normal condition if it is energized below -18°C (0°F) and is not above it.

4-E. FUEL PUMP

4-E-1. Testing Fuel Pump

To determine that the fuel pump is in satisfactory operating condition, the following tests should be made. The tests are performed with the pump installed on the car.

Before the tests, make sure the fuel filter has been changed within the recommended maintenance mileage interval. When in doubt, install a new filter.

a. Pressure test

1. Remove the air cleaner assembly. Disconnect the fuel inlet line at the carburetor.
- Use care to prevent combustion due to fuel spillage.

2. Connect a pressure gauge, a restrictor and flexible hoses between the fuel line and the carburetor.

3. Position the flexible hose and restrictor so that the fuel can be discharged into a suitable, graduated container.

4. Before taking a pressure reading, turn the ignition switch on and vent the system into the container by opening the hose restrictor momentarily.

5. Close the hose restrictor, allow the pressure to stabilize, and note the reading.

If the reading is not within $0.30 \sim 0.38 \text{ kg/cm}^2$ ($4.3 \sim 5.4 \text{ lb/in}^2$), and the fuel lines and filter are in satisfactory condition, the pump is damaged and should be replaced.

If the pump pressure is within the specifications, perform the test for volume.

b. Volume test

Turn the ignition switch on, open the hose restrictor and expel the fuel into the container, while observing the time required to expel 1,150 cc (2.4 U.S. pints, 2.0 Imp. pints). Close the restrictor. 1,150 cc (2.4 U.S. pints, 2.0 Imp. pints) or more of fuel should be expelled within one minute.

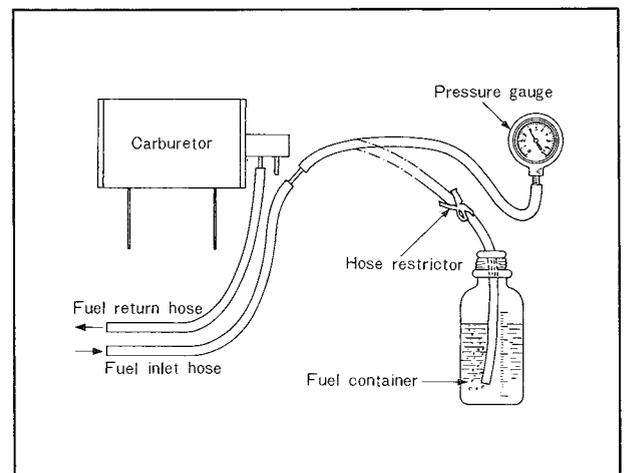


Fig. 4-36 Testing fuel pump

4-E-2. Replacing Fuel Pump

1. Disconnect the bullet connector of the pump lead.
2. Remove the fuel pump cover attaching bolts and remove the cover.
3. Disconnect the inlet and outlet hoses from the fuel pump.
4. Remove the nuts attaching the pump to the body and remove the pump.
5. Install the new fuel pump by following the removal procedures in the reverse order.

4-F. FUEL FILTER

The fuel filter is of a cartridge type, and is located in the fuel line between the fuel tank and the fuel pump. The fuel filter should be replaced at intervals, following the maintenance schedule.

To replace the fuel filter, proceed as follows:

1. Loosen the clamp at both ends of the filter and

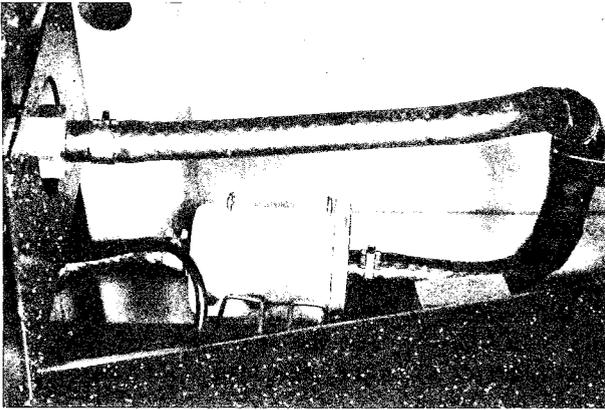


Fig. 4-37 Fuel filter

disconnect the fuel pipes.

2. Disconnect the fuel filter from the retainar.
3. Install a new filter and connect the fuel pipes.

4-G. FUEL LINE

Inspect the fuel lines for leaks and tighten the fuel line connections to prevent leakage. It is important to keep the fuel system clean and free from water. If an excessive amount of dirt or water is found, drain the fuel tank and blow out the fuel lines with compressed air.

4-H. FUEL TANK

Inspect the fuel tank for cracks and corrosion. If any defect is present, repair or replace as necessary.

Note: When repairing the fuel tank, clean the fuel tank thoroughly with steam to remove all explosive gas.

4-I. AIR CLEANER

The air cleaner is of a paper filter. The element should be serviced following the maintenance schedule. To clean the element, remove the element and blow out the dust with a low compressed air.

4-J. INTAKE AIR TEMPERATURE CONTROL VALVE

Intake air temperature control system consists of a control valve and a bimetal.

The intake of fresh air and hot air is automatically controlled over by means of the bimetal and control

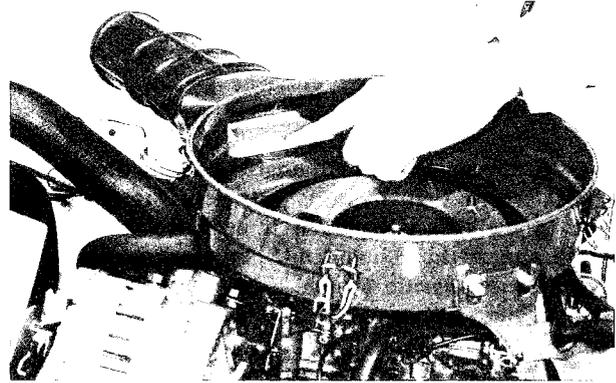


Fig. 4-38 Checking control valve

valve installed in the air cleaner.

Move the control valve up and down inside the air cleaner and if there is no difficulty to move and also the spring force of the bimetal is felt, it is in good order.

4-K. IDLE COMPENSATOR (CALIFORNIA)

1. Check the valve is in closed position when bi-metal temperature is lower than operating temperature.

Opening temperature	$65 \pm 4^{\circ}\text{C}$ ($149 \pm 7.2^{\circ}\text{F}$)
---------------------	--

To check, suck air into the tube. If excessive air leakage is found, replace the idle compensator as an assembly.

2. When the bi-metal temperature is more than approx. 90°C (194°F), visually check to see the valve is in open position.

If the valve is not open, replace the idle compensator as an assembly.

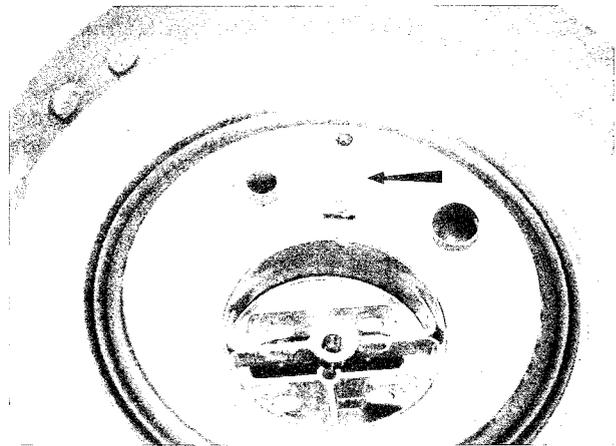


Fig. 4-39 Idle compensator

SPECIAL TOOL

49 0118 870A

Screwdriver

ELECTRICAL SYSTEM (ENGINE)

DESCRIPTION	5 : 1		
5-A. BATTERY	5 : 1		
5-A-1. Checking Battery	5 : 1		
5-A-2. Charging Battery	5 : 1		
5-B. ALTERNATOR	5 : 1		
5-B-1. Precautions on Service	5 : 1		
5-B-2. Checking Charging System on Car.	5 : 1		
5-B-3. Removing Alternator	5 : 2		
5-B-4. Disassembling Alternator	5 : 2		
5-B-5. Inspecting Alternator	5 : 3		
5-B-6. Assembling Alternator	5 : 4		
5-B-7. Installing Alternator and Drive Belt	5 : 4		
5-C. REGULATOR	5 : 5		
5-C-1. Checking Constant Voltage Relay	5 : 5		
5-C-2. Checking Pilot Lamp Relay	5 : 5		
5-C-3. Adjusting Regulator	5 : 5		
5-C-4. Replacing Regulator	5 : 6		
5-D. STARTING MOTOR	5 : 6		
5-D-1. Checking Starting Circuit	5 : 6		
5-D-2. Testing Starting Motor	5 : 6		
5-D-3. Removing Starting Motor	5 : 6		
5-D-4. Disassembling Starting Motor.	5 : 6		
5-D-5. Inspecting Starting Motor	5 : 7		
5-D-6. Magnetic Switch Test	5 : 8		
5-D-7. Assembling Starting Motor	5 : 9		
5-D-8. Installing Starting Motor.	5 : 9		
5-E. SPARK PLUG	5 : 9		
5-E-1. Removing Spark Plug	5 : 9		
		5-E-2. Checking Spark Plug	5 : 9
		5-E-3. Installing Spark Plug	5 : 9
		5-F. DISTRIBUTOR (CALIFORNIA).	5 : 9
		5-F-1. Testing Distributor	5 : 9
		5-F-2. Adjusting Point Gap.	5 : 10
		5-F-3. Adjusting Ignition Timing	5 : 10
		5-F-4. Removing Distributor.	5 : 11
		5-F-5. Disassembling Distributor	5 : 11
		5-F-6. Distributor Inspection	5 : 12
		5-F-7. Assembling Distributor.	5 : 12
		5-F-8. Installing Distributor	5 : 12
		5-G. DISTRIBUTOR (FEDERAL, CANADA).	5 : 12
		5-G-1. Testing Distributor	5 : 12
		5-G-2. Adjusting Point Gap.	5 : 13
		5-G-3. Adjusting Ignition Timing	5 : 13
		5-G-4. Removing Distributor.	5 : 13
		5-G-5. Disassembling Distributor.	5 : 13
		5-G-6. Distributor Inspection	5 : 14
		5-G-7. Assembling Distributor.	5 : 14
		5-G-8. Installing Distributor	5 : 14
		5-H. IGNITION COIL	5 : 14
		5-H-1. Spark Intensity Test.	5 : 14
		5-H-2. Checking Ignition Coil	5 : 14
		5-H-3. Replacing Ignition Coil.	5 : 15
		5-I. HIGH TENSION CORD	5 : 15
		5-I-1. Resistance Test	5 : 15
		SPECIAL TOOL.	5 : 15

DESCRIPTION

The engine electrical systems are the charging system, starting system and ignition system. Service information for these systems are included in this section.

5-A. BATTERY

5-A-1. Checking Battery

As the battery has many important functions to engine start, ignition and lighting, check the following points periodically and always keep the battery in perfect condition.

1. Check the electrolyte level in each cell of the battery, and add distilled water to the **upper level line** marked on the battery. **Do not** overfill.
2. Check the specific gravity of the electrolyte with a hydrometer.

If the reading is below the specification, the battery requires recharging.

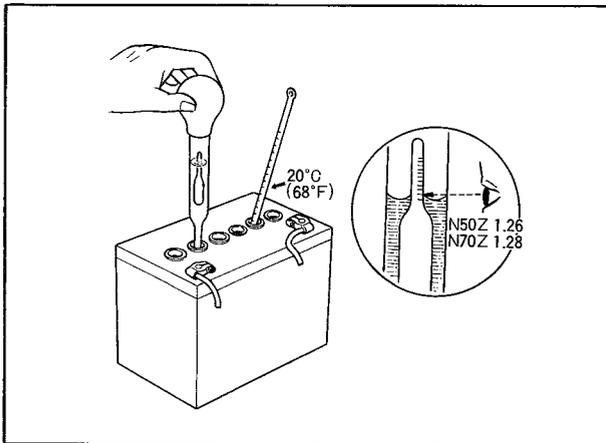


Fig. 5-1 Checking specific gravity

3. Check the tightness of the terminals to ensure good electrical connections. Clean the terminals and coat the terminals with grease.
4. Inspect for corroded or frayed battery cables.

5-A-2. Charging Battery

a. Constant current charge

1. If the exterior of the battery is dirty with sulphuric acid or dust and dirt, wash these off with clean water and dry thoroughly before charging the battery.
2. Check the electrolyte level and add distilled water if necessary.

Note:

If addition of distilled water is neglected, the plates and separators will become exposed to air, causing a sulphation to occur on the plates.

Do not add dilute sulphuric acid unless the electrolyte has overflowed or leaked out.

3. Connect the battery to the charger, ensuring that the polarities are correct.
4. To charge, apply an electric current of approxi-

mately 5 amperes until the specific gravity of the electrolyte reaches 1.26 ~ 1.28.

b. Fast charge

As a fast charge causes both the temperature and the level of the electrolyte to rise suddenly, it does not have a favorable effect on the battery. Therefore, this should not be performed unless in the case of an emergency.

To charge with a fast charger, follow the instructions of the manufacturer.

Note:

1. Ensure that the cables are removed from the battery terminals before the charge is applied. If this is neglected, it could cause a damage to the diodes on the alternator.
2. The battery should be kept by the use of cooling water to prevent the temperature of the electrolyte from exceeding 55°C (131°F), otherwise the charging should be discontinued temporarily when the temperature rises above this point.

5-B. ALTERNATOR

5-B-1. Precautions on Service

When servicing the charging system, observe the following precaution. If not followed, the result will be in serious damage of the system.

1. **Do not** short across or ground any of the terminals on the alternator.
2. **Never** operate the alternator on an open circuit (with the field terminal connected and the armature terminal disconnected).
3. When installing the battery, always make sure that the negative post of the battery is attached securely to the negative cable.
4. **Never** reverse battery cables, even for an instant, as the reverse polarity current flow will damage the diodes in the alternator.
5. When charging the battery with a fast charger, disconnect the positive cable at the battery.
6. Check the "V" belt tension and adjust it to specification if necessary.

5-B-2. Checking Charging System on Car

If the electrical system is not charging properly, it is advisable to determine whether the trouble is in the alternator or regulator prior to removing the alternator.

1. Disconnect the wire from "B" terminal of the alternator and connect the ammeter with the negative lead of the ammeter to the wire and the positive lead to the "B" terminal, as shown in Fig. 5-2.
2. Disconnect the coupler from the regulator. Connect the disconnected couplers with the suitable wires.
3. Start the engine and take a reading of the ammeter, holding the engine speed to 2,000 rpm.
4. Disconnect the wire from the "F" terminal and short-circuit the wire to the "A" terminal for a moment.
5. If the meter reading increases remarkably, the

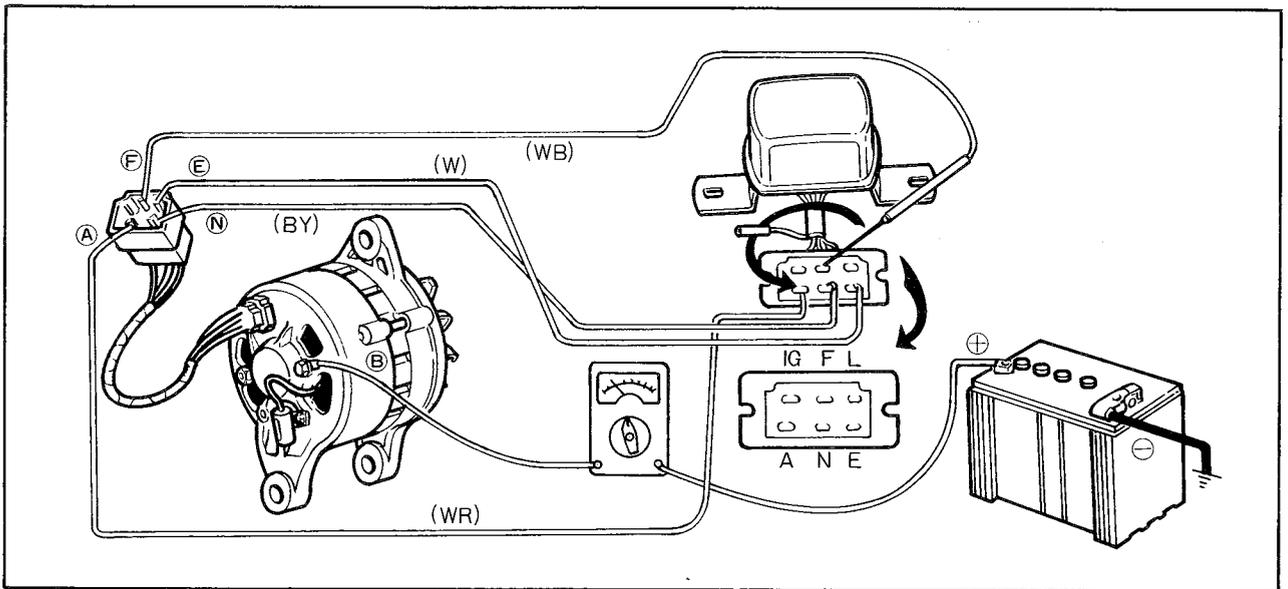


Fig. 5-2 Checking charging system

trouble is in the regulator and if there is no change in current, it is in the alternator.

5-B-3. Removing Alternator

1. Open the bonnet and disconnect the negative cable at the battery.
2. Remove the air cleaner.
3. Disconnect the wires at the alternator "B" terminal by removing the nut. Pull the multiple connector from the rear of the alternator.
4. Remove the alternator strap bolt.
5. Remove the alternator mounting bolt, and remove the alternator from the vehicle.

5-B-4. Disassembling Alternator

1. Remove the through bolts.
2. Separate the front housing assembly by prying apart with a screwdriver at the slots of the front housing.
3. Place the front housing and rotor assembly in a vise. Clamp the assembly on the rotor.
4. Remove the nut and washer attaching the pulley to the shaft. Remove the pulley, fan and spacer.

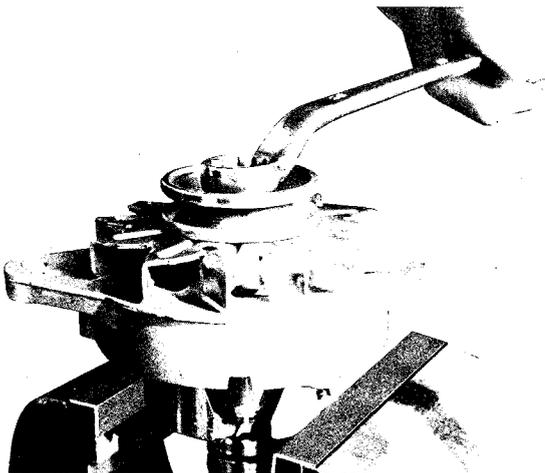


Fig. 5-3 Loosening pulley nut

5. Remove the front housing from the rotor.
6. Remove the radio noise suppression condenser from the rear of the alternator.
7. Remove the nut, washer and insulator from the "B" terminal at the rear of the alternator.
8. Remove the screw attaching the heat sink to the rear housing.
9. Unscrew but do not remove the two brush holder attaching screws. The screws will help to retain the terminals in the brush holder during removal of the stator and attached parts.
10. Carefully remove the stator, heat sinks and brush holder assembly from the rear housing. Use care to keep the brush holder assembly intact during removal from the rear housing.

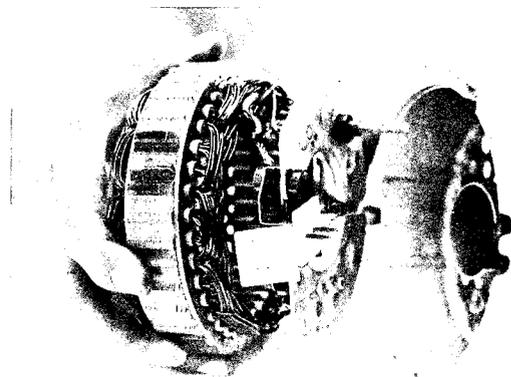


Fig. 5-4 Removing stator assembly

11. Unsolder the stator leads from the diodes and brush holder. Remove the heat sinks and brush holder assembly from the stator.
12. If bearing replacement is necessary, remove the rear bearing from the rotor shaft with a puller. To replace the front bearing, remove the bearing retainer attaching screws, and press the bearing from the front housing.

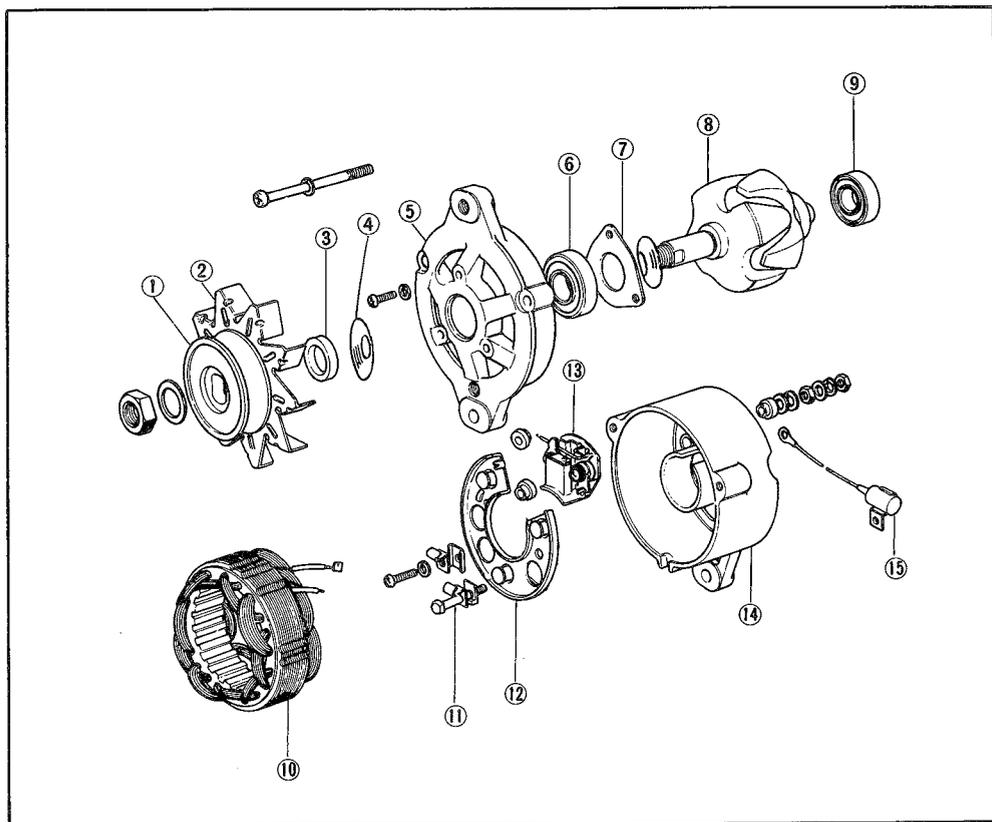


Fig. 5-6 Alternator components

1. Pulley
2. Fan
3. Spacer
4. Slinger
5. Front housing
6. Front bearing
7. Retainer
8. Rotor
9. Rear bearing
10. Stator
11. Terminal bolt
12. Diodes and heat sink
13. Brushes and holder
14. Rear housing
15. Condenser

5-B-5. Inspecting Alternator

a. Checking stator coil

Check the stator coil for both open and grounded circuits with an ohmmeter.

To check for open, connect the prods to each of the two leads, as shown in Fig. 5-5. If there is no flow of current, the coil is open circuit and must be repaired or replaced.

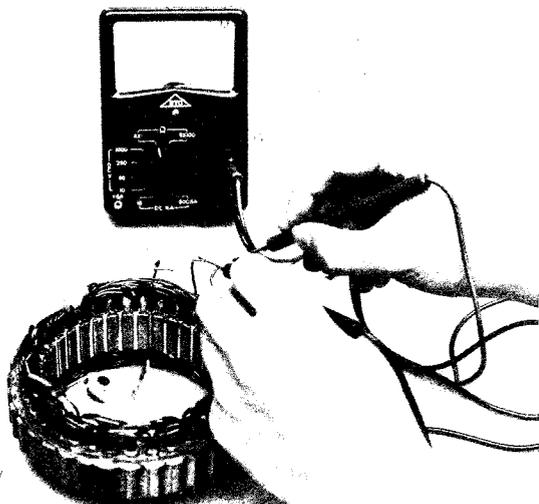


Fig. 5-5 Checking stator coil for open

To check for ground, connect one prod to the core and the other to each lead wire, as shown in Fig. 5-7. If a ground is present, the current will flow and the stator coil must be repaired or replaced.

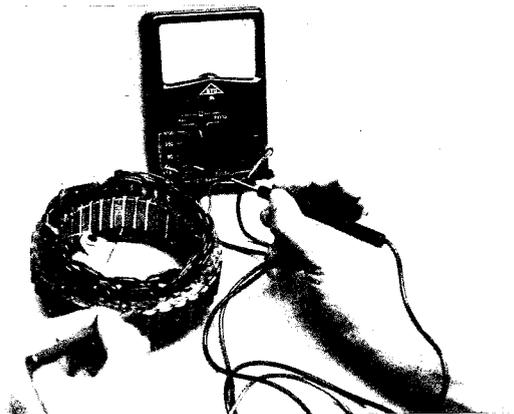


Fig. 5-7 Checking stator coil for ground

b. Checking rotor

To check for open circuit, place both prods of an ohmmeter on the slip rings, as shown in Fig. 5-8.



Fig. 5-8 Checking rotor for open

If the reading is 4 to 6 ohms, there is no trouble in the rotor.

To check for ground, connect one prod to the slip ring and other prod to the core. If the current flows, the rotor must be repaired or replaced.

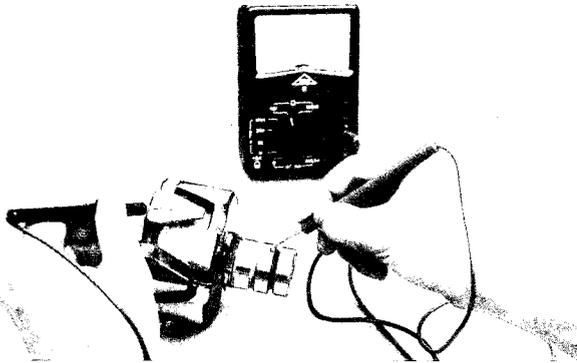


Fig. 5-9 Checking rotor for ground

c. Checking diodes

Diodes for use in the alternator are available in two different types, the positive diode which allows current to flow from the lead wire to the case but not from the case to the lead wire and the negative diode which has the opposite properties.

To check, read the resistance between the lead wire and case with a tester. Then reverse the tester leads and note the reading.

If both readings are very low or high, the diode is defective. A good diode will give one low reading and one high reading.

Note: The diode and heat sink are serviced as an assembly only.

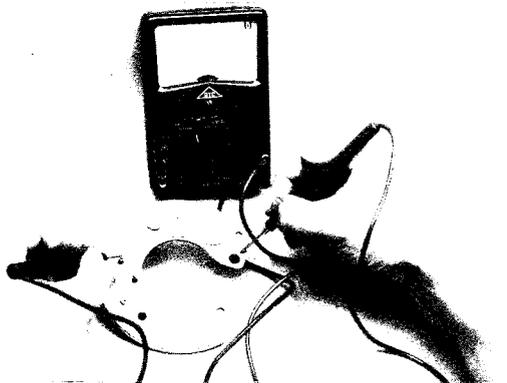


Fig. 5-10 Checking diode

d. Checking brushes and springs

The brushes should be replaced when one-third of the original length is worn away. This is indicated by a wear limit line on the side surface of each brush. Check the brush spring tension. The tension should be between 330 and 450 gr (12 and 16 oz). Replace the springs if the tension is less than 330 gr (12 oz) or if excessive corrosion exists.

e. Checking bearings

There is no need of lubricating as the bearing is pre-

lubricated. In a long spell of use, when the bearing is worn or damaged, replace it with a new one.

5-B-6. Assembling Alternator

Assemble the alternator in the reverse order of disassembling, noting the following points.

1. When installing the rotor assembly to the rear housing and stator assembly, hold the brushes in position by inserting a piece of stiff wire into the hole of the brush through the rear housing as shown in Fig. 5-11.



Fig. 5-11 Installing rotor assembly

2. The soldering of the diode leads should be performed in **less than twenty seconds** as the excessive heat may damage the diode.

1-B-7. Installing Alternator and Drive Belt

1. Place the alternator to the bracket with the bolt, and check the clearance as shown in Fig. 5-12.

If the clearance is more than 0.15 mm (0.0059 in), adjust it by using the following adjust shim.

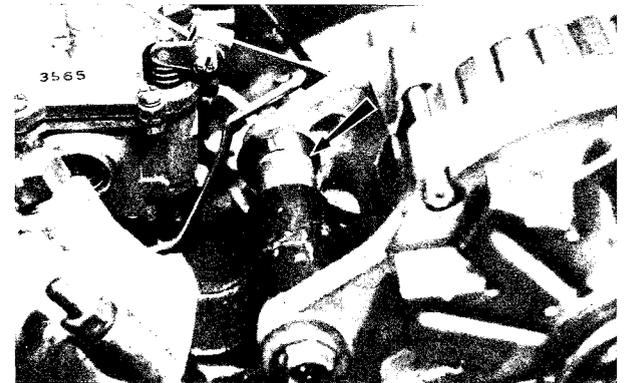


Fig. 5-12 Adjusting alternator fitting

0.15 mm	(0.0059 in)
0.3 mm	(0.0118 in)
0.5 mm	(0.0197 in)

2. Place the drive belt on the alternator pulley and install the alternator strap bolt.

3. Move the alternator toward or away from the engine until the correct tension is obtained.

Correct adjustment will permit the belt to flex **15 ± 2 mm (0.60 ± 0.08 in)** by pressing with thumb (10

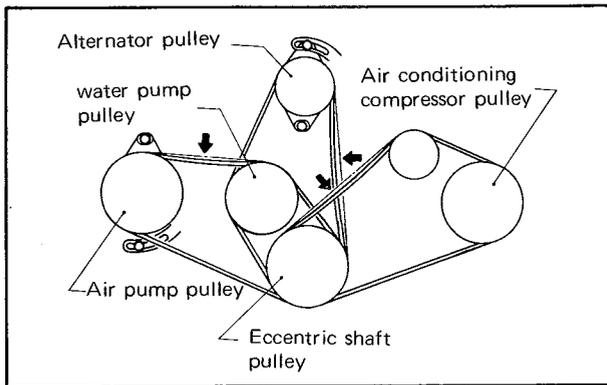


Fig. 5-13 Adjusting drive belt

- kg: 22 lb) midway between the alternator pulley and eccentric shaft pulley.
- 4. Tighten the alternator mounting bolt.
- 5. Connect multiple connector to the rear of the alternator.
- 6. Attach the wires to the alternator "B" terminal.
- 7. Install the air cleaner.
- 8. Connect the battery negative cable.

5-C. REGULATOR

The regulator used for MAZDA ROTARY PICKUP is composed of two control units, a constant voltage relay and a pilot lamp relay, mounted as an assembly.

5-C-1. Checking Constant Voltage Relay

To check, use an almost fully charged battery and connect a voltmeter between the "A" and "E" terminals of the regulator, as shown in Fig. 5-14.

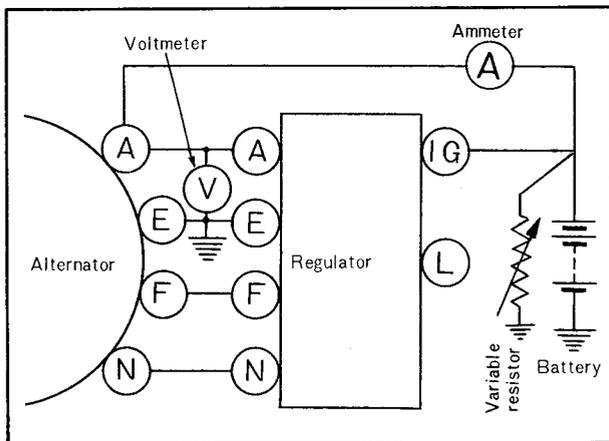


Fig. 5-14 Checking constant voltage relay

Then, hold the alternator revolution to 4,000 rpm (engine revolution 2,000 rpm) and take a reading of the voltmeter. If the reading is from **14.0 to 15.0 volts**, it is in proper order. If it is not within the specifications, the voltage relay must be adjusted, as instructed in Par. 5-C-3.

5-C-2. Checking Pilot Lamp Relay

Make a circuit, as shown in Fig. 5-15, using a voltmeter and variable resistor, and light up the pilot

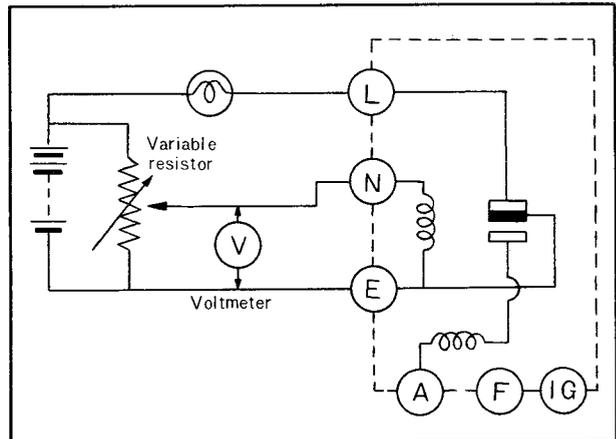


Fig. 5-15 Checking pilot lamp relay

lamp. Then, slide the knob of the variable resistor so that the voltage gradually increases. Read the voltage between the "N" and "E" terminals when the lamp goes out. If this voltage is **4.2 to 5.2 volts**, it is normal. Next, slide the knob to gradually reduce the voltage and the lamp will light again. If the reading is **0.5 ~ 3.0 volts** at this time, it is proper.

5-C-3. Adjusting Regulator

First, check the air gap, back gap and point gap with a wire gauge. If they are not within the specifications, adjust by bending the stationary contact bracket.

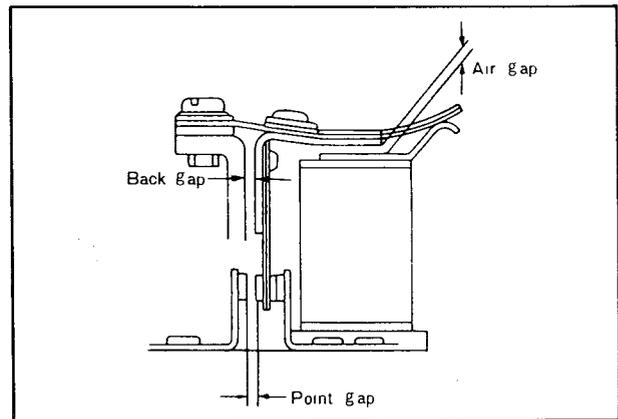


Fig. 5-16 Gaps of regulator

Constant voltage relay

Air gap	0.7 ~ 1.3 mm (0.028 ~ 0.051 in)
Point gap	0.3 ~ 0.45 mm (0.012 ~ 0.018 in)
Back gap	0.7 ~ 1.5 mm (0.028 ~ 0.059 in)

Pilot lamp relay

Air gap	0.9 ~ 1.4 mm (0.035 ~ 0.055 in)
Point gap	0.7 ~ 1.1 mm (0.028 ~ 0.043 in)
Back gap	0.7 ~ 1.5 mm (0.028 ~ 0.059 in)

After correct gaps are obtained, adjust the voltage setting. Bend the upper plate down to decrease the

voltage setting, up to increase the voltage setting. In case of the pilot lamp relay, if the voltage when the lamp lights up is adjusted to the specification, the voltage when the lamp goes out may be within the specification.

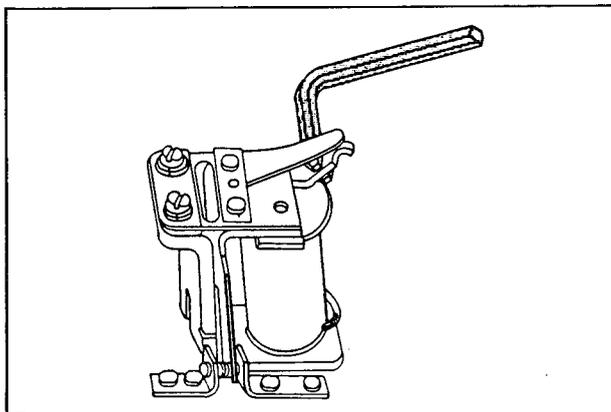


Fig. 5-17 Adjusting regulator

5-C-4. Replacing Regulator

1. Disconnect the regulator wires at the multiple connector.
2. Remove the two regulator attaching screws and remove the regulator.
3. Position the regulator to the body and install the two attaching screws.
4. Connector the regulator wires at multiple connector, and check the charging system operation.

5-D. STARTING MOTOR

5-D-1. Checking Starting Circuit

When the starting motor fails to operate or does not satisfactorily operate, check the following points before removing the starting motor:

1. Weak battery
2. Corroded or loose battery terminal
3. Loose starting motor terminal
4. Broken or loose wires of the starting circuit
5. Faulty ignition switch

5-D-2. Testing Starting Motor

a. Free running test

1. Place the starting motor in a vise equipped with

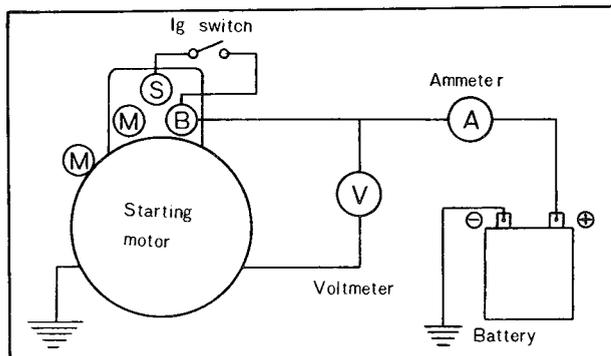


Fig. 5-18 Free running test

soft jaws and apply the battery voltage adjusted to **11.5 volts** to the starting motor.

2. Connect an ammeter between the "B" terminal of the starting motor and the battery.
3. Operate the starting motor and take a reading. The current draw should be **75 amperes minimum at 4,900 rpm** for manual transmission and **100 amperes minimum at 7,800 rpm** for automatic transmission.

b. Lock resistance test

1. Install the starting motor on a test bench.
2. Test the lock resistance of the starting motor, following the instructions of the test equipment manufacturer.
3. With applied battery voltage adjusted to 5.0 volts, the current flow should be **780 amperes** and the torque should be **1.1 m-kg (8.0 ft-lb)** for manual transmission, while the current flow **1,100 amperes** and the torque **2.4 m-kg (17.4 ft-lb)** for automatic transmission.

If the starting motor does not perform to the above test requirements, repair it referring to the following list.

- 1) Starter rotates slowly with a large current at free running.
 - a) Worn, dirty or defective bearings
 - b) Short circuit of armature
 - c) Grounded armature and field coil
- 2) Starter does not rotate with a large current.
 - a) Defective field circuit
 - b) Defective armature circuit
 - c) Burnt commutator
- 3) Low torque and low current flow. Low free running speed.
 - a) Breakage of field circuit
 - b) Excessive internal resistance
- 4) Low torque. High free running speed.
 - a) Short circuit of field coil

5-D-3. Removing Starting Motor

1. Disconnect the negative cable from the battery.
2. Disconnect the battery cable from the magnetic switch "B" terminal, and ignition switch wire from the magnetic switch "S" terminal.
3. Remove the bolts attaching the starting motor, and remove the starting motor.

5-D-4. Disassembling Starting Motor

1. Disconnect the field strap from the terminal on the magnetic switch.
2. Remove the magnetic switch attaching screws and

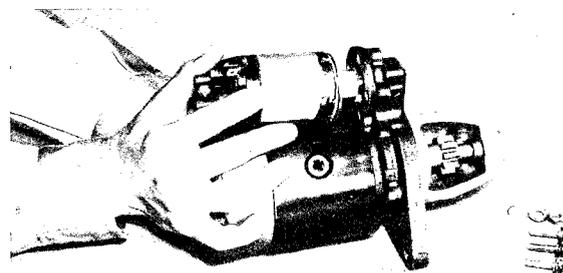


Fig. 5-19 Removing magnetic switch

remove the magnetic switch, spring and washers from the driving housing.

3. Remove the plunger from the driving lever.
4. Remove the through bolts and brush holder attaching screws. Then, remove the rear cover.



Fig. 5-20 Removing rear cover

5. Remove the insulator and washers from the rear end of the armature shaft.
6. Remove the brush holder.
7. Separate the yoke from the driving housing.

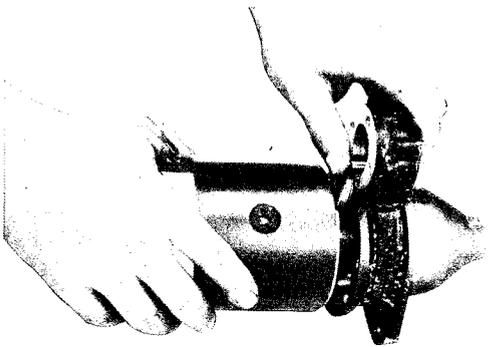


Fig. 5-21 Removing yoke assembly

8. Remove the rubber packing, springs and spring seat.
9. Remove the armature and over-running clutch assembly from the driving housing.

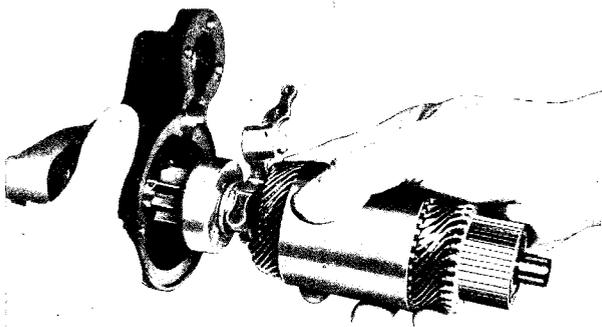


Fig. 5-22 Removing armature assembly

10. Remove the driving lever.
11. Drive the pinion stop collar toward the armature,

and remove the stop ring. Then, slide the stop collar and over-running clutch off the armature shaft.

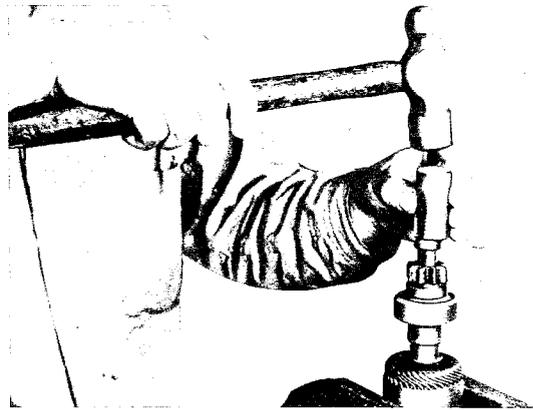


Fig. 5-23 Removing pinion stop collar

12. If the field coil removal is necessary, remove the shoe retaining screws. Then, remove the pole shoes and field coil from the yoke.

5-D-5. Inspecting Starting Motor

a. Checking armature

Check the armature for both ground and short circuit. To check for ground, touch one prod of an ohmmeter to each segment and the other prod to the core or shaft.

An infinite reading should be obtained for each segment. If the meter reading is not infinite, the armature windings are shorted to the core or shaft and the armature must be replaced.

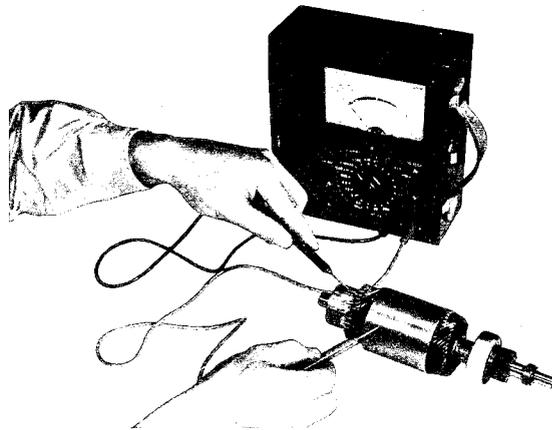


Fig. 5-24 Checking armature

To check for short circuit, use a growler tester. Place the armature against the core of the tester, and hold a steel strip on the armature. Then, rotate the armature slowly by hand. If the armature coil is shorted, the steel strip will become magnetized and vibrate. Replace the armature if a short is found.

b. Checking commutator

If the commutator is dirty, discolored or worn, clean it with emery paper and wash with clean solvent.

After cleaning, undercut the mica between the segments to the depth of 0.5 ~ 0.8 mm (0.02 ~ 0.031 in), as shown in Fig. 5-26.

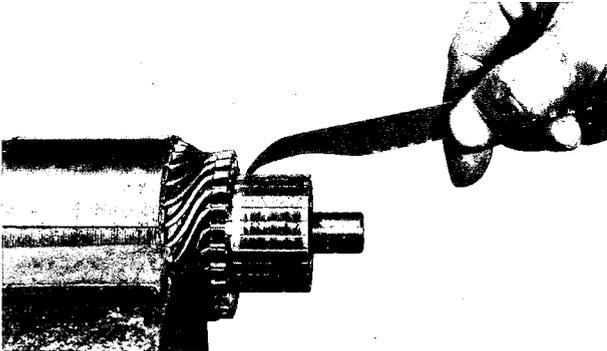


Fig. 5-25 Undercutting mica

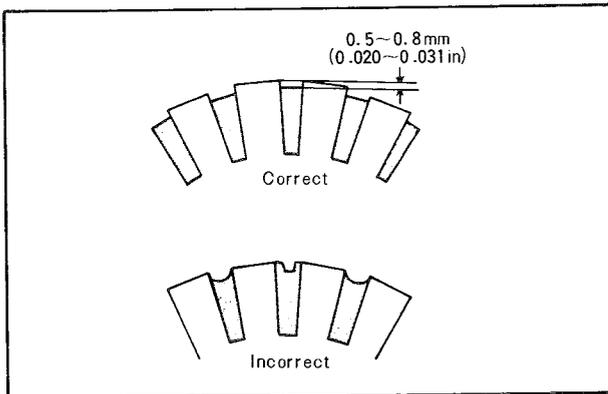


Fig. 5-26 Commutator mica depth

c. Checking field coil

To test the field coil for ground with an ohmmeter, place one prod on the yoke or pole core and the other prod to the field terminal. An infinite meter reading should be obtained. If a reading other than infinite is found, replace the field windings.

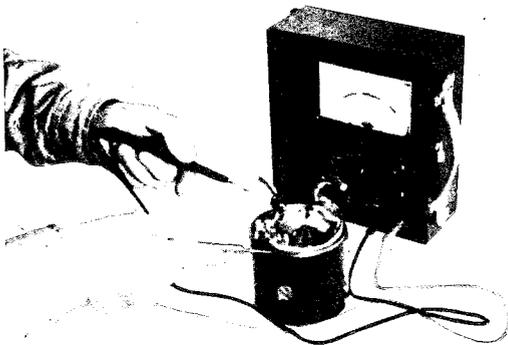


Fig. 5-27 Checking field coil for ground

To check for open, connect the prods to each of the two leads. If there is no flow of current, the coil is open circuit and must be repaired or replaced.

d. Checking brush holder

Check the brush holder for ground. Touch one prod of an ohmmeter to the insulated brush holder and the other prod to the brush holder frame.

If the meter reading is other than infinite, the brush holder assembly is shorted and must be replaced. Repeat this test for the other insulated brush holder. Do not use this test on the two grounded brush holders.

e. Checking brushes and brush springs

Check the brushes and replace if they are worn down more than one third of their original length. Otherwise, the brush spring tension will be reduced, leading to an increase in the brush-commutator contact resistance. This will lower the torque and cause the burnt commutator surface.

The spring tension is 1.4 ~ 1.8 kg (49 ~ 63 oz). If the tension is too low, replace the springs.

f. Checking bushes

Check the clearance between the armature shaft and the bush. If it exceeds 0.2 mm (0.008 in), replace the bush.

5-D-6. Magnetic Switch Test

a. Pull-in coil test

Apply the specified voltage (12V) between the "S" terminal and "M" terminal. If the magnetic switch is forcefully attracted, the pull-in coil is in good condition.

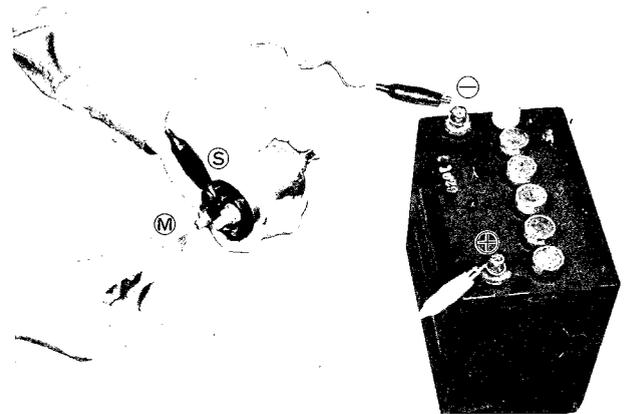


Fig. 5-28 Pull-in coil test

b. Holding coil test

Ground the "M" terminal to the magnetic switch body with a lead and impose the specified voltage (12V)

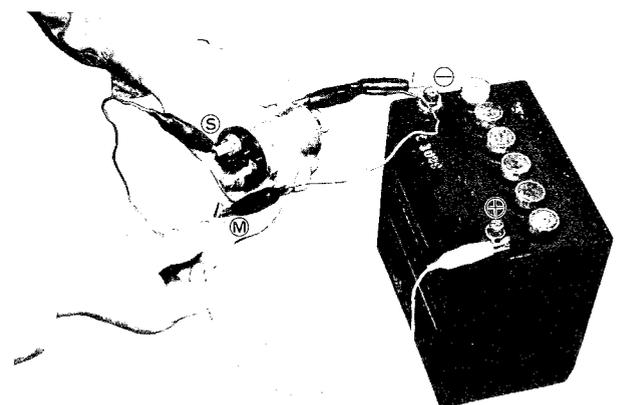


Fig. 5-29 Holding coil test

upon the "S" terminal to pull in the plunger. If the plunger remains attracted after disconnecting the lead from the "M" terminal, there is no trouble with the holding coil.

c. Return test

Push in the plunger by hand and apply the specified voltage (12V) between the "M" terminal and the magnetic switch body. If the plunger is not attracted, there is no trouble.

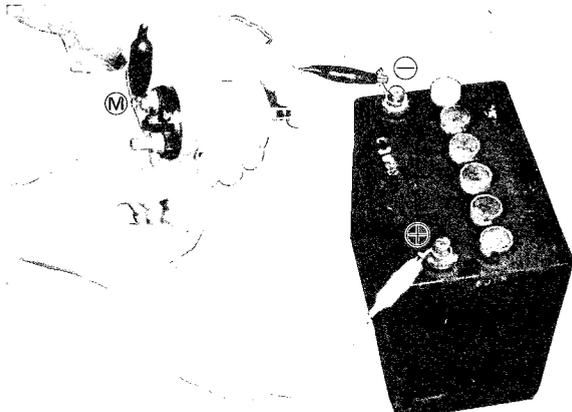


Fig. 5-30 Return test

5-D-7. Assembling Starting Motor

To assemble the starting motor, reverse the procedure of Par. 5-D-4, noting the following points.

1. Adjust the armature shaft end play to 0.1 ~ 0.5 mm (0.008 ~ 0.020 in) with a thrust washer on the rear end of the shaft.
2. When the magnetic switch is engaged, the clearance between the pinion and stop collar should be 0.5 ~ 2.0 mm (0.02 ~ 0.08 in).

This clearance can be adjusted by inserting the adjusting washer between the magnetic switch body and the driving housing.

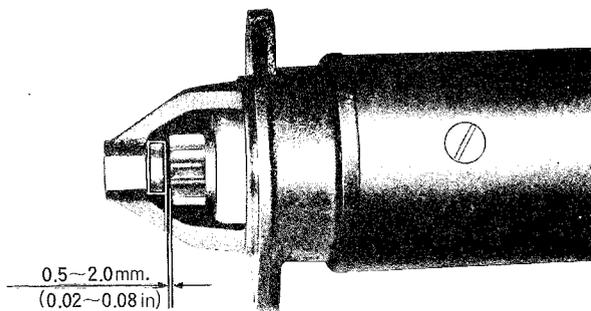


Fig. 5-31 Checking pinion position

5-D-8. Installing Starting Motor

Install the starting motor in the reverse order of removing.

5-E. SPARK PLUG

5-E-1. Removing Spark Plug

Note: When removing the high tension cords from the

spark plugs, grasp, twist and pull the moulded cap only. **Do not pull on the wire** because the wire connection inside the cap may become separated.

1. Disconnect the high tension cord from each spark plug.
2. After loosening each spark plug one or two turns, clean the area around each spark plug port with compressed air, then remove the spark plugs.

5-E-2. Checking Spark Plug

Check the spark plugs for burned and eroded electrode, black deposits, fouling, and cracked porcelain. Clean the spark plugs with a spark plug cleaner or a wire brush if they are fouled.

Replace the badly burned or eroded spark plugs.

The standard spark plug gap (initial) is 1.05 ± 0.05 mm (0.041 ± 0.002 in).

5-E-3. Installing Spark Plug

1. Apply **moly paste** (0259 77 767A or 0259 77 768A) to the threads of new spark plugs to prevent the threads from damaging.
2. Thread the spark plugs into the rotor housing finger tight until the gaskets contact the housing. If the plugs cannot be installed with finger pressure, clean the threads with a suitable greased thread chaser.
3. Torque each spark plug to $1.3 \sim 1.8$ m-kg ($9 \sim 13$ ft-lb).
4. Connect the high tension cords to spark plugs.

5-F. DISTRIBUTOR (CALIFORNIA)

5-F-1. Testing Distributor

a. Dwell angle test

The dwell angle is degrees of rotation through which the contact point remain closed.

To test the dwell angle, use a distributor tester following the instructions of the manufacturer.

Note: When checking the dwell angle of leading retard, remove the coupler of the distributor and connect the jumper wire to both terminals in the coupler as shown in Fig. 5-32.

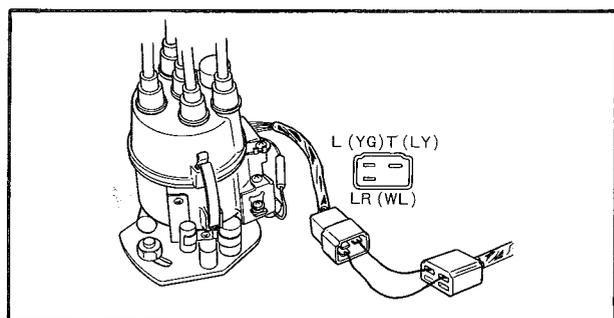


Fig. 5-32 Connecting coupler

If the reading is not within the specifications, it indicates the following troubles:

1. Incorrect point gap

2. Worn cam
3. Worn rubbing block
4. Distorted contact arm

The specifications are as follows:

	Dwell angle
Trailing	$58^\circ \pm 3^\circ$
Leading (normal)	$58^\circ \pm 3^\circ$
Leading (retarded)	$53^\circ \pm 3^\circ$

b. Advance test

To test the ignition advancing characteristic of the distributor, use a distributor tester following the instructions of the manufacturer.

The advancing characteristic of distributor should be **within the range** as shown in Fig. 5-33.

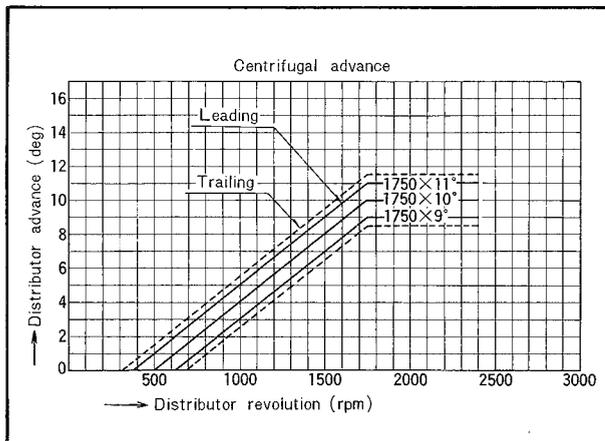


Fig. 5-33 Advance characteristics

5-F-2. Adjusting Point Gap

Adjust the point gap as follows:

1. Check the contact points alignment. If necessary,

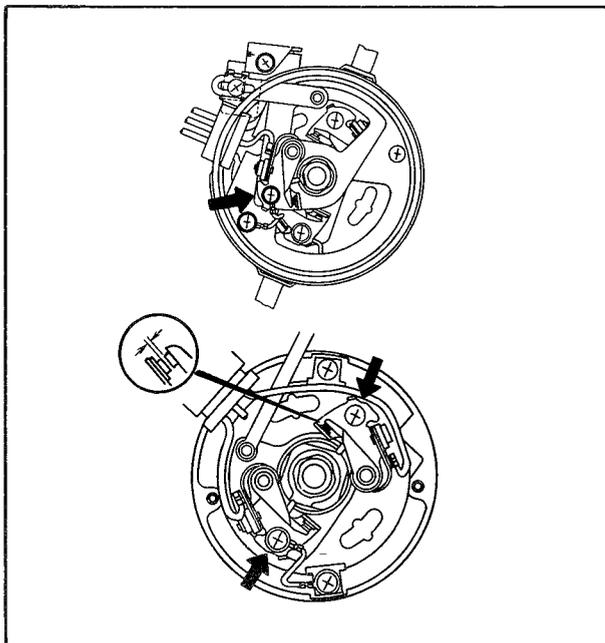


Fig. 5-34 Adjusting point gap

bend the stationary contact bracket so as to obtain contact in the center of the contact points.

2. Crank the engine and stop when the rubbing block on the contact arm just rests on the highest point of the cam.

3. Insert a feeler gauge of **0.45 mm (0.018 in)** between the contact points, loosen the set screw and move the stationary point until the correct gap is obtained.
4. Tighten the set screw and recheck the point gap.

5-F-3. Adjusting Ignition Timing

The timing mark and its location is illustrated in Fig. 5-35.

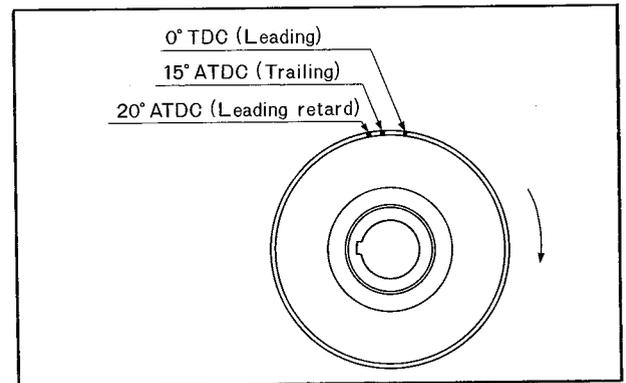


Fig. 5-35 Timing marks

a. Adjusting leading timing

1. Warm up the engine to the normal operating temperature.
2. Connect a tachometer to the engine.
3. Connect a timing light to the high tension cord for leading spark plug on the front rotor housing.
4. Start the engine and run it at specified idle speed. On the vehicle equipped with automatic transmission, place the selector lever to "D" position.
5. Aim the timing light at the timing indicator pin on the front cover.
6. If the leading timing is not correct, loosen the distributor lock nut and rotate the distributor housing until the leading timing mark on the pulley aligns with the indicator pin.
7. Tighten the distributor lock nut, and recheck the leading timing.

b. Adjusting leading retard timing

8. Stop the engine and leave the timing light connecting.
9. Disconnect the coupler of the distributor and connect the jumper wires to the end of the separated couplers as shown in Fig. 5-32.
10. Start the engine and check the leading retard timing, using the timing light.
11. If the timing is not correctly aligned, loosen the set screw of the external adjusting lever, and move the lever until the correct timing is obtained. Tighten the set screw of the external adjusting lever and recheck the leading retard timing.

c. Adjusting trailing timing

12. Connect the timing light to the high tension cord

for trailing spark plug on the front housing.

13. Start the engine and check the trailing timing, using the timing light.

14. If the trailing timing is not correct, loosen the set screw of the external adjusting lever, and move the lever until the correct timing is obtained.

15. Tighten the external adjusting lever set screw and recheck the trailing timing.

5-F-4. Removing Distributor

1. Disconnect the high tension cords from the distributor.

2. Disconnect the coupler of primary wires from the distributor.

3. Remove the distributor attaching nut.

4. Pull the distributor out of the front cover.

5-F-5. Disassembling Distributor

1. Remove the distributor cap and rotor.

2. Disconnect the primary wire terminal from leading retard point.

3. Remove the screws attaching the leading retard breaker base plate and external adjusting lever, and remove the breaker base plate assembly.

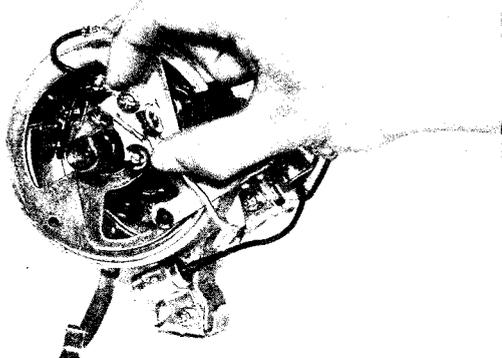


Fig. 5-36 Removing leading retard breaker base plate

4. Disconnect the primary wires from the leading and trailing contact points.

5. Disconnect the couplers from the condenser leads.

6. Remove the primary wires (rubber block) from the distributor housing.

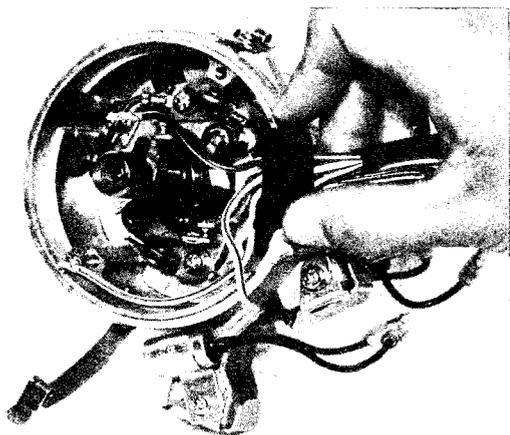


Fig. 5-37 Disconnecting primary wires

7. Remove the clip holding the external adjusting lever. Remove the screws attaching the external adjusting lever and remove the lever.

8. Remove the screws attaching the breaker base plate and remove the breaker base plate assembly.



Fig. 5-38 Removing breaker base plate

9. Remove the snap ring and cam from the drive shaft.

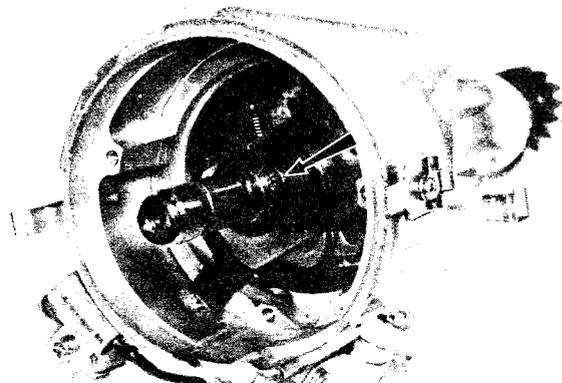


Fig. 5-39 Removing snap ring

10. Remove the retaining pin attaching the distributor driven gear. Remove the driven gear and washers.

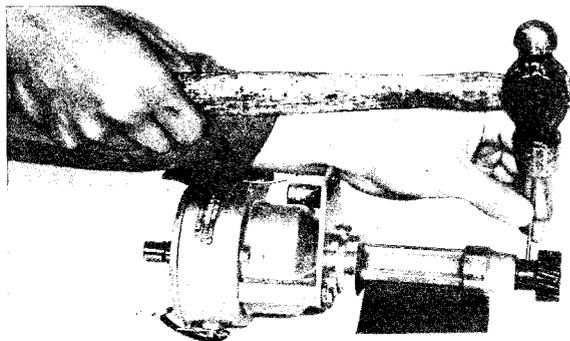


Fig. 5-40 Removing retaining pin

11. Remove the shaft through the top of the distributor housing.

12. Remove the governors by removing the springs.

13. Remove the condensers from the distributor housing.

5-F-6. Distributor Inspection

a. Checking cap

Inspect the distributor cap for cracks, carbon runners and evidence of arcing. If any of these conditions exists, the cap should be replaced. Clean any corroded high tension terminals.

b. Checking rotor

Inspect the rotor for cracks or evidence of excessive burning at the end of the metal strip. If any of these conditions exists, the rotor should be replaced.

c. Checking contact points

Inspect the points for wear, burning, transferred metal and pitting. If they are slight, the points can be cleaned with a stiff bristled brush or oil stone. If they are severe, replace with new ones.

d. Checking tension of contact arm spring

For inspection, hook a spring scale on the contact arm as close as possible to the movable breaker point and pull the spring scale at a right angle to the contact arm. Take a reading when the contact points start to separate. The reading should be between **0.5 ~ 0.65 kg (1.1 ~ 1.4 lb)**.

e. Checking bearing

Inspect the bearing for roughness. This can be determined by slowly turning the outer race by hand.

f. Checking condenser

If the condenser is leaky, it will cause a weak spark or burned contact points. Check the capacity of the condenser with a condenser tester. The Capacity is **0.27 ± 0.03 microfarads**. In the absence of a tester check by substituting a new condenser.

5-F-7. Assembling Distributor

Assembling the distributor in the reverse order of disassembling.

5-F-8. Installing Distributor

1. Rotate the eccentric shaft in the direction of revolution until the leading timing mark on the eccentric

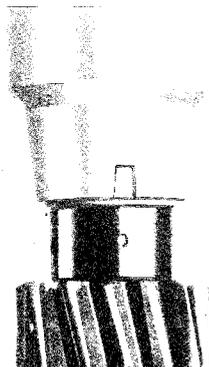


Fig. 5-41 Aligning tally marks

shaft pulley aligns with the indicator pin on the front cover.

2. Align the tally marks on the distributor housing and driven gear as shown in Fig. 5-41.

3. Install the distributor so that the distributor lock bolt is located in the center of the slit, and engage the gears.

4. Turn the distributor housing to the left until the contact points close. Then, turn it to the right and stop it when the leading contact points just start to separate. Tighten the lock nut.

5. Install the distributor rotor and cap.

6. Install the high tension cords and connect the primary wire coupler.

7. Adjust the ignition timing with a timing light, then tighten the distributor attaching nut.

5-G. DISTRIBUTOR (FEDERAL, CANADA)

5-G-1. Testing Distributor

a. Dwell angle test

The dwell angle is degrees of rotation through which the contact point remain closed.

To test the dwell angle, use a distributor tester following the instructions of the manufacturer. If the reading is not within the specifications, it indicates the following troubles:

1. Incorrect point gap
2. Worn cam
3. Worn rubbing block
4. Distorted contact arm

The specifications are as follows:

	Dwell angle
Leading	58° ± 3°
Trailing	58° ± 3°

b. Advance test

To test the ignition advance characteristic of the distributor, use a distributor tester following the instructions of the manufacturer. The advancing characteristic of distributor should be **within the range** as shown in Fig. 5-42.

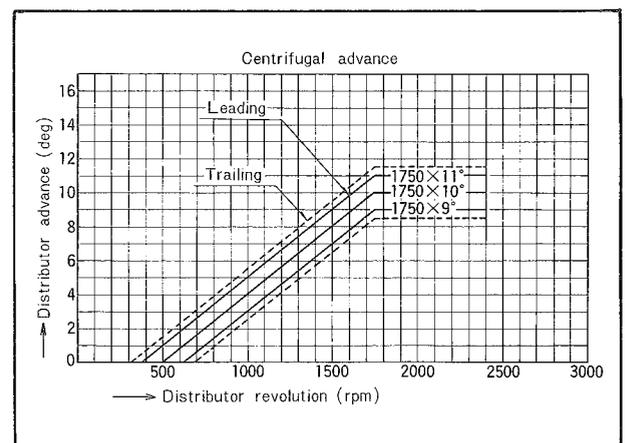


Fig. 5-42 Advance characteristics

5-G-2. Adjusting Point Gap

To adjust the point gap, see Par. 5-F-2.

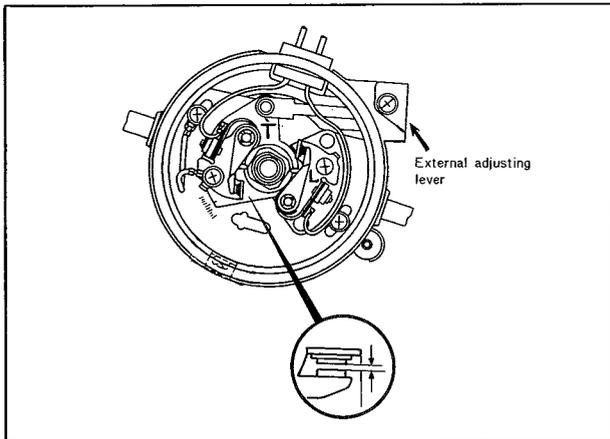


Fig. 5-43 Adjusting point gap

5-G-3. Adjusting Ignition Timing

The timing mark and its location is illustrated in Fig. 5-44.

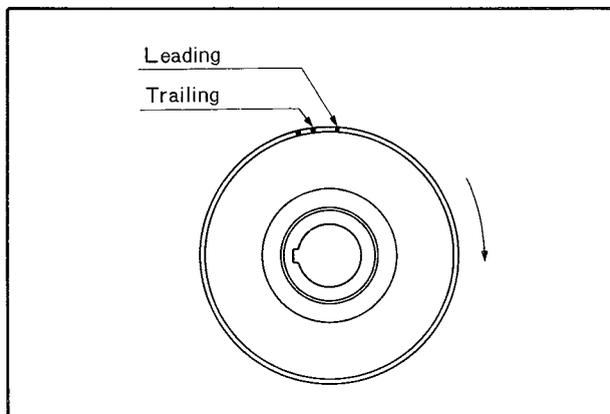


Fig. 5-44 Timing marks

a. Adjusting leading timing

1. Warm up the engine to the normal operating temperature.
2. Connect a tachometer to the engine.
3. Connect a timing light to the high tension cord for leading spark plug on the front rotor housing.
4. Start the engine and run it at specified idle speed. On the vehicle equipped with automatic transmission, place the selector lever to "D" position.
5. Aim the timing light at the timing indicator pin on the front cover.
6. If the leading timing is not correct, loosen the distributor lock nut and rotate the distributor housing until the timing mark on the pulley aligns with the indicator pin.
7. Tighten the distributor lock nut, and recheck the leading timing.

b. Adjusting trailing timing

8. Connect the timing light to the high tension cord for trailing spark plug on the front rotor housing.
9. Start the engine and check the trailing timing, using the timing light.

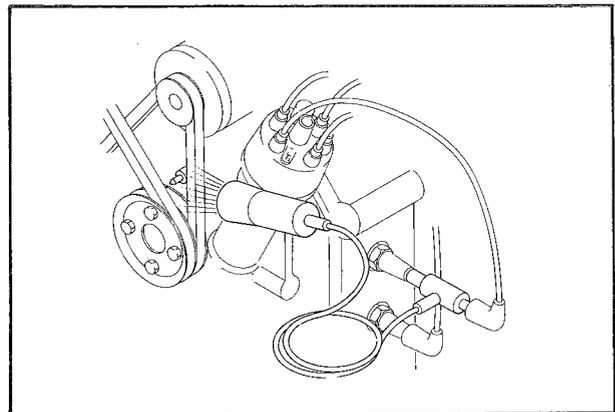


Fig. 5-45 Checking trailing timing

10. If the trailing timing is not correct, loosen the attaching screw of the external adjusting lever, and move the lever until the correct timing is obtained.

11. Tighten the attaching screw and recheck the trailing timing.

5-G-4. Removing Distributor

To remove the distributor, see Par. 5-F-4.

5-G-5. Disassembling Distributor

1. Remove the distributor cap and rotor.
2. Disconnect the primary wire terminals from the leading and trailing contact points.

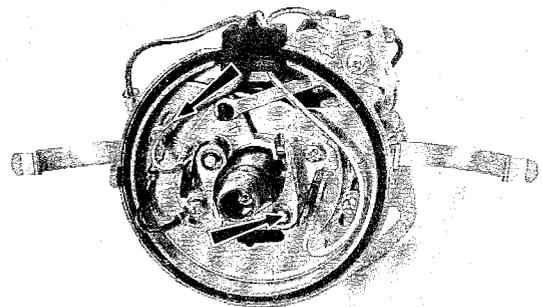


Fig. 5-46 Disconnecting primary wire

3. Disconnect the couplers from the condenser leads.
4. Remove the primary wires (rubber block) from the distributor housing.

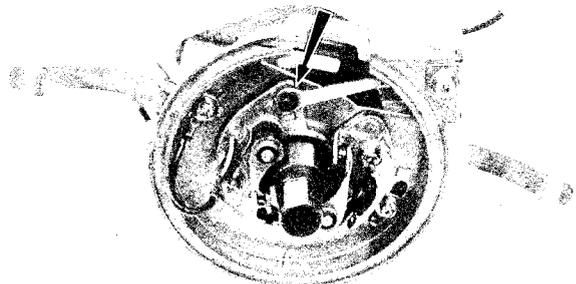


Fig. 5-47 Removing clip

5. Remove the clip holding the external adjusting lever links. Remove the set screw and remove the external adjusting lever.
6. Remove the screws attaching the breaker base plate and remove the breaker base plate assembly.

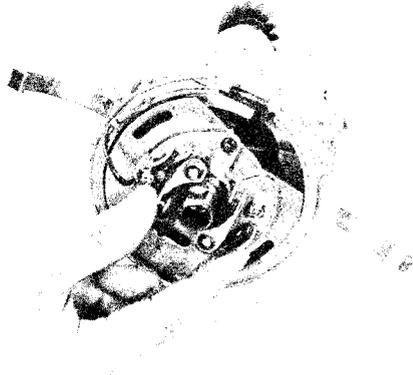


Fig. 5-48 Removing breaker base plate

7. Remove the cam attaching screw and lift the cam off the drive shaft.

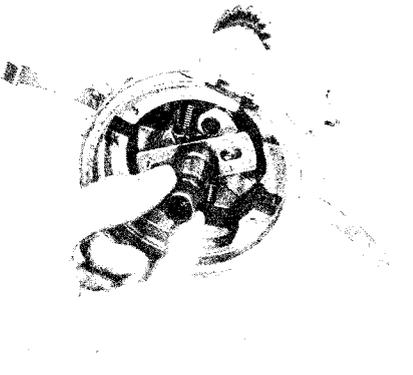


Fig. 5-49 Removing cam

8. Drive the retaining pin out of the driven gear with a suitable drift and remove the gear and washers.

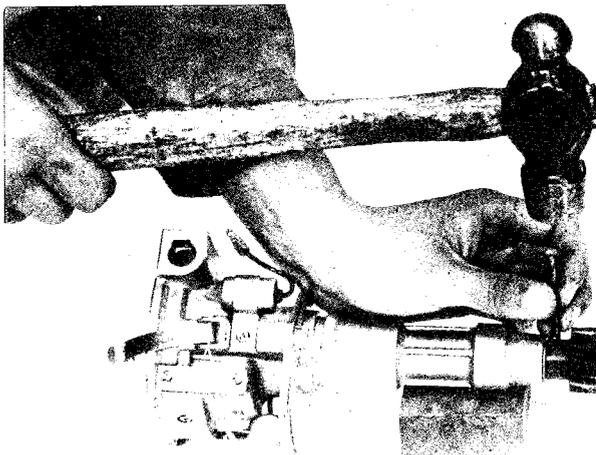


Fig. 5-50 Removing retaining pin

9. Remove the shaft through the top of the distributor housing.

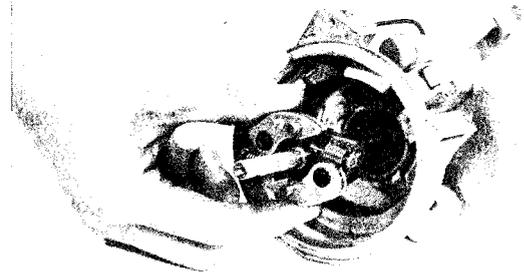


Fig. 5-51 Removing shaft

10. Remove the governors by removing the springs.
11. Remove the condensers from the distributor housing.

5-G-6. Distributor Inspection

To inspect the distributor, see Par. 5-F-6.

5-G-7. Assembling Distributor

Assembling the distributor in the reverse order of disassembling.

5-G-8. Installing Distributor

To install the distributor, see Par. 5-F-8.

5-H. IGNITION COIL

5-H-1. Spark Intensity Test

1. Connect the **remote starter switch** (49 0242 685A) in the starting circuit. Do not connect the "C" terminal of the remote starter switch to the ignition coil.
2. Remove the leading and trailing coil high tension cords from the distributor cap.
3. Turn on the ignition switch.
4. While holding the high tension cord approximately **6 mm (0.24 in)** from the rotor housing or any other good ground, crank the engine by using the remote starter switch.

If the spark is good, the trouble lines in the secondary circuit.

If there is no spark or a weak spark, the trouble is in the primary circuit, coil to distributor high tension cord, or the coil.

5-H-2. Checking Ignition Coil

Before testing the coil, always heat the coil to normal operating temperature.

1. Check the primary resistance with an ohmmeter. It should be **1.35 ohms** on the leading ignition coil and **1.46 ohms** on the trailing one.
2. Check the secondary resistance with an ohmmeter. It should be **8.7 kilo-ohms** on the leading ignition coil and **9.5 kilo-ohms** on the trailing one.
3. Check the resistance of the external resistor with

an ohmmeter. The resistance should be **1.4 ohms** on the leading side and **1.6 ohms** on the trailing side.

5-H-3. Replacing Ignition Coil

1. Disconnect the negative wire from the battery.
2. Disconnect the coupler from the negative terminal of the trailing ignition coil. Loosen the nut from the positive terminal and remove the wire terminal.
3. Disconnect the couplers from the negative terminal of the leading ignition coil. Loosen the nut from the positive terminal and remove the wire terminal.
4. Remove the high tension cords from the leading and trailing ignition coils.
5. Remove the bracket attaching bolt and remove the coils.
6. Install the coil by following the removal procedures in the reverse order.

5-I. HIGH TENSION CORD

The high tension cords include the cords connecting

the distributor cap to the spark plugs and the cord connecting the center terminal of the distributor cap to the center terminal of the ignition coil.

These cords are the radio resistance-type which filter out the high frequency electrical impulses that are the source of ignition noise interference.

5-I-1. Resistance Test

Check the resistance of each high tension cord. The resistance should not exceed **16 kilo-ohms per 1 m (39.37 in)**.

Note:

1. When checking the resistance of the cords or setting ignition timing, **do not** puncture the cords with a probe. The probe may cause a separation in the conductor.
2. When removing the cords from the spark plugs, grasp and twist the moulded cap, then pull the cap off the spark plug. **Do not** pull on the cord because the wire connection inside the cap may become separated or the insulator may be damaged.

SPECIAL TOOL

49 0242 685

Remote starter switch

CLUTCH

DESCRIPTION	6 : 1
6-A. CLUTCH PEDAL ADJUSTMENT.....	6 : 2
6-B. CLUTCH REMOVAL.....	6 : 2
6-C. CLUTCH INSPECTION.....	6 : 2
6-C-1. Checking Release Bearing and Fork.....	6 : 2
6-C-2. Checking Pressure Plate and Cover Assembly	6 : 2
6-C-3. Checking Clutch Disc.....	6 : 3
6-C-4. Flywheel Inspection.....	6 : 3
6-C-5. Ring Gear Replacement	6 : 3
6-C-6. Checking Pilot Bearing	6 : 3
6-C-7. Replacing Pilot Bearing.....	6 : 3
6-C-8. Checking Eccentric Shaft Rear Oil Seal.....	6 : 4
6-D. CLUTCH INSTALLATION.....	6 : 4
6-E. CLUTCH MASTER CYLINDER	6 : 4
6-E-1. Removing Clutch Master Cylinder.....	6 : 4
6-E-2. Disassembling Clutch Master Cylinder	6 : 4
6-E-3. Checking Clutch Master Cylinder.....	6 : 4
6-E-4. Assembling Clutch Master Cylinder.....	6 : 5
6-E-5. Installing Clutch Master Cylinder.....	6 : 5
6-F. CLUTCH RELEASE CYLINDER	6 : 5
6-F-1. Removing Clutch Release Cylinder.....	6 : 5
6-F-2. Disassembling Clutch Release Cylinder.....	6 : 5
6-F-3. Checking Clutch Release Cylinder.....	6 : 5
6-F-4. Assembling Clutch Release Cylinder.....	6 : 5
6-F-5. Installing Clutch Release Cylinder.....	6 : 5
6-G. AIR BLEEDING.....	6 : 6
SPECIAL TOOLS.....	6 : 6

DESCRIPTION

The clutch is of the single dry disc type. The clutch assembly consists of the clutch disc assembly, clutch cover and pressure plate assembly and clutch release mechanism.

The clutch operating mechanism is of the hydraulic type, consisting of a master cylinder mounted on the dash and a clutch release cylinder mounted on the clutch housing.

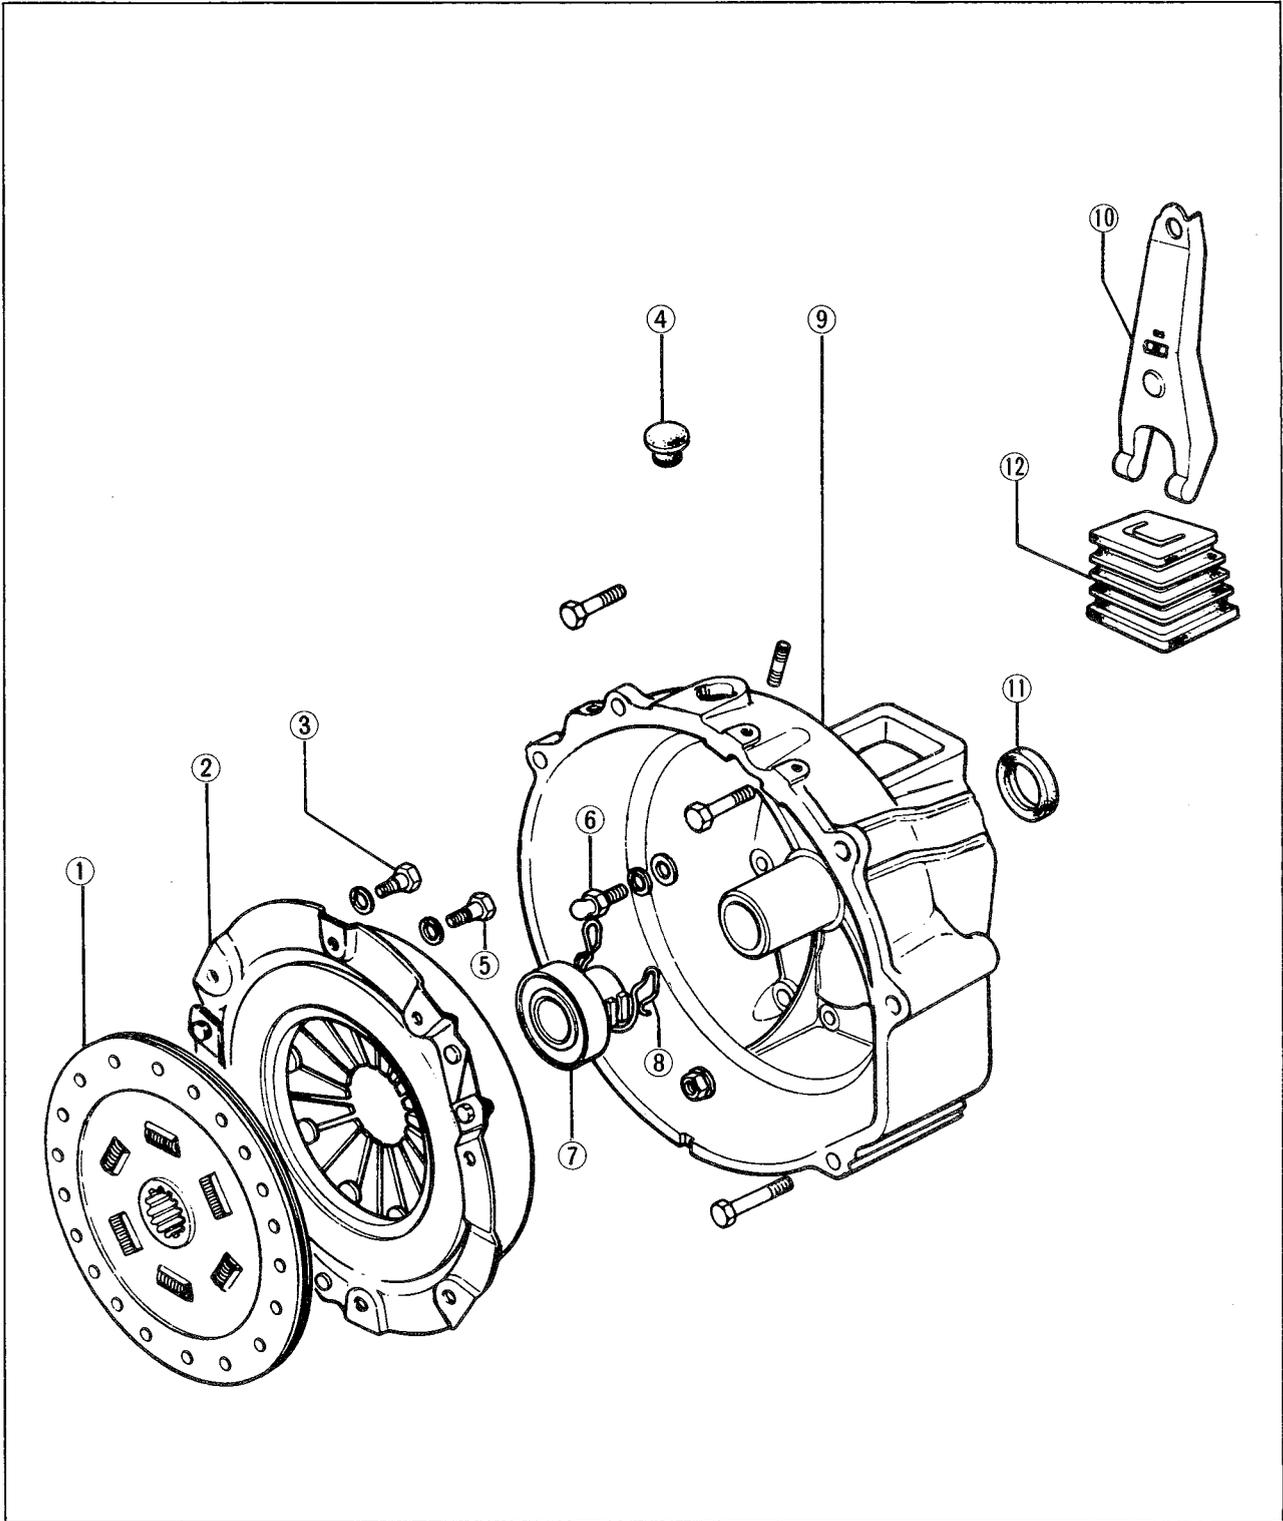


Fig. 6-1 Clutch components

- 1. Clutch disc
- 2. Clutch cover
- 3. Bolt
- 4. Service hole cover

- 5. Reamer bolt
- 6. Pivot pin
- 7. Release bearing
- 8. Spring

- 9. Clutch housing
- 10. Release fork
- 11. Oil seal
- 12. Dust boot

6-A. CLUTCH PEDAL ADJUSTMENT

The free travel of the clutch pedal before the push rod contacts with the piston should be 0.5 ~ 3.0 mm (0.02 ~ 0.12 in).

To adjust the free travel, loosen the lock nut and turn the push rod until the proper adjustment is made. Tighten the lock nut after adjustment is completed.

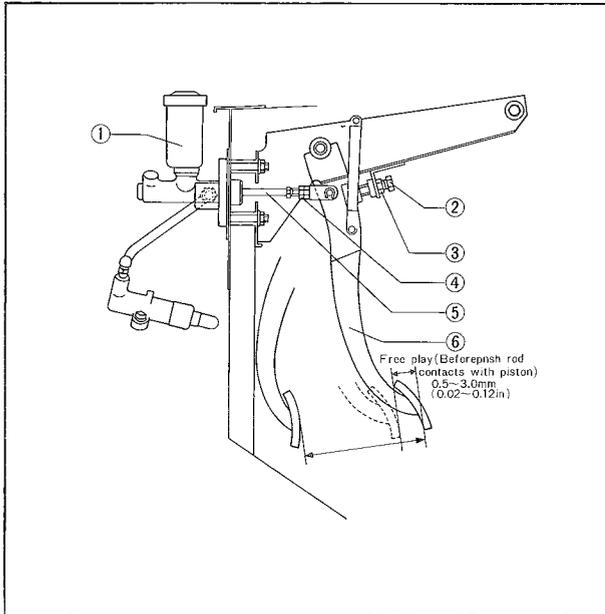


Fig. 6-2 Clutch pedal

- | | |
|--------------------|-------------|
| 1. Master cylinder | 4. Lock nut |
| 2. Stopper | 5. Push rod |
| 3. Lock nut | 6. Pedal |

6-B. CLUTCH REMOVAL

To remove the clutch from the vehicle, proceed as follows:

1. Remove the transmission.
2. Install the **ring gear brake** (49 1881 060).
3. Remove the 4 standard bolts and 2 reamer bolts holding the clutch cover assembly to the flywheel, and remove the clutch cover assembly and the clutch disc.
4. Straighten the tab of the lockwasher. With the **wrench** (49 0820 035), loosen the nut that attaches the flywheel to the eccentric shaft and remove the nut.

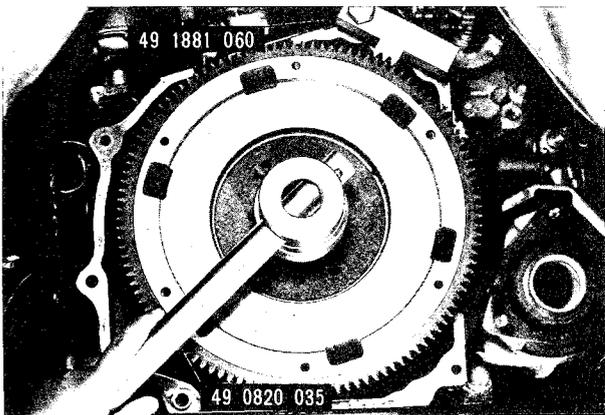


Fig. 6-3 Loosening flywheel nut

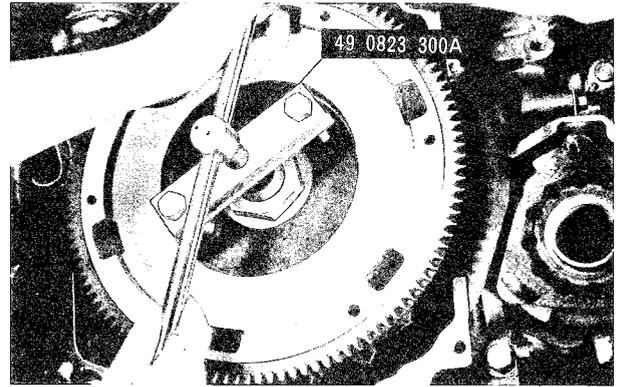


Fig. 6-4 Removing flywheel

5. Using the **puller** (49 0823 300A), remove the flywheel from the eccentric shaft.

Note: After removing the flywheel, inspect for oil leaking through the eccentric shaft rear oil seal.

6. Pull the release fork outward until the spring clip of the fork releases from the ball pivot. Remove the fork and release bearing from the clutch housing.

6-C. CLUTCH INSPECTION

6-C-1. Checking Release Bearing and Fork

Note: The release bearing is packed with lubricant which is intended to last the whole life time of the bearing. Therefore, the bearing must not be washed in gasoline or any other solvent.

Check the release bearing by pressing and turning the front race slowly by hand. Replace if the bearing feels rough or seems noisy when turning.

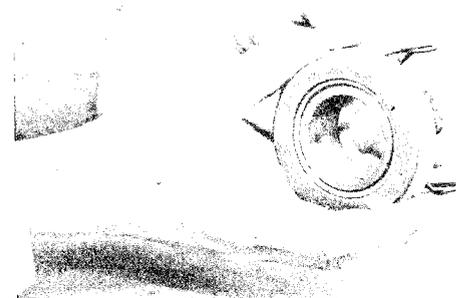


Fig. 6-5 Checking release bearing

Examine the clutch housing carefully to be certain there are no burrs on the outer surface of the clutch housing which pilots the release bearing. Check the release fork for crack or bend. If necessary, replace the fork.

6-C-2. Checking Pressure Plate and Cover Assembly

Check the contact surfaces of the pressure plate with the clutch facing for wear, damage or warpage.

If it is slight, correct it by lapping with compound or by turning a lathe. But if severe, replace with a new one.

Check the diaphragm spring and cover and if any wear or damage is found, replace the pressure plate and cover assembly.

6-C-3. Checking Clutch Disc

Inspect the clutch disc for warpage with a dial indicator or a feeler gauge, as shown in Fig. 6-6.

If it is **more than 1.0 mm (0.039 in)**, replace with a new one.

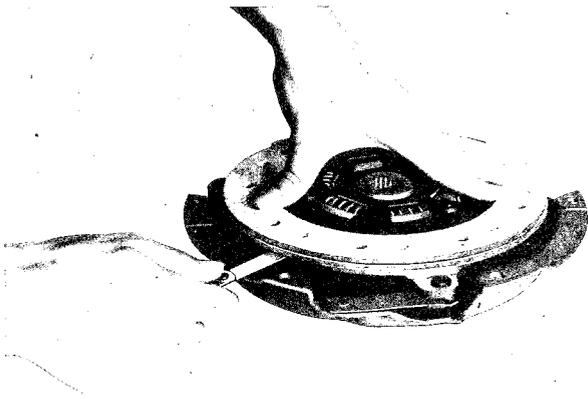


Fig. 6-6 Checking clutch disc

Replace excessively worn facing as it will cause slippage or score the pressure plate and flywheel due to the projected heads of rivets.

Check the depth between the facing surface and the rivet using a depth gauge, as shown in Fig. 6-7. If the reading is **less than 0.30 mm (0.012 in)**, replace the clutch disc.

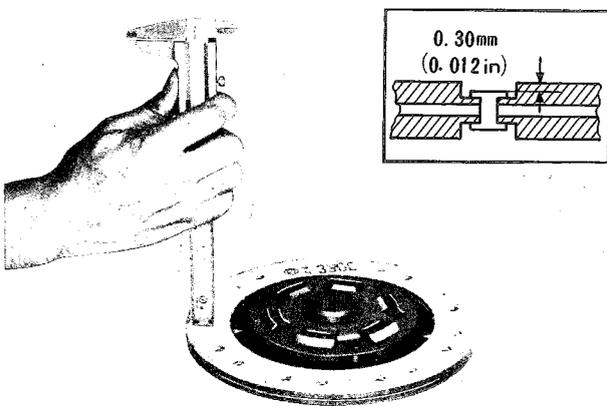


Fig. 6-7 Checking clutch disc

If oil is evident on the facing, clean or replace the facing and eliminate the cause of oil leakage. Make certain that the clutch disc slides easily on the main drive shaft without any excessive play.

6-C-4. Flywheel Inspection

Inspect the contact surface of the flywheel with the clutch facing for burnt surface, scored surface or

rivet grooves.

If it is slight, it can be reconditioned by grinding in a lathe. If the damage is deep, the flywheel should be replaced.

Check the ring gear teeth and replace if the ring gear teeth are broken, cracked or seriously burred.

Note: On the vehicle equipped with an automatic transmission, the ring gear and drive plate should be replaced as an assembly.

6-C-5. Ring Gear Replacement

1. Heat the old ring gear and remove it from the flywheel.
2. Heat a new ring gear evenly 250 to 300°C (480 to 570°F).
3. Place the ring gear on the cold flywheel, making sure that the chamfer on the teeth is faced to the transmission.
4. Allow the ring gear to cool slowly to shrink it onto the flywheel.

6-C-6. Checking Pilot Bearing

Check the transmission main drive shaft pilot bearing which is pressed into the rear end of the eccentric shaft. If the bearing is loose or rough, it should be replaced.

6-C-7. Replacing Pilot Bearing

1. Remove the bearing and seal from the rear end

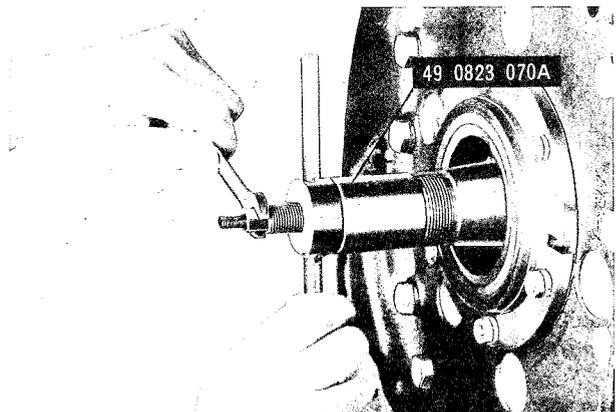


Fig. 6-8 Removing rollar bearing

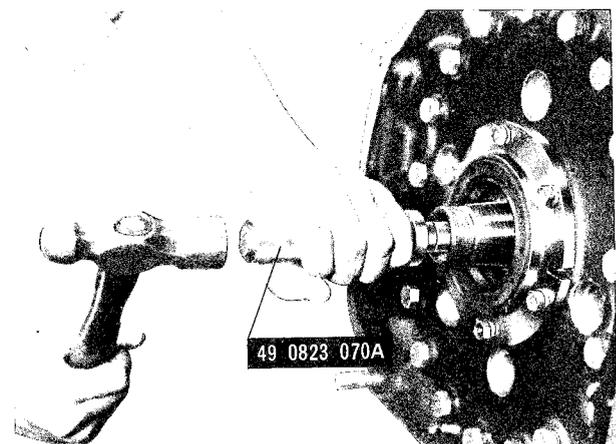


Fig. 6-9 Installing rollar bearing

of the eccentric shaft with the **remover** (49 0823 071A).

2. Install a new bearing with the **installer** (49 0823 072A).

3. Install the seal.

6-C-8. Checking Eccentric Shaft Rear Oil Seal

Check the oil seal fitted into the rear stationary gear for wear or damage. If traces of oil leakage are found, replace the oil seal.

6-D. CLUTCH INSTALLATION

1. Clean the contact surfaces of the flywheel, pressure plate and disc thoroughly with fine sandpaper or crocus cloth.

Note: Avoid touching the clutch disc facing, dropping the parts or contaminating them with oil or grease as a clutch chatter may result.

2. Fit the key into the keyway on the eccentric shaft.

3. Install the flywheel onto the rear end of the eccentric shaft, aligning the keyway of the flywheel with the key.

4. Apply sealer on both sides of the lockwasher and place it in position. Install the nut.

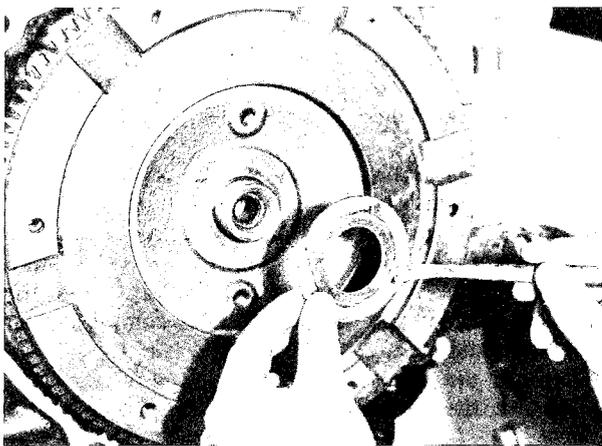


Fig. 6-10 Installing lock washer

5. Install the **ring gear brake** (49 1881 060) and with the **wrench** (49 0820 035) tighten the nut to **40 ~ 50 m-kg (289 ~ 362 ft-lb)**.

6. Bend the tab of the lockwasher to prevent loosening.

7. Hold the clutch disc in its mounting position with the **clutch disc centering tool** (49 0813 310).

If the tool is not available, use a spare main drive shaft.

8. Install the clutch cover and pressure plate assembly, aligning the "O" marks of the clutch cover and flywheel and install the 4 standard and 2 reamer bolts finger tight. To avoid pressure plate cover distortion, tighten the bolts a few turns at a time until they are all tight.

9. Torque the bolts to **1.8 ~ 2.7 m-kg (13 ~ 20 ft-lb)**.

10. Remove the disc centering tool and ring gear brake.

11. Apply a light film of grease to the face of the

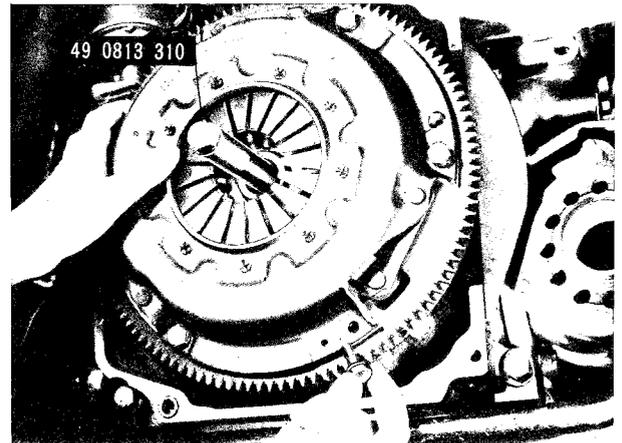


Fig. 6-11 Installing clutch cover assembly

release bearing and the bearing retainer of the clutch housing. Install the release bearing to the release fork. 12. Apply grease to the pivot pin. Insert the release fork and release bearing assembly through the dust boot and press it inward so that the spring clip of the fork fits to the ball pivot.

Operate the release fork to ensure that the bearing slides on the retainer back and forth smoothly.

13. Install the transmission and propeller shaft. Care should be taken in order not to bend the clutch disc by allowing the transmission to hang.

6-E. CLUTCH MASTER CYLINDER

6-E-1. Removing Clutch Master Cylinder

If it becomes necessary to remove the master cylinder for repair or overhaul, proceed as follows:

1. With the **spanner** (49 0259 770A), loosen the nut connecting the fluid pipe to the master cylinder outlet and disconnect the fluid pipe.

2. Remove the nuts that attach the master cylinder to the dash panel.

3. Pull the master cylinder straight out and away from the dash panel.

Note: Never allow the fluid to drop on any painted surface.

6-E-2. Disassembling Clutch Master Cylinder

The procedures for disassembling the master cylinder after removing the master cylinder are as follows:

1. Clean the outside of the master cylinder thoroughly and drain the brake fluid.

2. Remove the piston stop wire with a screwdriver and remove the stop washer.

3. Remove the piston assembly, primary cup and return spring from the cylinder.

4. Remove the reservoir from the cylinder.

6-E-3. Checking Clutch Master Cylinder

1. Wash the parts in clean alcohol or brake fluid. **Never** use gasoline or kerosene. Blow the parts dry with compressed air.

2. Check the piston cups and replace if they are damaged, worn, softened, or swelled.

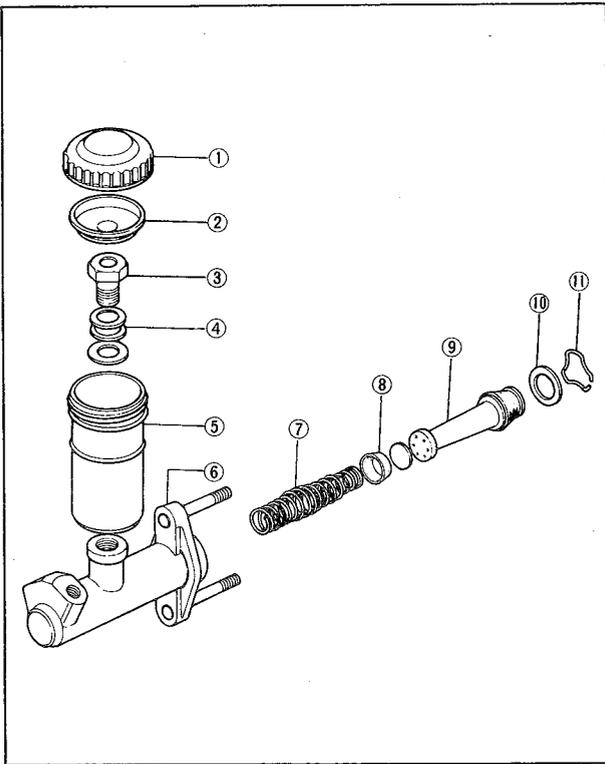


Fig. 6-12 Clutch master cylinder

- | | |
|-----------------|--------------------------------------|
| 1. Cap | 7. Spring |
| 2. Fluid baffle | 8. Primary piston cup |
| 3. Bolt | 9. Piston and secondary cup assembly |
| 4. Washer | 10. Piston stop washer |
| 5. Reservoir | 11. Piston stop wire |
| 6. Cylinder | |

3. Examine the cylinder bore and piston for wear, roughness or scoring.

4. Check the clearance between the cylinder bore and the piston. If it is more than 0.15 mm (0.006 in), replace the cylinder or piston.

5. Ensure that the compensating port on the cylinder is open.

6-E-4. Assembling Clutch Master Cylinder

1. Before assembling, dip the piston and cups in clean brake fluid.
2. Install the reservoir to the cylinder.
3. Insert the return spring into the cylinder.
4. Install the primary cup so that the flat side of the cup goes toward the piston.
5. Fit the secondary cup onto the piston and install them into the cylinder.
6. Install the stop washer and stop wire.
7. Fill with brake fluid and operate the piston with a screwdriver until the fluid is ejected at the outlet.

6-E-5. Installing Clutch Master Cylinder

1. Install the clutch master cylinder assembly onto the dash panel and tighten the nuts.
2. Connect the fluid pipe to the cylinder and tighten the nut securely, using the spanner (49 0259 770A).
3. Fill with brake fluid.
4. Bleed the clutch hydraulic system, as described in Par. 6-G.

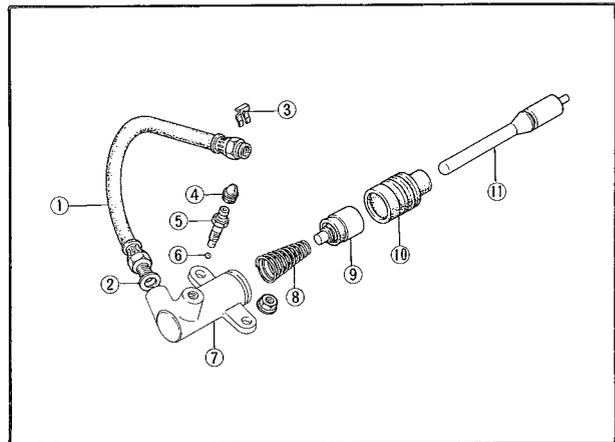


Fig. 6-13 Clutch release cylinder

- | | |
|-----------------------|--------------------|
| 1. Flexible hose | 7. Cylinder |
| 2. Gasket | 8. Spring |
| 3. Clip | 9. Piston assembly |
| 4. Rubber cap | 10. Boot |
| 5. Bleeder screw | 11. Release rod |
| 6. Valve (steel ball) | |

6-F. CLUTCH RELEASE CYLINDER

6-F-1. Removing Clutch Release Cylinder

1. Raise the vehicle and support with stands.
2. Disconnect the fluid pipe at the clutch release cylinder.
3. Remove the nuts attaching the cylinder to the clutch housing. Remove the release cylinder.

6-F-2. Disassembling Clutch Release Cylinder

1. Clean the outside of the cylinder thoroughly.
2. Remove the dust boot from the cylinder.
3. Remove the release rod.
4. Remove the piston and cup assembly from the cylinder. If necessary, blow out with compressed air from the fluid passage.
5. Remove the spring.
6. Remove the bleeder screw and valve (steel ball).

6-F-3. Checking Clutch Release Cylinder

Refer to Par. 6-E-3 and inspect the clutch release cylinder.

6-F-4. Assembling Clutch Release Cylinder

1. Install the spring into the cylinder.
2. Fit the piston cup to the piston and install them into the cylinder.
3. Install the clutch release rod into the cylinder.
4. Install the dust boot.
5. Install the valve (steel ball) and bleeder screw into the bleeder hole. Fit the cap.

6-F-5. Installing Clutch Release Cylinder

1. Install the clutch release cylinder assembly to the clutch housing with two nuts.
2. Connect the fluid pipe.
3. Fill the reservoir of the master cylinder with brake fluid and bleed the system, as described in Par. 6-G.

6-G. AIR BLEEDING

The clutch hydraulic system must be bled whenever a fluid line has been disconnected or air enters the system. To bleed the clutch system, proceed as follows:

Note:

- a) During bleeding operation, the reservoir of the master cylinder must be kept at least 3/4 full of the brake fluid.
- b) Never re-use the brake fluid which has been drained from the clutch hydraulic system.
- c) Do not mix low temperature brake fluid with

the specified fluid during the bleeding operation.

1. Remove the rubber cap from the bleeder screw and attach a vinyl tube to the bleeder screw.
2. Place the end of the tube in the glass jar and submerge in brake fluid.
3. Open the bleeder valve. Depress the clutch pedal and allow it to return slowly. Continue this pumping action and watch the flow of fluid in the jar.
4. When air bubbles cease to appear, close the bleeder valve, remove the vinyl tube and fit the cap to the bleeder screw.
5. Fill the reservoir and fit the filler cap.

SPECIAL TOOLS

49 1881 060	Ring gear brake
49 0820 035	Wrench for flywheel nut
49 0823 300A	Flywheel puller
49 0823 071A	Pilot bearing remover
49 0823 072A	Pilot bearing installer
49 0813 310	Clutch disc centering tool
49 0259 770A	Spanner



MANUAL TRANSMISSION

(Four-speed)

DESCRIPTION	7 : 1
7-A. TRANSMISSION REMOVAL	7 : 1
7-B. TRANSMISSION DISASSEMBLY	7 : 1
7-C. TRANSMISSION INSPECTION	7 : 3
7-C-1. Cleaning	7 : 3
7-C-2. Checking Transmission Case and Housing.....	7 : 3
7-C-3. Checking Bearings	7 : 4
7-C-4. Checking Gears.....	7 : 4
7-C-5. Checking Main Shaft and Main Drive Shaft.....	7 : 4
7-C-6. Checking Counter Shaft	7 : 4
7-C-7. Checking Reverse Idle Gear and Shaft.....	7 : 4
7-C-8. Checking Synchronizer Mechanism	7 : 4
7-C-9. Checking Control Lever, Shift Forks and Rods.....	7 : 4
7-D. TRANSMISSION ASSEMBLY	7 : 5
7-E. TRANSMISSION INSTALLATION	7 : 9
SPECIAL TOOLS	7 : 9

DESCRIPTION

This model is equipped with a four speed manual transmission which is of the fully synchronized type with all gears except the reverse gear being in selective sliding mesh.

The gearshift mechanism is a direct control with a floor-shift type.

7-A. TRANSMISSION REMOVAL

When removing the transmission from the vehicle, proceed as follows:

1. Open the bonnet disconnect the negative cable from the battery.
2. Remove the drain plug and drain the lubricant. Clean the drain plug and reinstall it after all lubricant is out.
3. Remove the gearshift lever knob.
4. Remove the gear shift lever boot.
5. Remove the bolts attaching the cover plate to the gearshift lever retainer. Remove the cover plate and gasket.
6. Pull the gearshift lever, shim and bush straight up and away from the gearshift lever retainer.
7. Remove the nuts attaching the clutch release cylinder and remove the clutch release cylinder.
8. Disconnect the connector of the back-up lamp switch.
9. Remove the bolt attaching the power brake vacuum pipe clip to the clutch housing.
10. Remove the bolts attaching the wiring harness holder to the wiring harness bracket near the starting motor.
11. Remove the one upper bolt securing the starting motor, then remove the three upper bolts securing the transmission to the engine rear end.
12. Raise the vehicle and support with stands.
13. Remove the bolts and screws attaching the heat insulators to the exhaust front pipe, and remove the heat insulators.
14. Disconnect the exhaust front pipe flange from the exhaust manifold by removing the nuts. Disconnect the exhaust front pipe from the brackets by removing the bolts and nuts. Remove the bolts and nuts attaching the front pipe flange to the main silencer, and remove the exhaust front pipe.
15. Remove the propeller shaft, as described in Par. 8-A-1, and insert the **mainshaft holder** (49 0259 440) into the extension housing.

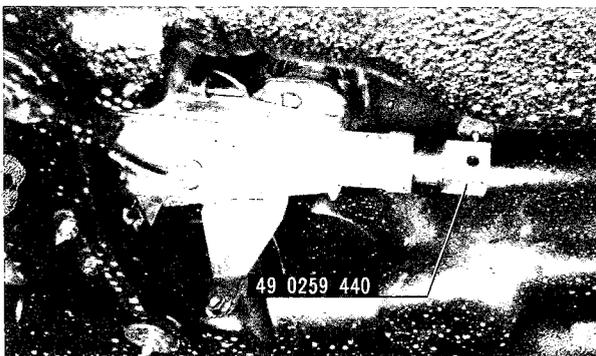


Fig. 7-1 Installing main shaft holder

16. Disconnect the speedometer cable from the extension housing.

17. Remove the lower bolt securing the starting motor to the clutch housing and remove the starting motor. Disconnect the wire at the starting motor.

18. Place a jack under the front side of the transmission and support the transmission with the jack.

19. Remove the bolts securing the transmission support to the body.

20. Remove the two lower bolts securing the transmission to the engine rear end.

21. Slide the transmission rearward until the main drive shaft clears the clutch disc and carefully withdraw it downward from the vehicle.

7-B. TRANSMISSION DISASSEMBLY

The procedures for disassembling the transmission after removing the transmission from the vehicle are as follows:

1. Pull the release fork outward until the spring clip of the fork releases from the ball pivot. Remove the fork and release bearing from the clutch housing.
2. Remove the nuts attaching the clutch housing to the transmission case and remove the clutch housing, shim and gasket.

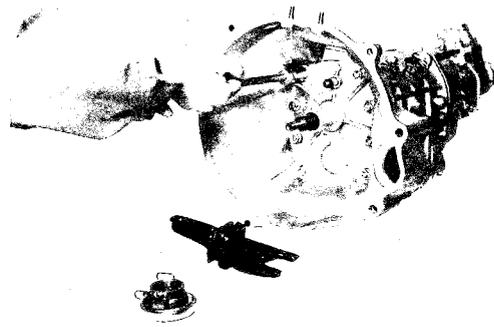


Fig. 7-2 Removing clutch housing

3. Remove the bolts attaching the gearshift lever retainer to the extension housing and remove the retainer and gasket.

4. Remove the spring cap bolt and remove the spring and steel ball, select lock spindle and spring from the gearshift lever retainer.

5. Remove the nuts that attach the extension housing to the transmission case. Slide the extension housing off the main shaft, with the control lever end laid down to the left as far as it will go.

6. Remove the bolt attaching the control lever end to the control rod and remove the control lever end, key and control rod.

7. Remove the ball seat from the control lever end.

8. Remove the lock plate and remove the speedometer driven gear assembly from the extension housing.

9. Remove the reverse lamp switch from the extension housing.

10. Remove the snap ring that secures the speedometer drive gear to the main shaft. Slide the speedo-

meter drive gear off the main shaft and remove the steel ball.

11. Evenly loosen the bolts attaching the under cover to the transmission case and remove the under cover and gasket.

12. Remove the three spring cap bolts and remove the springs and shift locking balls.

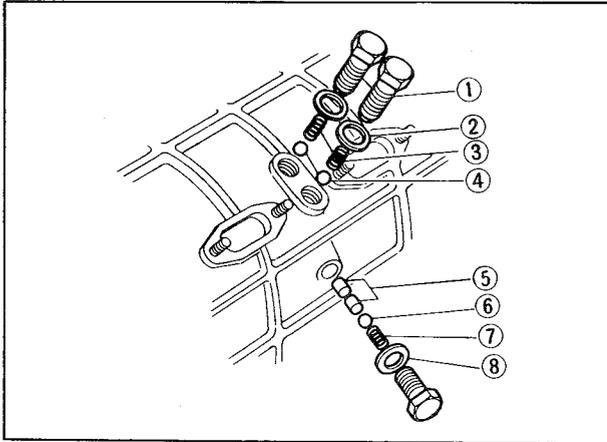


Fig. 7-3 Spring cap bolts

- | | |
|--------------------|-------------------|
| 1. Spring cap bolt | 5. Inter-lock pin |
| 2. Washer | 6. Detent ball |
| 3. Detent spring | 7. Detent spring |
| 4. Detent ball | 8. Washer |

13. Remove the nuts attaching the two blind covers to the transmission case and remove the blind covers and gaskets.

14. Remove the bolt attaching the reverse shift lever to the transmission case. Slide the reverse shift fork shaft with the reverse shift lever and reverse idle gear out the rear of the transmission case. Remove the attaching bolt from the reverse shift fork and remove the shift fork.

15. Remove the bolts attaching the first-and-second shift fork and third-and-fourth shift fork to their respective rods using the socket wrench through the openings of the case. Remove the shift rods and interlock pin.

16. Straighten the tab of the lockwasher, hold the main shaft with the **main shaft holder** (49 0259 440), as shown in Fig. 7-4, and loosen the lock nut by using the **spanner** (49 0164 631A). Remove the reverse gear and key from the main shaft.

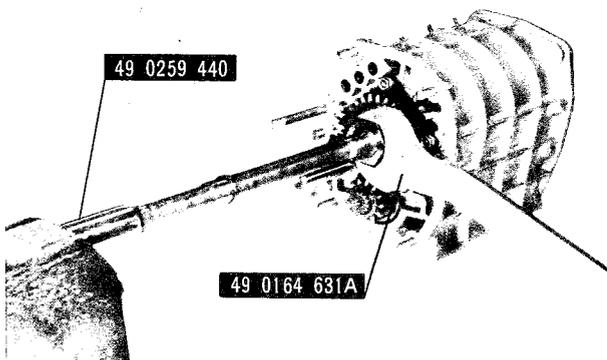


Fig. 7-4 Removing main shaft lock nut

17. Remove the snap ring from the rear end of the counter shaft and slide off the counter reverse gear.

18. Remove the bolts attaching the bearing cover plate to the transmission case and remove the bearing cover plate.

19. Remove the reverse idler gear shaft from the transmission case.

20. Remove the snap ring from the front end of the counter shaft.

21. Install the **synchronizer ring holder** (49 0839 445) between the fourth synchronizer ring and the synchromesh gear on the main drive shaft, as shown in Fig. 7-5.

22. Using the **bearing puller** (49 0839 425B) as shown in Fig. 7-5, remove the counter shaft front bearing.

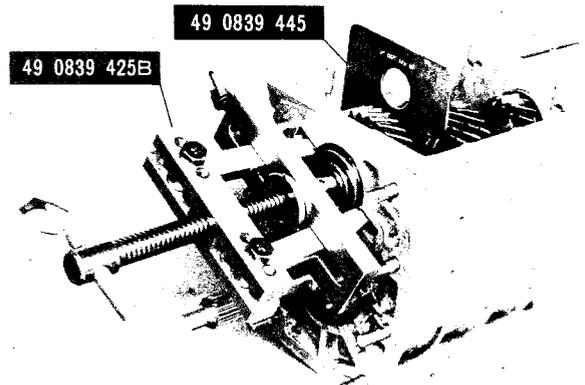


Fig. 7-5 Removing counter shaft front bearing

23. Remove the adjusting shim from the counter shaft front bearing bore of the transmission case.

24. Remove the rear bearing from the counter shaft with the **puller** (49 0839 425B).

25. Using the **puller** (49 0839 425B), remove the main shaft bearing.

26. Remove the adjusting shim from the main shaft bearing bore of the transmission case.

27. Remove the snap ring that secures the bearing to the main drive shaft. Remove the main drive shaft bearing with the **puller** (49 0839 425B).

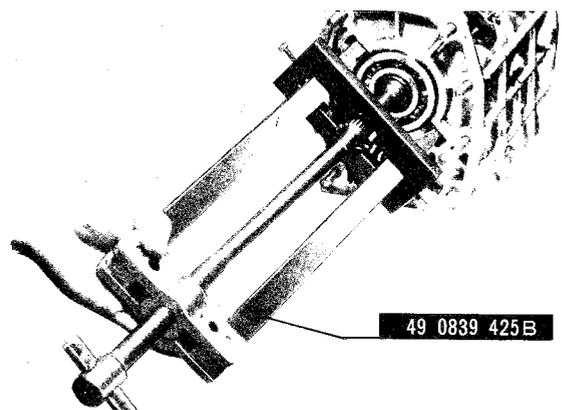


Fig. 7-6 Removing main drive shaft bearing

28. Take out the counter shaft and gear from the transmission case.

29. Separate the main drive shaft from the main

shaft and remove the main drive shaft from the case. Remove the synchronizer ring and needle bearing from the main drive shaft.

30. Take out the main shaft and gears assembly from the case, as shown in Fig. 7-7.

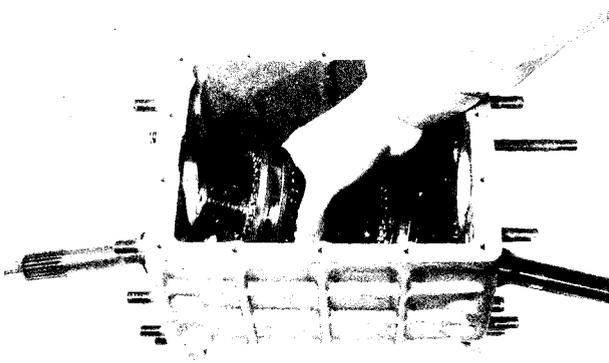


Fig. 7-7 Removing main shaft and gear assembly

31. Remove the first-and-second shift fork and third-and-fourth shift fork from the case.

32. Using the snap ring pliers, remove the snap ring from the front of the main shaft.

33. Slide the third-and-fourth clutch hub and sleeve as-

sembly, synchronizer ring, third gear off the main shaft. 34. Remove the thrust washer, first gear and sleeve, synchronizer ring, first-and-second clutch hub and sleeve assembly, synchronizer ring and second gear from the rear of the main shaft in sequence.

7-C. TRANSMISSION INSPECTION

7-C-1. Cleaning

1. Wash all parts, except the ball bearings and seals in a suitable cleaning solvent. Dry all parts with compressed air.

2. Rotate the ball bearings in a cleaning solvent until all lubricant is removed. Hold the bearing to prevent it from rotating and dry it with compressed air.

3. Lubricate the bearings with lubricant and wrap them in a clean, lint-free cloth or paper until ready for use.

7-C-2. Checking Transmission Case and Housings

1. Inspect the transmission case and extension housing for cracks and machined mating surfaces for burrs, nicks or any damages.

2. Check the bush and oil seal in the extension housing. Replace the bush and oil seal if they are worn or damaged.

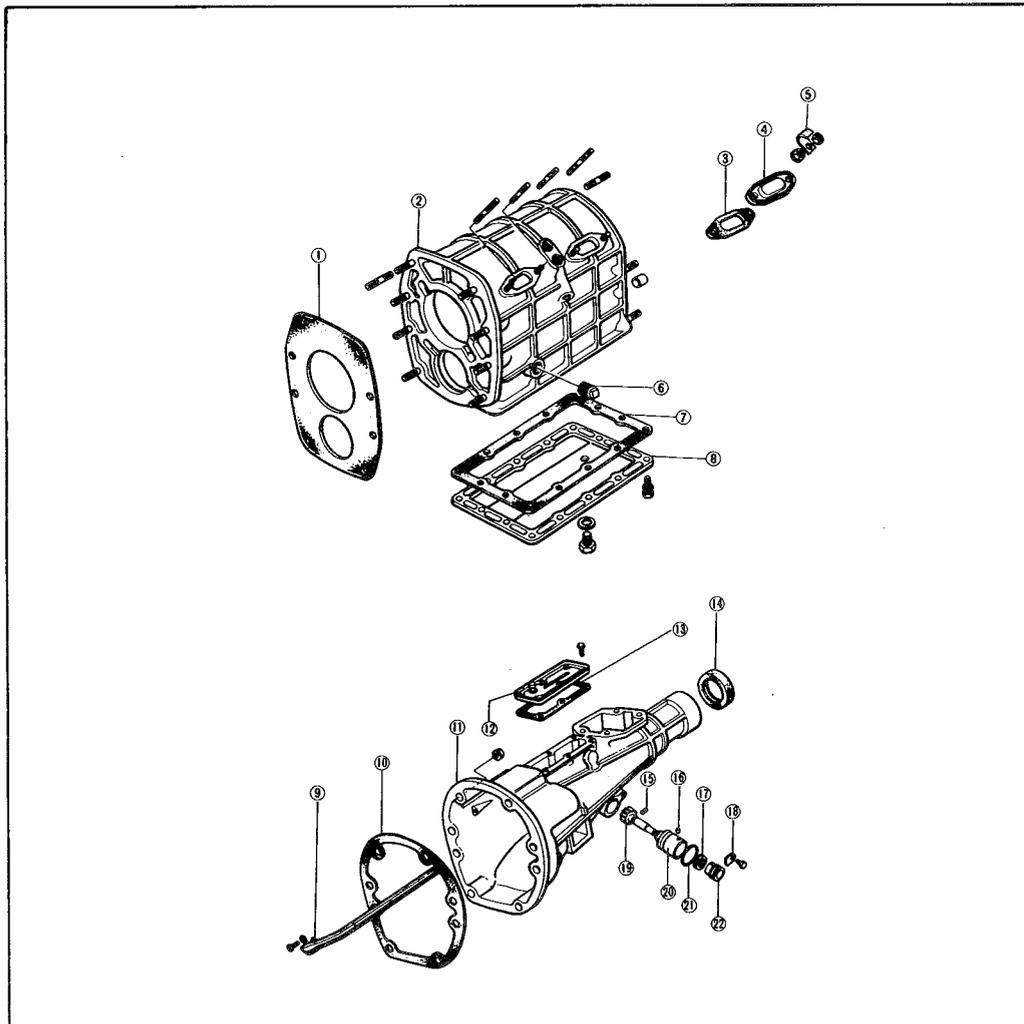


Fig. 7-8 Transmission case and extension housing

1. Gasket
2. Transmission case
3. Gasket
4. Blind cover
5. Clip
6. Plug
7. Gasket
8. Transmission under cover
9. Oil pass
10. Gasket
11. Extension housing
12. Cover
13. Gasket
14. Main shaft oil seal
15. Pin
16. Pin
17. Oil seal
18. Lock plate
19. Speedometer driven gear
20. Sleeve
21. "O" ring
22. Cable joint

7-C-3. Checking Bearings

1. Inspect each bearing for roughness. This can be determined by slowly turning the outer race by hand.
2. Check the needle bearing for wear or any damage. The rollers should have a uniformly good appearance and roll freely.

7-C-4. Checking Gears

Inspect the teeth of each gear. If excessively worn, broken or chipped, replace with new gear. Excessive wear of the gears causes increase of backlash, which results in producing noises or may cause the gear to work off while running.

7-C-5. Checking Main Shaft and Main Drive Shaft

1. Inspect the main shaft for run-out by applying a dial indicator to several places along the shaft. The reading of the indicator for run-out should be less than **0.03 mm (0.0012 in)**. If it is not within the specification, correct with a press or replace with a new one.

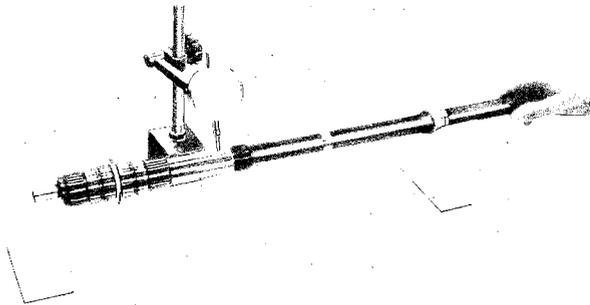


Fig. 7-9 Checking main shaft run-out

2. Replace the main shaft if there is any evidence of wear or any of the spline is damaged.
3. Check the fit of the main shaft and gear bores. The standard fit is 0.03 ~ 0.08 mm (0.0012 ~ 0.0031 in). If this clearance increases beyond **0.15 mm (0.006 in)** due to wear, replace the gear.
4. Replace the main drive shaft if the spline is damaged or the teeth are chipped, worn or broken.

7-C-6. Checking Counter Shaft

Check the counter gears for chipped, worn or broken teeth. Replace the counter shaft if it is bent, scored or worn.

7-C-7. Checking Reverse Idle Gear and Shaft

1. Check the reverse idle gear for chipped, worn or broken teeth. Replace the idle gear shaft if it is bent, worn or scored.
2. The standard fit of the reverse idle gear bush and shaft is 0.02 ~ 0.06 mm (0.0008 ~ 0.0024 in). If this clearance increases beyond **0.15 mm (0.006 in)** due to wear, replace the reverse idle gear.

7-C-8. Checking Synchronizer Mechanism

1. Inspect the gear teeth on the synchronizer ring.

If there is evidence of chipping or excessively worn teeth, replace with new parts.

2. Inspect the synchronizer ring for wear. To check the wear of the synchronizer ring, fit the synchronizer ring evenly to the gear cone and measure the clearance between the side faces of the synchronizer ring and the gear with a feeler gauge, as shown in Fig. 7-10. If it is less than **0.8 mm (0.031 in)**, replace the synchronizer ring or gear. The standard clearance is 1.5 mm (0.059 in).

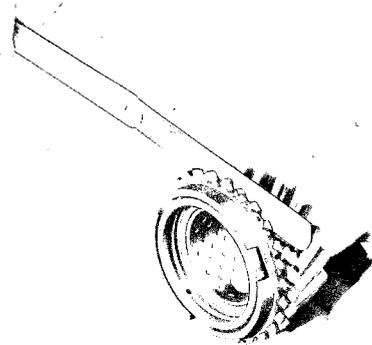


Fig. 7-10 Checking synchronizer ring

3. Inspect the contact between the inner surface of the synchronizer ring and the cone surface of the gear. To inspect, apply a thin coat of "Prussian Blue" on the cone surface of the gear and fit it into the ring. If the contact pattern is poor, correct this by applying the compound and lapping the surfaces together.
4. See if the clutch sleeve slides easily on the clutch hub.
5. Check the synchronizer key, the inner surface of the clutch sleeve, and the key groove on the clutch hub for wear.
6. Check the synchronizer key spring for tension.

7-C-9. Checking Control Lever, Shift Forks and Rods

1. Check the condition of the control lever, shift forks and rods, and replace if they are worn or damaged.
2. Check the clearance between the control lever and the gate of the shift rod, as shown in Fig. 7-11. If this clearance exceeds **0.8 mm (0.031 in)**, replace the control lever or the shift rod.

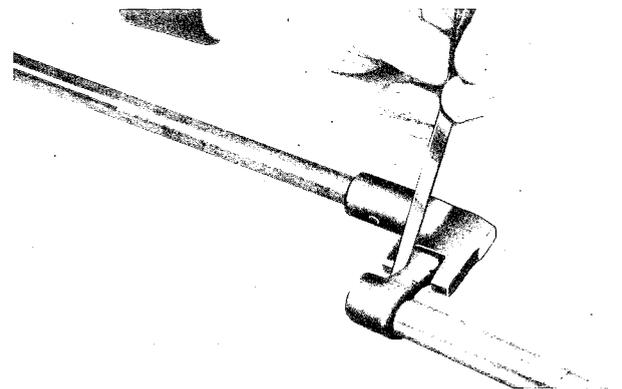


Fig. 7-11 Checking control rod

3. Check the clearances between the shift fork and clutch sleeve and between the shift fork and reverse idle gear. If these clearances exceed **0.5 mm (0.020 in)**, replace the shift fork, clutch sleeve or reverse idle gear.

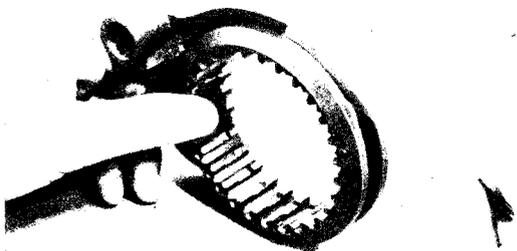


Fig. 7-12 Checking shift fork

7-D. TRANSMISSION ASSEMBLY

1. Assemble the third-and-fourth clutch by installing the clutch hub into the sleeve, placing the three keys

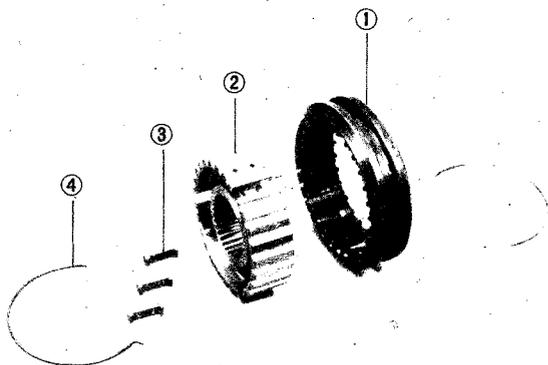


Fig. 7-14 Synchronesh mechanism

- 1. Clutch sleeve
- 2. Clutch hub
- 3. Synchronizer key
- 4. Key spring

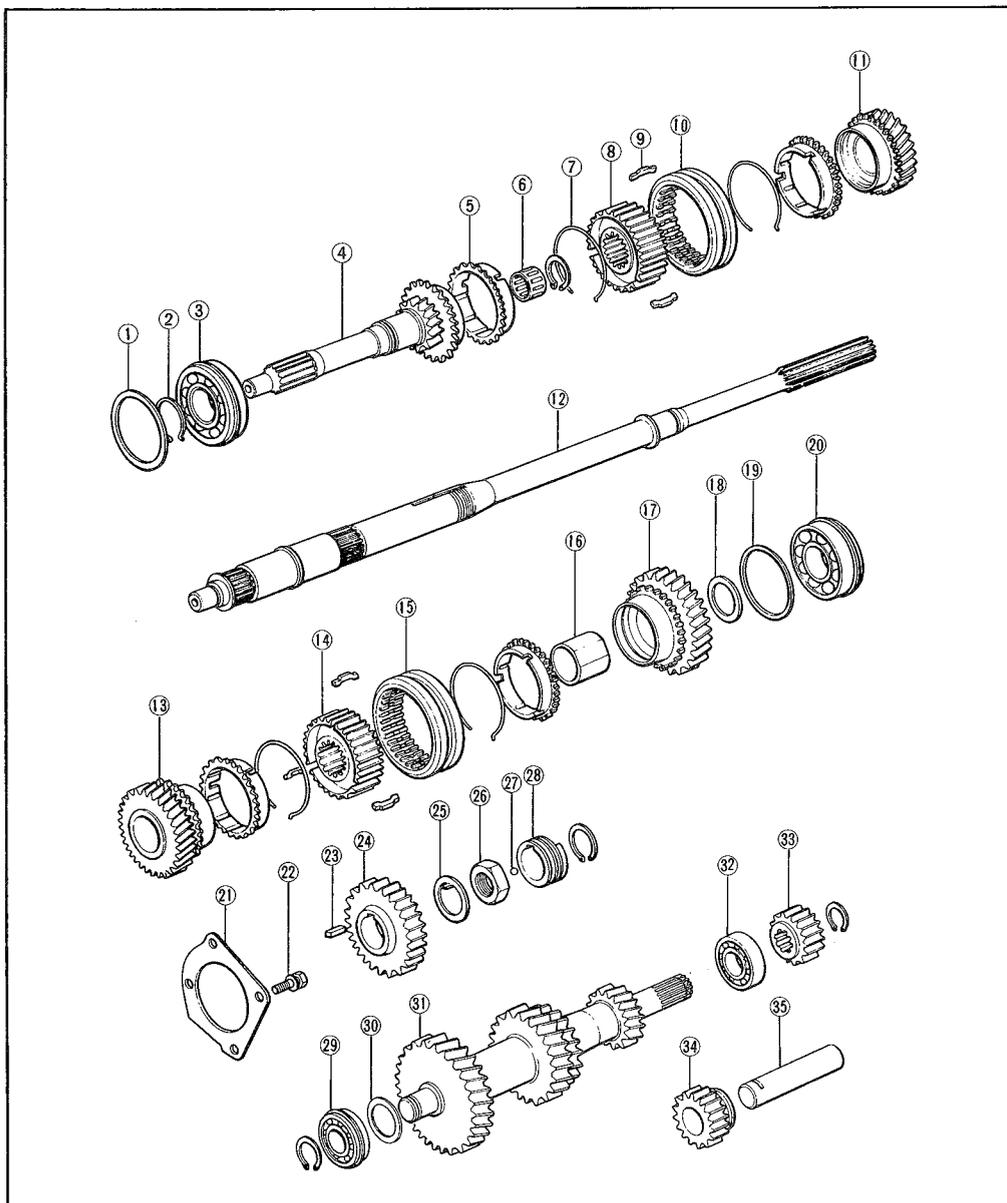


Fig. 7-13 Shafts and gears

- 1. Adjusting shim
- 2. Snap ring
- 3. Main drive shaft bearing
- 4. Main drive shaft
- 5. Synchronizer ring
- 6. Needle bearing
- 7. Synchronizer key spring
- 8. Third-and-fourth clutch hub
- 9. Synchronizer key
- 10. Clutch sleeve
- 11. Third gear
- 12. Main shaft
- 13. Second gear
- 14. First-and-second clutch hub
- 15. Clutch sleeve
- 16. First gear sleeve
- 17. First gear
- 18. Thrust washer
- 19. Adjusting shim
- 20. Main shaft bearing
- 21. Bearing cover plate
- 22. Bolt
- 23. Key
- 24. Reverse gear
- 25. Lock washer
- 26. Lock nut
- 27. Lock ball
- 28. Speedometer drive gear
- 29. Counter shaft front bearing
- 30. Adjusting shim
- 31. Counter shaft
- 32. Counter shaft rear bearing
- 33. Counter reverse gear
- 34. Reverse idler gear
- 35. Reverse idler gear shaft

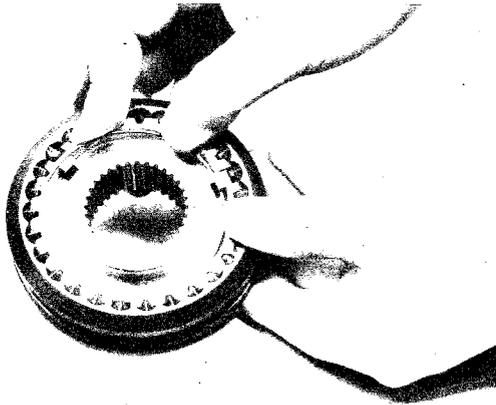


Fig. 7-15 Installing synchronizer key spring

into the clutch hub slots and installing the springs onto the hub, as shown in Fig. 7-15.

2. Assemble the first-and-second clutch hub and sleeve in the same manner as described in Step 1.
3. Install the second gear, synchronizer ring, first-and-second clutch assembly, synchronizer ring, first gear with sleeve, and thrust washer in this sequence to the rear section of the main shaft.

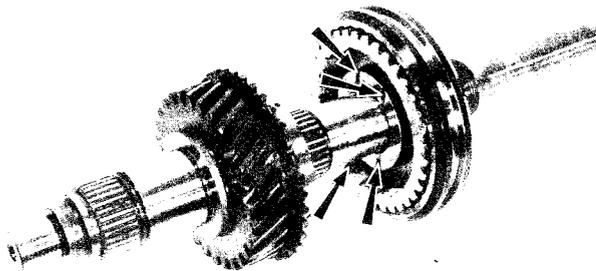


Fig. 7-16 Installing clutch assembly (1st & 2nd)

4. Install the third gear and synchronizer ring onto the front section of the main shaft.
5. Install the third-and-fourth clutch assembly onto the main shaft.

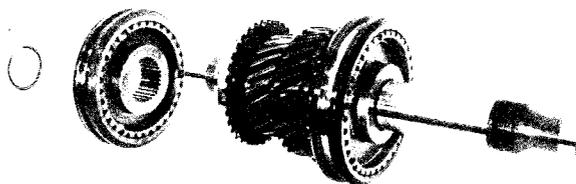


Fig. 7-17 Installing clutch assembly (3rd & 4th)

Note: The direction of the clutch assembly is as shown in Fig. 7-18.

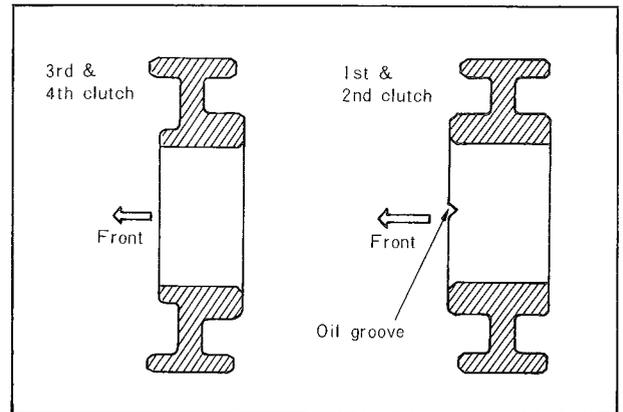


Fig. 7-18 Direction of clutch hub

6. Fit the snap ring on the main shaft.
7. Position the main shaft assembly in the case.

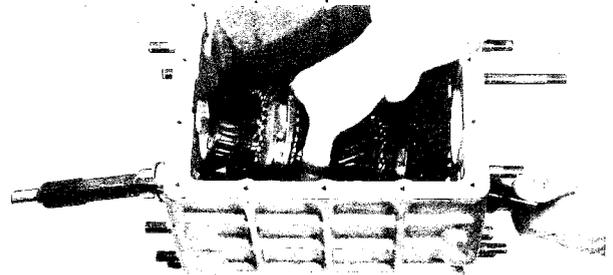


Fig. 7-19 Installing main shaft and gear assembly

8. Install the needle bearing to the front end of the main shaft. Place the synchronizer ring on the main drive gear and install them to the front end of the main shaft.
9. Install the first-and-second shift fork and third-and-fourth shift fork to their respective clutch sleeves.
10. Position the counter shaft gear in the case.



Fig. 7-20 Installing counter shaft gear

11. Check the main shaft bearing end play. Measure the depth of the main shaft bearing bore in the transmission case by using a depth gauge. Then, measure the main shaft bearing height. The difference between the two measurements indicates the required thickness

of the adjusting shim. The end play should be less than 0.1 mm (0.0039 in). The adjusting shims are available in the following thickness:

0.1 mm (0.0039 in)	0.3 mm (0.0118 in)
--------------------	--------------------

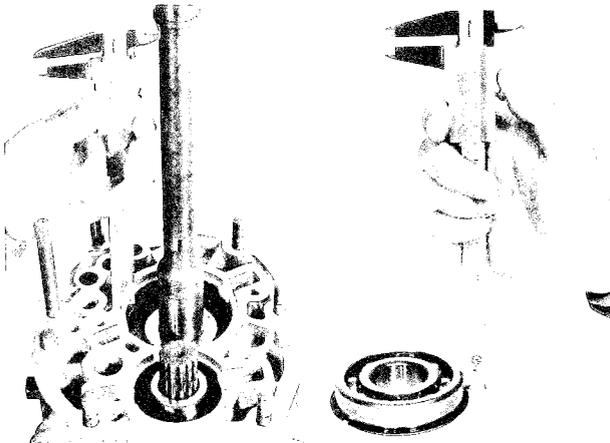


Fig. 7-21 Checking end play

12. Install the **synchronizer ring holder** (49 0839 445) between the fourth synchronizer ring and the synchronizer gear on the main drive shaft.

13. Position the shims and main shaft bearing in the bearing bore, and press the bearing by using a press.

14. Position the main drive shaft bearing in the bearing bore, and press it with a press.

15. Install the snap ring to secure the main drive shaft bearing.

16. Check the counter shaft front bearing end play in the same manner for the main shaft bearing end play. The end play should be less than 0.1 mm (0.0039 in). The adjusting shims are available in the following thickness:

0.1 mm (0.0039 in)	0.3 mm (0.0118 in)
--------------------	--------------------

17. Position the shims and counter shaft front bearing to the bearing bore, and press them with a press.

18. Install the snap ring to secure the front bearing.

19. Install the counter shaft rear bearing with a press.

20. Install the bearing cover plate to the transmission case and tighten the attaching bolts.

21. Install the counter reverse gear to the rear end of the counter shaft and secure it with the snap ring.

22. Install the reverse idler gear shaft to the transmission case.

23. Install the reverse gear with the key to the main shaft and tighten the lock nut to 20.0 ~ 28.0 m·kg (145 ~ 203 ft·lb) by using the **holder** (49 0259 440) and **spanner** (49 0164 631A). Bend the tab of the lock washer.

24. Install the first-and-second shift rod through the holes of the case and fork.

25. Using the **shift fork rod guide** (49 0862 350) and **interlock pin installer** (49 0187 451A), insert the interlock pin, as shown in Fig. 7-23.

26. Remove the tools and install the third-and-fourth shift rod through the holes of the case and fork.

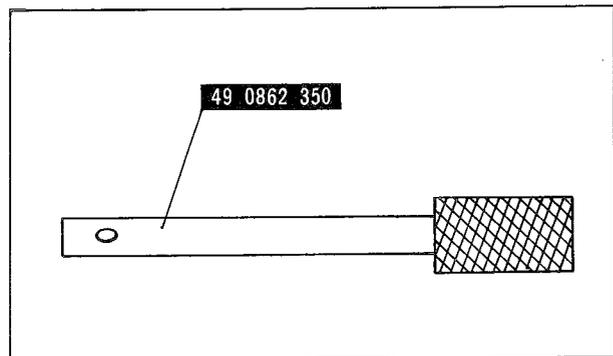


Fig. 7-22 Shift fork rod guide

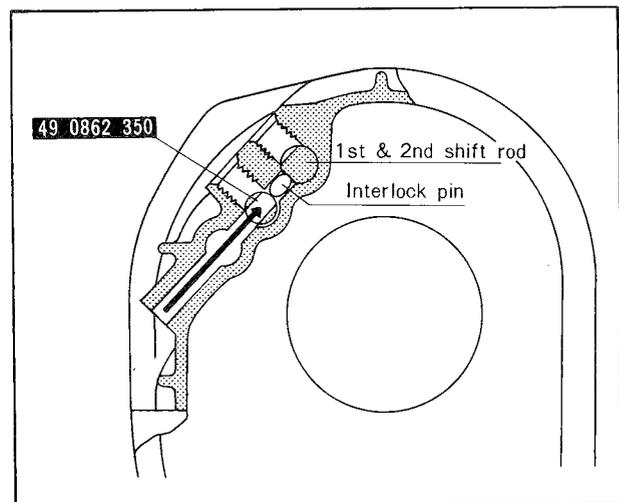


Fig. 7-23 Installing inter-lock pin (1)

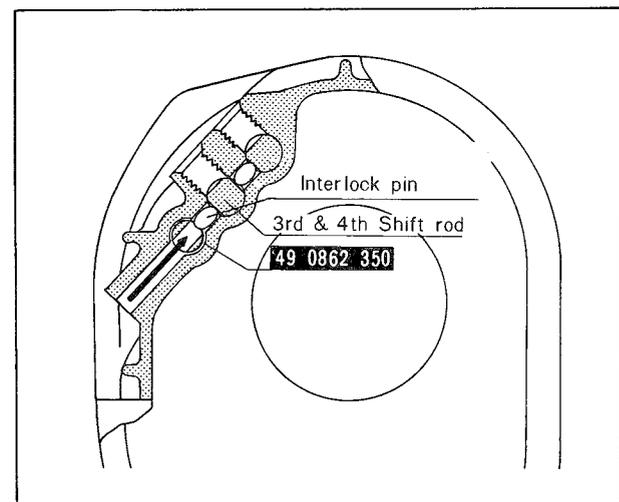


Fig. 7-24 Installing interlock pin (2)

27. Through the opening of the case, align the lock bolt holes of each shift fork and rod. Install and tighten the lock bolts.

28. With the same tools that were used in Step 25, install the interlock pin.

29. Install the reverse shift fork to the reverse shift fork shaft and secure the shift fork with the lock bolt.

30. Slide the reverse shift fork rod with the reverse shift lever and reverse idler in to the case from the rear of the case. Secure the reverse shift lever to the case with the bolt.

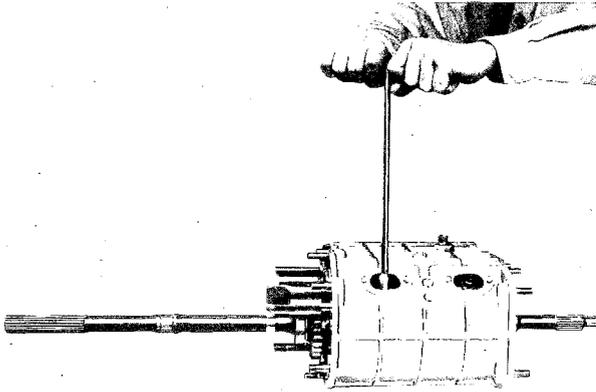


Fig. 7-25 Securing shift fork

31. Position the three shift locking balls and springs into their respective positions and install the spring cap bolts.
32. Place the third-and-fourth clutch sleeve in the third gear.
33. Check the clearance between the synchronizer key and the exposed edge of the synchronizer ring with a feeler gauge. This measurement should be **0.66 ~ 2.0 mm (0.026 ~ 0.079 in)**. If the measurement is greater than 2.0 mm (0.079 in), the synchronizer key could pop out of position. If the measurement exceeds **2.0 mm (0.079 in)**, exchange the thrust washer (selective fit). The thrust washers are available as in the following table.

2.5 mm (0.098 in)	3.5 mm (0.138 in)
3.0 mm (0.118 in)	

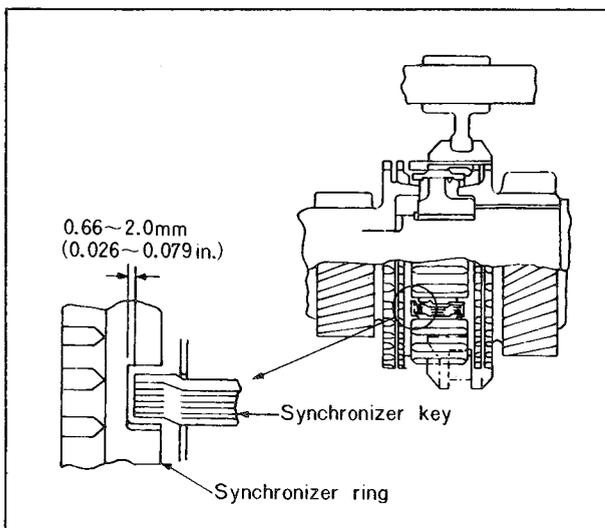


Fig. 7-26 Checking clearance

34. Install the two blind covers and gaskets to the case and tighten the attaching nuts.
35. Place the gasket on the case and install the under cover. Tighten the bolts to **0.6 ~ 0.9 m·kg (4 ~ 7 ft·lb)**.
36. Install the speedometer drive gear with the steel ball onto the main shaft, as shown in Fig. 7-27, and secure it with the snap ring.

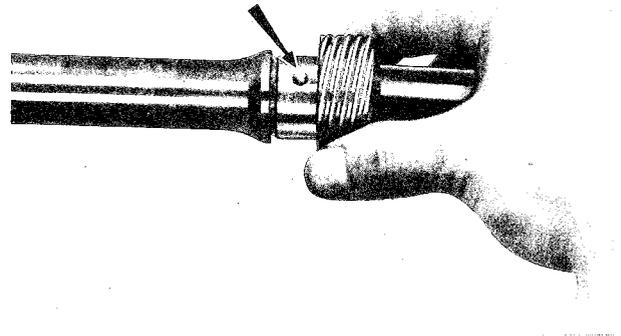


Fig. 7-27 Installing speedometer drive gear

37. Insert the speedometer driven gear assembly to the extension housing and secure it with the bolt and lock plate.
38. Insert the control rod through the holes from the front side of the extension housing.

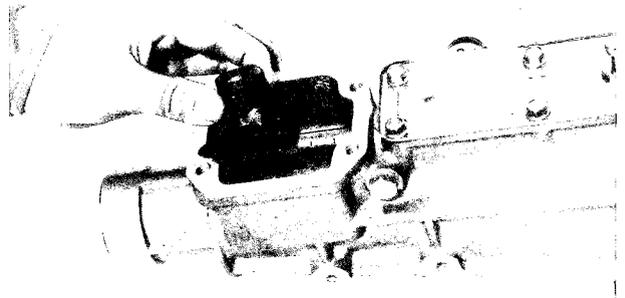


Fig. 7-28 Installing control lever end

39. Align the key and insert the control lever end to the control rod. Install the bolt and tighten it to **2.8 ~ 3.4 m·kg (20 ~ 25 ft·lb)**.
40. Install the reverse lamp switch to the extension housing and tighten the switch to **2.5 ~ 3.5 m·kg (18 ~ 25 ft·lb)**.
41. Place the gasket on the case and install the extension housing with the control lever end laid down to the left as far as it will go. Tighten the attaching nuts.

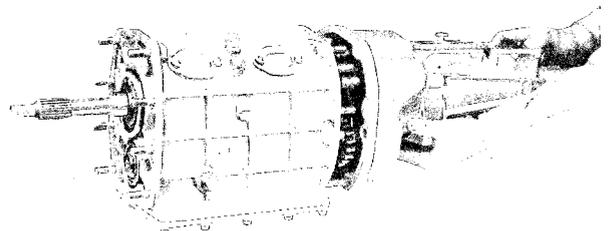


Fig. 7-29 Installing extension housing

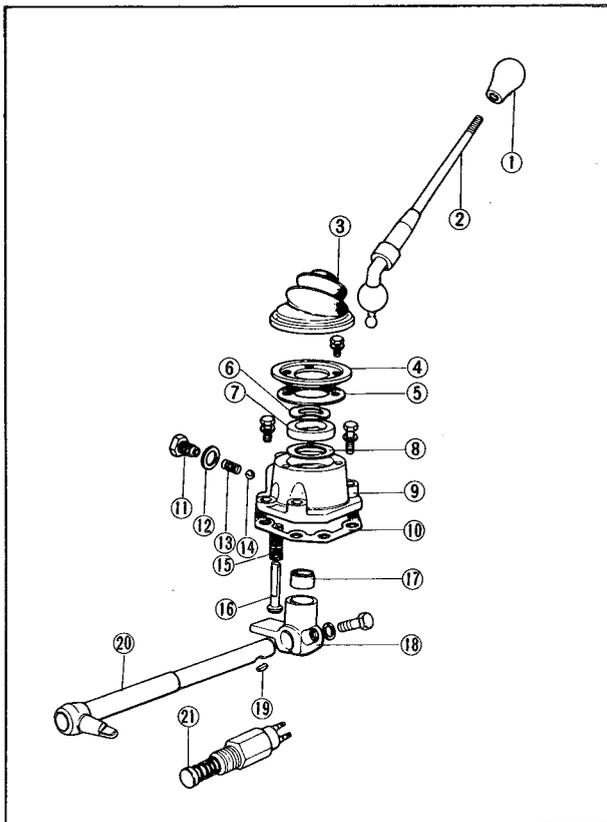


Fig. 7-30 Gearshift lever and retainer

- | | |
|-------------------------|-------------------------|
| 1. Gearshift lever knob | 12. Washer |
| 2. Gearshift lever | 13. Spring |
| 3. Dust boot | 14. Detent ball |
| 4. Cover | 15. Spring |
| 5. Gasket | 16. Select lock spindle |
| 6. Washer | 17. Bush |
| 7. Bush | 18. Control lever end |
| 8. Washer | 19. Key |
| 9. Detent spring | 20. Control lever |
| 10. Gasket | 21. Reverse lamp switch |
| 11. Spring cap bolt | |

42. Insert the ball seat into the control lever end. Check to ensure that the gearshift control lever operates properly.

43. Insert the select lock spindle and spring from the inside of the gearshift lever retainer. Install the steel ball and spring in alignment with the spindle groove and install the spring cap bolt.

44. Install the gearshift lever retainer and gasket to the extension housing.

45. Check the bearing end play. Measure the depth of the bearing bore in the clutch housing using a depth gauge. Then, measure the bearing protrusion, as shown in Fig. 7-31. The difference between two measurements indicates the required thickness of the adjusting shim. The end play should be **less than 0.1 mm (0.0039 in)**. The shims are available in the following thickness:

0.1 mm (0.0039 in)	0.3 mm (0.0118 in)
--------------------	--------------------

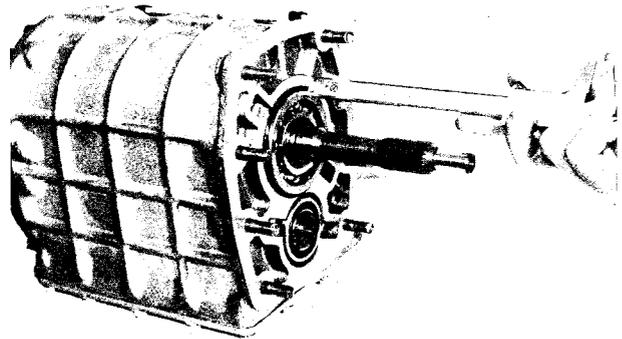


Fig. 7-31 Measuring bearing height

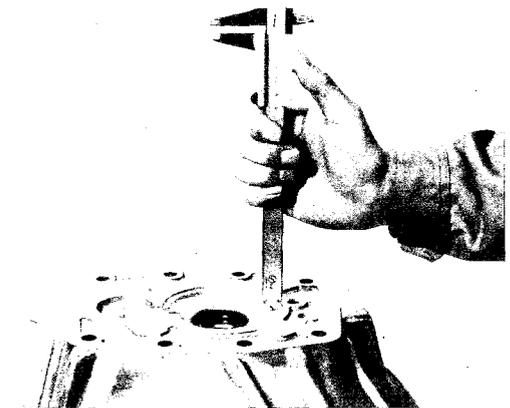


Fig. 7-32 Measuring bearing bore depth

46. Place the gasket on the front side of the case. Apply lubricant to the lip of the oil seal and install the clutch housing to the case. Tighten the attaching nuts.

47. Install the release bearing and release fork to the clutch housing.

7-E. TRANSMISSION INSTALLATION

Carry out the removing operations in the reverse order.

Note:

- Apply a thin coat of grease onto the splines of the main drive shaft.
- Use the **main shaft holder** (49 0259 440) to align the splines of the main drive shaft and clutch disc.
- Fill the transmission with the correct grade and quantity of lubricant.

SPECIAL TOOLS

49 0829 425B	Bearing puller
49 0259 440	Main shaft holder
49 0839 445	Synchronizer ring holder
49 0862 350	Shift fork rod guide
49 0187 451A	Interlock pin installer
49 0164 631A	Mainshaft lock nut wrench

MANUAL TRANSMISSION

(Five-speed)

DESCRIPTION	7A : 1
7A-A. TRANSMISSION REMOVAL	7A : 1
7A-B. TRANSMISSION DISASSEMBLY	7A : 1
7A-C. TRANSMISSION INSPECTION	7A : 7
7A-C-1. Cleaning.....	7A : 7
7A-C-2. Checking Transmission Case and Housing	7A : 7
7A-C-3. Checking Bearings	7A : 7
7A-C-4. Checking Gears.....	7A : 7
7A-C-5. Checking Main Shaft and Main Drive Shaft.....	7A : 7
7A-C-6. Checking Counter Shaft	7A : 7
7A-C-7. Checking Reverse Idle Gear and Shaft	7A : 7
7A-C-8. Checking Synchronizer Mechanism.....	7A : 9
7A-C-9. Checking Control Lever, Shift Forks and Rods	7A : 9
7A-D. TRANSMISSION ASSEMBLY	7A : 9
7A-E. TRANSMISSION INSTALLATION	7A : 18
SPECIAL TOOLS.....	7A : 18

7A

DESCRIPTION

This model is equipped with a five-speed manual transmission which is of the fully synchronized type with all gears.

The gearshift mechanism is a direct control with a floor-shift type.

7A-A. TRANSMISSION REMOVAL

When removing the transmission from the vehicle, proceed as follows:

1. Remove the gearshift lever knob from the gearshift lever.
2. Remove the gearshift lever boot.
3. Remove the bolts attaching the retainer cover to the gearshift lever retainer.
4. Pull the gearshift lever, shim and bush straight up and away from the gearshift lever retainer.
5. Open the bonnet and disconnect the negative battery cable from the battery terminal.
6. Remove the nuts attaching the clutch release cylinder and remove the clutch release cylinder.
7. Disconnect the connector of the back-up lamp switch near the clutch release cylinder.
8. Remove the one upper bolt securing the starting motor, then remove the three upper bolts and nuts securing the transmission to the engine rear end.
9. Raise the vehicle and support with stands.
10. Drain the lubricant from the transmission.
11. Remove the bolts and screws attaching the heat insulators to the exhaust front pipe, and remove the heat insulators.
12. Disconnect the exhaust front pipe flange from the exhaust manifold by removing the bolts and nuts. Remove the bolts and nuts attaching the front pipe flange to the main silencer, and remove the exhaust front pipe.
13. Disconnect the propeller shaft at the rear axle companion flange.
14. Remove the propeller shaft center bearing support attaching nuts, washers and lock washers.
15. Lower the propeller shaft and withdraw it from the transmission.
16. Disconnect the speedometer cable from the extension housing.
17. Remove the lower bolt securing the starting motor to the clutch housing and remove the starting motor. Disconnect the wire at the starting motor.
18. Place a jack under the front side of the transmission and support the transmission with the jack.
19. Remove the bolts securing the transmission support to the body.
20. Remove the two lower bolts securing the transmission to the engine rear end.
21. Slide the transmission rearward until the main drive shaft clears the clutch disc and carefully withdraw it downward from the vehicle.

7A-B. TRANSMISSION DISASSEMBLY

The procedures for disassembling the transmission after removing the transmission from the vehicle are as follows:

1. Pull the release fork outward until the spring clip of the fork releases from the ball pivot. Remove the fork and release bearing from the clutch housing.



Fig. 7A-1 Removing release fork

2. Remove the nuts attaching the clutch housing to the transmission case and remove the clutch housing, shim and gasket.

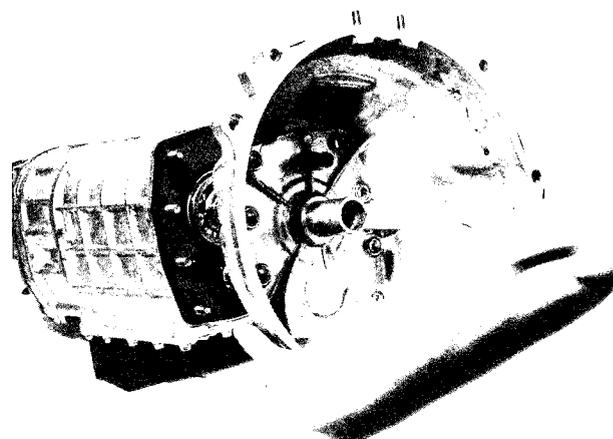


Fig. 7A-2 Removing clutch housing

3. Remove the bolts attaching the gearshift lever retainer to the extension housing and remove the retainer and gasket.

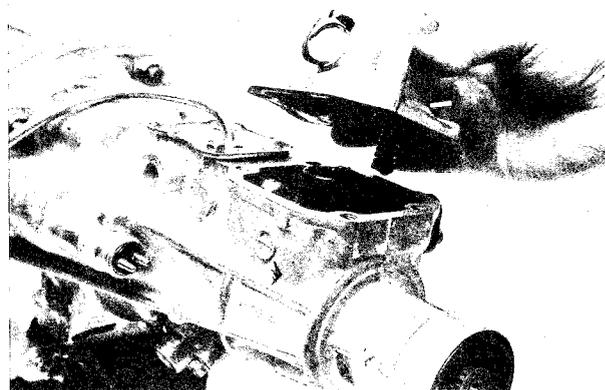


Fig. 7A-3 Removing shift lever retainer

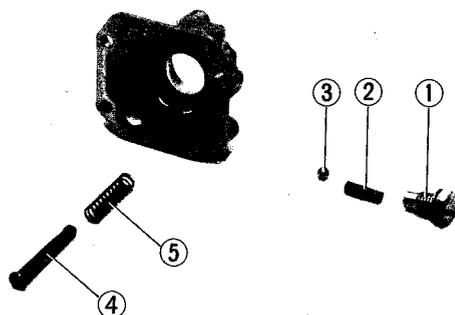


Fig. 7A-4 Shift lever retainer

- | | |
|--------------------|------------------------|
| 1. Spring cap bolt | 4. Select lock spindle |
| 2. Spring | 5. Spring |
| 3. Steel ball | |

4. Remove the spring cap bolt and remove the spring and steel ball, select lock spindle and spring from the gearshift lever retainer.

5. Remove the nuts that attach the extension housing to the transmission case. Slide the extension housing off the main shaft, with the control lever end laid down to the left as far as it will go.

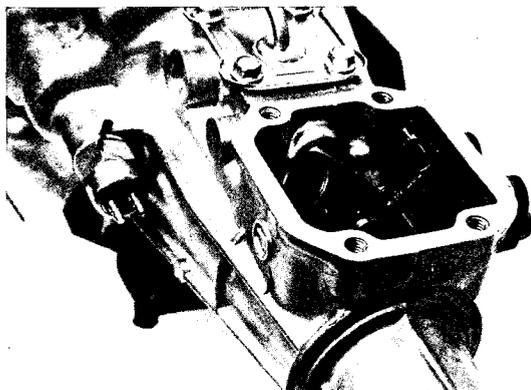


Fig. 7A-5 Position of control lever end

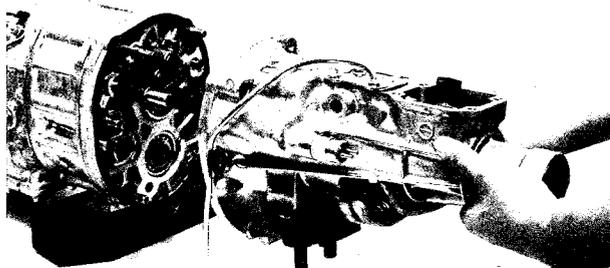


Fig. 7A-6 Removing extension housing

6. Remove the bolt attaching the control lever end to the control rod and remove the control lever end, key and control rod.

7. Remove the lock plate and remove the speedometer driven gear assembly from the extension housing.

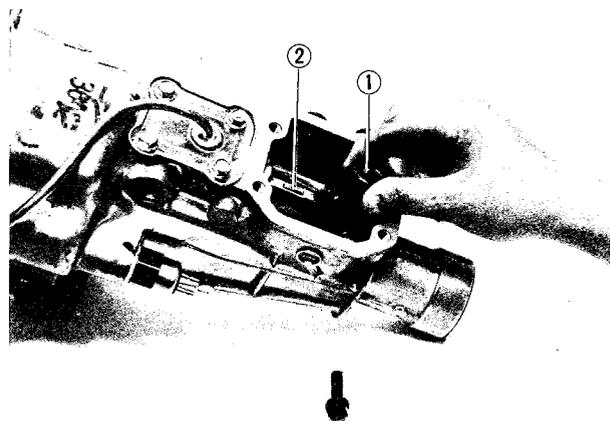


Fig. 7A-7 Removing control rod

- | | |
|----------------------|----------------|
| 1. Control lever end | 2. Control rod |
|----------------------|----------------|

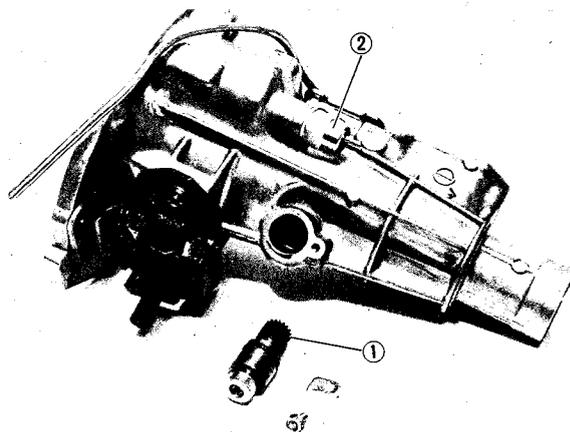


Fig. 7A-8 Removing speedometer driven gear

- | | |
|----------------------------|------------------------|
| 1. Speedometer driven gear | 2. Reverse lamp switch |
|----------------------------|------------------------|

8. Remove the reverse lamp switch from the extension housing.

9. Remove the snap ring that secures the speedometer drive gear to the main shaft. Slide the speedometer drive gear off the main shaft and remove the steel ball.

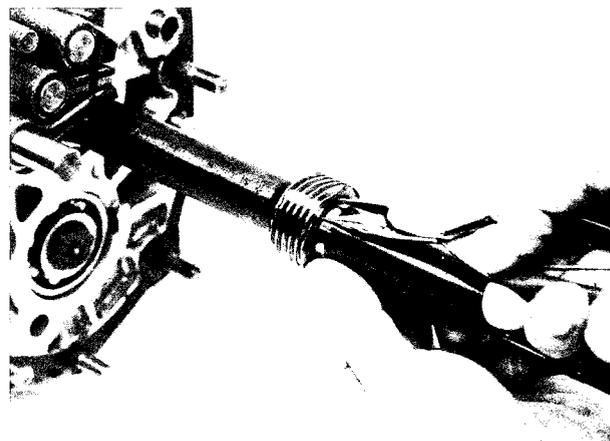


Fig. 7A-9 Removing speedometer drive gear

10. Evenly loosen the bolts attaching the under cover to the transmission case and remove the under cover and gasket.

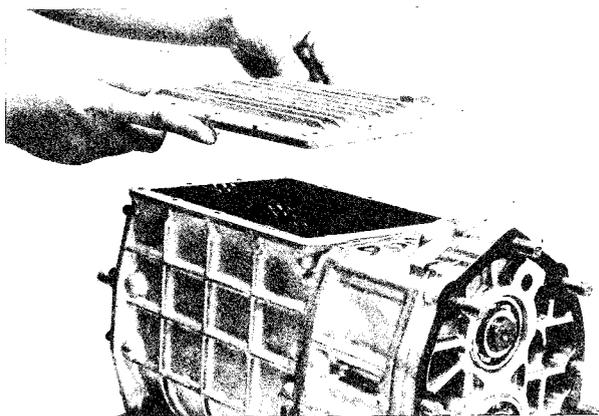


Fig. 7A-10 Removing under cover

11. Remove the bolts attaching the shift rod ends to their respective rods, and remove the shift rod ends.

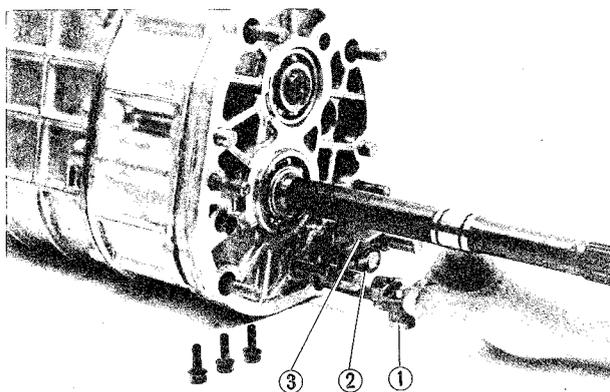


Fig. 7A-11 Removing shift rod end

1. Rod end (Rev. & 5th)
2. Rod end (3rd & 4th)
3. Rod end (1st & 2nd)

12. Remove the rear bearing housing from the intermediate housing.

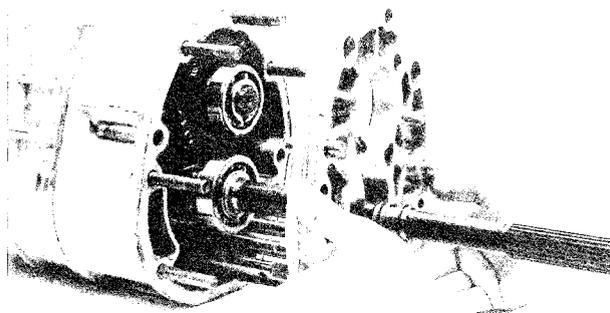


Fig. 7A-12 Removing rear bearing housing

13. Remove the snap ring that secures the main shaft rear bearing to the main shaft. Remove the bearing, thrust washer and bearing inner race with the puller (49 0839 425B), as shown in Fig. 7A-13.

14. Remove the snap ring from the rear of the counter shaft. Using the puller (49 0839 425B), remove the washer and counter shaft rear bearing. Remove the counter fifth gear.

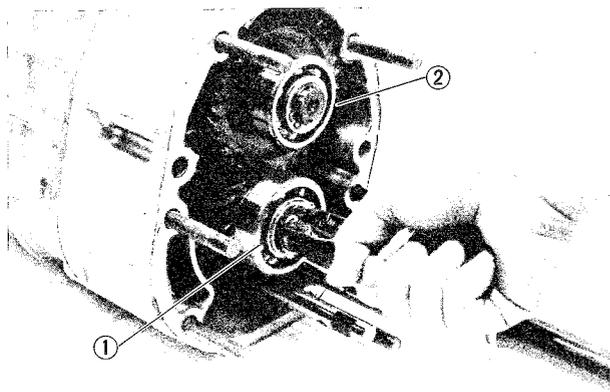


Fig. 7A-13 Removing snap ring

1. Main shaft rear bearing
2. Counter shaft rear bearing

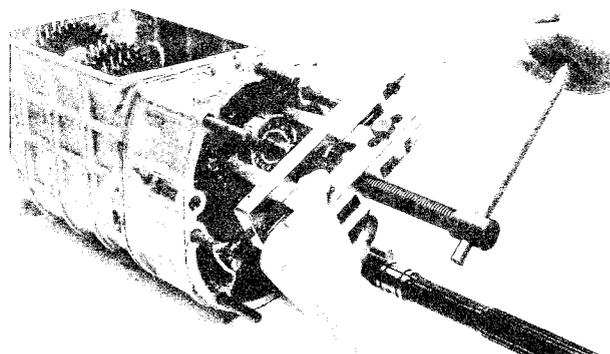


Fig. 7A-14 Removing counter shaft rear bearing

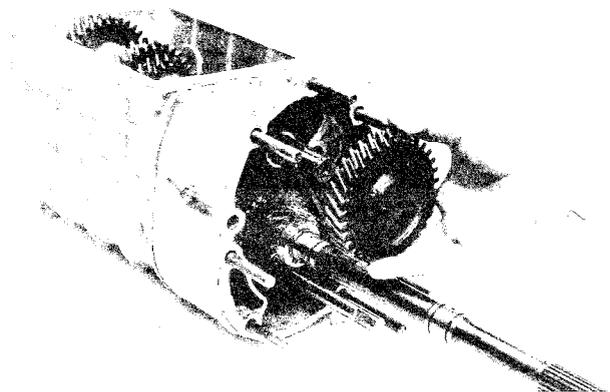


Fig. 7A-15 Removing counter fifth gear

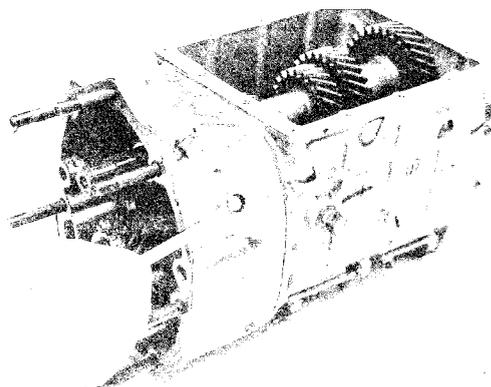


Fig. 7A-16 Removing attaching bolt

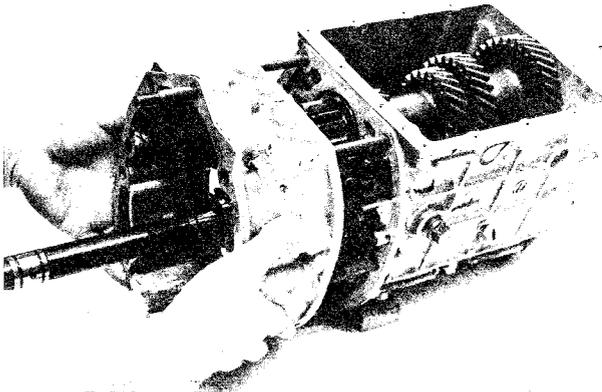


Fig. 7A-17 Removing intermediate housing

15. Remove the intermediate housing attaching bolt shown in Fig. 7A-16, and remove the intermediate housing from the transmission case.
16. Remove the three spring cap bolts and remove the springs and shift locking balls.
17. Remove the nuts attaching the two blind covers to the transmission case and remove the blind covers and gaskets.

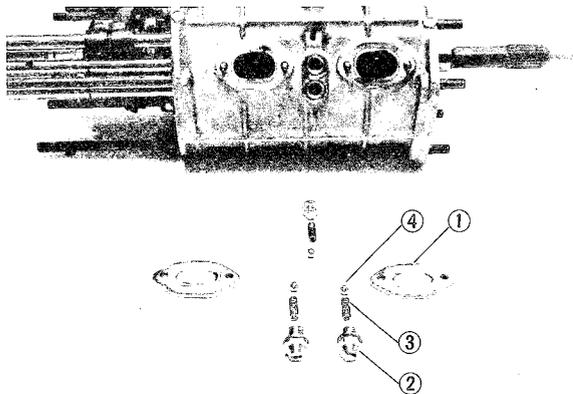


Fig. 7A-18 Removing shift locking ball
 1. Blind cover 3. Spring
 2. Spring cap bolt 4. Locking ball

18. Remove the bolt attaching the reverse-and-fifth shift fork to the rod. Remove the reverse-and-fifth shift rod, fork and interlock pin.

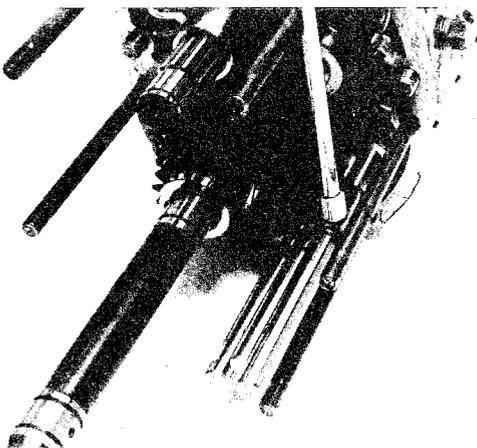


Fig. 7A-19 Removing shift fork attaching bolt

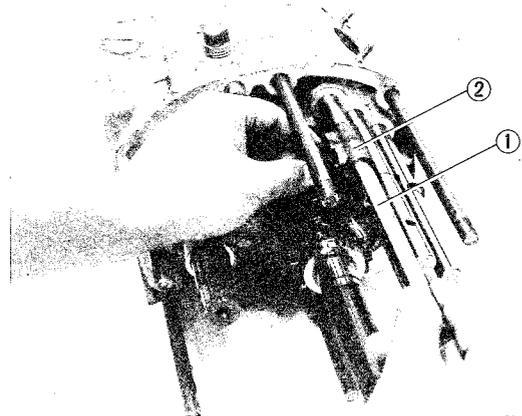


Fig. 7A-20 Removing shift fork and rod
 1. Shift rod 2. Shift fork

19. Remove the bolts attaching the first-and-second shift fork and third-and-fourth shift fork to their respective rods using the socket wrench through the openings of the case. Remove the shift rods and interlock pin.

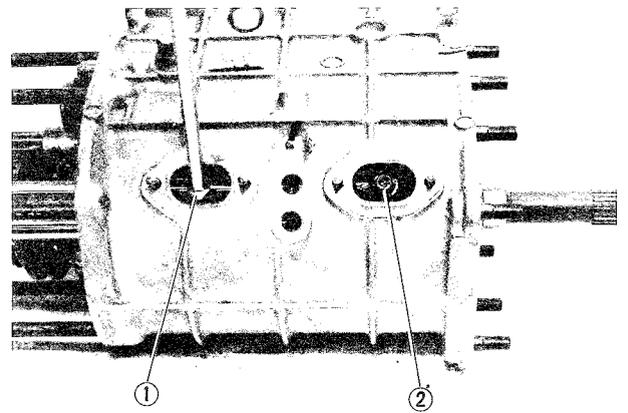


Fig. 7A-21 Removing shift fork attaching bolt
 1. For 1st & 2nd 2. For 3rd & 4th

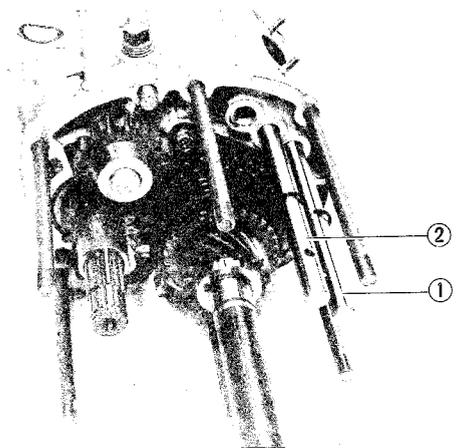


Fig. 7A-22 Removing shift rod
 1. For 1st & 2nd 2. For 3rd & 4th

20. Remove the snap ring that secures the fifth gear to the main shaft. Slide the thrust washer, fifth gear, synchronizer ring off the main shaft, and remove the steel ball and the needle bearing.

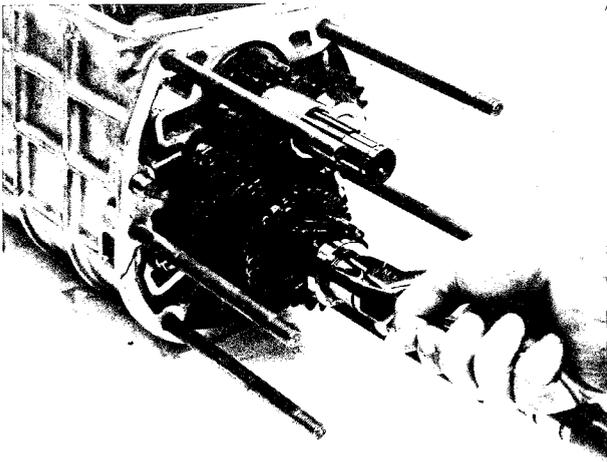


Fig. 7A-23 Removing snap ring

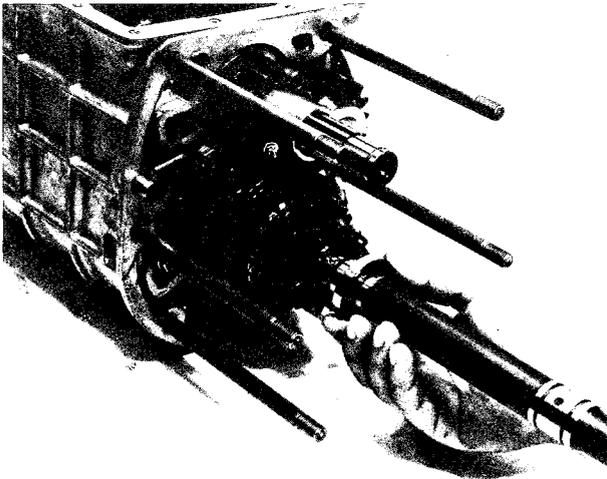


Fig. 7A-24 Removing thrust washer

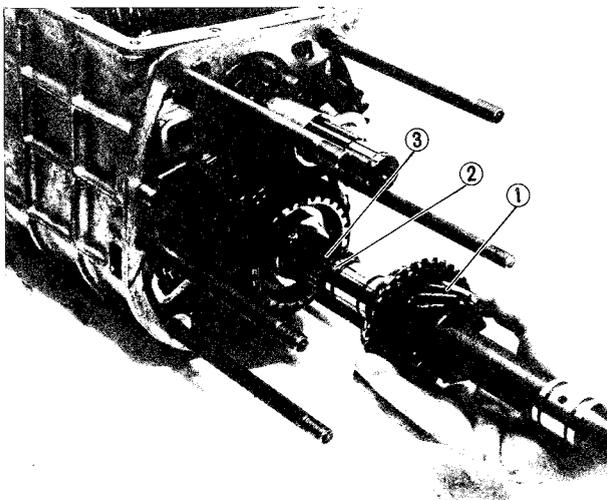


Fig. 7A-25 Removing fifth gear
1. Fifth gear 2. Ball 3. Bearing

21. Shift into the second gear and the reverse gear to lock the rotation of the main shaft.
22. Straighten the tab of the nut. Remove the lock nut with the **lock nut wrench** (49 1243 465), as shown in Fig. 7A-27. Discard the lock nut.

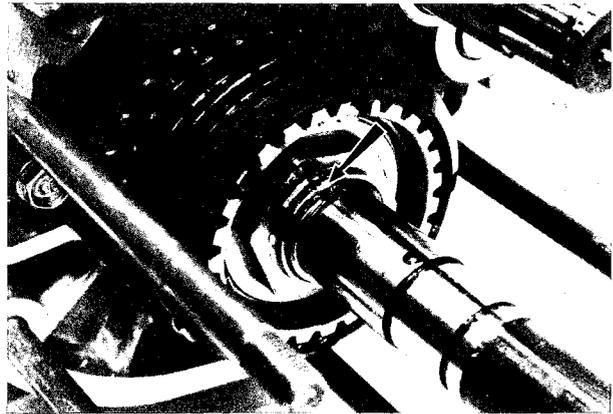


Fig. 7A-26 Main shaft lock nut tab

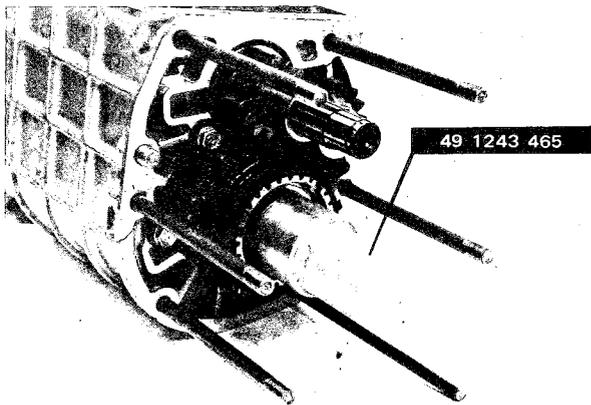


Fig. 7A-27 Removing lock nut

23. Slide the reverse-and-fifth clutch hub and sleeve assembly, synchronizer ring, reverse gear, needle bearing off the main shaft.
24. Remove the spacer and counter reverse gear from the rear of the counter shaft.
25. Remove the reverse idler gear, thrust washers and shaft from the transmission case.
26. Remove the bolts attaching the bearing cover plate to the transmission case and remove the bearing cover plate.
27. Remove the snap ring from the front end of the counter shaft.
28. Install the **synchronizer ring holder** (49 0839 445) between the fourth synchronizer ring and the

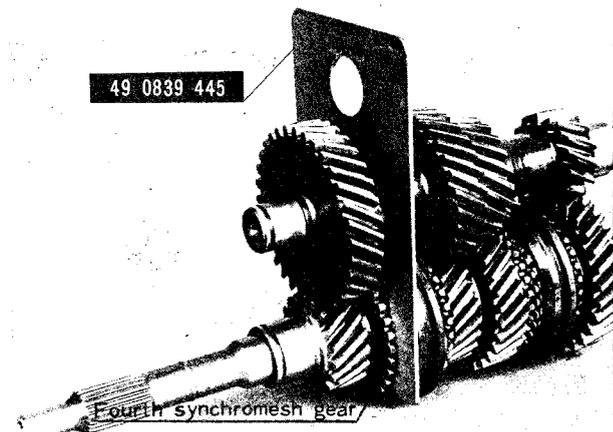


Fig. 7A-28 Synchronizer ring holder

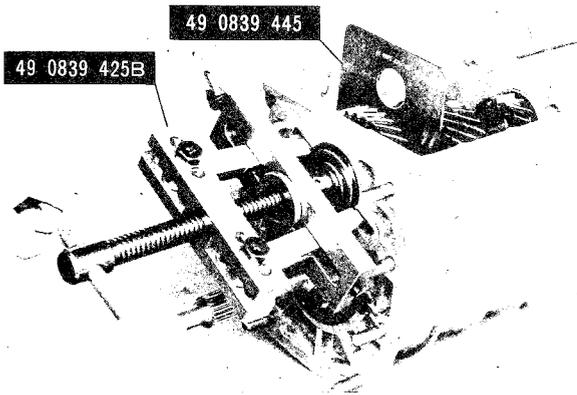


Fig. 7A-29 Removing counter shaft front bearing

synchronmesh gear on the main drive shaft, as shown in Fig. 7A-28.

29. Using the bearing puller (49 0839 425B) as shown in Fig. 7A-29, remove the counter shaft front bearing.
30. Remove the adjusting shim from the counter shaft front bearing bore of the transmission case.
31. Remove the counter shaft center bearing outer race with the puller (49 0839 425B).

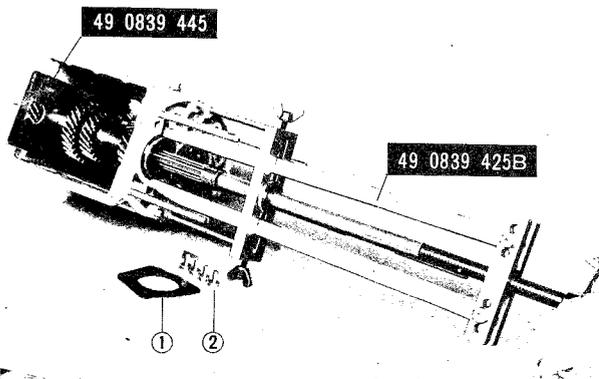


Fig. 7A-30 Removing counter shaft center bearing
1. Bearing cover 2. Bolt

32. Using the puller (49 0839 425B) and attachment (49 0862 426) as shown in Fig. 7A-31, remove the main shaft front bearing, thrust washer and bearing inner race.
33. Remove the adjusting shim from the main shaft front bearing bore of the transmission case.

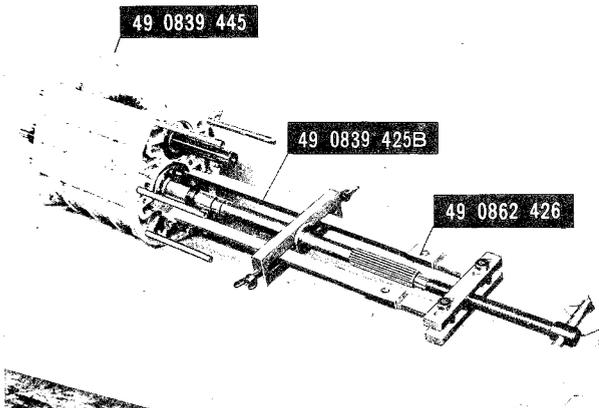


Fig. 7A-31 Removing main shaft front bearing

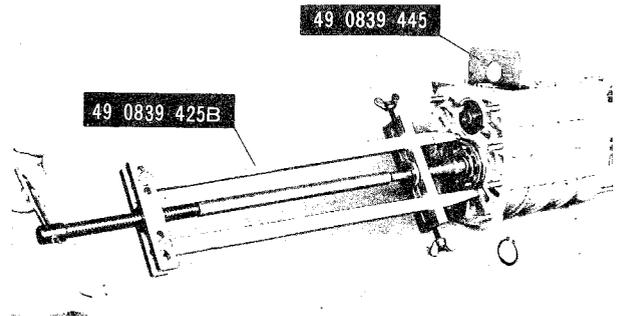


Fig. 7A-32 Removing main drive shaft bearing

34. Remove the snap ring that secures the bearing to the main drive shaft. Remove the main drive shaft bearing with the puller (49 0839 425B).
35. Take out the counter shaft from the transmission case.
36. Remove the counter shaft center bearing inner race with the puller (49 0710 520).

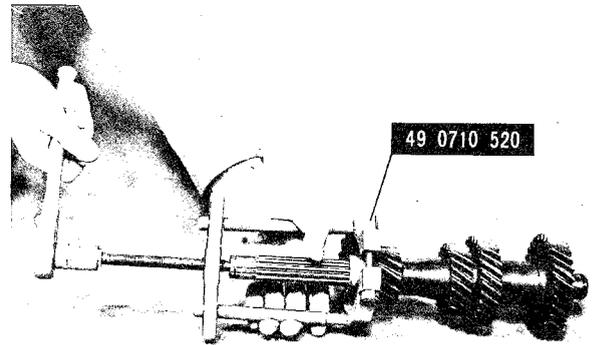


Fig. 7A-33 Removing bearing inner race

37. Separate the main drive shaft from the main shaft and remove the main drive shaft from the case. Remove the synchronizer ring and needle bearing from the main drive shaft.

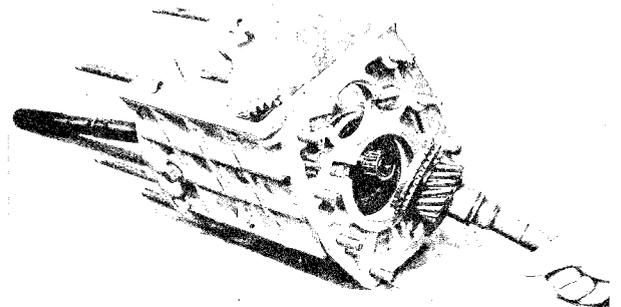


Fig. 7A-34 Removing main drive shaft

38. Take out the main shaft and gears assembly from the case, as shown in Fig. 7A-35.
39. Remove the first-and-second shift fork and third-and-fourth shift fork from the case.
40. Using the snap ring pliers, remove the snap ring from the front of the main shaft.

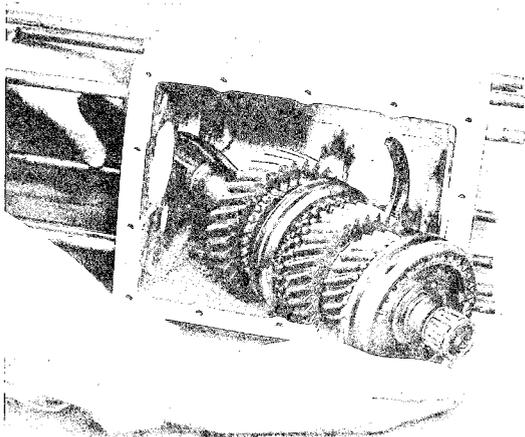


Fig. 7A-35 Removing main shaft and gear assembly

41. Slide the third-and-fourth clutch hub and sleeve assembly, synchronizer ring, third gear off the main shaft.

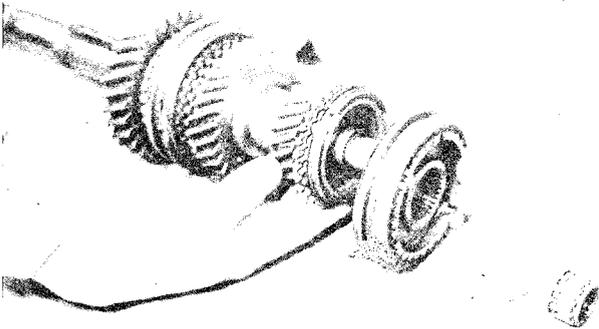


Fig. 7A-36 Removing third gear

42. Remove the thrust washer, first gear and needle bearing from the rear of the main shaft.

43. Press out the needle bearing inner race, synchronizer ring, first-and-second clutch hub and sleeve assembly, synchronizer ring and second gear from the main shaft.

7A-C. TRANSMISSION INSPECTION

7A-C-1. Cleaning

1. Wash all parts, except the ball bearings and seals in a suitable cleaning solvent. Dry all parts with compressed air.
2. Rotate the ball bearings in a cleaning solvent until all lubricant is removed. Hold the bearing to prevent it from rotating and dry it with compressed air.
3. Lubricate the bearings with lubricant and wrap them in a clean, lint-free cloth or paper until ready for use.

7A-C-2. Checking Transmission Case and Housings

1. Inspect the transmission case and extension housing for cracks and machined mating surfaces for burrs, nicks or any damages.
2. Check the bush and oil seal in the extension housing.

Replace the bush and oil seal if they are worn or damaged.

7A-C-3. Checking Bearings

1. Inspect each bearing for roughness. This can be determined by slowly turning the outer race by hand.
2. Check the needle bearing for wear or any damage. The rollers should have a uniformly good appearance and roll freely.

7A-C-4. Checking Gears

Inspect the teeth of each gear. If excessively worn, broken or chipped, replace with new gear. Excessive wear of the gears causes increase of backlash, which results in producing noises or may cause the gear to work off while running.

7A-C-5. Checking Main Shaft and Main Drive Shaft

1. Inspect the main shaft for run-out by applying a dial indicator to several places along the shaft. The reading of the indicator for run-out should be less than 0.03 mm (0.0012 in). If it is not within the specification, correct with a press or replace with a new one.

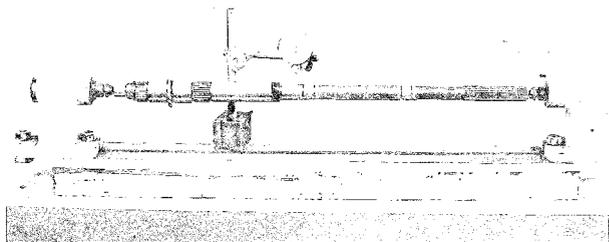


Fig. 7A-37 Checking main shaft run-out

2. Replace the main shaft if there is any evidence of wear or any of the spline is damaged.
3. Check the fit of the main shaft and gear bores. The standard fit is 0.03 ~ 0.08 mm (0.0012 ~ 0.0031 in). If this clearance increases beyond 0.15 mm (0.006 in) due to wear, replace the gear.
4. Replace the main drive shaft if the spline is damaged or the teeth are chipped, worn or broken.

7A-C-6. Checking Counter Shaft

Check the counter gears for chipped, worn or broken teeth. Replace the counter shaft if it is bent, scored or worn.

7A-C-7. Checking Reverse Idle Gear and Shaft

1. Check the reverse idle gear for chipped, worn or broken teeth. Replace the idle gear shaft if it is bent, worn or scored.
2. The standard fit of the reverse idle gear bush and shaft is 0.02 ~ 0.06 mm (0.0008 ~ 0.0024 in). If this clearance increases beyond 0.15 mm (0.006 in) due to wear, replace the reverse idle gear.

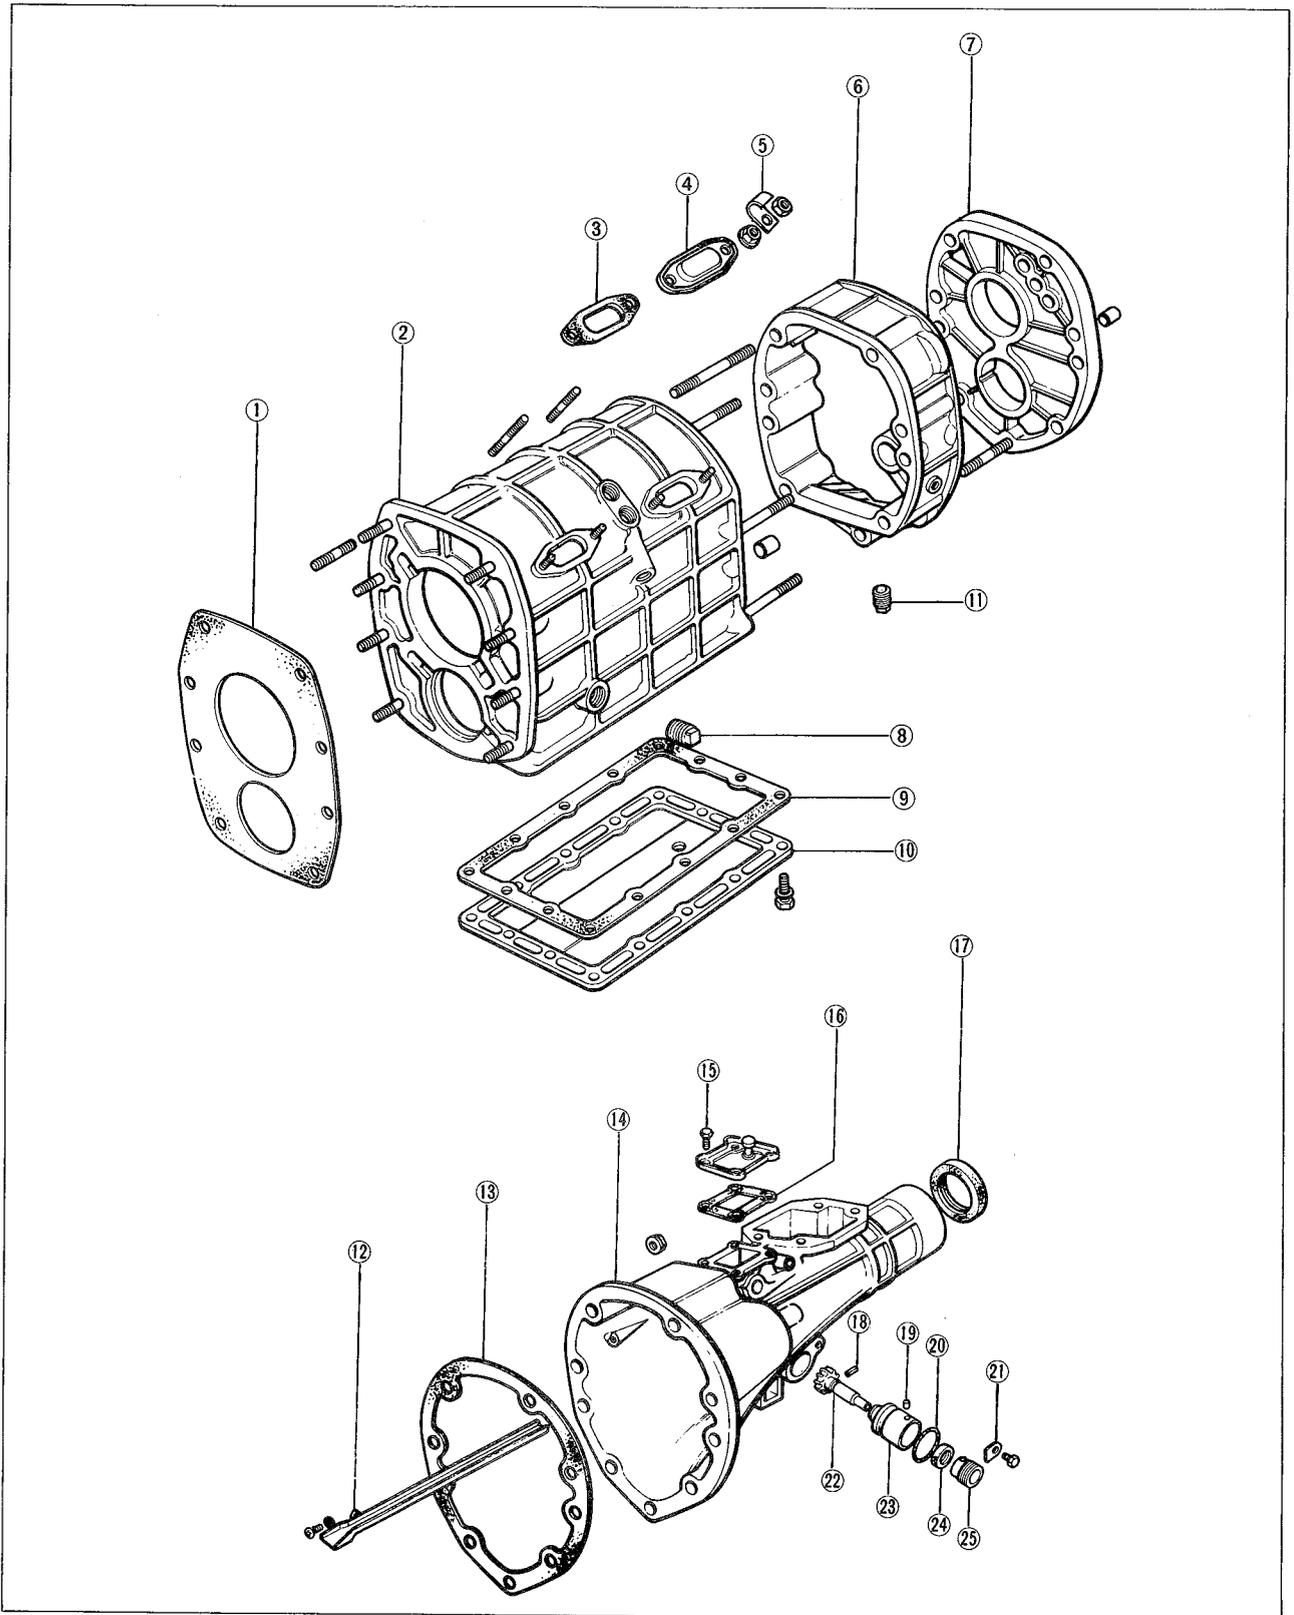


Fig. 7A-38 Transmission case

- | | | | |
|-------------------------|-----------------------|-----------------|-----------------------------|
| 1. Gasket | 8. Oil plug | 15. Blind cover | 22. Speedometer driven gear |
| 2. Transmission case | 9. Gasket | 16. Gasket | 23. Sleeve |
| 3. Gasket | 10. Under cover | 17. Oil seal | 24. Oil seal |
| 4. Blind cover | 11. Oil plug | 18. Pin | 25. Cable joint |
| 5. Clip | 12. Oil pass | 19. Pin | |
| 6. Intermediate housing | 13. Gasket | 20. O ring | |
| 7. Rear bearing housing | 14. Extension housing | 21. Lock plate | |

7A-C-8. Checking Synchronizer Mechanism

1. Inspect the gear teeth on the synchronizer ring. If there is evidence of chipping or excessively worn teeth, replace with new parts.
2. Inspect the synchronizer ring for wear. To check the wear of the synchronizer ring, fit the synchronizer ring evenly to the gear cone and measure the clearance between the side faces of the synchronizer ring and the gear with a feeler gauge, as shown in Fig. 7A-39. If it is less than **0.8 mm (0.031 in)**, replace the synchronizer ring or gear. The standard clearance is 1.5 mm (0.059 in).

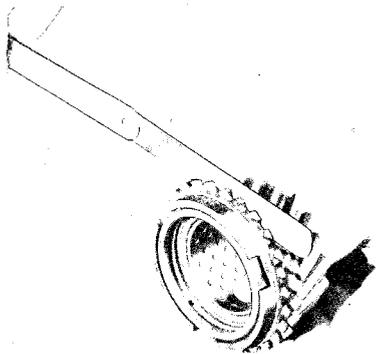


Fig. 7A-39 Checking synchronizer ring

3. Inspect the contact between the inner surface of the synchronizer ring and the cone surface of the gear. To inspect, apply a thin coat of "Prussion Blue" on the cone surface of the gear and fit it into the ring. If the contact pattern is poor, correct this by applying the compound and lapping the surfaces together.
4. See if the clutch sleeve slides easily on the clutch hub.
5. Check the synchronizer key, the inner surface of the clutch sleeve, and the key groove on the clutch hub for wear.
6. Check the synchronizer key spring for tension.

7A-C-9. Checking Control Lever, Shift Forks and Rods

1. Check the condition of the control lever, shift forks and rods, and replace if they are worn or damaged.

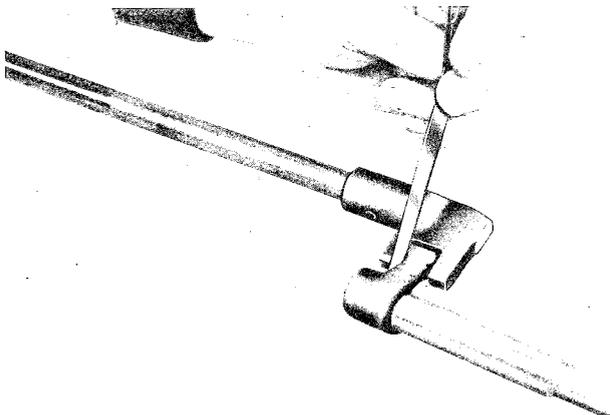


Fig. 7A-40 Checking control lever

2. Check the clearance between the control lever and the gate of the shift rod, as shown in Fig. 7A-40. If this clearance exceeds **0.8 mm (0.031 in)**, replace the control lever or the shift rod.
3. Check the clearances between the shift fork and clutch sleeve and between the shift fork and reverse idle gear. If these clearances exceed **0.5 mm (0.020 in)**, replace the shift fork, clutch sleeve or reverse idle gear.



Fig. 7A-41 Checking shift fork

7A-D. TRANSMISSION ASSEMBLY

1. Assemble the third-and-fourth clutch by installing the clutch hub into the sleeve, placing the three keys into the clutch hub slots and installing the springs onto the hub, as shown in Fig. 7A-43.

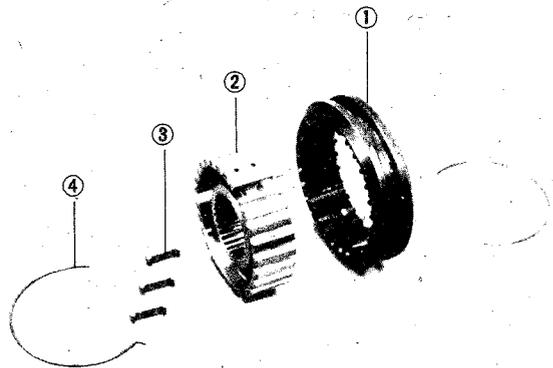


Fig. 7A-42 Synchronismesh mechanism

- | | |
|------------------|---------------------|
| 1. Clutch sleeve | 3. Synchronizer key |
| 2. Clutch hub | 4. Key spring |

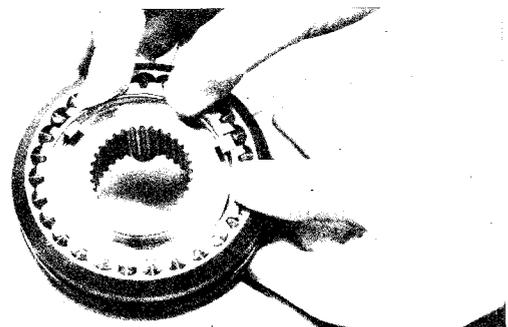


Fig. 7A-43 Assembling clutch hub

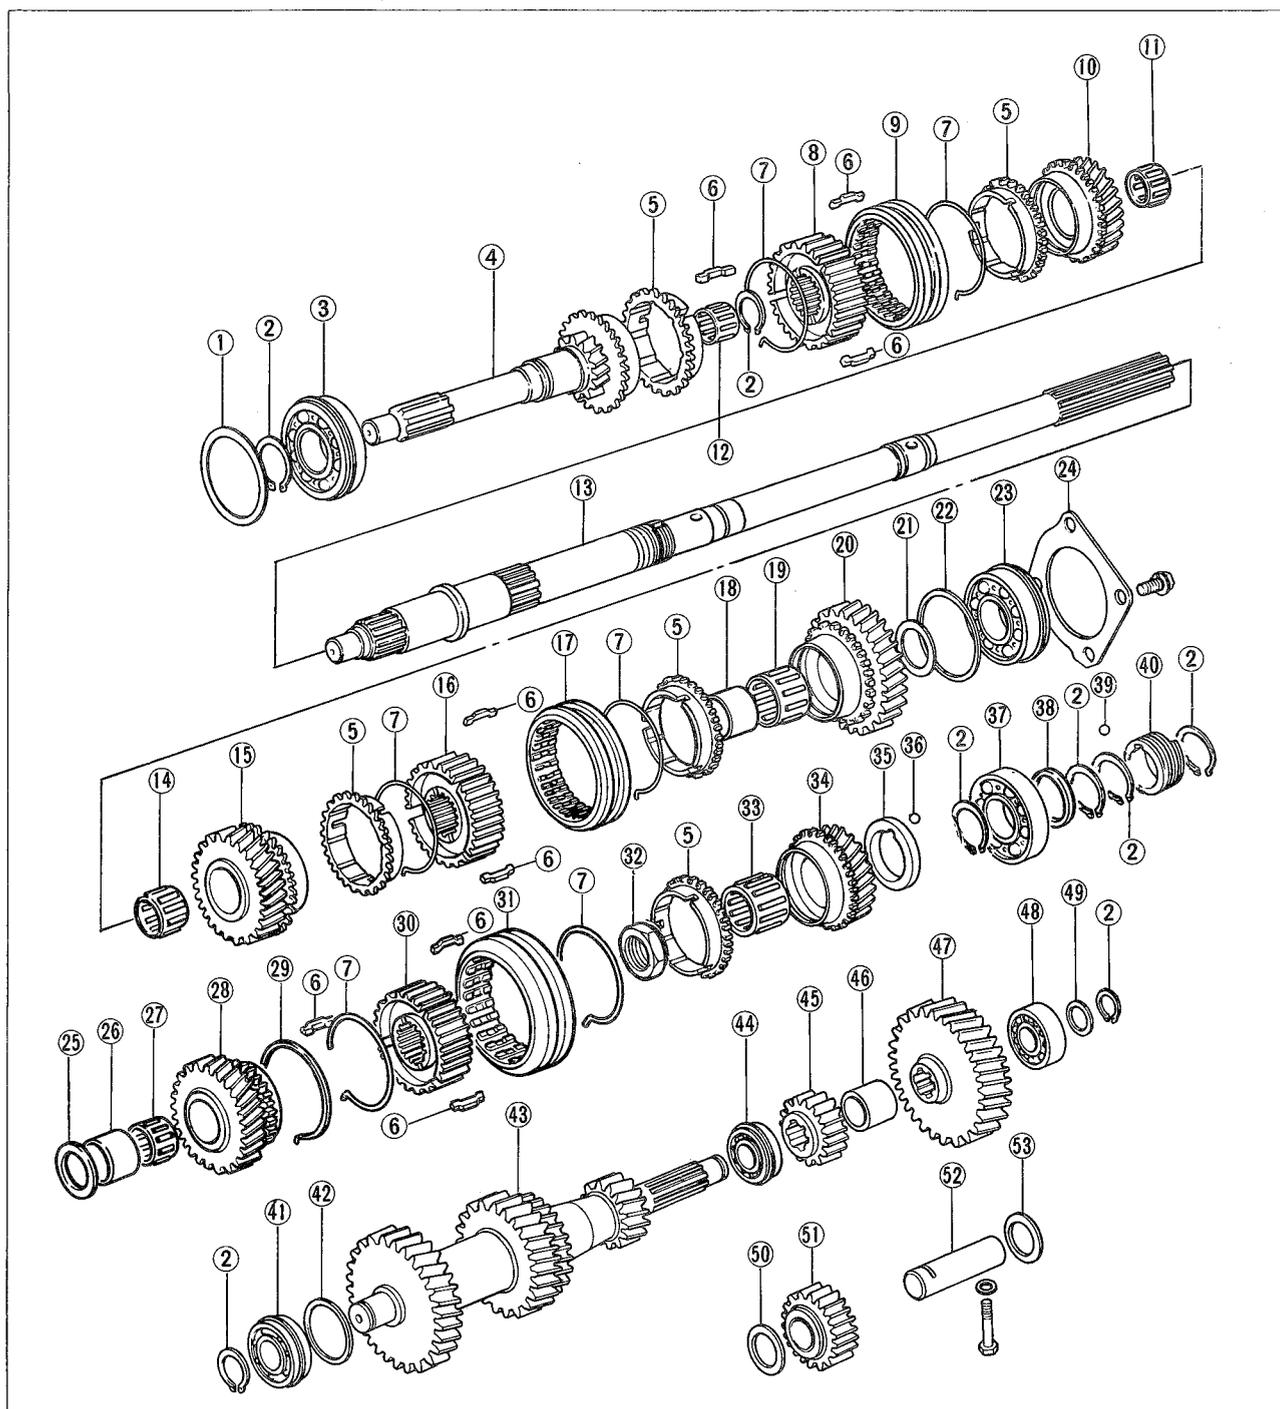


Fig. 7A-44 Transmission gears

- | | | | |
|-----------------------------|------------------------------|---------------------------------|----------------------------------|
| 1. Shim | 15. 2nd gear | 29. Stop ring | 43. Counter shaft |
| 2. Snap ring | 16. 1st-and-2nd clutch hub | 30. Rev.-and-5th clutch hub | 44. Counter shaft center bearing |
| 3. Main drive shaft bearing | 17. Clutch sleeve | 31. Clutch sleeve | 45. Counter reverse gear |
| 4. Main drive shaft gear | 18. Bearing inner race | 32. Main shaft lock nut | 46. Spacer |
| 5. Synchronizer ring | 19. Needle bearing | 33. Needle bearing | 47. Reverse gear |
| 6. Synchronizer key | 20. 1st gear | 34. 5th gear | 48. Counter shaft rear bearing |
| 7. Synchronizer key spring | 21. Thrust washer | 35. Thrust washer | 49. Thrust washer |
| 8. 3rd-and-4th clutch hub | 22. Shim | 36. Lock ball | 50. Thrust washer |
| 9. Clutch sleeve | 23. Main shaft front bearing | 37. Main shaft rear bearing | 51. Reverse idler gear |
| 10. 3rd gear | 24. Bearing cover | 38. Thrust washer | 52. Idler gear shaft |
| 11. Needle bearing | 25. Thrust washer | 39. Lock ball | 53. Thrust washer |
| 12. Needle bearing | 26. Bearing inner race | 40. Speedometer drive gear | |
| 13. Main shaft | 27. Needle bearing | 41. Counter shaft front bearing | |
| 14. Needle bearing | 28. Reverse gear | 42. Shim | |

7A

2. Assemble the first-and-second, reverse-and-fifth clutch hub and sleeve in the same manner as described in Step 1.

3. Install the needle bearing, second gear, synchronizer ring, first-and-second clutch assembly in this sequence to the rear section of the main shaft.

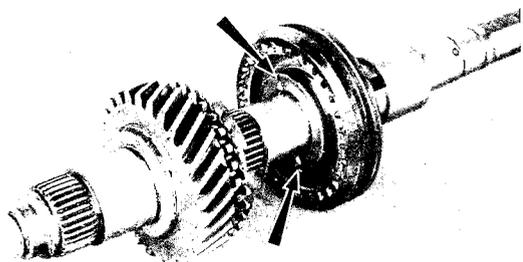


Fig. 7A-45 Installing clutch hub assembly (1st & 2nd)

4. Position the needle bearing inner race of the first gear to the main shaft, and press it with a press.



Fig. 7A-46 Installing bearing inner race

5. Install the third gear and synchronizer ring onto the front section of the main shaft.

6. Install the third-and-fourth clutch assembly onto the main shaft.

7. Fit the snap ring on the main shaft.

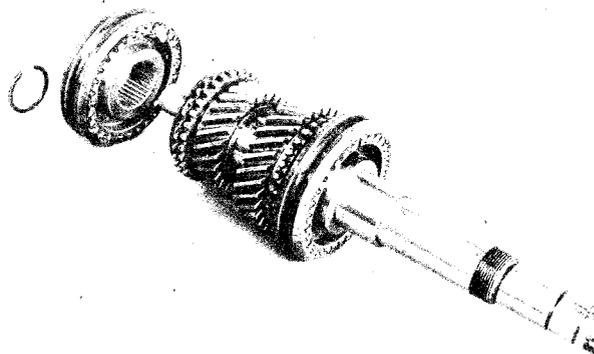


Fig. 7A-47 Installing clutch hub assembly (3rd & 4th)

8. Install the needle bearing, synchronizer ring, first gear and thrust washer to the main shaft.

9. Position the main shaft assembly in the case.

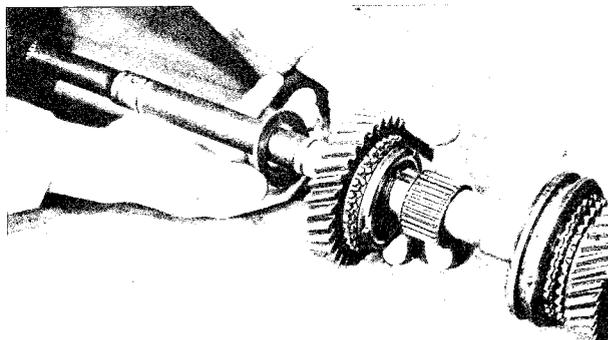


Fig. 7A-48 Installing first gear

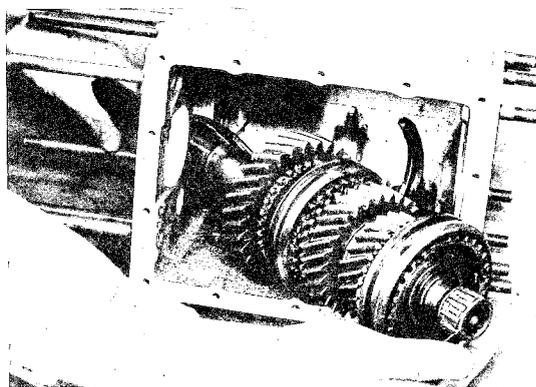


Fig. 7A-49 Installing main shaft and gear assembly

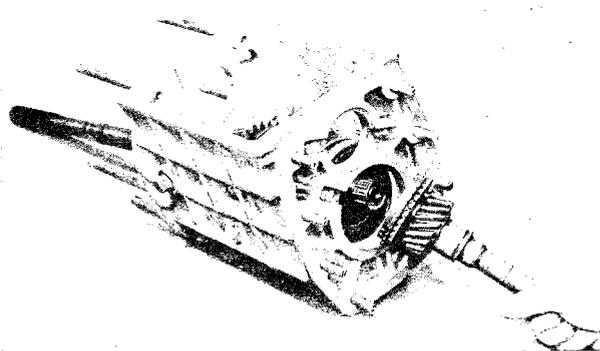


Fig. 7A-50 Installing main drive shaft gear

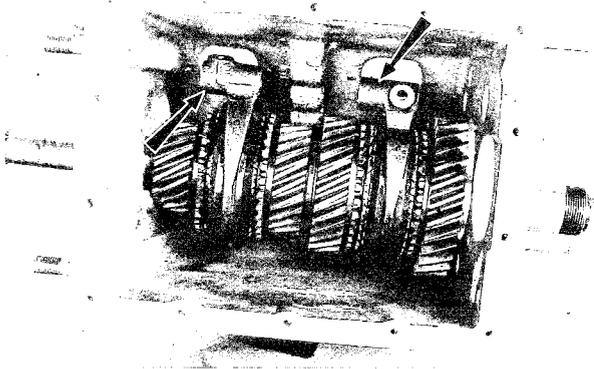


Fig. 7A-51 Installing shift fork

10. Install the needle bearing to the front end of the main shaft. Place the synchronizer ring on the main drive gear and install them to the front end of the main shaft.

11. Install the first-and-second shift fork and third-and-fourth shift fork to their respective clutch sleeves.

12. Press the counter shaft center bearing inner race to the counter shaft.

Position the counter shaft gear in the case.



Fig. 7A-52 Installing bearing inner race

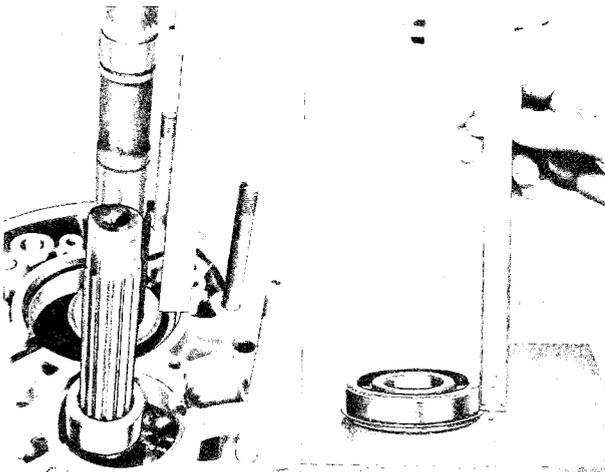


Fig. 7A-53 Checking end play

13. Check the main shaft bearing end play. Measure the depth of the main shaft bearing bore in the transmission case by using a depth gauge. Then, measure the main shaft bearing height. The difference between the two measurements indicates the required thickness of the adjusting shim. The end play should be **less than 0.1 mm (0.0039 in)**. The adjusting shims are available in the following thickness:

0.1 mm (0.0039 in)	0.3 mm (0.0118 in)
--------------------	--------------------

14. Install the **synchronizer ring holder (49 0839 445)** between the fourth synchronizer ring and the synchronizer mesh gear on the main drive shaft.

15. Position the shims and main shaft bearing in the bearing bore, and press the bearing by using a press.

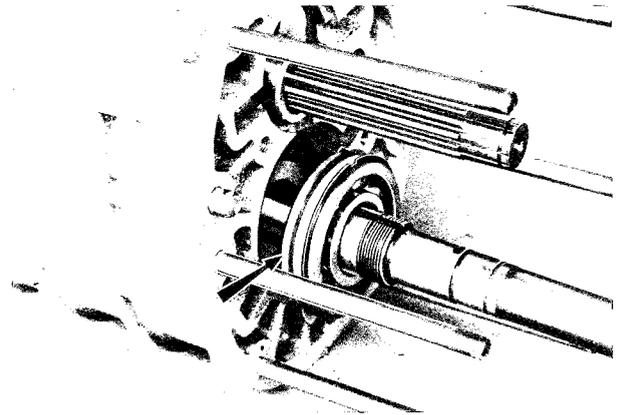


Fig. 7A-54 End play adjusting shim

49 0839 445



Fig. 7A-55 Installing bearing

16. Position the main drive shaft bearing in the bearing bore, and press it with a press.
17. Install the snap ring to secure the main drive shaft bearing.
18. Check the counter shaft front bearing end play in the same manner for the main shaft bearing end play. The end play should be **less than 0.1 mm (0.0039 in)**. The adjusting shims are available in the following thickness:

0.3 mm (0.0118 in)	0.5 mm (0.0197 in)
--------------------	--------------------

19. Position the shims and counter shaft front bearing to the bearing bore, and press them with a press.

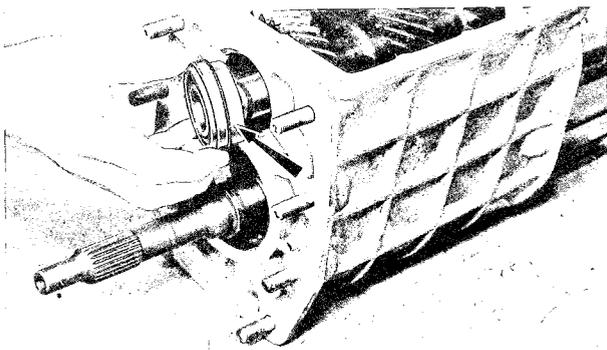


Fig. 7A-56 End play adjusting shim

20. Install the snap ring to secure the front bearing.
21. Install the counter shaft center bearing with a press.
22. Install the bearing cover plate to the transmission case and tighten the attaching bolts.
23. Install the reverse idler gear shaft, thrust washers and reverse idler gear to the transmission case.
24. Install the counter reverse gear and spacer to the rear end of the counter shaft.
25. Install the thrust washer and press the needle bearing inner race of the reverse gear to the main shaft with a press.
26. Install the needle bearing, reverse gear, synchronizer ring, reverse-and-fifth clutch assembly and **new main shaft lock nut** to the main shaft.
27. Shift into the second gear and the reverse gear to lock the rotation of the main shaft. Tighten the

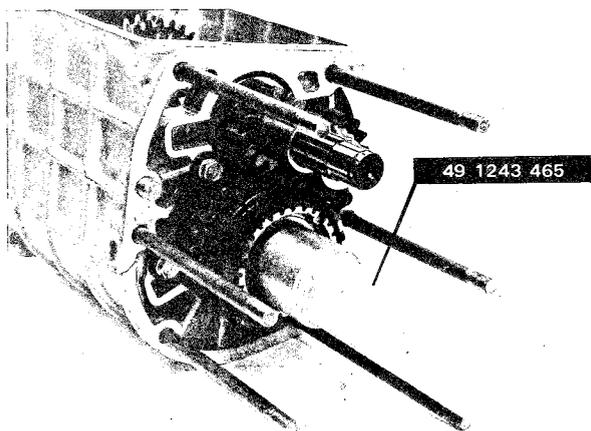


Fig. 7A-57 Tightening main shaft lock nut

lock nut to **16 ~ 24 m-kg (115 ~ 173 ft-lb)** and bend the tab of the lock nut.

28. Install the needle bearing, synchronizer ring, fifth gear to the main shaft.
29. Install the thrust washer with the steel ball onto the main shaft, and install the snap ring.
30. Check the clearance between the thrust washer and the snap ring.

The clearance should be **0.1 ~ 0.3 mm (0.0039 ~ 0.0118 in)**. The thrust washers are available in the following thickness:

2.5 mm (0.098 in)	3.5 mm (0.138 in)
3.0 mm (0.118 in)	

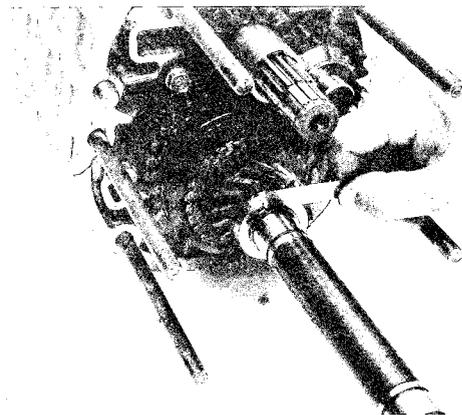


Fig. 7A-58 Checking clearance

31. Install the first-and-second shift rod through the holes of the case and fork.
32. Using the **shift fork rod guide (49 0862 350)** and **interlock pin installer (49 0187 451A)**, insert the interlock pin, as shown in Fig. 7A-59.

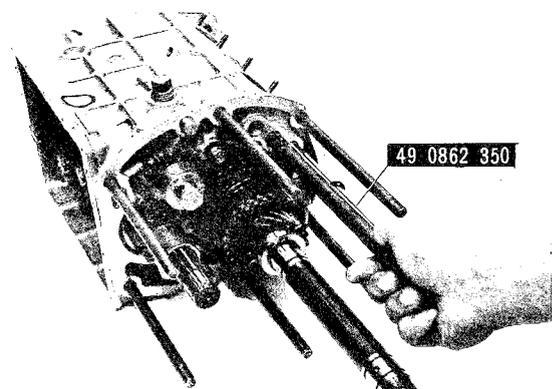


Fig. 7A-59 Installing interlock pin

33. Remove the tools and install the third-and-fourth shift rod through the holes of the case and fork.
34. Through the opening of the case, align the lock bolt holes of each shift fork and rod. Install and tighten the lock bolts.
35. With the same tools that were used in Step 32, install the interlock pin.
36. Position the reverse-and-fifth shift fork to the clutch sleeve and install the shift rod. Tighten the lock bolt.

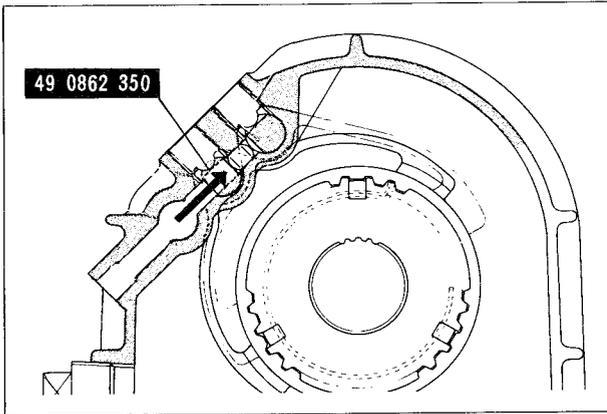


Fig. 7A-60 Installing interlock pin (1)

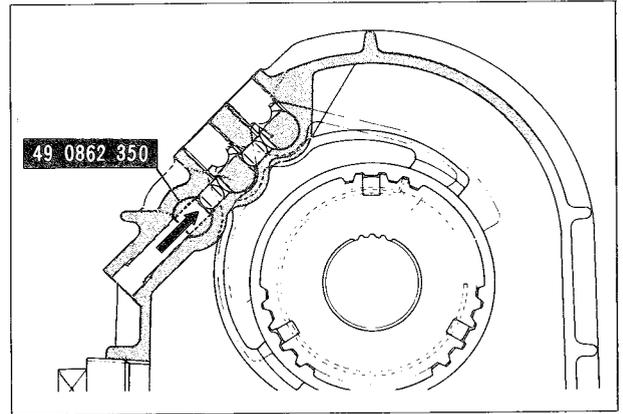


Fig. 7A-61 Installing interlock pin (2)

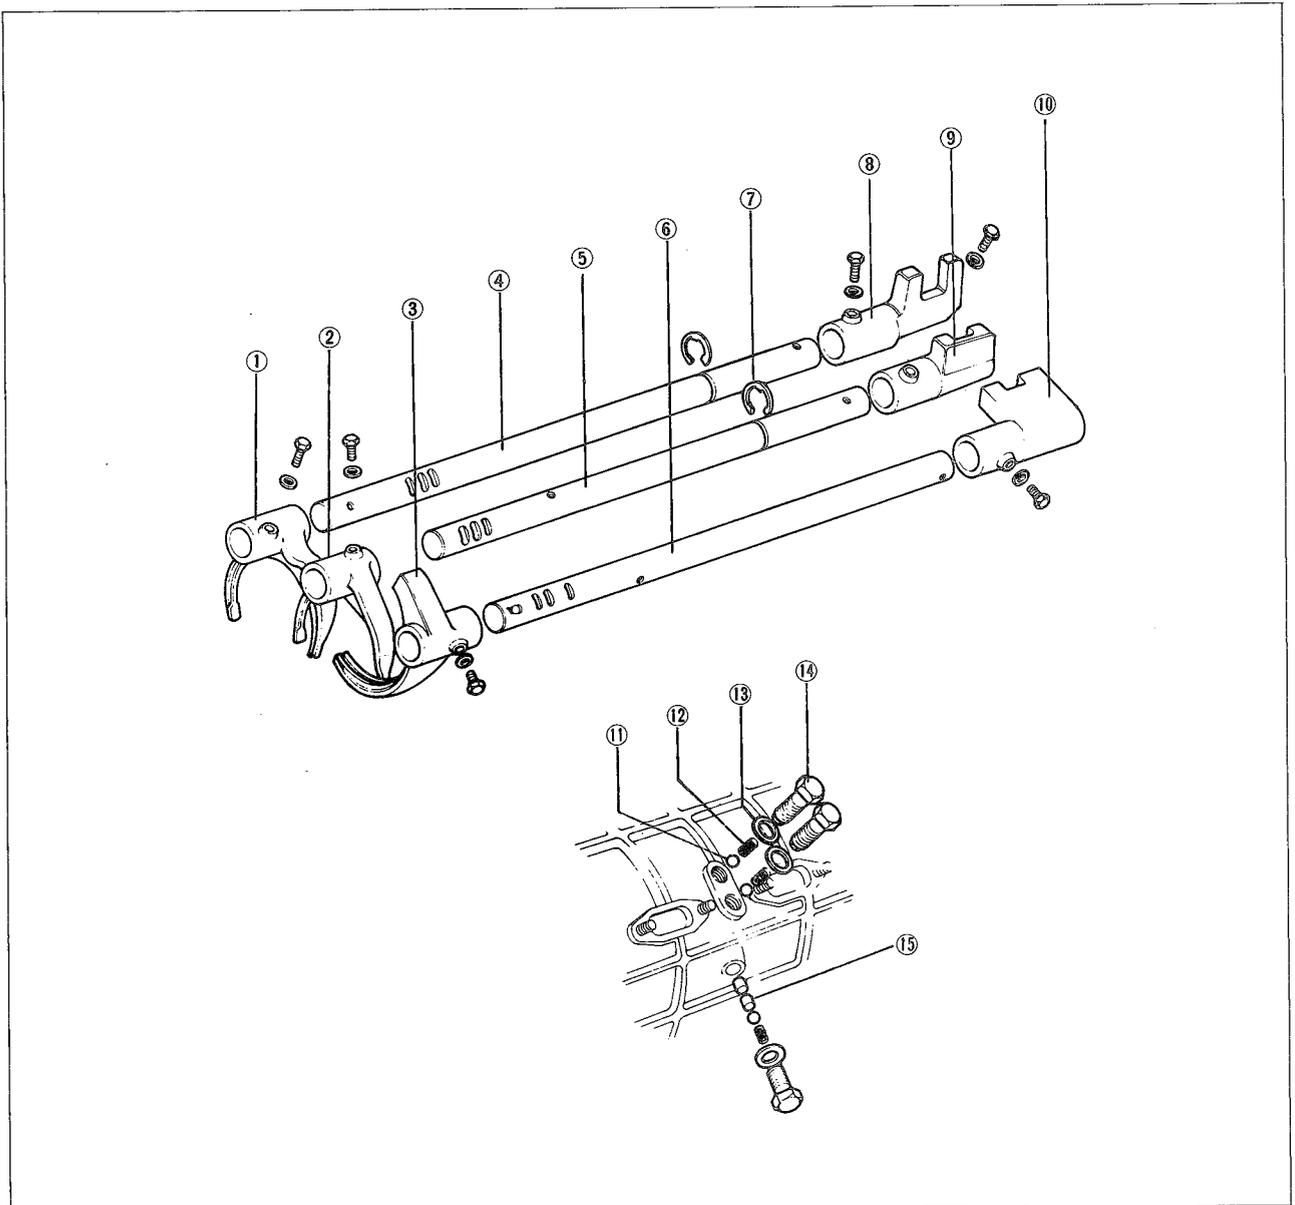


Fig. 7A-62 Shift rod, locking ball and shift fork

- | | | |
|--------------------------|---------------------------|---------------------|
| 1. Shift fork | 6. Rev.-and-5th shift rod | 11. Detent ball |
| 2. Shift fork | 7. Stop ring | 12. Detent spring |
| 3. Shift fork | 8. Shift rod end | 13. Washer |
| 4. 3rd-and-4th shift rod | 9. Shift rod end | 14. Spring cap bolt |
| 5. 1st-and-2nd shift rod | 10. Shift rod end | 15. Interlock pin |

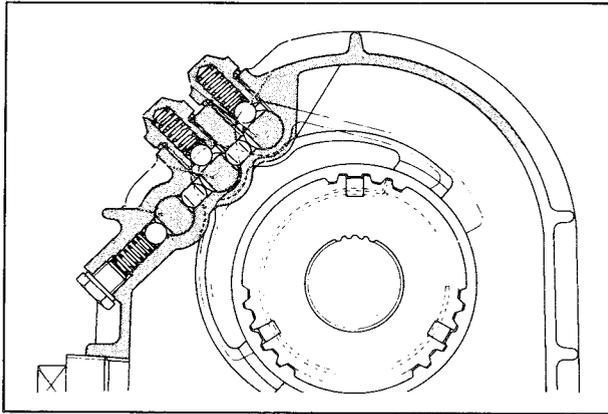


Fig. 7A-63 Installing spring cap bolt

37. Position the three shift locking balls and springs into their respective positions and install the spring cap bolts.

38. Place the third-and-fourth clutch sleeve in the third gear.

39. Check the clearance between the synchronizer key and the exposed edge of the synchronizer ring with a feeler gauge. This measurement should be **0.66 ~ 2.0 mm (0.026 ~ 0.079 in)**. If the measurement is greater than 2.0 mm (0.079 in), the synchronizer key could pop out of position.

If the measurement exceeds **2.0 mm (0.079 in)**, exchange the thrust washer (selective fit). The thrust washers are available as in the following table.

2.5 mm (0.098 in)	3.5 mm (0.138 in)
3.0 mm (0.118 in)	

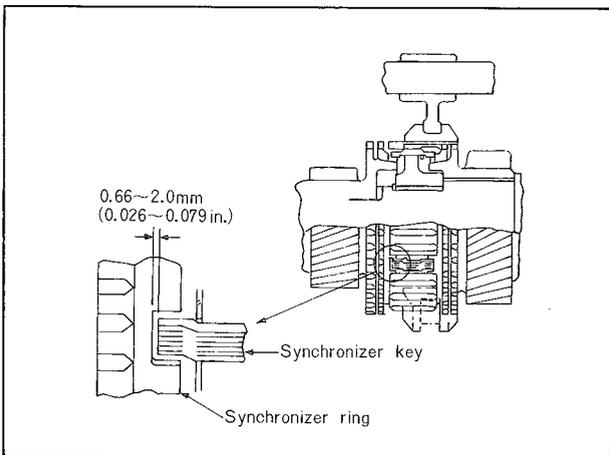


Fig. 7A-64 Checking clearance

40. Install the two blind covers and gaskets to the case and tighten the attaching nuts.

41. Place the gasket on the case and install the under cover. Tighten the bolts to **0.6 ~ 0.9 m·kg (4 ~ 7 ft·lb)**.

42. Apply a thin coat of sealing agent on the contacting surface of the intermediate housing.

43. Install the intermediate housing to the transmission case and align the lock bolt holes of the housing and reverse idler gear shaft.

Install and tighten the lock bolt.

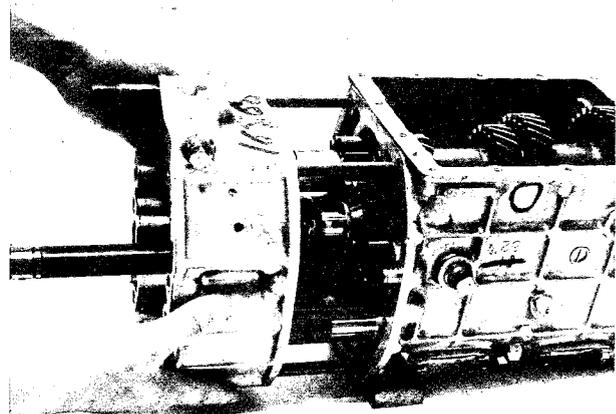


Fig. 7A-65 Installing intermediate housing

44. Position the counter fifth gear and bearing to the rear end of the counter shaft, and press them with a press.

45. Install the thrust washer and secure the counter shaft rear bearing with the snap ring.

46. Check the clearance between the thrust washer and the snap ring.

The clearance should be less than **0.1 mm (0.0039 in)**. The thrust washers are available in the following thickness:

2.5 mm (0.098 in)	3.5 mm (0.138 in)
3.0 mm (0.118 in)	

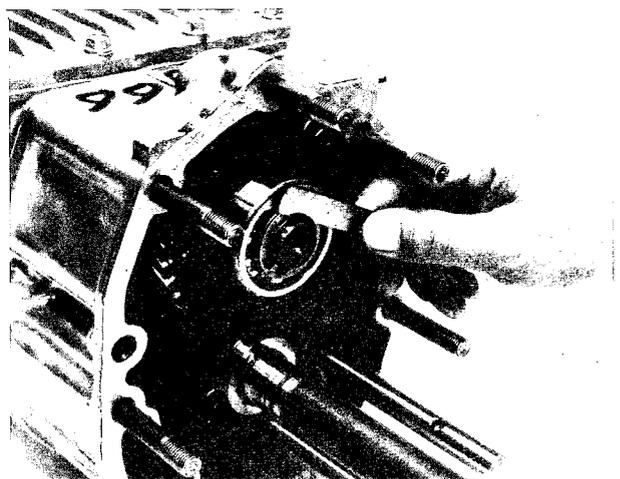


Fig. 7A-66 Checking clearance

47. Position the main shaft rear bearing to the main shaft, and press it with a press.

48. Install the thrust washer and secure the bearing with the snap ring.

49. Check the clearance between the thrust washer and the snap ring.

The clearance should be less than **0.15 mm (0.0059 in)**. The thrust washers are available in the following thickness:

2.5 mm (0.098 in)	3.5 mm (0.138 in)
3.0 mm (0.118 in)	

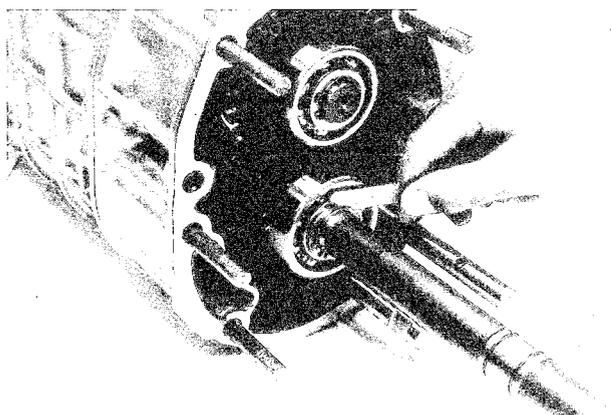


Fig. 7A-67 Checking clearance

50. Apply a thin coat of sealing agent on both contact surfaces of the rear bearing housing.
 51. Install the bearing housing to the intermediate housing.

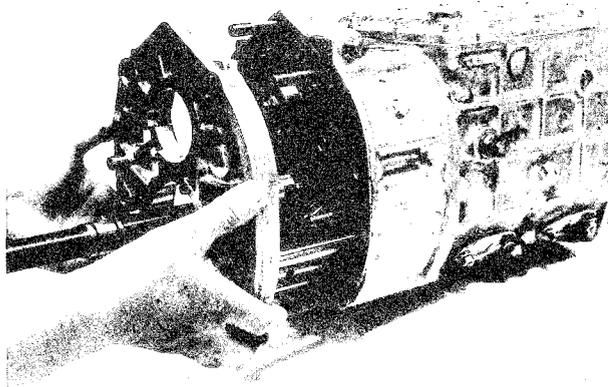


Fig. 7A-68 Installing bearing housing

52. Install the shift rod ends to their respective shift rods and tighten the bolts.

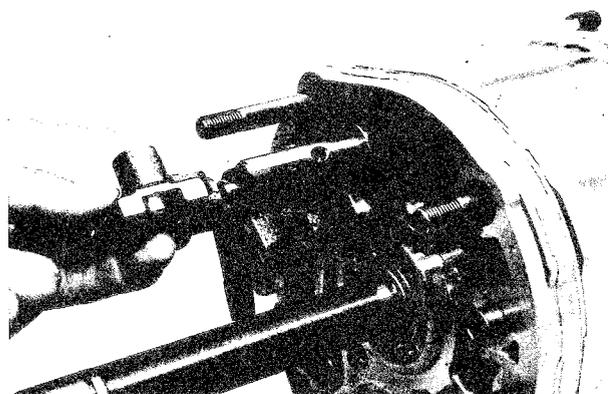


Fig. 7A-69 Installing shift rod end

53. Install the speedometer drive gear with the steel ball onto the main shaft, as shown in Fig. 7A-70, and secure it with the snap ring.
 54. Insert the speedometer driven gear assembly to the extension housing and secure it with the bolt and lock plate.

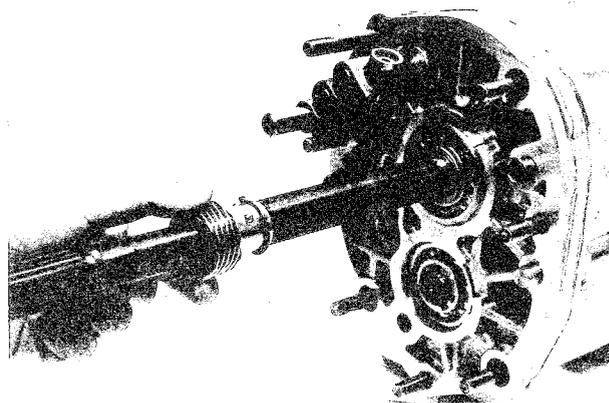


Fig. 7A-70 Installing speedometer driven gear

55. Insert the control rod through the holes from the front side of the extension housing.
 56. Align the key and insert the control lever end to the control rod. Install the bolt and tighten it to 2.8 ~ 3.4 m-k_g (20 ~ 25 ft-lb).
 57. Install the reverse lamp switch to the extension housing and tighten the switch to 2.8 ~ 4.5 m-k_g (20 ~ 33 ft-lb).
 58. Place the gasket on the case and install the extension housing with the control lever end laid down to the left as far as it will go. Tighten the attaching nuts.

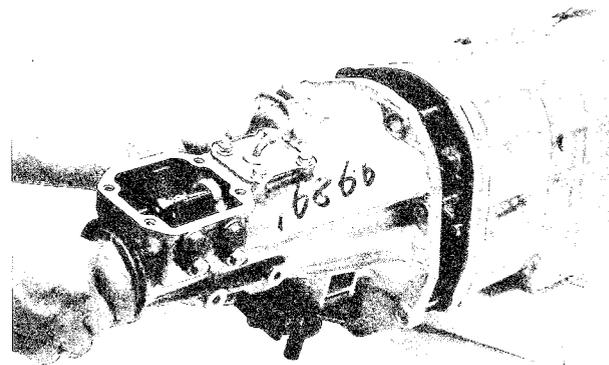


Fig. 7A-71 Installing extension housing

59. Check to ensure that the gearshift control lever operates properly.



Fig. 7A-72 Installing gearshift lever retainer

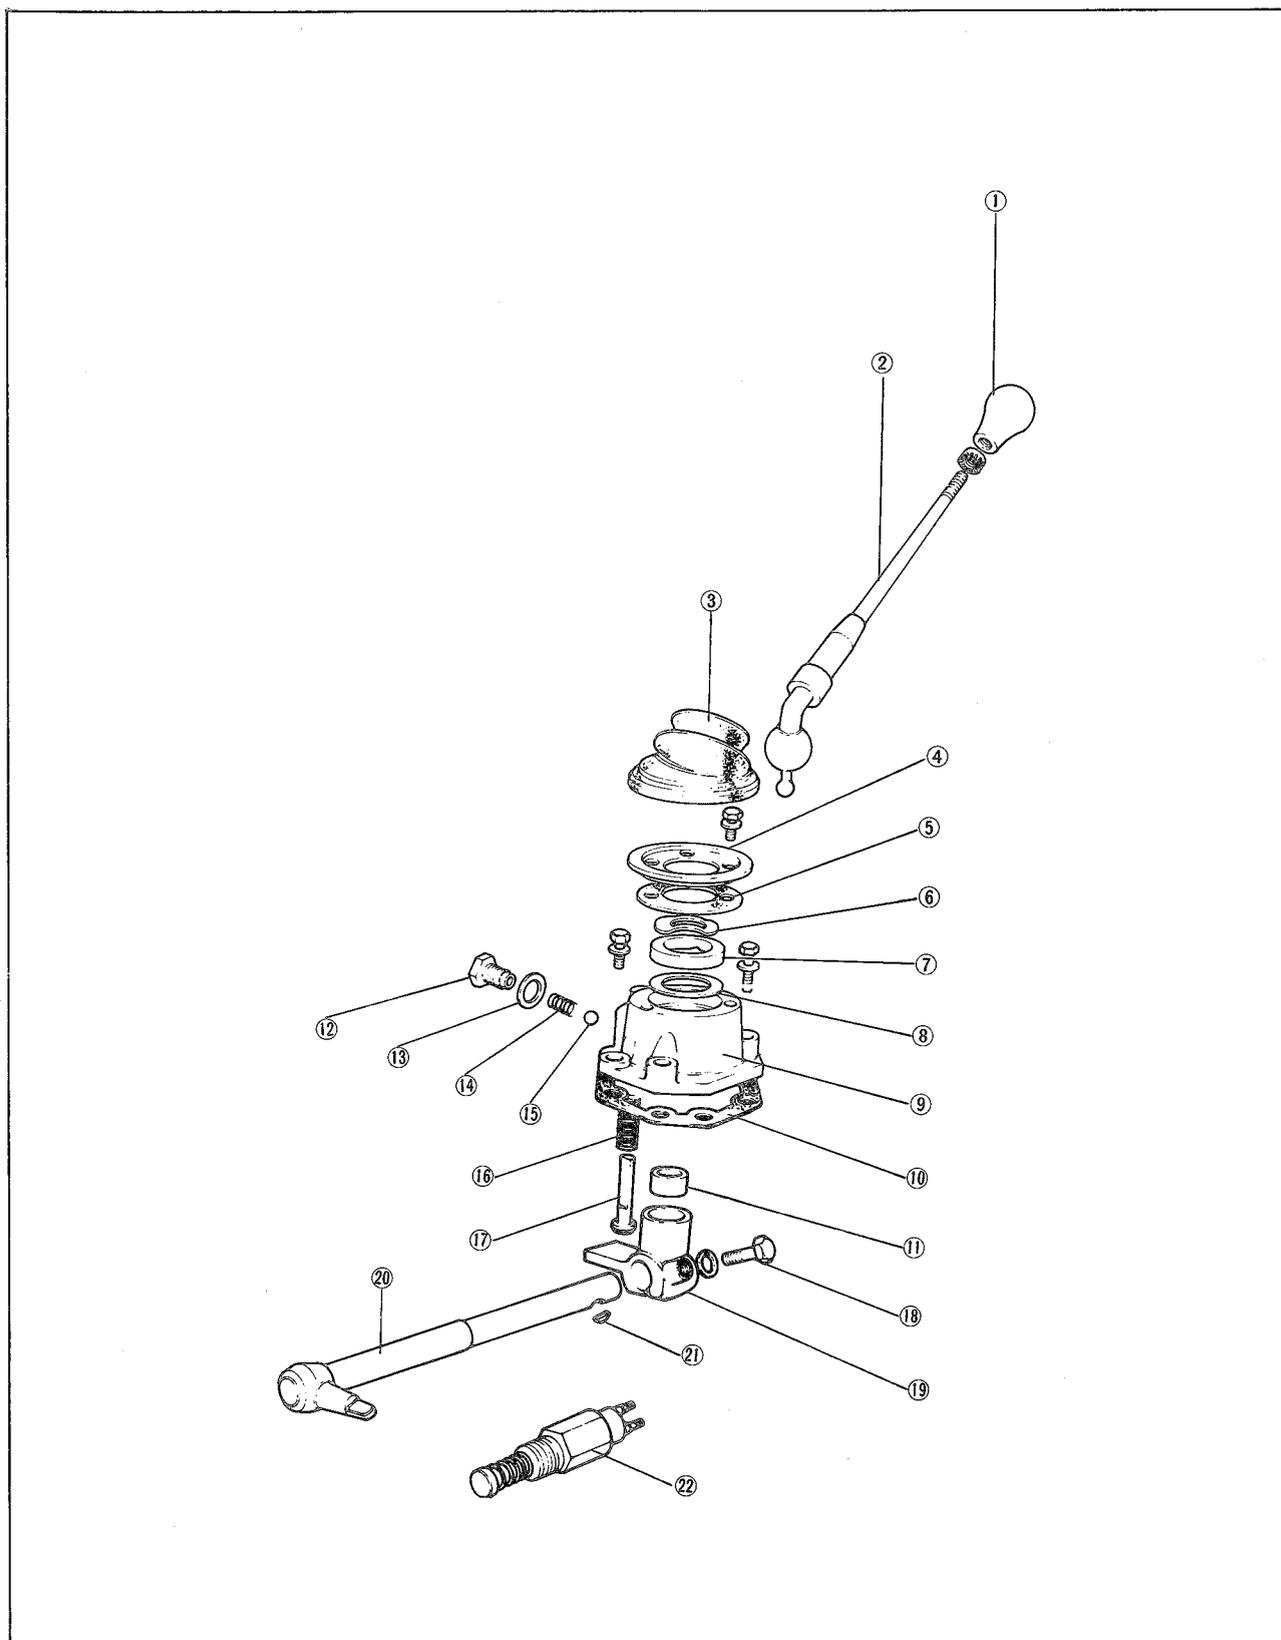


Fig. 7A-73 Gearshift lever and retainer

- | | | | |
|--------------------|-----------------------------|-------------------------|-------------------------|
| 1. Knob | 7. Bush | 13. Washer | 19. Control lever end |
| 2. Gearshift lever | 8. Shim | 14. Spring | 20. Control lever |
| 3. Boot | 9. Gearshift lever retainer | 15. Ball | 21. Key |
| 4. Cover | 10. Gasket | 16. Spring | 22. Reverse lamp switch |
| 5. Gasket | 11. Ball seat | 17. Select lock spindle | |
| 6. Spring | 12. Spring cap bolt | 18. Reamer bolt | |

60. Insert the select lock spindle and spring from the inside of the gearshift lever retainer. Install the steel ball and spring in alignment with the spindle groove and install the spring cap bolt.

61. Install the gearshift lever retainer and gasket to the extension housing.

62. Check the bearing end play. Measure the depth of the bearing bore in the clutch housing using a depth gauge. Then, measure the bearing protrusion, as shown in Fig. 7A-74. The difference between two measurements indicates the required thickness of the adjusting shim. The end play should be less than 0.1 mm (0.0039 in).

The shims are available in the following thickness:

0.1 mm (0.0039 in)	0.3 mm (0.0118 in)
--------------------	--------------------

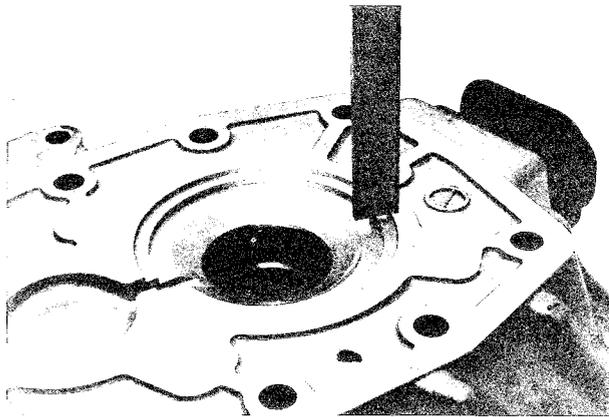


Fig. 7A-74 Measuring bearing bore depth

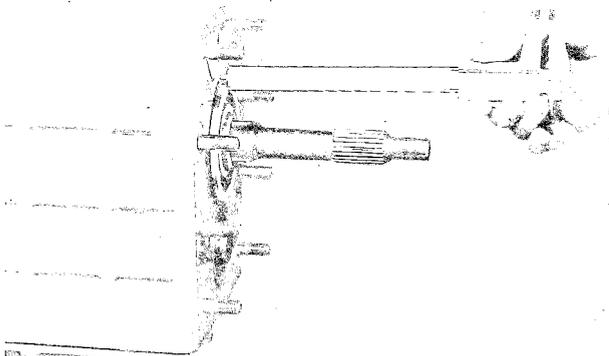


Fig. 7A-75 Measuring bearing height

63. Place the shims on the bearing bore.

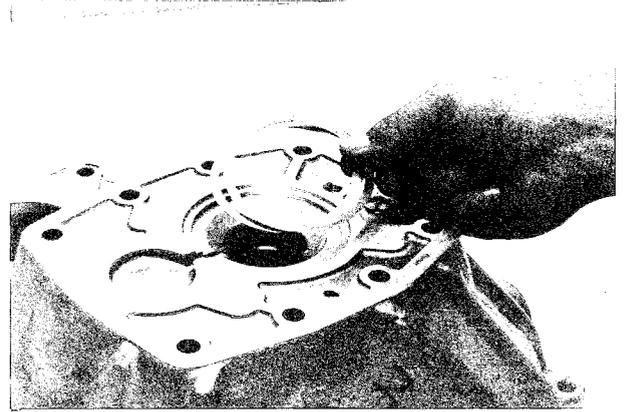


Fig. 7A-76 Installing shim

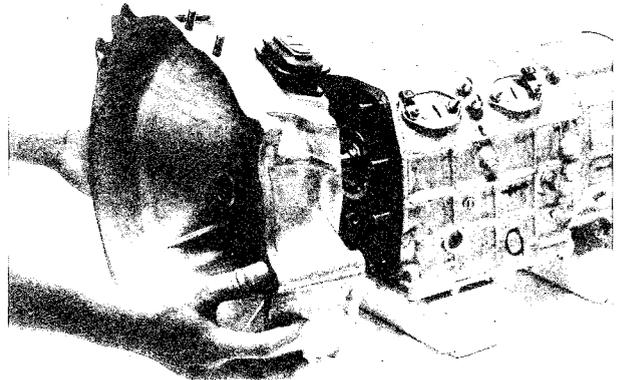


Fig. 7A-77 Installing clutch housing

64. Place the gasket on the front side of the case. Apply lubricant to the lip of the oil seal and install the clutch housing to the case. Tighten the attaching nuts.

65. Install the release bearing and release fork to the clutch housing.

7A-E. TRANSMISSION INSTALLATION

Carry out the removing operations in the reverse order.

Note:

- Apply a thin coat of grease onto the splines of the main drive shaft.
- Use the **main shaft holder** (49 0259 440) to align the splines of the main drive shaft and clutch disc.
- Fill the transmission with the correct grade and quantity of lubricant.

SPECIAL TOOLS

49 0259 440	Main shaft holder
49 0839 425B	Bearing puller
49 0839 445	Synchronizer ring holder
49 0862 350	Shift fork rod guide
49 0187 451A	Interlock pin installer
49 1243 465	Main shaft lock nut wrench



AUTOMATIC TRANSMISSION

7B-A.	GENERAL TRANSMISSION SERVICE.....	7B : 1
	7B-A-1. Manual Linkage Check	7B : 1
	7B-A-2. Transmission Fluid Level Check	7B : 1
	7B-A-3. Fluid Aeration Check	7B : 1
	7B-A-4. Transmission Fluid Leakage Check.....	7B : 1
	7B-A-5. Engine Idle Speed Check	7B : 1
	7B-A-6. Control Pressure Check	7B : 1
	7B-A-7. Stall Test	7B : 2
	7B-A-8. Shift Point Check	7B : 2
	7B-A-9. Air Pressure Checks	7B : 3
7B-B.	SHIFT CONTROL LINKAGE	7B : 3
	7B-B-1. Manual Linkage	7B : 3
	7B-B-2. Selector Lever Knob Adjustment	7B : 3
	7B-B-3. Throttle Linkage Adjustment	7B : 4
	7B-B-4. Kick-down Switch Adjustment	7B : 4
	7B-B-5. Inhibitor Switch Adjustment	7B : 4
	7B-B-6. Kick-down Switch	7B : 4
	7B-B-7. Inhibitor Switch	7B : 4
	7B-B-8. Selector Lever	7B : 5
7B-C.	TRANSMISSION REMOVAL	7B : 5
7B-D.	TRANSMISSION DISASSEMBLY.....	7B : 6
7B-E.	OVERHAUL OF MAIN COMPONENTS.....	7B : 8
	7B-E-1. Front Clutch	7B : 8
	7B-E-2. Rear Clutch	7B : 9
	7B-E-3. Low and Reverse Brake	7B : 11
	7B-E-4. Servo	7B : 12
	7B-E-5. Governor	7B : 12
	7B-E-6. Oil Pump	7B : 13
	7B-E-7. Control Valve Body	7B : 14
	7B-E-8. Connecting Shell and Sun Gear	7B : 15
	7B-E-9. Internal Drive Flange	7B : 16
	7B-E-10. Planet Carrier	7B : 16
	7B-E-11. One-way Clutch	7B : 16
7B-F.	TRANSMISSION ASSEMBLY	7B : 16
7B-G.	TRANSMISSION INSTALLATION	7B : 19

7B-A. GENERAL TRANSMISSION SERVICE

7B-A-1. Manual Linkage Check

Correct manual linkage adjustment is necessary to position the manual valve for proper pressure direction to the different transmission components. Improperly adjusted manual linkage may cause crossleakage and subsequent transmission failure. Refer to the linkage adjustments in Par. 7B-B-1 for detailed manual linkage adjustment procedures.

7B-A-2. Transmission Fluid Level Check

1. Make sure the vehicle is standing level. Then firmly apply the parking brake.
2. Run the engine at normal idle speed. If the transmission fluid is cold, run the engine at fast idle speed (about 1200 rpm) for several minutes. When the fluid is warm, slow the engine down to normal idle speed.
3. Shift the selector lever through all positions, and place the lever at N or P. Do not turn off the engine during the fluid level checks.
4. Clean all dirt from the transmission fluid dipstick cap before removing the dipstick from the filler tube.
5. Pull the dipstick out of the tube, wipe it clean, and push it all the way back into the tube. Be sure it is properly seated.
6. Pull the dipstick out of the tube again, and check the fluid level.

Observe the level on the dipstick.

The fluid level should be between the L and F marks (Fig. 7B-1). If necessary add enough fluid to the transmission through the filler tube to bring the level between the L and F marks on the dipstick. Do not overfill the transmission. Install the dipstick, making sure it is fully seated in the tube.

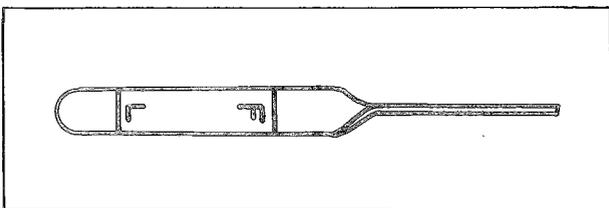


Fig. 7B-1 Fluid level dipstick

7B-A-3. Fluid Aeration Check

A fluid level that is too high will cause the fluid to become aerated:

Aerated fluid will cause low control pressure, and the aerated fluid may be forced out the vent. Check the transmission fluid level. Low fluid level can affect the operation of the transmission, and may indicate fluid leaks that could cause transmission damage.

7B-A-4 Transmission Fluid Leakage Check

Check the speedometer cable connection at the transmission. Replace the rubber seal if necessary. Leakage at the oil pan gasket often can be stopped by tightening the attaching bolts to the proper torque. If necessary, replace the gasket.

Check the fluid filler tube connection at the transmission case. If leakage is found here, install a new O-ring.

Check the fluid lines and fittings between the transmission and the cooler for looseness, wear, or damage. If leakage cannot be stopped by tightening a fitting, replace the damaged parts.

If leakage is found at the manual lever shaft, replace the seals.

Inspect the two pipe plugs on the left side of the transmission case and the one plug on the right side of the case at the rear. If the plugs show leakage, torque them to specifications. If tightening does not stop the leak, replace the plug.

Oil-soluble aniline or fluorescent dyes premixed at the rate of 1/2 teaspoon of dye powder to 1/2 pint of transmission fluid have proved helpful in locating the source of the fluid leakage. Such dyes may be used to determine whether an engine oil or transmission fluid leak is present or if the fluid in the oil cooler leaks into the engine coolant system. A black light, however, must be used with the fluorescent dye solution.

7B-A-5. Engine Idle Speed Check

Check and, if necessary, adjust the engine idle speed, using the procedure given in Par. 4-A-1.

If the idle speed is too low, the engine will run roughly. An idle speed that is too high will cause the vehicle to creep, have harsh engagements and harsh closed-throttle downshifts.

7B-A-6. Control Pressure Check

If the shifts do not occur within limits or the transmission slips during shift point, the line pressure and governor pressure must be checked.

a. Line pressure test

1. If the transmission fluid is cold, run the engine until the fluid reaches its normal operating temperature (60 ~ 100°C=140 ~ 212°F).

2. Line pressure for the R range is taken by connecting a pressure gauge to the pressure outlet at the left front of the transmission case, and for the D, 2, and 1 ranges use the pressure outlet at the right rear of the transmission case. (Fig. 7B-2).

Be sure to place the gauge where it is visible from the driver's seat.

3. Chock the front and rear wheels and apply the parking brake.

4. With the selector lever in the range to be checked, run the engine at engine idle speed and read the pressure gauge.

5. With the service brakes firmly applied, depress the accelerator pedal gradually to the wide open position. While checking whether the pressure rises smoothly, read the pressure gauge at the stall condition. The test time from starting accelerator depression to its release must not exceed 5 seconds.

6. Measure line pressure for each of the ranges in the same manner. Be sure to allow at least one minute cooling time between tests at 1200 rpm with the transmission in the P or N position.

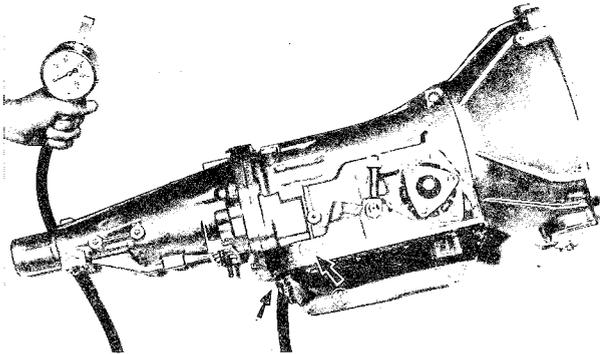


Fig. 7B-2 Control pressure check
 A : For line pressure in whole ranges
 B : For governor pressure

Line Pressure

Manual Range	Line Pressure	
	Engine Idling	Stall
“R”	4.0 ~ 7.0 kg/cm ² (57 ~ 100 lb/in ²)	15.5 ~ 19.0 kg/cm ² (220 ~ 270 lb/in ²)
“D”	3.0 ~ 4.0 kg/cm ² (43 ~ 57 lb/in ²)	9.5 ~ 11.0 kg/cm ² (135 ~ 156 lb/in ²)
“2”	10.0 ~ 12.0 kg/cm ² (142 ~ 171 lb/in ²)	10.0 ~ 12.0 kg/cm ² (142 ~ 171 lb/in ²)
“1”	3.0 ~ 4.0 kg/cm ² (43 ~ 57 kg/cm ²)	9.5 ~ 11.0 kg/cm ² (135 ~ 156 lb/in ²)

b. Governor pressure test

The governor pressure is tested when the shift points are different than those listed in the specifications.

1. Connect a pressure gauge to the pressure outlet port on the left side of the transmission (Fig. 7B-2).
2. Read the pressure with the vehicle running at the speeds specified in the specification section. If pressures are not within specifications, disassemble and check the governor valve.

Governor Pressure (1)

Driving speed	Output shaft speed rpm	Standard governor pressure	
		kg/cm ²	lb/in ²
20 mile/h	980 ~ 1,080	0.8 ~ 1.3	12 ~ 18
35 mile/h	1,730 ~ 1,870	1.4 ~ 2.1	20 ~ 29
55 mile/h	2,730 ~ 2,900	2.6 ~ 3.6	36 ~ 51

Governor Pressure (2)

Break point	at 1,000 rpm	at 2,000 rpm	at 3,000 rpm
400~600rpm	0.9~1.3kg/cm ² (13~18lb/in ²)	1.6~2.2kg/cm ² (23~28lb/in ²)	3.0~3.8kg/cm ² (43~54lb/in ²)

7B-A-7. Stall Test

Start the engine to allow it to reach its normal operating temperature. Apply both the parking and service brakes while making this test. The stall test is made in D, 2, 1 or R, at full throttle to check engine performance, converter clutch operation or installation and the holding ability of the clutches, band, low and reverse brake, and one-way clutch. While making this test, do not hold the throttle open for more than five seconds at a time. Then move the selector lever to N or P and run engine at 1200 rpm for about one minute to cool the converter before making the next test. If the engine speed recorded by the tachometer exceeds the maximum limits shown in the Specifications, release the accelerator immediately because clutch, brake or band slippage is indicated.

Stall revolution	
Before break in	After break in
2,400 ~ 2,650 rpm	2,450 ~ 2,700 rpm

7B-A-8. Shift Point Checks

Check the minimum throttle upshift in D. The transmission should start in first gear, shift to second, and then shift to third, within the shift points specified in the Specifications.

While the transmission is in third gear, depress the accelerator pedal through the detent (to the floor). The transmission should shift from third to second or third to first, depending on the vehicle speed. Check the closed throttle downshift from third to first by coasting down from about 45 mph in third gear. The shift should occur within the limits specified in the Specifications.

When the selector lever is at 2, the transmission can operate only in second gear.

With the transmission in third gear and road speed over 45 mph, the transmission should shift to second gear when the selector lever is moved from D to 2 to 1. The transmission will downshift from second or third to first gear when this same manual shift is made below approximately 45 mph.

Shift Speed

Throttle condition	Gear shift	Shift speed (miles/h)
Kick-down (0 ~ 100 mm-Hg) (0 ~ 3.94 in-Hg)	D1 → D2	33 ~ 49
	D2 → D3	63 ~ 85
	D3 → D2	56 ~ 72
	D2 → D1	15 ~ 31
Half throttle (200 ± 10 mm-Hg) (7.87 ± 0.39 in-Hg)	D1 → D2	10 ~ 23
	D2 → D3	19 ~ 44
Fully closed throttle	D3 → D1	6 ~ 13
Manual 1	12 → 11	27 ~ 36

7B-A-9. Air Pressure Checks

A NO DRIVE condition can exist, even with correct transmission fluid pressure, because of inoperative clutches or bands. On automatic transmission, an erratic shift could be caused by a stuck governor valve. The inoperative units can be located through a series of checks by substituting air pressure for the fluid pressure to determine the location of the malfunction.

To make the air pressure checks, drain the transmission fluid and remove the oil pan and the control valve body assembly. The inoperative units can be located by introducing air pressure into the various transmission case passages (Fig. 7B-3).

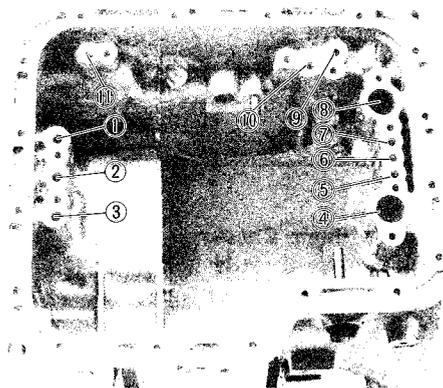


Fig. 7B-3 Case fluid passage hole identification

- | | |
|------------------------------------|-------------------------------|
| 1. Low & reverse
brake pressure | 6. Rear clutch pressure |
| 2. Governor feed pressure | 7. Front clutch pressure |
| 3. Governor pressure | 8. Pump in |
| 4. Pump out | 9. Servo apply |
| 5. Torque converter
pressure | 10. Servo release |
| | 11. Line pressure
pressure |

7B-B. SHIFT CONTROL LINKAGE

The transmission control linkage adjustment should be performed in the order in which they appear in this section of the manual. Before the linkage is adjusted, be sure the engine idle speed is properly adjusted. Refer to Par. 4-A-1 for the procedure.

7B-B-1. Manual Linkage Adjustments

1. Place the transmission selector lever in the N position.
2. Raise the vehicle and disconnect the clevis from the lower end of the selector lever operating arm (Fig. 7B-4).
3. Move the transmission manual lever to the N position, third detent position from the back of the transmission.
4. Loosen the two clevis retaining nuts and adjust the clevis so that it freely enters the hole of the lever. Tighten the retaining nuts to secure the adjustment.
5. Connect the clevis to the lever and secure with the spring washer, flat washer and retaining clip (Fig. 7B-4).
6. Lower the vehicle and check the operation of the transmission in each selector lever position.

7B-B-2. Selector Lever Knob Adjustment

When the select lever knob is removed, it should be adjusted properly in the following manner.

1. Position the select lever at N or D range.
2. Loosen the lock nut and screw the select lever knob in until there is no play of the push button.
3. Screw back the select lever knob within one turn to the position where the push button is on the driver's side.
4. Push the push button and confirm that the select lever can be shifted to P range.

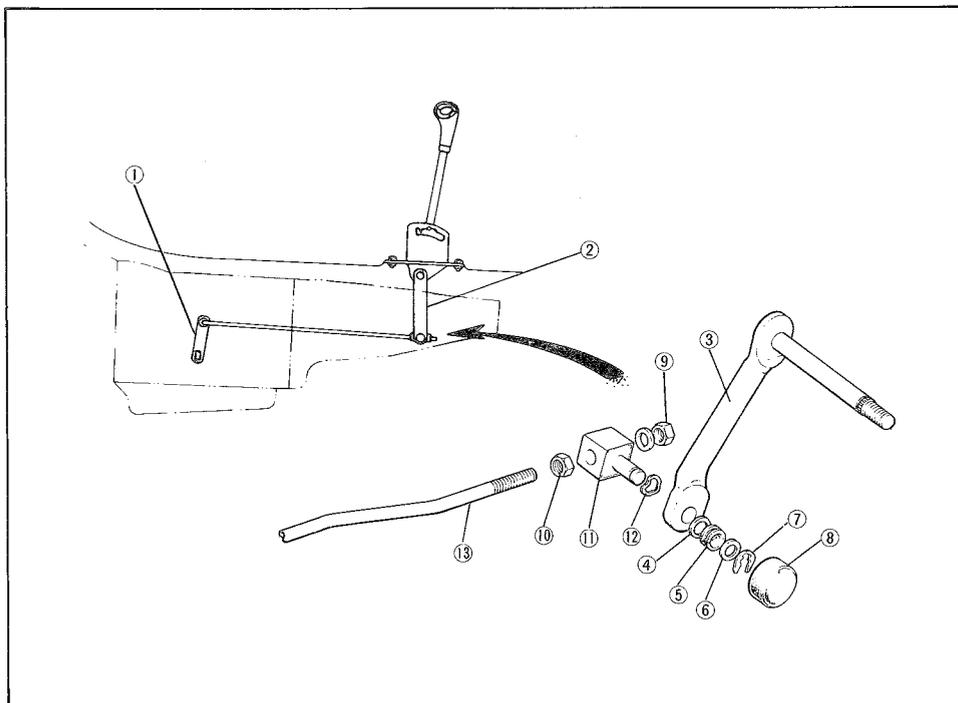


Fig. 7B-4 Manual linkage

1. Manual lever
2. Selector lever operating
arm
3. Selector lever operating
arm
4. Washer
5. Bush
6. Washer
7. Retaining ring
8. Dust cover
9. Nut
10. Nut
11. T joint
12. Wave washer
13. Shift rod

5. In case the select lever cannot be shifted to P range, screw in the select lever knob by one turn.
6. Repeat items (4) and (5) until the select lever can be shifted to P range smoothly.
7. Confirm that the select lever cannot, without pushing the push button, be shifted from N to R or from D to 2 range.
8. In case, in item (7), the select lever can be shifted to R or 2 range without pushing the push button, it means that the select lever knob is excessively screwed in and so screw back the knob.
9. Make final confirmation on whether the function of the push button is perfect when shifting the select lever to each range.
10. Finally lock the lever by the lock nut under the select lever knob. Tightening torque is 1.5 ~ 2.0 kg-m (10.8 ~ 14.5 ft-lb).

7B-B-3. Throttle Linkage Adjustment

Adjusting the throttle linkage is important to be certain the throttle and downshift systems are properly adjusted. Refer to Section 4 for throttle linkage adjustment procedures.

7B-B-4. Kick-down Switch Adjustment

1. Move the ignition switch to the ON position.
2. Loosen the kick-down switch attaching nut and adjust the switch to engage when the accelerator pedal is between $7/8 \sim 15/16$ of full pedal travel. The down shift solenoid will click when the switch engages (Fig. 7B-5).

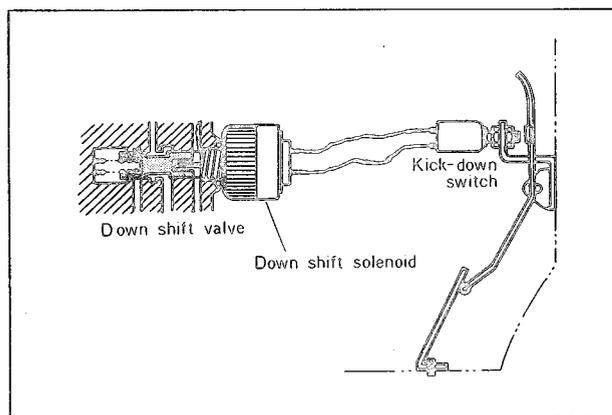


Fig. 7B-5 Kick-down switch adjustment

3. Tighten the attaching nut and check for proper switch operation.

7B-B-5. Inhibitor Switch Adjustment

The inhibitor switch permits the reverse lamp to light up only when R range is selected and the starter motor to revolve only when the lever is in N or P position, so that when D, 2 or 1 is selected, the reverse lamp does not light up and the starter motor cannot revolve.

If any abnormality is found in any range, check and adjust the manual linkage; if the manual linkage is found normal, then check the inhibitor switch. Engage the manual lever in each range and check the connection of the inhibitor switch with a tester,

as described in Par. 15-D.

Move the range select lever to both sides from the center position of each range (R, P and N), and it is normal if the electricity is on while the lever is within an angle of about 3° on the both sides from each lever set line.

If anything wrong is revealed as a result of the conductivity check of the inhibitor switch, make adjustments in the following procedures.

1. Remove the nut that holds the range select lever and bolts holding the inhibitor switch body, then remove the screw.
2. Correctly position the manual shaft in N position by adjusting the range select lever. The proper N position is where the slot of the manual shaft is positioned vertically and detent works to position in the shaft correctly with a click sound.
3. Move the switch slightly aside so that the screw hole will be aligned with the pin hole of the sliding plate when the range select lever is in N position by inserting a 2.0 mm (0.079 in) diameter pin into the holes.

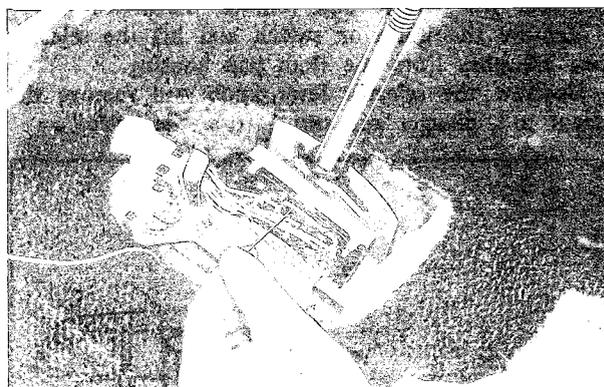


Fig. 7B-6 Inhibitor switch adjustment

4. If the alignment is made correct, tighten the switch body with the bolts, pull out the pin and tighten up the screw again into the hole, and tighten the range select lever as before.
5. Check over again the continuity with the tester. If the malfunction still remains, replace the inhibitor switch.

7B-B-6. Kick-down Switch

a. Removal and Installation

1. Disconnect the wire connector at the kick-down switch.
2. Remove the nut securing the kick-down switch to the bracket and remove the switch.
3. Install the kick-down switch to the bracket and adjust the switch to engage when the accelerator pedal is between $7/8 \sim 15/16$ of full pedal travel.
4. Tighten the attaching nut.
5. Connect the wire connector and check for proper switch operation.

7B-B-7. Inhibitor Switch

a. Removal

1. Place the transmission selector lever in the N

7B

position.

2. Remove the indicator.
3. Disconnect the multiple wire connectors.
4. Remove the two inhibitor switch retaining screws and remove the switch.

b. Installation

1. Position the inhibitor switch to the selector lever bracket and install the two retaining screws.
2. Check the operation of the switch in each detent position.

The engine should start only with the transmission selector lever in N or P position.

3. Install the indicator.

7B-B-8. Selector Lever

a. Removal and installation

1. Raise the vehicle and remove the nut and lock washer securing the selector lever to the lower selector lever operating arm.
2. Lower the vehicle and remove the indicator.
3. Remove the inhibitor switch and lift the selector lever assembly from the floor pan housing.
4. Unscrew the selector lever knob and remove the detent rod, plunger and spring from the lever.

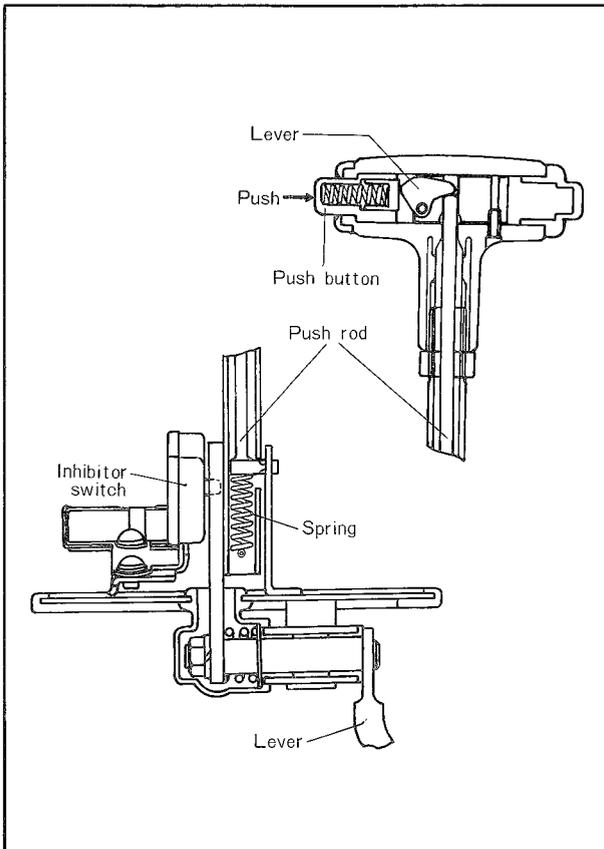


Fig. 7B-7 Select lever mechanism

5. Place the spring, plunger and detent rod in the selector lever and install the knob.
6. Place the selector lever assembly through the floor pan housing and raise the vehicle.
7. Position the selector lever assembly to the lower

selector lever operating arm and secure with the lock washer and nut.

8. Lower the vehicle.
9. Adjust the selector lever knob as described in Par. 7B-B-2, and tighten the lock nut.
10. Install the indicator.

7B-C. TRANSMISSION REMOVAL

1. Disconnect the battery.
2. Raise the vehicle on a hoist or jack stands.
3. Place a drain pan under the transmission. Starting at the rear of the transmission oil pan and working toward the front, loosen the attaching bolts and allow the fluid to drain. Finally remove all of the pan attaching bolts except two at the front to allow the fluid to further drain. After the fluid has drained, install two bolts on the rear side of the pan to temporarily hold it in place.
4. Remove the screws attaching the heat insulator to the exhaust pipe and remove the heat insulator.
5. Remove the bolt and nut attaching the exhaust front pipe to the exhaust pipe bracket. Disconnect the exhaust front pipe flange from the exhaust manifold by removing the nuts. Remove the bolts and nuts attaching the exhaust front pipe flange to the main silencer, and remove the exhaust front pipe.
6. Disconnect the propeller shaft at the rear axle companion flange.
7. Remove the propeller shaft center bearing support attaching nuts, washers and lock washers. Lower the propeller shaft and withdraw it from the transmission.
8. Remove the vacuum hose from the vacuum diaphragm. Disconnect the wire connection of the down-shift solenoid.
9. Disconnect the speedometer cable from the extension housing.
10. Disconnect the shift rod from the manual lever at the transmission.
11. Disconnect the oil cooler lines at the transmission.
12. Remove the access cover from the lower end of the converter housing.
13. Mark the drive plate and torque converter for correct realignment during reassembly, then remove the four bolts that attach the torque converter to the drive plate.
14. Remove the transmission rear support to cross-member bolts and nuts.
15. Support the transmission with a transmission jack, then remove the crossmember-to-frame attaching bolts and remove the crossmember.
16. Secure the transmission to the jack with safety chain.
17. Lower the transmission enough to loosen the attaching bolts. Then, remove the converter housing-to-engine attaching bolts. Remove the transmission fluid filler tube.
18. With a pry bar, exert pressure between the flex plate and converter to prevent the converter from disengaging from the transmission as the assembly is moved rearward.
19. Lower the transmission and converter as an assembly and remove it from under the vehicle.

7B-D. TRANSMISSION DISASSEMBLY

1. Mount the transmission on the stand (49 0378 320).
2. Remove the converter from the transmission front pump and converter housing.
3. Remove the bolts attaching the converter housing to the transmission case and remove the converter housing.

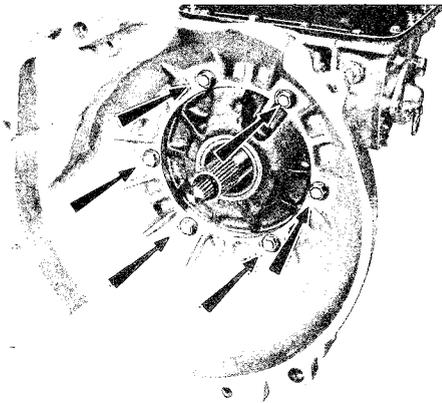


Fig. 7B-8 Bolts on converter housing

4. Remove the bolts attaching the extension housing to the case. Remove the extension housing and gasket from the case.

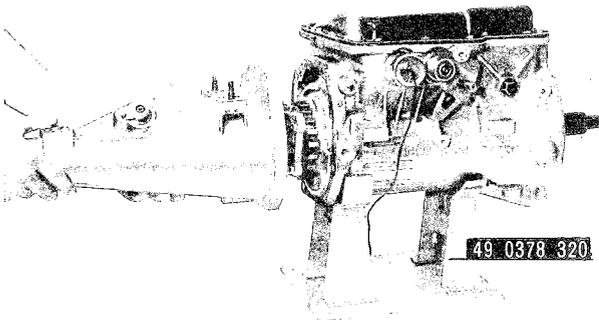


Fig. 7B-9 Removing extension housing

5. Remove the parking pawl, spring and washer from the extension housing.
6. Remove the bolts and remove the retaining plate,

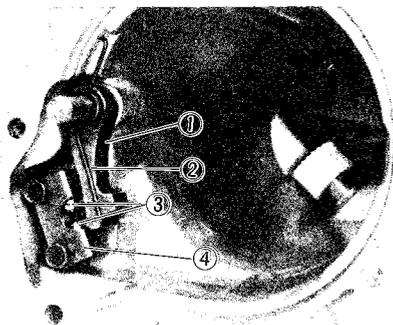


Fig. 7B-10 Parking pawl and actuating support

- | | |
|-----------------|--------------------|
| 1. Parking pawl | 3. Ball |
| 2. Spring | 4. Retaining plate |

actuator support, balls, retainer and springs from the extension housing.

7. Remove the oil pan attaching bolts, and remove the oil pan and gasket from the case.
8. Unscrew and remove the downshift solenoid and vacuum diaphragm unit. Remove the vacuum diaphragm rod from the case.

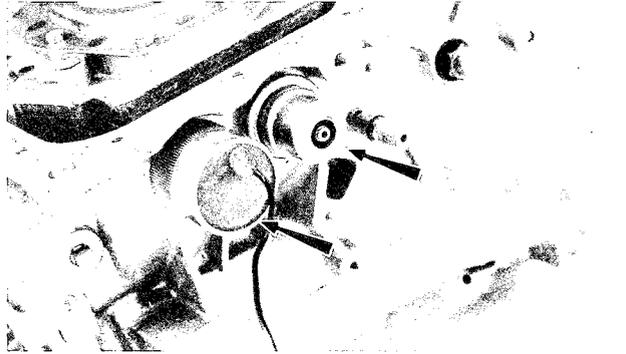


Fig. 7B-11 Downshift solenoid and vacuum diaphragm unit

9. Remove the control valve body attaching bolts and remove the control valve body from the case.

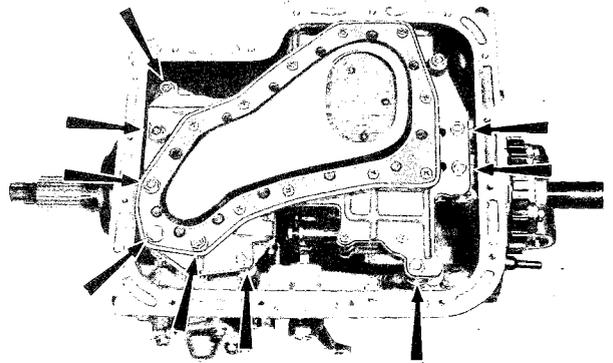


Fig. 7B-12 Control valve body ass'y setting bolts

10. Remove the nut and washer attaching the range select lever to the manual shaft and remove the range select lever.

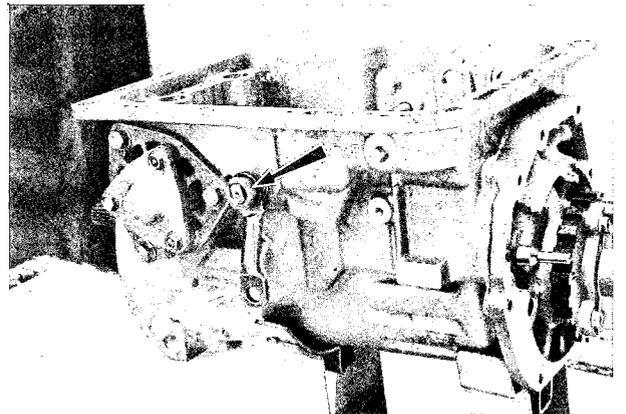


Fig. 7B-13 Removing range select lever

11. Loosen the nut attaching the manual plate to the manual shaft and remove the manual shaft from

the case, tapping the manual shaft with a suitable drift and hammer. Remove the manual plate and spacer.

12. Remove the retaining rings from the end of the parking brake lever. Then, remove the parking brake lever and rod.

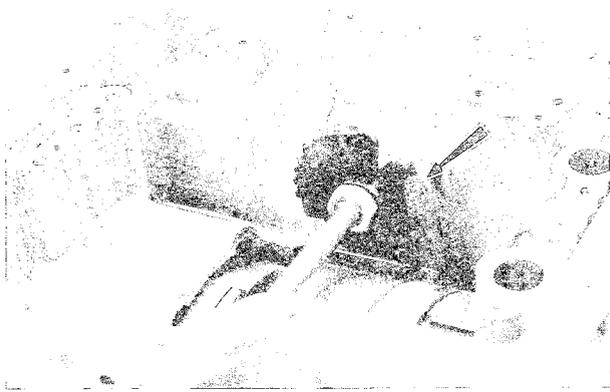


Fig. 7B-14 Removing parking brake lever

13. Remove the bolts that attach the band servo cover to the servo retainer and remove the servo cover and "O" ring.



Fig. 7B-15 Removing band servo cover

14. Loosen the brake band piston stem lock nut and tighten the piston stem to prevent the front clutch drum from falling when the oil pump is removed.

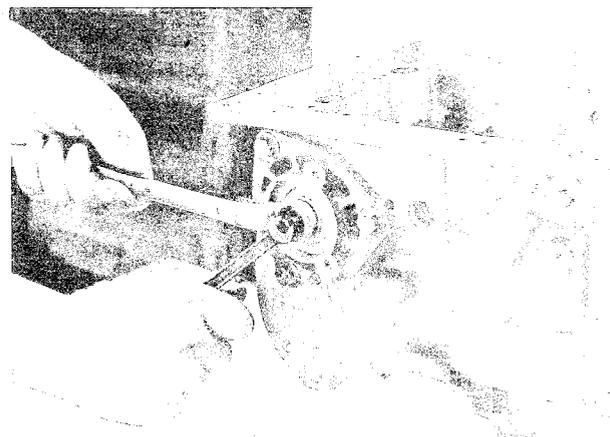


Fig. 7B-16 Tightening piston stem

15. Pull the input shaft out of the front pump.

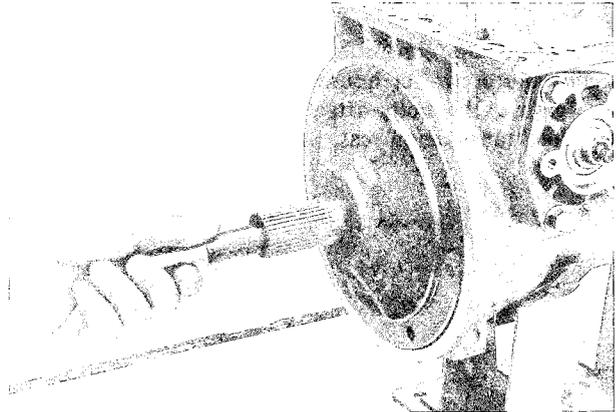


Fig. 7B-17 Removing input shaft

16. Remove the oil pump using the remover (49 0378 390), as shown in Fig. 7B-18.



Fig. 7B-18 Removing oil pump

17. Remove the bolt retaining the band.

18. Loosen the piston stem and remove the band strut.

19. Remove the band, front clutch assembly, rear clutch assembly, front planet carrier assembly and sun gear as an assembly, as shown in Fig. 7B-19.



Fig. 7B-19 Removing clutch ass'y

20. Remove the large snap ring that secures the rear planet carrier to the connecting drum. Remove the rear planet carrier from the drum.

21. Remove the output shaft snap ring, as shown in Fig. 7B-20, and remove the internal drive flange.



Fig. 7B-20 Removing snap ring

22. Turn the connecting drum counter-clockwise as far as it will go. Then, turn the connecting drum clockwise and remove the drum and one-way clutch from the case as an assembly.

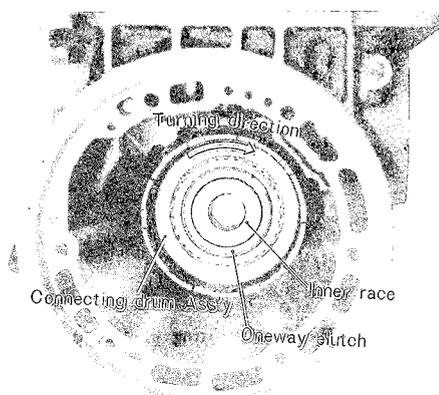


Fig. 7B-21 Removing connecting drum

23. Slide the output shaft assembly from the transmission case.

24. Remove the governor and oil distributor from the case.

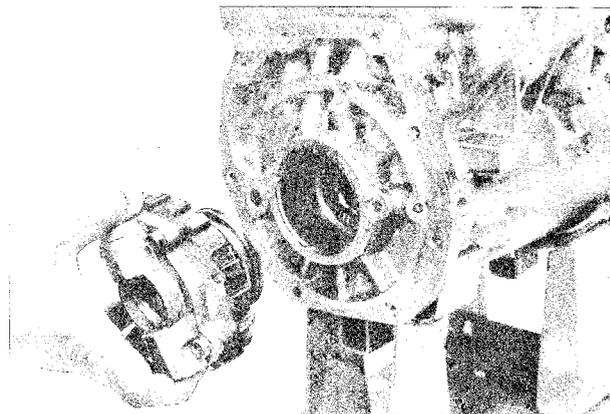


Fig. 7B-22 Removing governor and oil distributor

25. Remove the oil distributor needle bearing and race from inside the transmission.

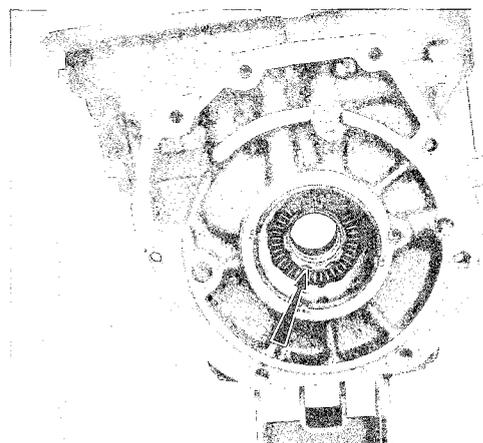


Fig. 7B-23 Removing needle bearing

7B-E. OVERHAUL OF MAIN COMPONENTS

7B-E-1. Front Clutch

a. Disassembly

1. Remove the clutch retaining plate snap ring.
2. Remove the retaining plate, inner plates, outer plates and dished plate from the clutch drum.

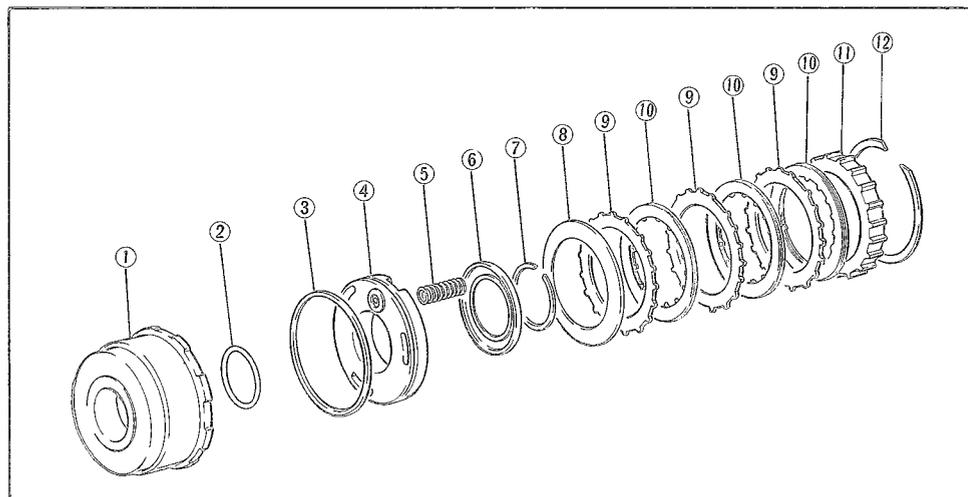


Fig. 7B-24 Front clutch disassembled

1. Clutch drum
2. Inner seal
3. Outer seal
4. Piston
5. Spring
6. Spring retainer
7. Snap ring
8. Dished plate
9. Outer plate
10. Inner plate
11. Retaining plate
12. Snap ring

3. Using the **spring compressor** (49 0378 375), compress the coil springs and remove the snap ring with the **pliers** (49 8000 025).

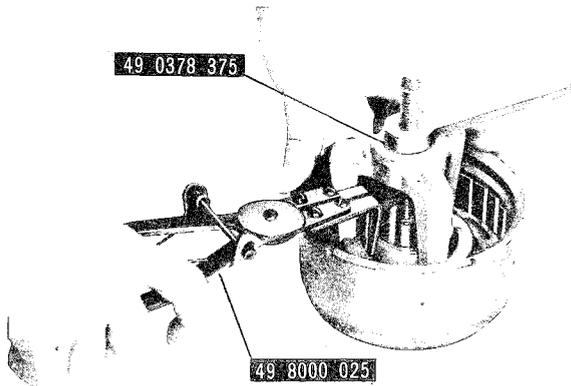


Fig. 7B-25 Removing snap ring

4. Remove the tool, coil spring retainer and 10 coil springs.

5. Apply air pressure to the clutch piston pressure hole in the clutch drum, as shown in Fig. 7B-26, and remove the piston.

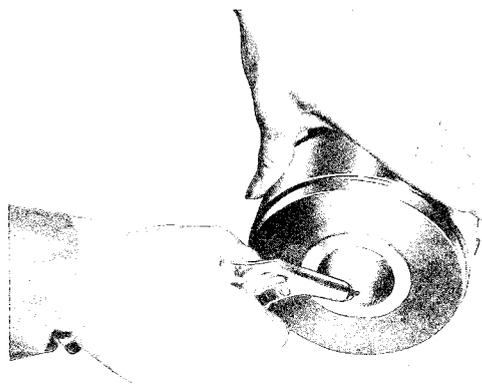


Fig. 7B-26 Blowing out piston

6. Remove the piston outer seal from the piston and the inner seal from the clutch drum.

b. Checking

1. Inspect the inner and outer plates for wear and scoring. Check the plates for fit on the clutch drum serrations. Replace all plates that are badly scored, worn or do not fit freely in the drum serrations.

2. Check the coil springs and spring retainer for excessive wear, distortion or damage.

3. Check the seal ring around the piston and the "O" ring inside the clutch drum for damage. Replace the seals that are damaged.

c. Assembly

1. Dip the new seals in transmission fluid and install one on the drum and one on the piston.

2. Lubricate the piston and install the piston into the clutch drum.

3. Position the 10 coil springs in the piston and the spring retainer on the springs. Install the **spring**

compressor (49 0378 375) and compress the springs. Install the snap ring with the **pliers** (49 8000 025). Remove the tool.

4. Dip the clutch plates in clean transmission fluid. Install the dished plate. Install the inner and outer plates alternately starting with an outer plate.

5. After all clutch plates have been installed, position the retaining plate in the clutch drum. Install the snap ring.

6. With a feeler gauge, check the clearance between the retaining plate and snap ring, as shown in Fig. 7B-27. This clearance should be 1.6 ~ 1.8 mm (0.062 ~ 0.071 in). If it is not within the specifications, select and install the correct size retaining plate. The retaining plates are available in the following six thicknesses.

7.2 mm (0.283 in)	7.8 mm (0.307 in)
7.4 mm (0.291 in)	8.0 mm (0.315 in)
7.6 mm (0.299 in)	8.2 mm (0.323 in)

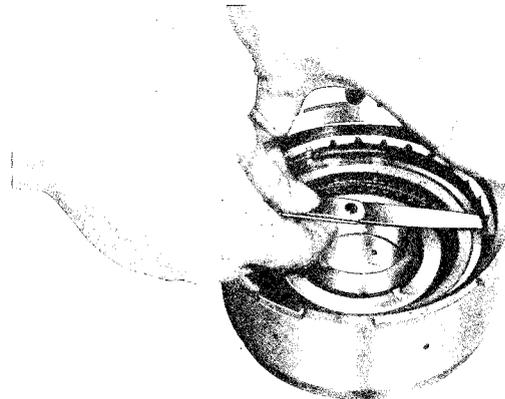


Fig. 7B-27 Measuring clearance

7. Install the front clutch assembly to the oil pump. Blow compressed air into the oil hole as shown in Fig. 7B-28 and check the clutch operation.

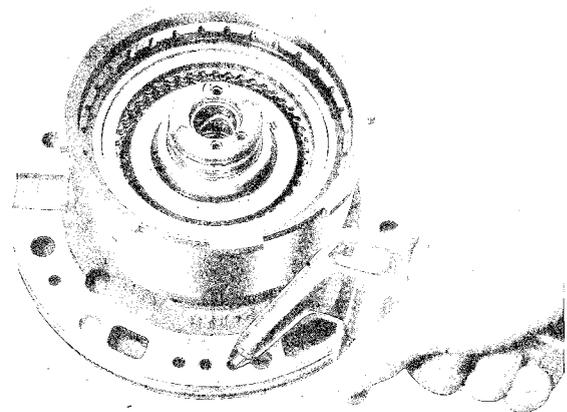


Fig. 7B-28 Testing front clutch

7B-E-2. Rear Clutch

a. Disassembly

1. Remove the clutch retaining plate snap ring.

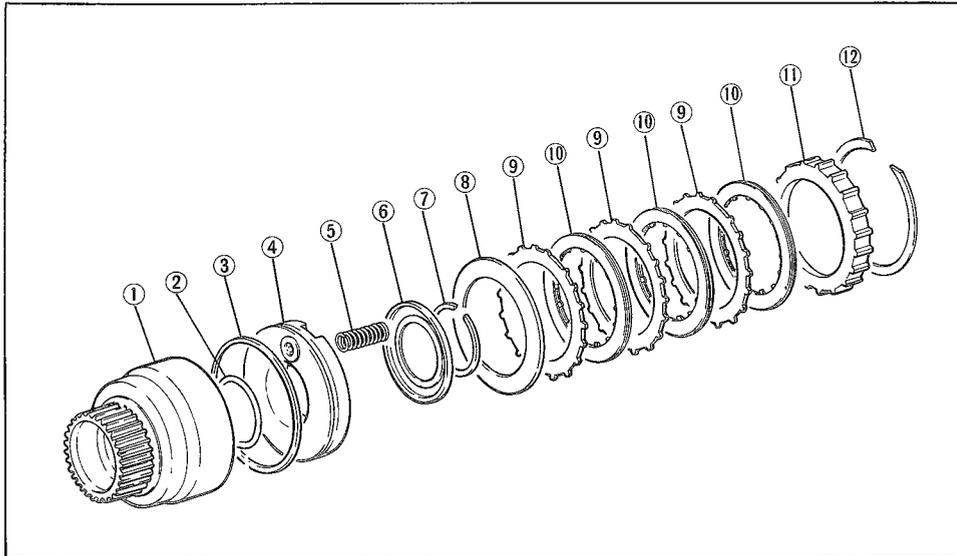


Fig. 7B-29 Rear clutch disassembled

1. Clutch drum
2. Inner seal
3. Outer seal
4. Piston
5. Spring
6. Spring retainer
7. Snap ring
8. Dished plate
9. Outer plate
10. Inner plate
11. Retaining plate
12. Snap ring

2. Remove the retaining plate, inner plates, outer plates and dished plate from the clutch drum.
3. Using the spring compressor (49 0378 375), compress the coil springs and remove the snap ring.
4. Remove the tool, coil spring retainer and 10 coil springs.
5. Apply air pressure to the clutch piston pressure hole in the clutch drum, as shown in Fig. 7B-30, and remove the piston.

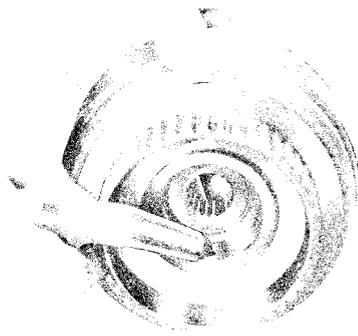


Fig. 7B-30 Blowing out piston

2. Lubricate the piston and install the piston into the clutch drum.
3. Position the 10 coil springs in the piston and the spring retainer on the springs. Install the **spring compressor** (49 0378 375) and compress the springs. Install the snap ring with the **pliers** (49 8000 025). Remove the tool.
4. Dip the clutch plates in clean transmission fluid. Install the dished plate. Install the inner and outer plates alternately starting with an outer plate.
5. After all clutch plates have been installed, position the retaining plate in the clutch drum. Install the snap ring.
6. With a feeler gauge, check the clearance between the retaining plate and snap ring, as shown in Fig. 7B-31. This clearance should be 0.8 ~ 1.5 mm (0.031 ~ 0.059 in). If it is not within the specifications, select and install the correct size retaining plate. The retaining plates are available in the following six thicknesses.

7.2 mm (0.283 in)	7.8 mm (0.307 in)
7.4 mm (0.291 in)	8.0 mm (0.315 in)
7.6 mm (0.299 in)	8.2 mm (0.323 in)

6. Remove the piston outer seal from the piston and the inner seal from the clutch drum.

b. Checking

1. Inspect the inner and outer plates for wear and scoring. Check the plates for fit on the clutch drum serrations. Replace all plates that are badly scored, worn or do not fit freely in the drum serrations.
2. Check the coil springs and spring retainer for excessive wear, distortion or damage.
3. Check the seal ring around the piston and the "O" ring inside the clutch drum for damage. Replace the seals that are damaged.

c. Assembly

1. Dip the new seals in transmission fluid and install one on the drum and one on the piston.



Fig. 7B-31 Measuring clearance

7. Install the front clutch assembly to the oil pump.

Blow compressed air into the oil hole as shown in Fig. 7B-32 and check the clutch operation.

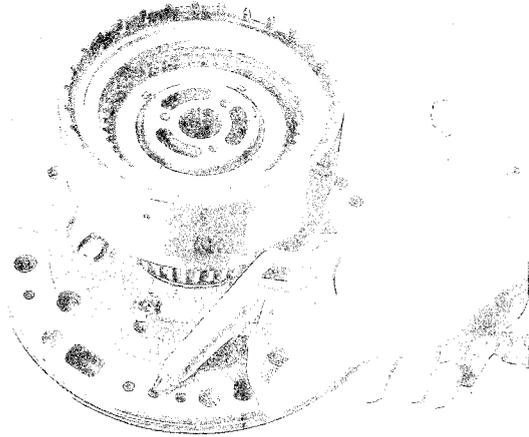


Fig. 7B-32 Testing rear clutch

7B-E-3. Low and Reverse Brake

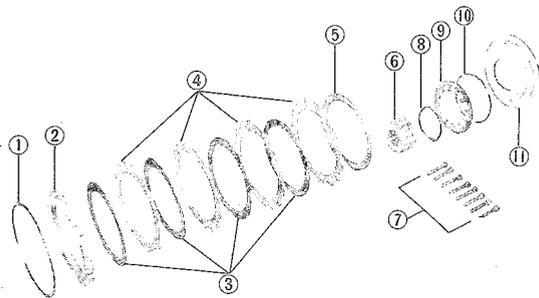


Fig. 7B-33 Fig. 7B-33 Low and reverse brake

- | | |
|--------------------|-------------------------|
| 1. Snap ring | 7. Bolt |
| 2. Retaining plate | 8. Snap ring |
| 3. Friction plate | 9. Piston return spring |
| 4. Steel plate | 10. Spring ring |
| 5. Dished plate | 11. Piston |
| 6. Inner race | |

a. Disassembly

1. Remove the snap ring securing the low and reverse brake assembly to the case. Then, remove the retaining plate, steel and friction plates and dished plate from the case.
2. With the hex-head extension (49 8000 040), remove the eight one-way clutch inner race attaching bolts from the rear of the case. Remove the inner race, snap ring, piston return spring and support ring from inside the case.
3. Remove the low and reverse brake piston from the case by blowing compressed air into the port located at the rear of the case, as shown in Fig. 7B-34.

b. Checking

1. Check the friction and steel plates for wear and scoring. Check the plates for fit on the transmission

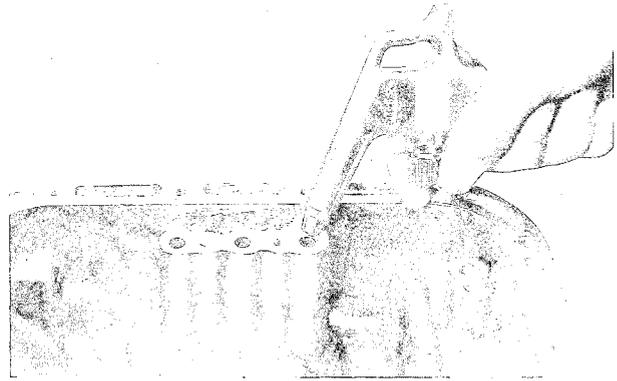


Fig. 7B-34 Blowing out piston

case serrations.

Replace all plates that are badly scored, worn or do not fit freely in the case serrations.

2. Check the piston return spring for excessive wear, distortion or damage.
3. Check the seal rubbers on the inside and outside of the piston for wear and any damages.

c. Assembly

1. Lubricate the low and reverse brake piston with transmission fluid and install it into the transmission case.
2. Install the support ring, piston return spring, snap ring and one-way clutch inner race in the case.
3. Hold the one-way clutch inner race in position and install and tighten the attaching bolts to 1.3 ~ 1.8 m-kG (10 ~ 13 ft-lb), using the hex-head extension (49 8000 040) and torque wrench, as shown in Fig. 7B-35.



Fig. 7B-35 Tightening inner race

4. Position the dished plate in the case. Dip the steel and friction plates in clean transmission fluid and install the plates alternately starting with a steel plate.

5. Position the retaining plate in the case and install the snap ring.
6. With a feeler gauge, check the clearance between the retaining plate and snap ring, as shown in Fig. 7B-36. The clearance should be 0.8 ~ 1.05 mm (0.031 ~ 0.042 in). If it is not within the speci-

cation, adjustment can be made with selective retaining plate.

The retaining plates are available in the following six thicknesses:

11.8 mm (0.466 in)	12.4 mm (0.488 in)
12.0 mm (0.472 in)	12.6 mm (0.496 in)
12.2 mm (0.480 in)	12.8 mm (0.504 in)

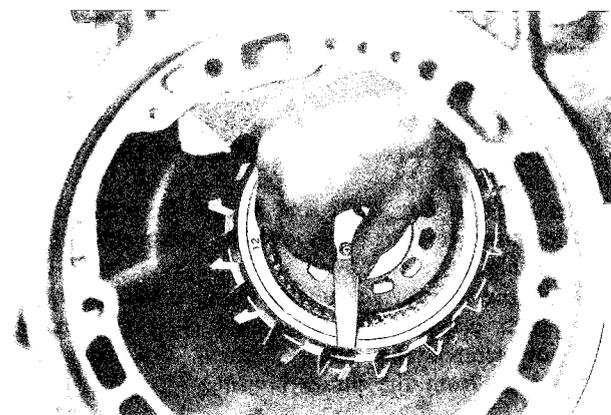


Fig. 7B-36 Measuring clearance

7B-E-4. Servo

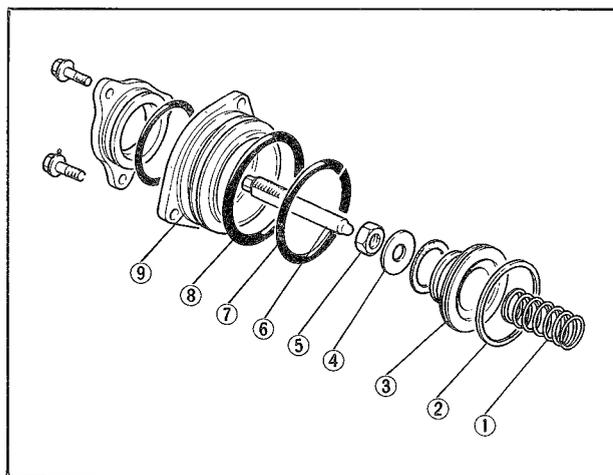


Fig. 7B-37 Servo

- | | |
|------------------|-------------------|
| 1. Return spring | 6. Piston stem |
| 2. Piston seal | 7. Seal |
| 3. Piston | 8. Seal |
| 4. Washer | 9. Servo retainer |
| 5. Nut | |

a. Disassembly

Remove the bolts attaching the cover to the servo retainer and remove the cover.

1. Remove the bolts that attach the servo retainer to the transmission case. Remove the servo retainer and piston from the case. If it is difficult to remove the servo retainer assembly from the case, apply air pressure from the fluid passage.
2. Remove the return spring from the case.
3. Apply air pressure to the port in the servo retainer to remove the piston.
4. Remove the seals from the retainer.
5. Remove the seals from the piston.

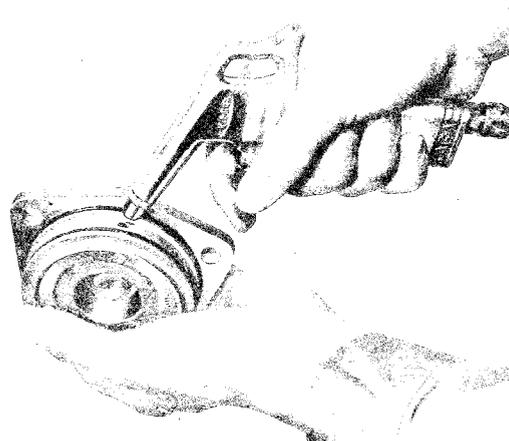


Fig. 7B-38 Blowing out piston

b. Checking

1. Inspect the servo bore for cracks and the piston bore and piston stem for scores. Check fluid passages for obstructions.
2. Check the piston stem for free movement and wear. Inspect the adjusting screw threads for damage.
3. Check the servo spring for distortion.
4. Inspect the retainer seals and gasket sealing surface for damage.
5. Inspect the piston seal ring for damage.
6. Inspect the band lining for excessive wear and damage.
7. Replace seals that are damaged.

c. Assembly

1. Dip the seals in transmission fluid.
2. Install the seals on the servo retainer and piston.
3. Apply transmission fluid to the piston and install the piston in the retainer.
4. Place the return spring and install the retainer assembly to the case and tighten the bolts to 1.0 ~ 1.5 m-kg (7 ~ 11 ft-lb).

7B-E-5. Governor

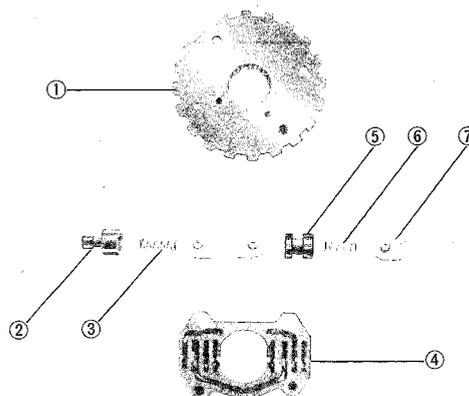


Fig. 7B-39 Governor valve

- | | |
|--------------------|--------------------|
| 1. Oil distributor | 5. Primary valve |
| 2. Secondary valve | 6. Spring |
| 3. Spring | 7. Retaining plate |
| 4. Valve body | |

a. Disassembly

1. Remove the bolts attaching the governor body to the oil distributor and remove the governor body.
2. Remove the secondary governor valve retainer plate and remove the secondary governor valve and spring from the body.
3. Remove the primary governor valve retainer plates and remove the primary governor valve spring and valve from the body.

b. Checking

1. Inspect the governor valves and bores for scores. Minor scores may be removed from the valves with crocus cloth. Replace the governor if the valves or body is deeply scored.
2. Check for free movement of the valves to the bores. The valves should slide freely of their own weight in the bores when dry. Inspect fluid passages in the valve body for obstructions. All fluid passages must be clean.
3. Check the spring for proper tension and the retainer plates for warping.
4. Check the side clearance between the seal ring and groove, as shown in Fig. 7B-40. This clearance should be 0.04 ~ 0.16 mm (0.002 ~ 0.006 in). To remove the seal ring, squeeze it up so that its joint will rise above the groove and disconnect the joint.

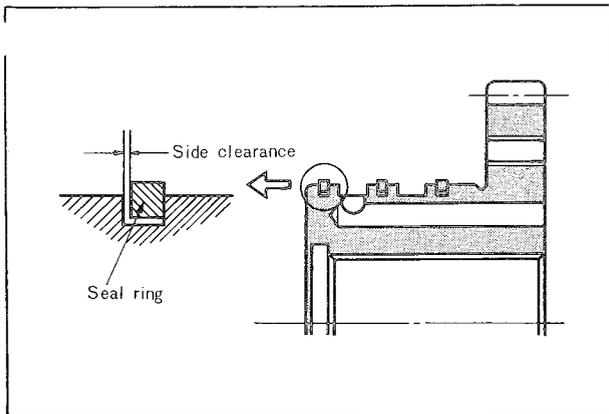


Fig. 7B-40 Clearance of oil seal ring

c. Assembly

1. Install the primary governor valve and spring in the body and install the retainer plate.
2. Install the secondary governor valve spring and valve in the body and install the retainer plate.
3. Install the governor body assembly to the oil distributor and tighten the bolts to 0.5 ~ 0.7 m-kp (3.6 ~ 5.1 ft-lb).

7B-E-6. Oil Pump

a. Disassembly

1. Remove the four seal rings from the stator support.
2. Remove the large seal ring from the O.D. of the pump housing.
3. Remove the five bolts that attach the pump cover to the pump housing. Remove the pump cover from the housing.
4. Mark the top surface of the pump inner and outer gears with prussian blue to assure correct assembly. Do not scratch the gears. Remove the inner and outer gears from the pump housing.

b. Checking

1. Inspect the inner and outer gears for worn or damaged teeth.
2. Check the side clearance of the inner or outer gear

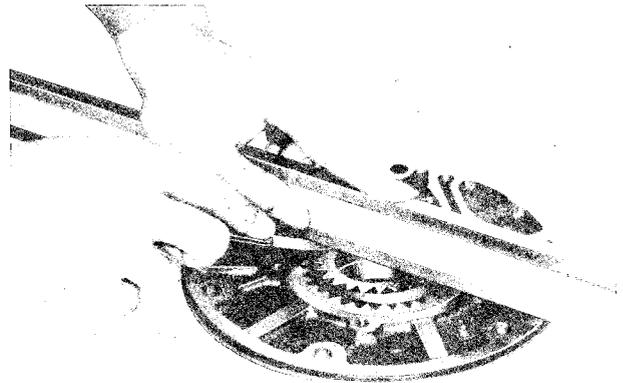


Fig. 7B-41 Measuring clearance (1)

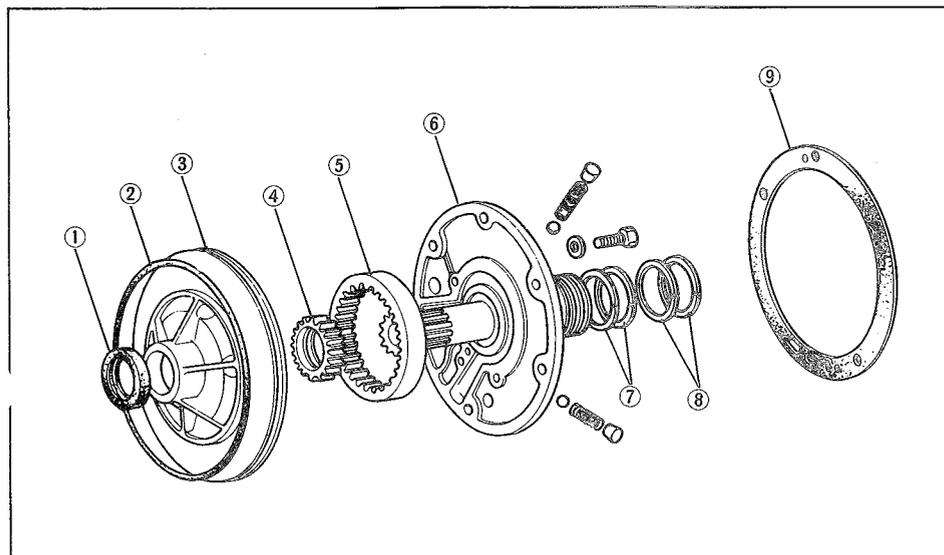


Fig. 7B-42 Oil pump disassembled

1. Seal
2. Large seal ring
3. Pump housing
4. Inner gear
5. Outer gear
6. Pump cover
7. Seal ring
8. Seal ring
9. Gasket

by using a straight edge and feeler gauge, as shown in Fig. 7B-41. The clearance should be 0.02 ~ 0.04 mm (0.001 ~ 0.002 in). If the clearance exceeds 0.08 mm (0.003 in), replace the gears. Make sure that the inner and outer gears are replaced as a set.

3. Check the clearance between the outer gear teeth and crescent. The clearance should be 0.14 ~ 0.21 mm (0.006 ~ 0.008 in). If the clearance exceeds 0.25 mm (0.010 in), replace the outer and inner gears.

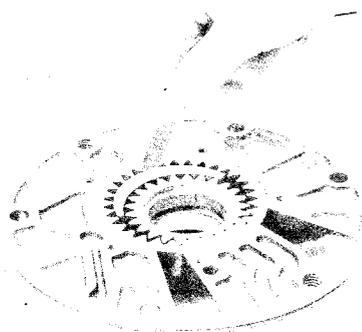


Fig. 7B-43 Measuring clearance (2)

4. Check the clearance between the outer gear and housing, as shown in Fig. 7B-44. The clearance should be 0.05 ~ 0.20 mm (0.002 ~ 0.008 in). If the clearance exceeds 0.25 mm (0.010 in), replace the outer and inner gears.

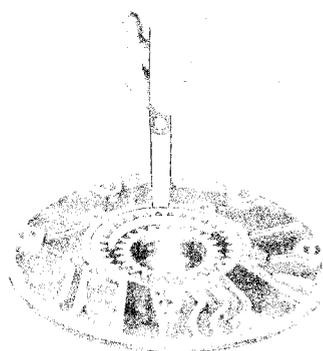


Fig. 7B-44 Measuring clearance (3)

5. Inspect the large seal ring groove on the pump housing for damage.

6. Inspect the pump housing and cover for damage. Minor burrs or scores may be removed with crocus cloth.

c. Assembly

1. Install the inner and outer gears in the pump housing. Align the mating marks made during disassembly.

2. Lubricate the gears with clean transmission fluid. Install the pump housing on the oil pump assembling guide (49 0378 405). Position the pump cover and

gasket to the pump housing and install the five attaching bolts. Torque the bolts to 0.6 ~ 0.8 m·kg (4.3 ~ 5.8 ft·lb) and remove the oil pump assembly from the guide.

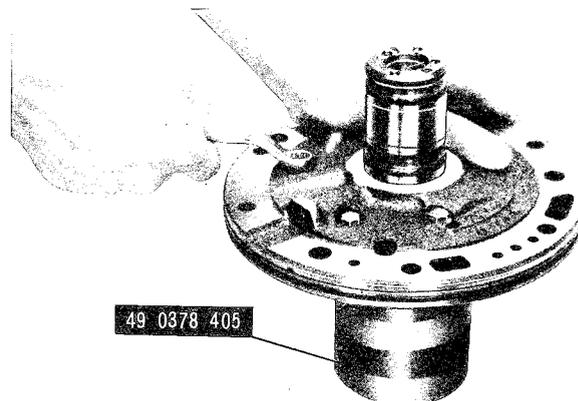


Fig. 7B-45 Assembling oil pump

3. Carefully install four new seal rings on the stator support. Install a new seal ring on the O.D. of the pump housing.

4. If the front pump seal must be replaced, use a suitable tool and remove it from the housing. Install a new seal.

7B-E-7. Control Valve Body

a. Disassembly

1. Remove the bolts attaching the oil strainer to the control valve body and remove the oil strainer.

2. Remove the bolts attaching the upper and lower valve bodies. Separate the lower valve body and separator plate from the upper valve body. Be careful not to lose the check valve and springs in the lower valve body when separating the upper and lower valve bodies.

3. Slide the manual valve out of the upper valve body.

4. Remove the cover plate for the 1-2 shift valve and 2-3 shift valve from the body.

5. Remove the 1-2 shift valve and spring from the body.

6. Remove the 2-3 shift valve, spring and plug from the body.

7. Remove the pressure modifier valve and spring from the body.

8. Remove the downshift valve cover plate from the body.

9. Remove the downshift valve and spring from the body.

10. Remove the throttle back-up valve spring and valve from the body.

11. Remove the vacuum throttle valve from the body.

12. Remove the 2-3 timing valve spring and valve from the body.

13. Remove the pressure regulator valve cover plate from the body.

14. Remove the pressure regulator valve sleeve, plug, spring seat, spring and pressure regulator valve.

15. Remove the second lock valve and spring from the body.

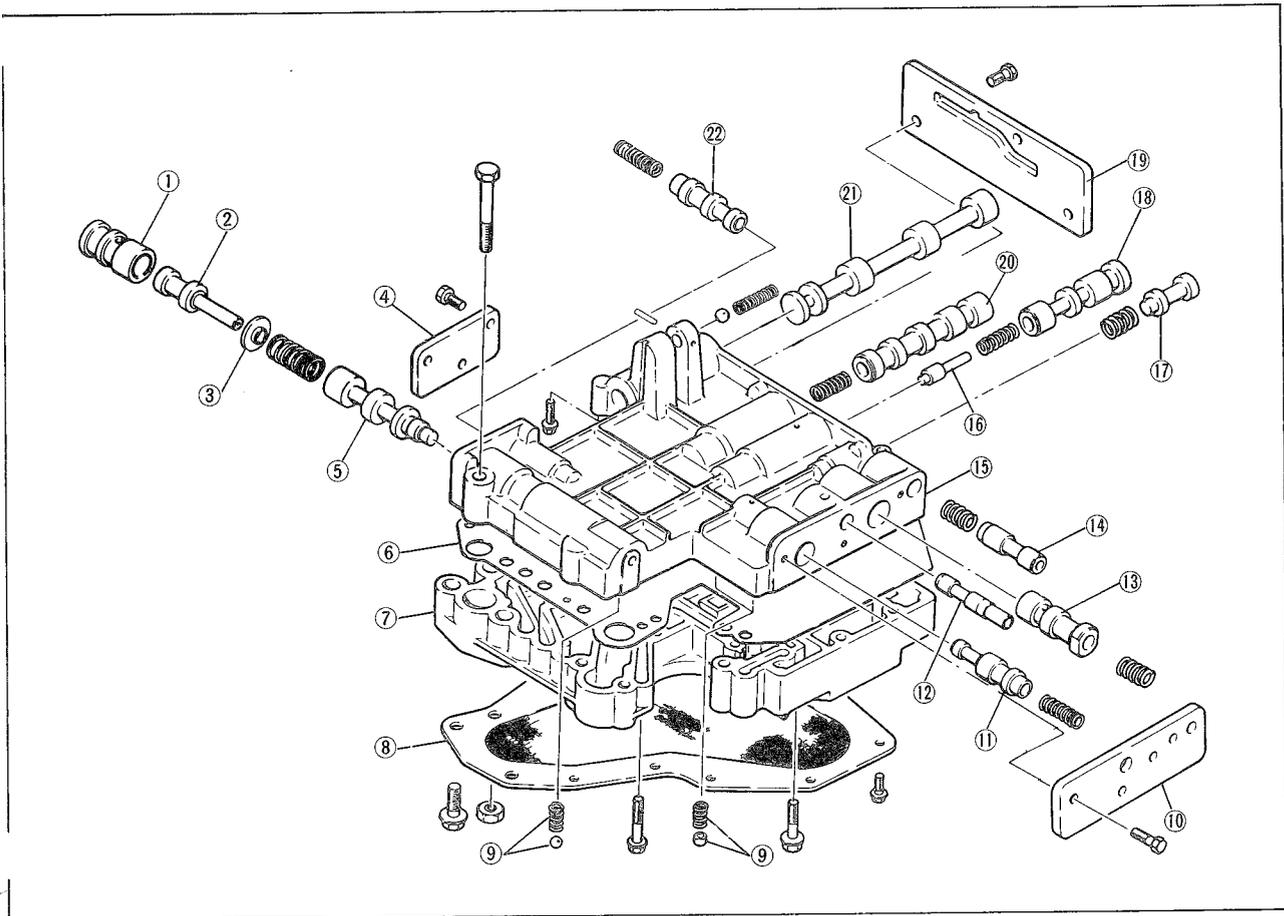


Fig. 7B-46 Control valve body disassembled

- | | | |
|------------------------------|----------------------------|-----------------------|
| 1. Pressure regulator sleeve | 9. Check valve and spring | 17. Modulator valve |
| 2. Pressure regulator plug | 10. Plate | 18. 2-3 shift valve |
| 3. Spring seat | 11. 2-3 timing valve | 19. Plate |
| 4. Plate | 12. Throttle valve | 20. 1-2 shift valve |
| 5. Pressure regulator valve | 13. Throttle back-up valve | 21. Manual valve |
| 6. Separator plate | 14. Downshift valve | 22. Second lock valve |
| 7. Lower valve body | 15. Upper valve body | |
| 8. Oil screen | 16. 2-3 shift plug | |

b. Checking

1. Clean all parts thoroughly in clean solvent, and then blow them dry with moisture-free compressed air.

2. Inspect all valve and plug bores for scores. Check all fluid passages for obstructions. Inspect the check valve for free movement. Inspect all mating surfaces for burrs or distortion. Inspect all plugs and valves for burrs and scores.

Crocus cloth can be used to polish valves and plugs if care is taken to avoid rounding the sharp edges of the valves and plugs.

3. Inspect all springs for distortion. Check all valves and plugs for free movement in their respective bores. Valves and plugs, when dry, must fall from their own weight in their respective bores.

4. Roll the manual valve on a flat surface to check it for a bent condition.

c. Assembly

Assemble the control valve body in the reverse order of disassembling.

Note:

1. Before installing, lubricate all valves, plugs and springs with transmission fluid.

2. The tightening torque of the following screws is 0.25 ~ 0.35 m·kg (1.8 ~ 2.5 ft·lb).

Cover plate to body

Lower valve body to upper valve body

Oil strainer to lower valve body

7B-E-8. Connecting Shell and Sun Gear

a. Disassembly

1. Remove the external snap ring from the sun gear.

2. Remove the thrust washer from the connecting shell and sun gear.

3. From inside the connecting shell, remove the sun gear. Remove the internal snap ring from the sun gear.

b. Assembly

1. Install the internal snap ring on the sun gear. Install the sun gear in the connecting shell.

2. Install the thrust washer on the sun gear and connecting shell.
3. Install the external snap ring on the sun gear.

7B-E-9. Internal Drive Flange

a. Disassembly

1. Remove the drive flange retaining snap ring from the flange.
2. Lift the drive flange from the internal gear.

b. Assembly

1. Position the drive flange in the internal gear.
2. Secure the drive flange with the snap ring. Make sure that the snap ring is fully engaged in the groove.

7B-E-10. Planet Carrier

a. Checking

The planetary carrier cannot be divided into its individual components.

If any part or component is defective, replace the carrier as a unit.

Check the clearance between pinion washer and planetary carrier with a feeler.

The standard clearance is 0.20 ~ 0.70 mm (0.008 ~ 0.027 in).

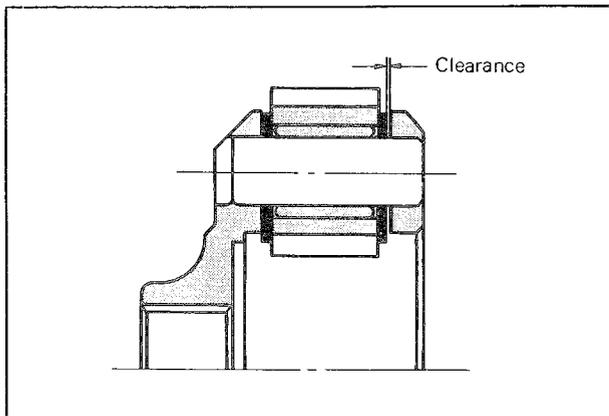


Fig. 7B-47 Clearance of planetary gear

If the clearance exceeds 0.80 mm (0.032 in), replace with new one.

7B-E-11. One-way Clutch

a. Disassembly

1. Remove the snap ring from each end of the one-way clutch and remove the clutch.
2. Remove the snap ring securing the outer race to the connecting drum and remove the outer race.

b. Checking

1. Inspect the outer and inner races for scores or damaged surface area where the rollers contact the races.
2. Inspect the rollers for excessive wear or damage.

c. Assembly

1. Position the outer race in the connecting drum.

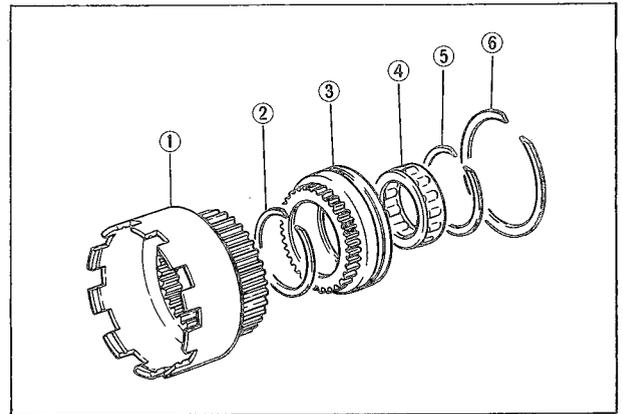


Fig. 7B-48 One-way clutch disassembled

- | | |
|--------------------|-------------------|
| 1. Connecting drum | 4. One-way clutch |
| 2. Snap ring | 5. Snap ring |
| 3. Outer race | 6. Snap ring |

2. Secure the outer race with the snap ring. Make sure the snap ring is fully seated in the groove.
3. Install a snap ring in the forward snap ring groove of the connecting drum.
4. Install the one-way clutch on top of the snap ring. Be sure the arrow stamped on the one-way clutch is pointed toward the front of the vehicle.



Fig. 7B-49 Mark on the one-way clutch

5. Install the remaining snap ring at the rear of one-way clutch to secure the assembly.

7B-F. TRANSMISSION ASSEMBLY

1. Install the low and reverse brake in the transmission case, as described in Par. 7B-E-3.
2. While applying pressure, rotate the connecting drum clockwise to mesh the low and reverse brake plates with the splines of the drum.
3. Install the oil distributor needle bearing and race in the case. Then, install the governor and oil distributor assembly in the case, taking care not to damage the seal rings.
4. Install the output shaft.
5. Position the needle bearings on the front and rear sides of the internal drive flange. Retain the bearings with vaseline and install the flange on the output shaft. Install the snap ring.

6. Position the needle bearing race on the rear side of the rear planet carrier and the needle bearing on the front side of the carrier. Insert the assembly into the internal drive flange and install the snap ring.

7. Position the needle bearing on the rear end of the rear clutch hub and the bearing race on the front end of the front planet carrier. Assemble the rear clutch hub and planet carrier and install the assembly into the connecting shell and sun gear.

8. Place the above assembly on a bench with the rear clutch hub facing upward.

Position the needle bearing on the front end of the rear clutch hub and the bearing race on the rear end of the rear clutch assembly. Install the rear clutch assembly on the rear clutch hub by rotating the units to mesh the rear clutch plates with the splines of the rear clutch hub, as shown in Fig. 7B-50.

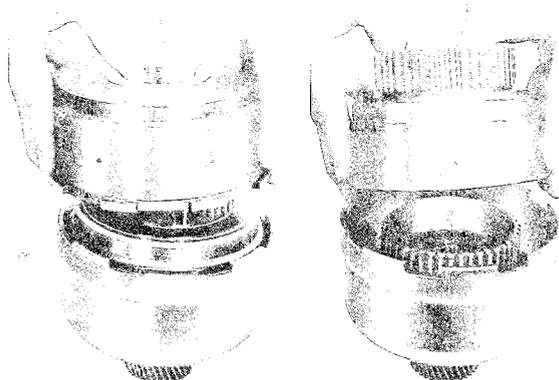


Fig. 7B-50 Assembling clutches

9. Install the front clutch assembly on the rear clutch assembly by rotating the units to mesh the front clutch plates with the splines of the rear clutch.

10. Install the front clutch, rear clutch, front planet carrier and connecting shell and sun gear as an assembly into the transmission case.

11. Insert the brake band into the case around the front clutch drum.

12. Install the bolt retaining the band and tighten the bolt to 5.6 ~ 8.2 m-kg (41 ~ 59 ft-lb).

13. Install the strut and tighten the servo piston stem sufficiently to retain the band.

14. Place a selective thickness thrust washer and bearing race on the rear end of the oil pump cover and retain them with vaseline.

15. Install the oil pump and gasket to the transmission case.

16. Place the converter housing on the case and install the six attaching bolts. Tighten the bolts to 4.5 ~ 5.5 m-kg (33 ~ 39 ft-lb).

17. Install the input shaft.

18. To check the end play of the front clutch drum, use a feeler gauge and check the clearance between the front clutch drum and connecting shell. The end play should be 0.5 ~ 0.8 mm (0.020 ~ 0.031 in). If the end play is not within the specifications, select and install the correct thrust washer.

The thrust washers are available in the following seven thicknesses:

1.5 mm (0.059 in)	2.3 mm (0.091 in)
1.7 mm (0.067 in)	2.5 mm (0.098 in)
1.9 mm (0.075 in)	2.7 mm (0.106 in)
2.1 mm (0.083 in)	



Fig. 7B-51 Checking end play

19. Using a dial indicator as shown in Fig. 7B-52, check the transmission total end play.

With the dial indicator contacting the end of the input shaft, set the dial indicator at Zero. Insert a screwdriver behind the connecting shell and move the connecting shell and the front part of the gear train forward. Record the dial indicator reading.

The end play should be 0.25 ~ 0.50 mm (0.010 ~ 0.020 in). If it is not within the specifications, adjust the end play by selecting the proper race.

The bearing races are available in the following six thicknesses:

1.2 mm (0.047 in)	1.8 mm (0.071 in)
1.4 mm (0.055 in)	2.0 mm (0.079 in)
1.6 mm (0.063 in)	2.2 mm (0.087 in)



Fig. 7B-52 Checking end play

20. Adjust the band brake. To adjust tighten the servo piston stem to 1.2 ~ 1.5 m-kg (9 ~ 11 ft-lb)

and then back off the stem two turns. Hold the stem stationary and tighten the lock nut to 1.5 ~ 4.0 m-k_g (11 ~ 29 ft-lb).

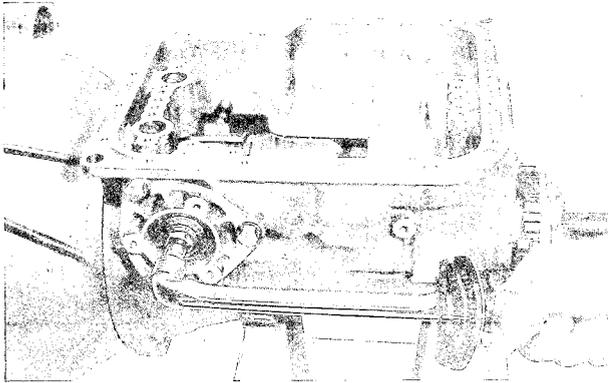


Fig. 7B-53 Tightening stem

- 21. Install the servo cover and tighten the bolts.
- 22. Install the parking brake lever and rod into the case and secure with the retaining ring.
- 23. Install the manual shaft in the case. Install the manual plate, washer and nut. Torque the nut to 3.0 ~ 4.0 m-k_g (22 ~ 29 ft-lb).
- 24. Install the range select lever to the manual shaft with the washer and nut. Tighten the nut.

25. Install the control valve body to the transmission case, engaging the pin on the manual lever into the manual valve groove. Tighten the bolts to 0.55 ~ 0.75 m-k_g (4.0 ~ 5.4 ft-lb).



Fig. 7B-54

- 26. Install the downshift solenoid to the transmission case.
- 27. Install the vacuum diaphragm rod into the transmission case. If the control valve body, transmission case or vacuum diaphragm unit was replaced, a new length diaphragm rod must be used.

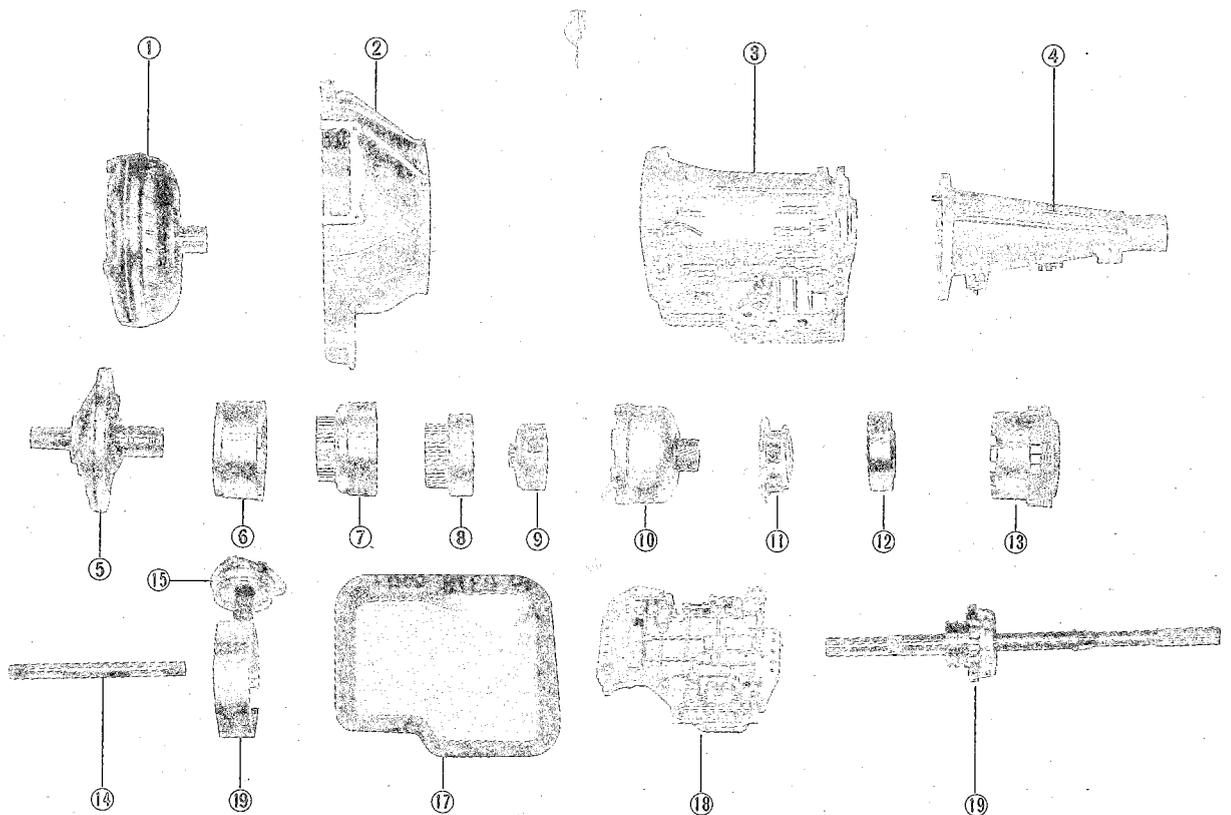


Fig. 7B-55 Main components of transmission

- | | | | |
|----------------------|-------------------------------|-------------------------------|--|
| 1. Torque converter | 6. Front clutch ass'y | 11. Rear planet carrier ass'y | 16. Servo piston ass'y |
| 2. Converter housing | 7. Rear clutch ass'y | 12. Drive flange ass'y | 17. Oil pan |
| 3. Case | 8. Rear clutch hub ass'y | 13. Low & reverse brake ass'y | 18. Control valve ass'y |
| 4. Extension housing | 9. Front planet carrier ass'y | 14. Input shaft | 19. Governor valve ass'y
and output shaft |
| 5. Oil pump ass'y | 10. Shell & sun gear ass'y | 15. Brake band | |

With the vacuum throttle valve fully compressed, measure the depth of the throttle valve bore ("L" shown in Fig. 7B-56).

According to this measurement "L" and the following table, select the correct diaphragm rod.

Measurement "L"	Length of the rod to be used
Under 27.2 mm (1.071 in)	29.0 mm (1.140 in)
27.3 ~ 27.7 mm (1.075 ~ 1.091 in)	29.5 mm (1.160 in)
27.8 ~ 28.2 mm (1.095 ~ 1.110 in)	30.0 mm (1.180 in)
28.3 ~ 28.7 mm (1.114 ~ 1.130 in)	30.5 mm (1.200 in)
Over 28.8 mm (1.134 in)	31.0 mm (1.220 in)

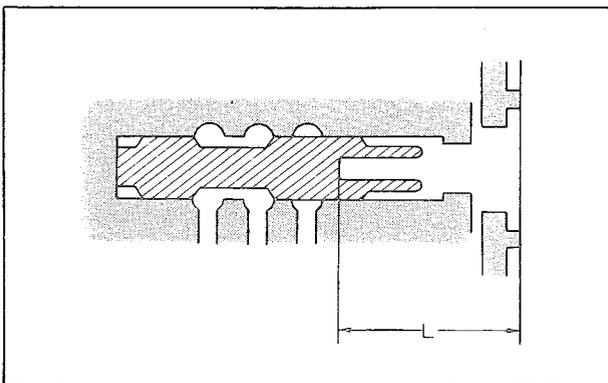


Fig. 7B-56 Vacuum throttle valve

28. Install a new "O" ring on the vacuum diaphragm unit and install the unit to the case hand tight.
 29. Place a new gasket on the case and install the oil pan. Install and tighten the bolts to 0.5 ~ 0.7 m-kg (3.6 ~ 5.1 ft-lb).

30. Install the spacer, return spring and parking pawl on the shaft.

31. Place a new gasket on the rear end of the transmission case. Install the extension housing so that the rear end of the parking rod is positioned between two steel balls in the supporter, as shown in Fig. 7B-57. Tighten the bolts to 2.0 ~ 2.5 m-kg (15 ~ 18 ft-lb).

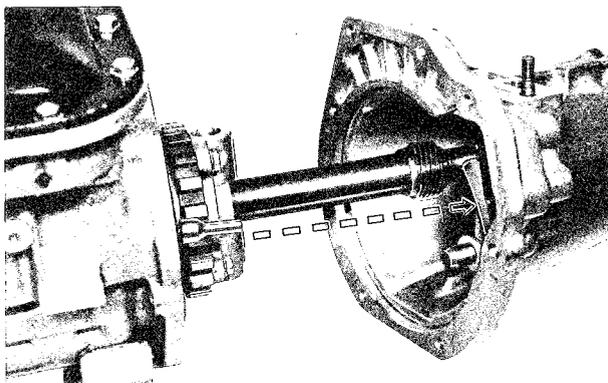


Fig. 7B-57 Installing extension housing

32. Install the converter to the oil pump.

7B-G. TRANSMISSION INSTALLATION

Install the transmission in the reverse order of removing.

Note:

1. Tighten the bolts attaching the converter to the drive plate to 3.7 ~ 5.5 m-kg (27 ~ 40 ft-lb). To tighten to the specification, use the wrench (49 0877 435) and install a torque wrench to the center hole of the wrench. Then, tighten the bolts until the reading on the torque wrench comes to the value to be obtained by the undermentioned formula.

$$\frac{5L \text{ mm}}{10 + L \text{ mm}} \text{ w-kg} \left(\frac{35L \text{ in}}{4 + L \text{ in}} \text{ ft-lb} \right)$$

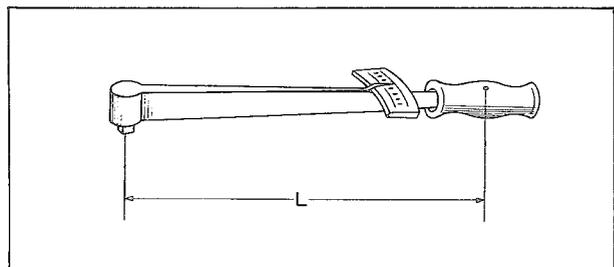


Fig. 7B-58 "L" length of torque wrench

2. Fill the transmission to the proper fluid level with the specified fluid.

3. Check the followings and adjust if necessary.

- Manual linkage
- Inhibitor switch
- Engine idle
- Kick-down switch
- Downshift solenoid

4. Perform stall test, road test and hydraulic test perform.

SPECIAL TOOLS

49 0378 400	Oil pressure gauge set
49 0378 320	Transmission case stand
49 0378 390	Puller oil pump
49 8000 015	Snap ring remover
49 8000 025	Snap ring remover
49 8000 021	Torque driver
49 0378 375	Clutch spring compressor
49 8000 031	Hexagon wrench
49 8000 035	Spinner handle
49 0378 346	Hex-head extension
49 0877 435	Special wrench
49 0378 405	Oil pump assembling gauge

PROPELLER SHAFT

DESCRIPTION	8 : 1
8-A. REMOVING PROPELLER SHAFT	8 : 1
8-B. CHECKING PROPELLER SHAFT	8 : 1
8-C. DISASSEMBLING UNIVERSAL JOINT	8 : 2
8-D. CHECKING UNIVERSAL JOINT	8 : 2
8-E. ASSEMBLING UNIVERSAL JOINT	8 : 2
8-F. INSTALLING PROPELLER SHAFT	8 : 3
SPECIAL TOOLS	8 : 3

DESCRIPTION

The propeller shaft assembly consists of the front propeller shaft, rear propeller shaft, center support bearing, universal joints and yokes. The rear end of the propeller shaft is attached to the companion flange of the rear axle through the universal joint and the front end is attached to the main shaft of the transmission by means of the splined sliding yoke, which permits fore and aft movement of the propeller shaft when the rear axle moves up and down. The center of the propeller shaft is supported by the bearing attached to the under body. The universal joints are lubricated for life, so do not require lubricating.

8-A. REMOVING PROPELLER SHAFT

1. Raise the rear end of the vehicle and support with stands.
2. Remove the bolts attaching the heat insulator to the pre-silencer and remove the heat insulator.
3. To maintain drive line balance, mark the mating parts of the companion flange, yokes and the propeller shaft so they may be reinstalled in their original positions.
4. Remove the bolts that attach the propeller shaft to the companion flange of the rear axle.
5. Remove the nuts attaching the center bearing protector and the center bearing support.
6. Pull the propeller shaft assembly rearward and remove from the transmission.

7. Install the main shaft holder (49 0259 440) into the extension housing to prevent lubricant from leaking out of the housing.



Fig. 8-1 Main shaft holder

8. Remove the universal joints, as described in Par. 8-C.
9. Remove the nut attaching the yoke and bearing to the front propeller shaft. Remove the yoke and bearing support.

Note: Do not remove the oil seals and bearing from the support unless they are defective.

8-B. CHECKING PROPELLER SHAFT

1. Check the run-out of the propeller shaft by sup-

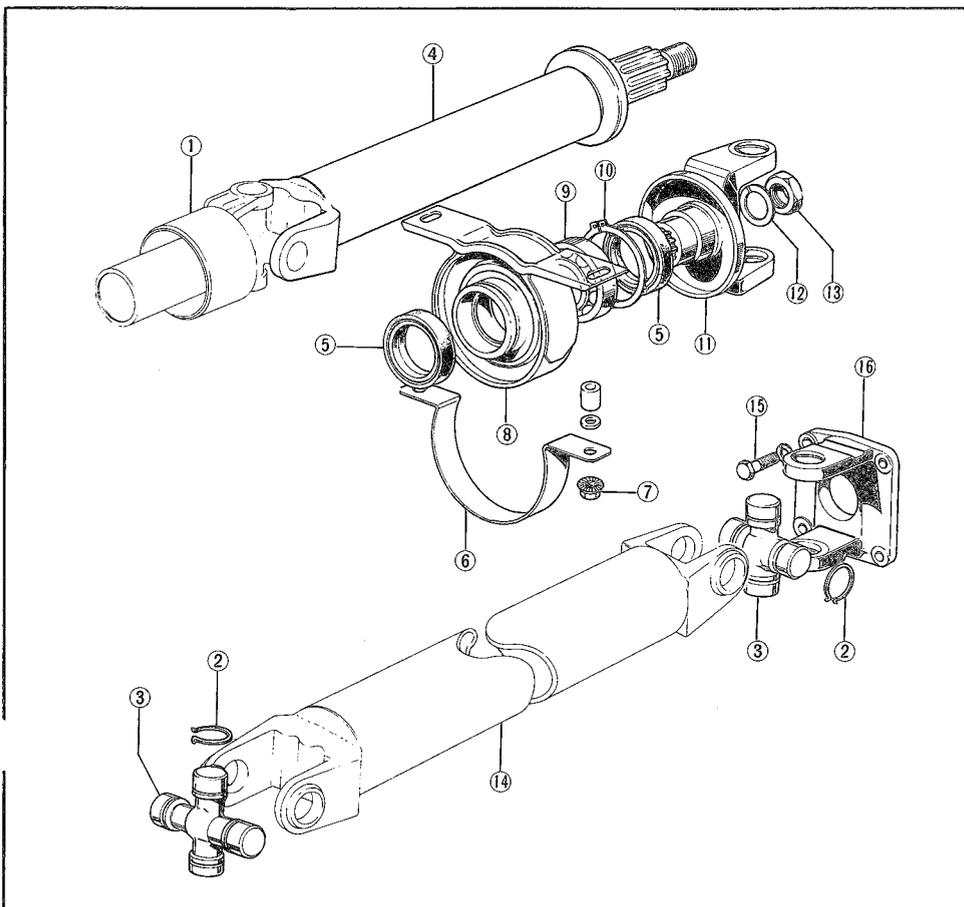


Fig. 8-2 Propeller shaft components

1. Sliding yoke
2. Snap ring
3. Universal joint
4. Front shaft
5. Grease seal
6. Protector
7. Nut and washer
8. Center bearing support
9. Bearing
10. Snap ring
11. Yoke (Center)
12. Washer
13. Nut
14. Rear shaft
15. Bolt
16. Yoke (Rear)

porting both ends of the propeller shaft on the "V" blocks and applying a dial indicator. The permissible run-out is under 0.4 mm (0.016 in).

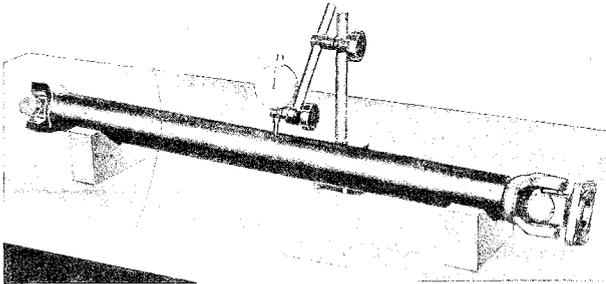


Fig. 8-3 Checking propeller shaft run-out

2. Check the propeller shaft for dynamic unbalance. The maximum permissible unbalance is shown in the following table. If the unbalance is not within the specifications, correct or replace the propeller shaft assembly.

	Max. permissible unbalance at 4,000 rpm
At front	15 cm-gr (0.21 in-oz)
At center	30 cm-gr (0.42 in-oz)
At rear	30 cm-gr (0.42 in-oz)

Note: As the looseness on the front universal joint may cause the increase of the unbalance, resulting the seizure of the extension housing bush, the front universal joint and propeller shaft should be replaced as an assembly. But, if the unbalance of the propeller shaft assembly can be checked and corrected within the specifications, the universal joint only may be replaced.

3. Check the center bearing for wear, looseness or any damage.

8-C. DISASSEMBLING UNIVERSAL JOINT

1. Place the propeller shaft in a vise being careful not to damage it.
2. Remove the snap rings retaining the bearings in the yoke and in the propeller shaft.
3. Position the universal joint replacer (49 0259 460A)

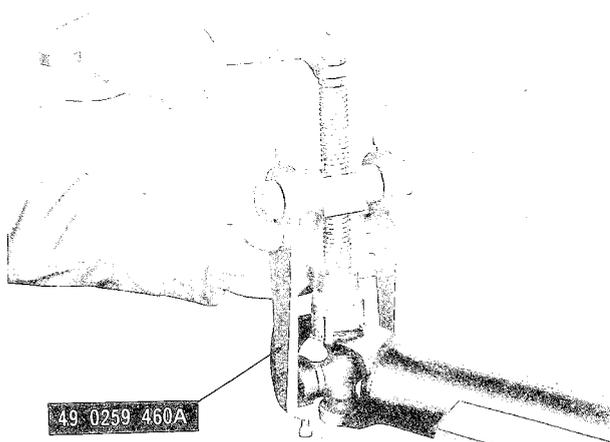


Fig. 8-4 Removing bearing cap

on the yoke and screw in the center bolt until the bearing comes out of the yoke. If necessary, install the spacer between the yoke and the spider.

4. Remove the replacer and remove the bearing.
5. Reposition the replacer to press on the yoke to remove the bearing from the opposite side of the yoke.
6. Remove the opposite side bearing in the same manner.
7. Remove the yoke and spider assembly from the propeller shaft.
8. Using the same replacer, remove the remaining two bearings in the same manner.
9. Remove the spider from the yoke.

8-D. CHECKING UNIVERSAL JOINT

1. Examine the bearing surfaces of the spider. They should be smooth and free from pits.
2. Measure the diameter of the spider. If it is under 16.549 mm (0.6515 in), replace with a new universal joint assembly.

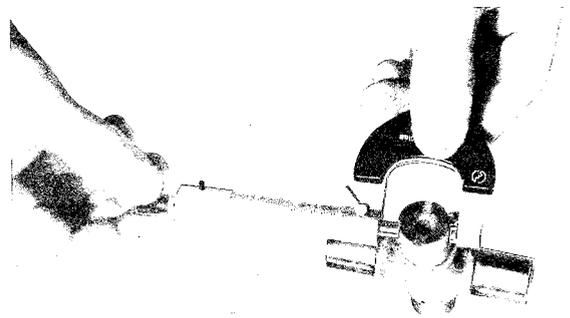


Fig. 8-5 Measuring spider diameter

3. Check the needle rollers for wear or any damage. The rollers should have a uniformly good appearance and roll freely inside the bearing cup.

8-E. ASSEMBLING UNIVERSAL JOINT

1. Place the bearing into the yoke at the end of the propeller shaft.

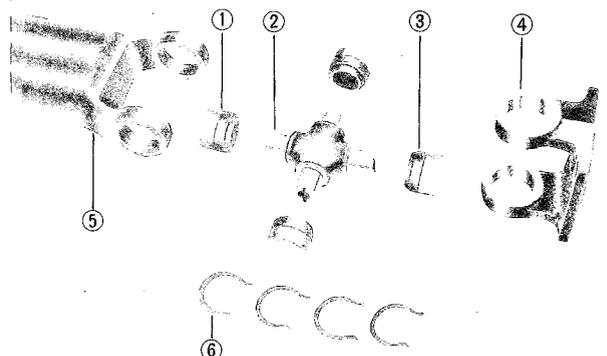


Fig. 8-6 Universal joint components

- | | |
|----------------|--------------------|
| 1. Bearing | 4. Yoke |
| 2. Spider | 5. Propeller shaft |
| 3. Grease seal | 6. Snap ring |

2. Position the spider in the yoke.
3. Position the replacer and press the bearing, while guiding the spider into the bearing, until the snap ring can be installed.
4. Remove the replacer and install the snap ring.
5. Place the bearing into the opposite side of the yoke.
6. Install the replacer and press on the bearing until the snap ring can be installed.

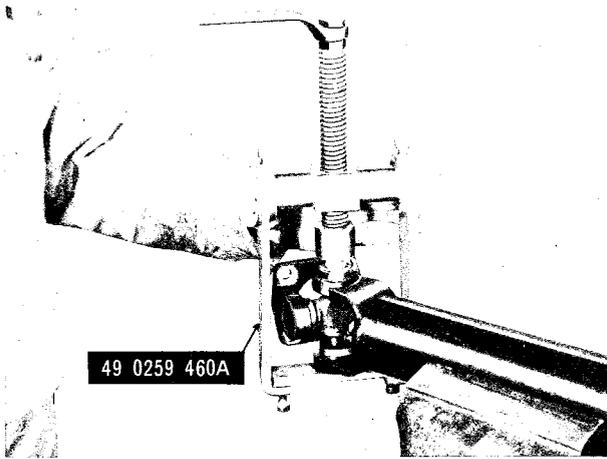


Fig. 8-7 Installing bearing cap

7. Remove the replacer and install the snap ring.

Note: Select the snap rings so as to place the spider

in the center of the yoke and to give a suitable slight drag fit (not binding).

Be sure to use same sized snap rings to both sides of the yoke.

Snap rings are available in the following thickness:

1.45 mm (0.0570 in)	1.57 mm (0.0618 in)
1.48 mm (0.0582 in)	1.60 mm (0.0629 in)
1.51 mm (0.0594 in)	1.63 mm (0.0641 in)
1.54 mm (0.0606 in)	

8. Position the yoke on the spider and install two bearings and snap rings in the same manner as instructed above.

8-F. INSTALLING PROPELLER SHAFT

Install the propeller shaft in the reverse order of removing, noting the following points.

1. Be sure to observe location marks on the companion flange, yokes and propeller shaft for correct assembly.
2. Torque the nut attaching the yoke and center bearing to the front shaft to **16 ~ 18 m-kg (116 ~ 130 ft-lb)**.
3. The tightening torque of the nuts attaching the center bearing support is **2.0 ~ 2.9 m-kg (14 ~ 21 ft-lb)**.
4. The tightening torque of the bolts attaching the yoke to companion flange is **5.5 ~ 6.5 m-kg (40 ~ 47 ft-lb)**.

SPECIAL TOOLS

49 0259 440	Mainshaft holder
49 0259 460A	Universal joint replacer

REAR AXLE

9-A.	REAR AXLE SHAFT	9 : 1
9-A-1.	Removing Rear Axle Shaft	9 : 1
9-A-2.	Disassembling Rear Axle Shaft	9 : 1
9-A-3.	Assembling Rear Axle Shaft	9 : 1
9-A-4.	Installing Rear Axle Shaft	9 : 1
9-B.	REAR AXLE REMOVAL	9 : 2
9-C.	REAR AXLE DISASSEMBLY	9 : 2
9-C-1.	Removing Differential	9 : 2
9-C-2.	Disassembling Differential	9 : 2
9-C-3.	Removing Drive Pinion	9 : 3
9-D.	REAR AXLE INSPECTION	9 : 3
9-D-1.	Checking Drive Pinion and Ring Gear	9 : 3
9-D-2.	Checking Differential Gears	9 : 3
9-D-3.	Checking Bearings	9 : 3
9-D-4.	Replacing Pinion Bearing Outer Race	9 : 3
9-D-5.	Checking Collapsible Spacer	9 : 3
9-D-6.	Checking Oil Seal	9 : 3
9-D-7.	Checking Companion Flange	9 : 3
9-E.	REAR AXLE ASSEMBLY	9 : 3
9-E-1.	Adjusting Drive Pinion	9 : 3
9-E-2.	Adjusting Pinion Bearing Preload	9 : 5
9-E-3.	Assembling Differential	9 : 5
9-E-4.	Installing Differential	9 : 7
9-E-5.	Adjusting Backlash	9 : 7
9-F.	REAR AXLE INSTALLATION	9 : 7
	SPECIAL TOOLS	9 : 8

REAR AXLE

Rotary pickup is equipped with a semi-floating type rear axle with a hypoid ring gear and pinion set. The final reduction ratio is 4.375 for manual transmission and 4.111 for automatic transmission.

9-A. REAR AXLE SHAFT

9-A-1. Removing Rear Axle Shaft

1. Raise the rear end of the vehicle and support the rear axle housing with stands.
2. Remove the rear wheel and brake drum.
3. Remove the brake shoe assembly, as detailed in Par 11-C.
4. Remove the parking brake cable retainer.
5. Disconnect the brake fluid pipes at the wheel cylinders, using the spanner (49 0259 770A).
6. Remove the nuts holding the brake backing plate and bearing housing to the axle housing.
7. Pull the axle shaft, brake backing plate, bearing housing assembly and shims off the axle housing.

9-A-2. Disassembling Rear Axle Shaft

1. Straighten the tabs of the lock washer.
2. With the spanner (49 0603 622A), loosen the lock nut and remove the lock nut and lock washer.
3. Using a suitable puller, remove the bearing and housing assembly from the rear axle shaft.
4. Remove the backing plate.
5. Remove the bearing and oil seals from the bearing housing, if necessary.

9-A-3. Assembling Rear Axle Shaft

Assemble the rear axle shaft in the reverse order of disassembling.

9-A-4. Installing Rear Axle Shaft

1. Install the rear axle shaft, backing plate and bearing housing assembly to the rear axle housing.
2. Using two bolts and nuts, temporarily assemble

the bearing housing and backing plate to the axle housing flange.

3. Mount a dial indicator to the backing plate to check the end play, as shown in Fig. 9-1.

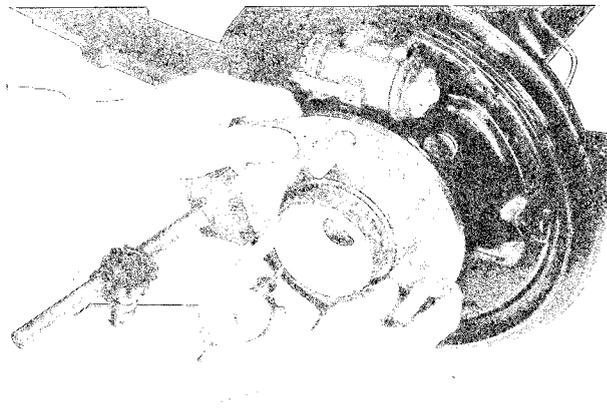


Fig. 9-1 Checking end play

If only one axle shaft has been removed, the end play should be 0.05 ~ 0.15 mm (0.002 ~ 0.006 in). A very special procedure is required if both axle shafts have been removed. When installing the shafts, the end play should be checked when the first shaft is installed (don't wait until after both shafts are installed).

The end play for the first shaft should be 0.65 ~ 0.85 mm (0.026 ~ 0.033 in). The second shaft should then be 0.05 ~ 0.15 mm (0.002 ~ 0.006 in). Use the adjusting shims to arrive at these results.

4. After adjusting the end play, install all bolts and nuts and torque to specifications.
5. Install the brake shoe assembly and drum, as described in Par. 11-I-3.
6. Connect the brake fluid pipes to the wheel cylinders and tighten the nuts securely with the spanner (49 0259 770A).
7. Bleed the brake system, as described in Par. 11-C.
8. Install the wheel and lower the vehicle.

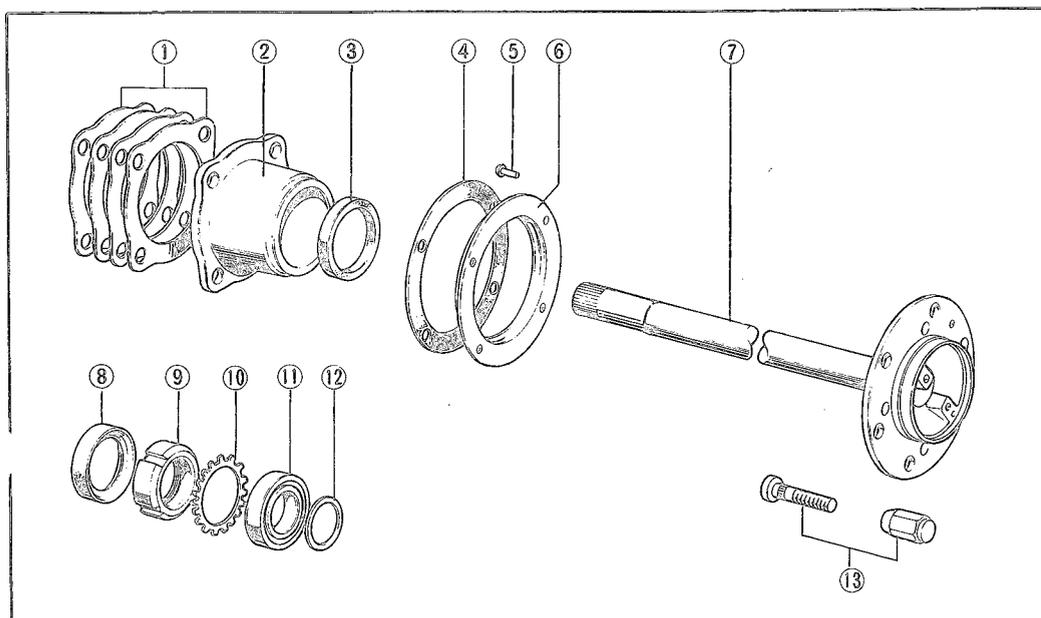


Fig. 9-2

Rear axle shaft components

1. Shims
2. Bearing housing
3. Oil seal (Outer)
4. Gasket
5. Rivet
6. Baffle
7. Axle shaft
8. Oil seal (Inner)
9. Lock nut
10. Lock washer
11. Bearing
12. Spacer
13. Hub bolt and nut

9-B. REAR AXLE REMOVAL

1. Raise the rear end of the vehicle and support with stands.
2. Drain the oil by removing the drain plug with the wrench (49 0259 730). Reinstall the drain plug after all oil is out. (As the plug is magnetic, it should be cleaned.)
3. Remove the rear axle shafts, referring to Par. 9-A-1.
4. Mark the companion flange and propeller shaft for correct reassembly, then disconnect the propeller shaft.
5. Remove the nuts attaching the rear axle to the rear axle housing and remove the rear axle.

9-C. REAR AXLE DISASSEMBLY

9-C-1. Removing Differential

1. Mount the rear axle on the stand (49 0164 550D and 49 0164 562B).

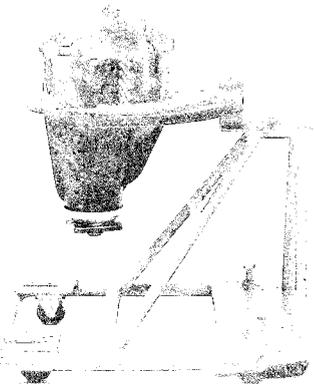


Fig. 9-3 Stand for rear axle

2. Apply identification punch marks on the carrier, differential bearing cap and adjuster for reassembly purpose.



Fig. 9-4 Applying identification marks

3. Remove the adjuster lock plates.
4. Loosen the bearing cap attaching nuts and back off the adjuster slightly with the spanner (49 0259 720) to relieve differential bearing preload.

5. Remove the nuts, bearing caps and adjusters.
6. Remove the differential assembly together with the bearing outer races. Make certain that each bearing outer race remains with its respective bearing.



Fig. 9-5 Removing differential assembly

9-C-2. Disassembling Differential

1. If the bearing replacement is necessary, remove the bearings from the differential gear case with a suitable puller.
2. Remove the bolts and washers that attach the ring gear to the gear case. Remove the ring gear.

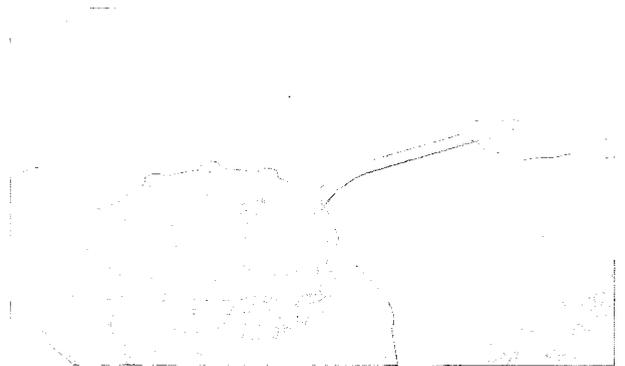


Fig. 9-6 Removing ring gear

3. From the back side of the gear case flange, drive the pinion shaft lock pin out of the gear case with a suitable drift, as shown in Fig. 9-7.

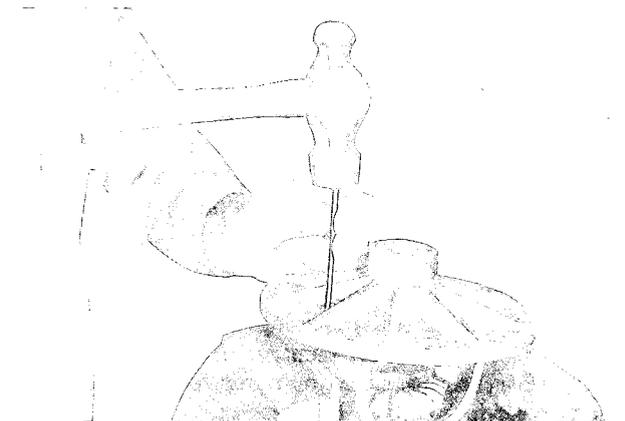


Fig. 9-7 Removing pinion shaft lock pin

4. Remove the pinion shaft and thrust block.

5. Rotate the differential pinion gears 90 degrees and remove each pinion gear.
6. Remove the differential side gears and thrust washers.

9-C-3. Removing Drive Pinion

1. Hold the companion flange with the holder (49 0259 710A) and remove the drive pinion nut, using the wrench (49 0164 620A).

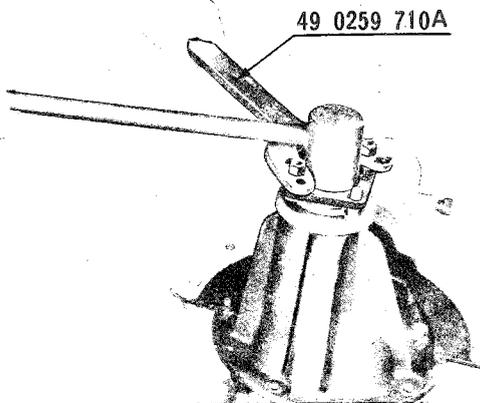


Fig. 9-8 Loosening pinion nut

2. Remove the companion flange.
3. Remove the drive pinion, rear bearing and collapsible spacer from the carrier. If necessary, tap the pinion out with a plastic hammer, while being careful to guide the pinion by hand to avoid damage.
4. Remove the oil seal and front bearing from the carrier.

9-D. REAR AXLE INSPECTION

9-D-1. Checking Drive Pinion and Ring Gear

Check the drive pinion for damaged or excessively worn teeth, damaged bearing journals and splines. Inspect the ring gear for worn or chipped teeth. If any of above conditions is found, replace both drive pinion and ring gear as they are available only in set.

9-D-2. Checking Differential Gears

Inspect the differential side gears and pinion gears for cracks, chipped teeth or any damage. Replace the side gears, pinion gears or thrust washers if necessary. Check the clearance between the pinion gear and shaft. If excessive clearance is found due to wear, replace with new parts.

Check the spline fit of the side gear and rear axle shaft. If excessive clearance is found, replace the side gear or rear axle shaft.

9-D-3. Checking Bearings

Inspect the differential bearings and pinion bearings for wear, flaking or any damage. If inspection reveals that either bearing cones or outer race are unfit for further service, replace the bearing.

9-D-4. Replacing Pinion Bearing Outer Race

If it becomes necessary to replace the pinion bearing

outer race(s), proceed as follows:

1. Remove the old outer race from the carrier by using a drift in slots provided for this purpose.

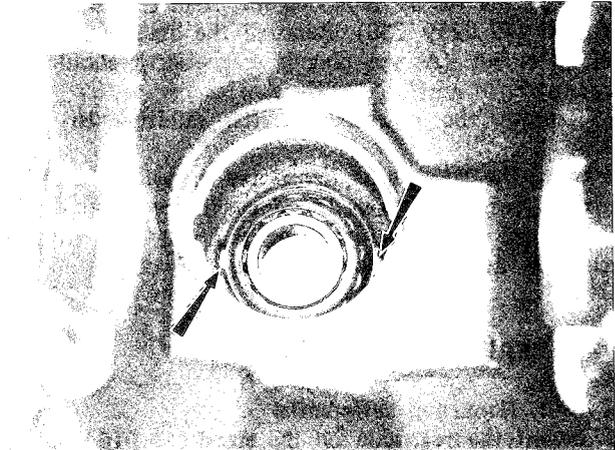


Fig. 9-9 Removing pinion bearing outer race

2. Install a new outer race into the carrier.

9-D-5. Checking Collapsible Spacer

Measure the length of the collapsible spacer with a micrometer. The standard length is 47 ± 0.15 mm (1.8504 ± 0.0059 in).

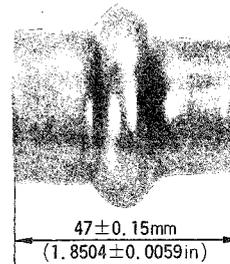


Fig. 9-10 Collapsible spacer

9-D-6. Checking Oil Seal

Check the oil seal for wear or damage. If there is any possibility of oil leakage, replace the oil seal.

9-D-7. Checking Companion Flange

Check the companion flange for cracks, worn splines, or rough oil seal contacting surface. Repair or replace the companion flange if necessary.

9-E. REAR AXLE ASSEMBLY

9-E-1. Adjusting Drive Pinion

The drive pinion should be correctly positioned in relation to the ring gear by the use of spacer which is placed between the drive pinion and the pinion rear bearing.

To adjust the drive pinion position, use the pinion adjusting gauge (49 0727 570 and 49 0603 555A) and proceed as follows:

1. Install the dial indicator to the gauge body. Place the gauge body on the surface plate as shown in Fig. 9-11 and lock the dial indicator by the screw so

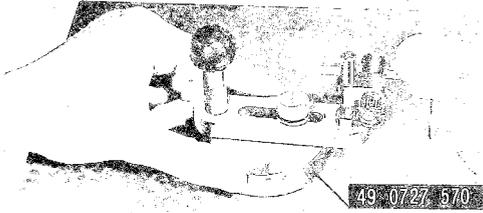


Fig. 9-11 ZERO setting

that the needle is pointing toward 1 to 3 mm.

Then, set the reading to "Zero" by turning the outer ring of the indicator.

2. Make certain that the differential bearing support bores are free of dirt and burrs.

3. Install the pinion and bearing model (49 0603 555A) together with a spacer into the carrier.

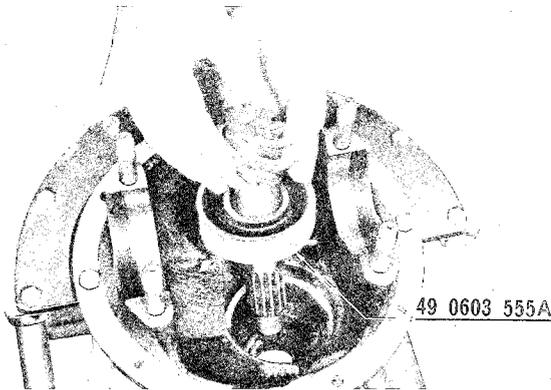


Fig. 9-12 Installing pinion and bearing model

4. Place the gauge block on the pinion and carefully place the gauge body adjusted in Step 1 on the gauge block so that the feeler of the indicator comes in contact with the lowest portion of the differential bearing support bore.

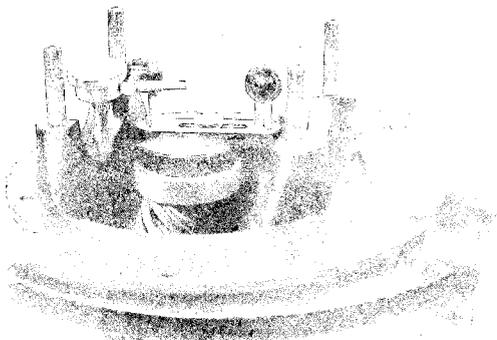


Fig. 9-13 Measuring pinion height

5. Record the number of hundredths dial indicator moves in a "+" (plus) or "-" (minus) direction from zero.

(a) If the dial indicator shows "+" (plus), add the amount equivalent to the reading.

(b) If the dial indicator shows "-" (minus), subtract the amount equivalent to the reading.

6. Remove the gauge body and dial indicator from the carrier and check zero setting on the surface plate to make sure this setting was not disturbed by handling.

7. In order to compensate for all of the machining variables, the pinion has a plus or minus reading recorded in hundredth millimeters on the rear face of the pinion.

Example:

$$M + 2 = +0.02 \text{ mm } (+0.0008 \text{ in})$$

$$M - 1 = -0.01 \text{ mm } (-0.0004 \text{ in})$$

(a) If the bearing is higher than the model, subtract the amount equivalent to the difference.

(b) If the bearing is lower than the model, add the amount equivalent to the difference.

8. Place the bearing model and the rear pinion bearing on the surface plate and compare their heights as shown in Fig. 9-14.

(a) If the pinion is marked "+" (plus), subtract the amount specified on the pinion.

(b) If the pinion is marked "-" (minus), add the amount specified on the pinion.

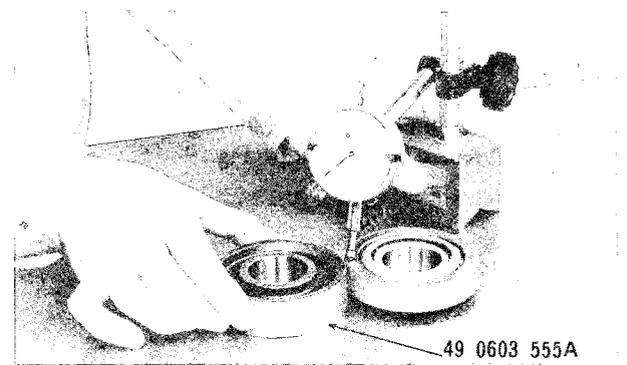


Fig. 9-14 Measuring bearing height

9. Finally select the correct pinion spacer to be used during pinion assembly by adding or subtracting the amount determined in Step 5, 7 and 8 from the thickness of the spacer used in Step 3.

The spacers are available in the following thickness:

Identification mark	Thickness
08	3.08 mm (0.1213 in)
11	3.11 mm (0.1224 in)
14	3.14 mm (0.1236 in)
17	3.17 mm (0.1248 in)
20	3.20 mm (0.1260 in)
23	3.23 mm (0.1271 in)
26	3.26 mm (0.1283 in)
29	3.29 mm (0.1295 in)
32	3.32 mm (0.1307 in)
35	3.35 mm (0.1319 in)
38	3.38 mm (0.1331 in)
41	3.41 mm (0.1343 in)
44	3.44 mm (0.1354 in)
47	3.47 mm (0.1366 in)

10. Position the correct spacer on the pinion and install the rear pinion bearing.

9-E-2. Adjusting Pinion Bearing Preload

1. Install the collapsible spacer onto the drive pinion and install them in the carrier, as shown in Fig. 9-15.

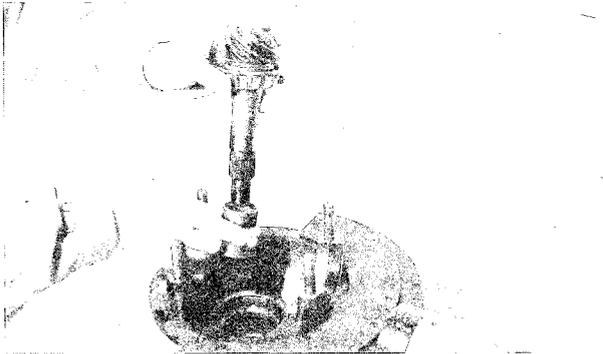


Fig. 9-15 Installing pinion and collapsible spacer

2. Place the front pinion bearing in position on the pinion. Hold the pinion fully forward and drive the pinion bearing over the pinion until seated.
3. Apply gear lubricant to the lip of the pinion oil seal and install the pinion oil seal into the carrier.
4. Install the companion flange on the pinion by tapping with a soft hammer.
5. Install the pinion washer and nut. Before tightening the nut (When the pinion preload is Zero), check the drag by the oil seal by using a torque wrench.
6. Tighten the pinion nut to 20 m-k_g (145 ft-lb) and check the preload as shown in Fig. 9-16.

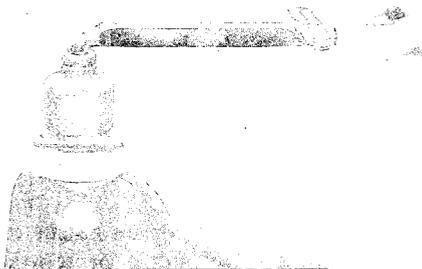


Fig. 9-16 Checking pinion bearing preload

Note: After preload has been checked, final tightening should be done very cautiously.

The pinion nut should be further tightened only a little at a time and preload should be checked after each slight amount of tightening. Exceeding preload specifications will compress the collapsible spacer too far and requires its replacement. The maximum tightening torque of the nut is 35 m-k_g (253 ft-lb). If the specified preload is not obtained after tightening the nut to the maximum torque of 20 m-k_g (145 ft-lb), replace the collapsible spacer with a new one.

7. While observing the proceeding caution, carefully set the preload drag at 13 to 18 cm-k_g (11.3 to 15.6 in-lb) plus the oil seal drag determined in Step 5.

Note: If the preload is measured by using a spring scale at the bolt hole of the companion flange, the preload drag is 3.3 ~ 4.6 kg (7.3 ~ 10.1 lb).

9-E-3. Assembling Differential

1. Install the thrust washer on each differential side gear and install these in the gear case.

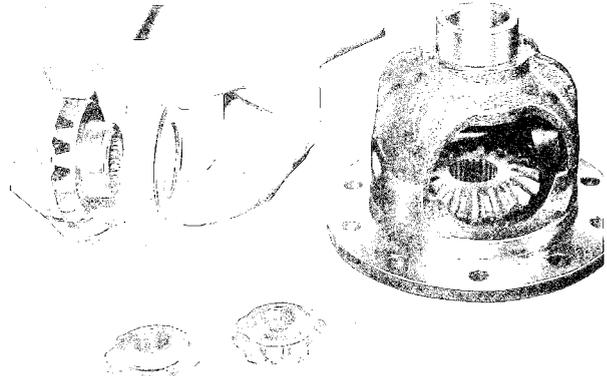


Fig. 9-17 Installing side gear and thrust washer

2. Through the openings of the gear case, insert each of two pinion gears exactly 180 degrees opposite each other.



Fig. 9-18 Installing differential gears

3. Rotate the gears 90 degrees so that the pinion shaft holes of the case come into alignment with the holes in the pinion gears.

4. Insert the pinion shaft through the case and pinion gears.

5. Check the backlash of the side gear and pinion gear.

The backlash should be 0 to 0.2 mm (0 to 0.008 in).

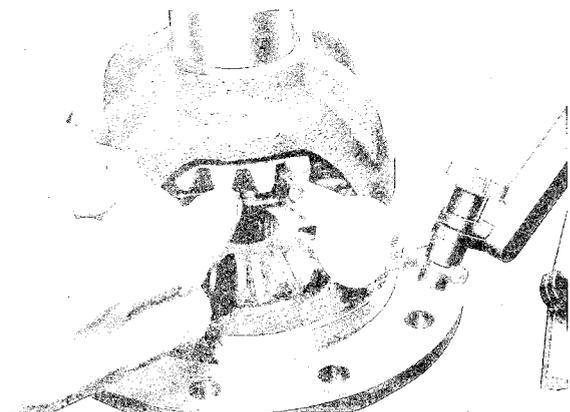


Fig. 9-19 Checking backlash of pinion and side gear

If it is more than 0.2 mm (0.008 in), adjustment can be made with the side gear thrust washers. The following thrust washers are available:

Identification mark	Thickness
0	2.0 mm (0.0789)
1	2.1 mm (0.0827)
2	2.2 mm (0.0866)

6. After adjustment, remove the pinion shaft and

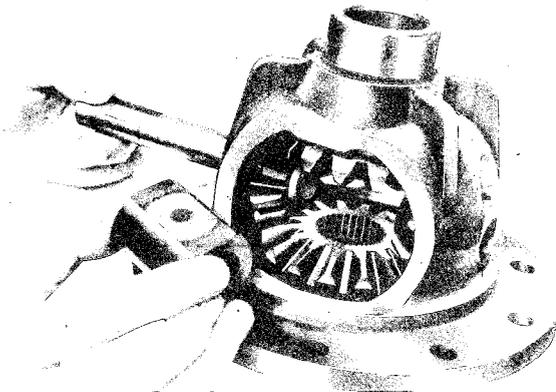


Fig. 9-20 Installing thrust block and pinion shaft

install the thrust block so that the hole is centered between the side gears. Reinstall the pinion shaft into the case until the lock pin hole in the pinion shaft is exact alignment with the hole in the case. 7. Install the lock pin to secure the pinion shaft. Stake the lock pin into position with a punch to prevent it from working out. 8. Install the ring gear to the case and torque the bolts to 5.5 ~ 6.5 m-kg (40 ~ 47 ft-lb).

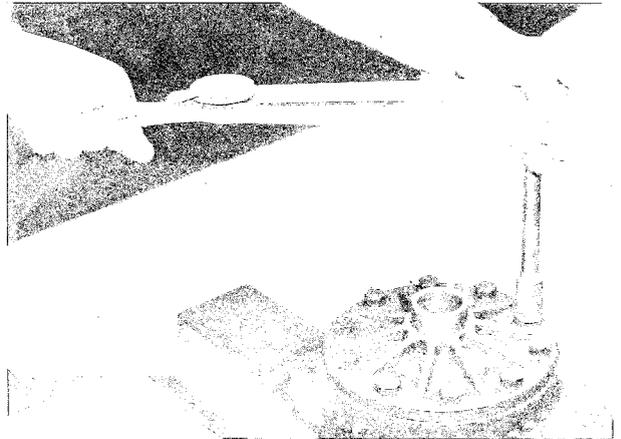


Fig. 9-22 Tightening ring gear bolts

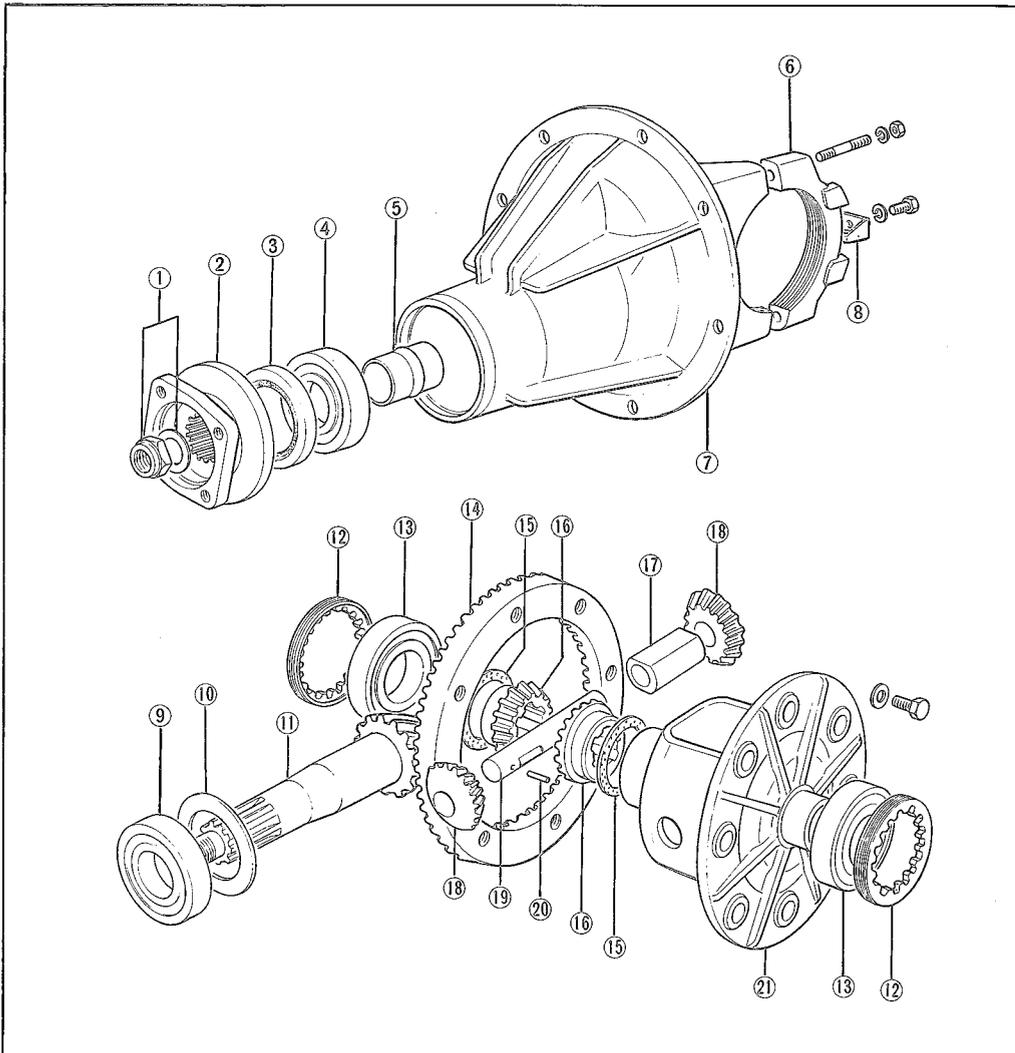


Fig. 9-21
Rear axle components
1. Lock nut and washer
2. Companion flange
3. Oil seal
4. Front bearing
5. Collapsible spacer
6. Bearing cap
7. Carrier
8. Lock plate
9. Rear bearing
10. Spacer
11. Drive pinion
12. Adjusting screw
13. Differential bearing
14. Ring gear
15. Thrust washer
16. Side gear
17. Thrust block
18. Pinion gear
19. Pinion shaft
20. Pinion shaft pin
21. Gear case

9. Install each differential bearing to the gear case.
10. Install the differential bearing outer races to their respective bearings.

9-E-4. Installing Differential

1. Place the differential gear assembly in the carrier, making ensure that the marks on the face of the pinion and ring gear teeth are in aligned.

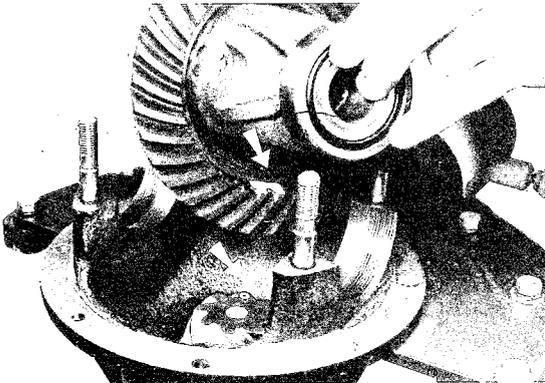


Fig. 9-23 Installing of differential assembly

2. Note the identification marks on the adjusters and install each to its respective side.
3. Install the differential bearing caps making sure that the identification marks on the caps correspond with those on the carrier and install the attaching nuts.
4. Turn the adjusters with the spanner (49 0259 720) until the bearings are properly positioned in their respective outer races and the end play is eliminated with some backlash existing between the ring gear and drive pinion.
5. Slightly tighten one of the bearing cap nuts on each side and adjust the backlash, as instructed in the following paragraph.

9-E-5. Adjusting Backlash

1. Secure a dial indicator to the carrier flange so that the feeler comes in contact at right angles with one of the ring gear teeth.
2. Check the backlash between the ring gear and drive pinion. With the spanner (49 0259 720), turn both bearing adjusters equally until the backlash becomes 0.19 to 0.21 mm (0.0075 to 0.0083 in).

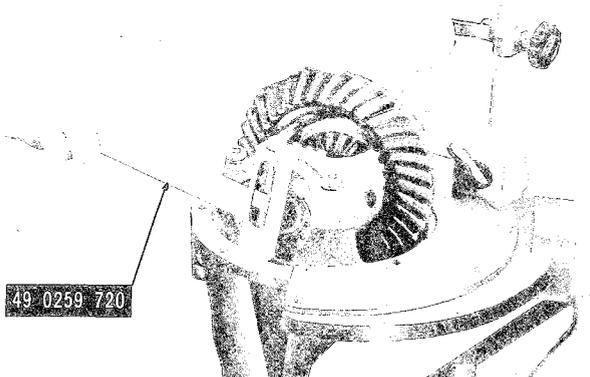


Fig. 9-24 Adjusting backlash

3. The preload on the differential bearings is obtained

by tightening the adjusters. Tighten the adjusters until the distance between both pilot sections on the bearing caps becomes 204.428 ~ 204.5 mm (8.0485 ~ 8.0513 in), as shown in Fig. 9-25.

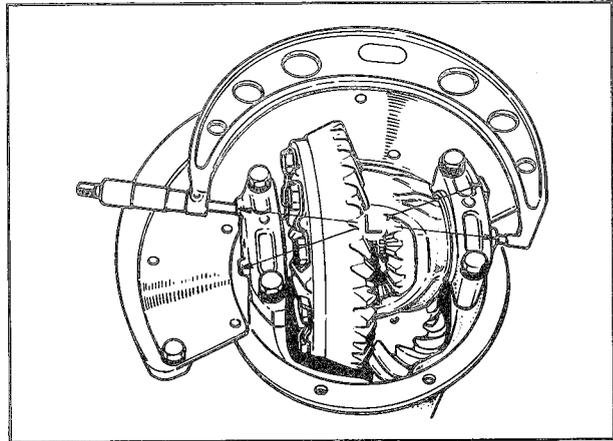


Fig. 9-25 Adjusting bearing preload (case spread)

Note: When adjusting the preload, care must be taken not to affect the backlash of the drive pinion and ring gear.

4. Tighten the bearing cap nuts to a torque of 6.5 ~ 7.7 m·kg (47 ~ 56 ft·lb).
5. Install the adjuster lock plates on the bearing caps to prevent the adjusters from loosening.
6. Check the tooth contact of the ring gear and pinion by applying a thin coat of red lead on both sides of about six or eight of ring gear teeth and rotating the ring gear several times to and fro. If the pinion position and backlash have been correctly set, the contact pattern should be as shown in Fig. 9-26.

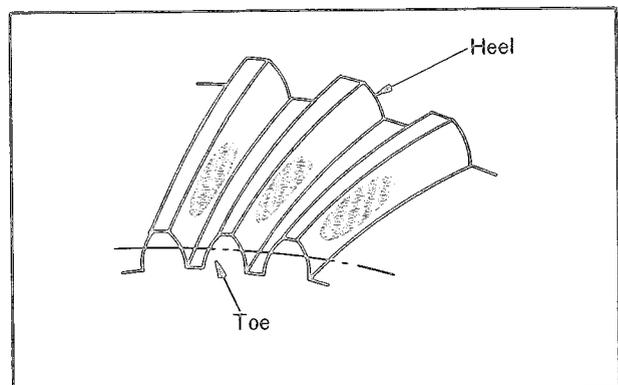


Fig. 9-26 Correct tooth contact

9-F. REAR AXLE INSTALLATION

1. Clean the sealing surface of the carrier and the housing. No gasket is required.
2. Apply oil resistant sealer to the surfaces.
3. Position the carrier to the housing.
4. Tighten the nuts.
5. Connect the propeller shaft following the markings closely to prevent any out of balance condition. Torque the bolts to 5.5 ~ 6.5 m·kg (40 ~ 47 ft·lb).

-
6. Install the axle shafts, drums and wheels. of lubricant.
7. Fill the axle with the correct grade and quantity 8. Lower the vehicle.

SPECIAL TOOLS

49 0603 622A	Spanner for axle shaft bearing lock nut
49 0164 550D	Rear axle stand
49 0164 562B	Attachment for rear axle stand
49 0259 720	Backlash adjusting spanner
49 0259 710A	Companion flange holding tool
49 0727 570	Pinion adjusting gauge
49 0603 555A	Gauge block and bearing model
49 0419 561	Attachment for engine stand
49 0164 620A	Drive pinion nut box wrench

Note:

If the **engine stand** 49 0839 000 and 49 0107 680A is available, this can be used together with the **attachments** (49 0419 561 and 49 0164 562A) as a rear axle stand.



MANUAL STEERING

DESCRIPTION.....	10 : 1
10-A. CHECKING STEERING WHEEL FREE PLAY.....	10 : 1
10-B. STEERING GEAR REMOVAL.....	10 : 1
10-C. STEERING GEAR DISASSEMBLY.....	10 : 2
10-D. STEERING GEAR INSPECTION.....	10 : 2
10-E. STEERING GEAR ASSEMBLY.....	10 : 3
10-F. STEERING GEAR ADJUSTMENT.....	10 : 5
10-F-1. Adjusting Worm Bearing Preload.....	10 : 5
10-F-2. Adjusting Sector Gear and Ball Nut Backlash.....	10 : 5
10-G. STEERING GEAR INSTALLATION.....	10 : 5
10-H. STEERING LINKAGE.....	10 : 5
10-H-1. Checking Ball Joints.....	10 : 5
10-H-2. Replacing Idler Arm.....	10 : 5
10-H-3. Replacing Pitman Arm.....	10 : 6
10-H-4. Replacing Tie-rod.....	10 : 6
10-H-5. Replacing Center Link.....	10 : 7
10-H-6. Lubrication of Idler Arm.....	10 : 7
10-H-7. Lubrication of Ball Joints.....	10 : 7
10-I. FRONT WHEEL ALIGNMENT.....	10 : 7
10-I-1. Inspection Before Checking Front Wheel Alignment.....	10 : 7
10-I-2. Toe-in.....	10 : 7
10-I-3. Camber, Caster and King Pin Inclination.....	10 : 7
10-I-4. Adjusting Turning Angle.....	10 : 8
SPECIAL TOOLS.....	10 : 8

DESCRIPTION

The steering system consists of the steering gear, steering column, steering wheel and steering linkage. This steering gear provides easy steering with the minimum of friction in the steering gear.

10-A. CHECKING STEERING WHEEL FREE PLAY

The standard free play at the outer circumference of the steering wheel is 20 ~ 30 mm (0.8 ~ 1.2 in). To check the free play of the steering wheel, place the front wheels straight ahead and turn the steering wheel slowly. The value of the free play is taken when the front wheel begins to move.

If excessive play is found, the following points should be carefully checked, because this could cause steering instability in driving.

1. Fit of the ball joints of the center link and those of the tie rods.
2. Looseness of the idler arm bushes.
3. Looseness of the wheel bearings.
4. Backlash between the sector gear and ball nut.

10-B. STEERING GEAR REMOVAL

1. Raise the front end of the vehicle and support with stands.

2. Remove the front wheel.
3. Remove the cotter pin and castellated nut attaching the center link to the pitman arm.
4. Disconnect the center link from the pitman arm with the ball joint puller (49 0118 850C).

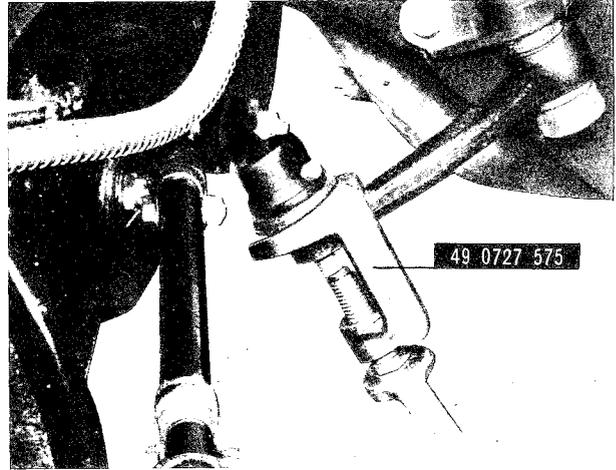


Fig. 10-1 Disconnecting center link

5. Remove the bolt securing the worm shaft to the steering joint.

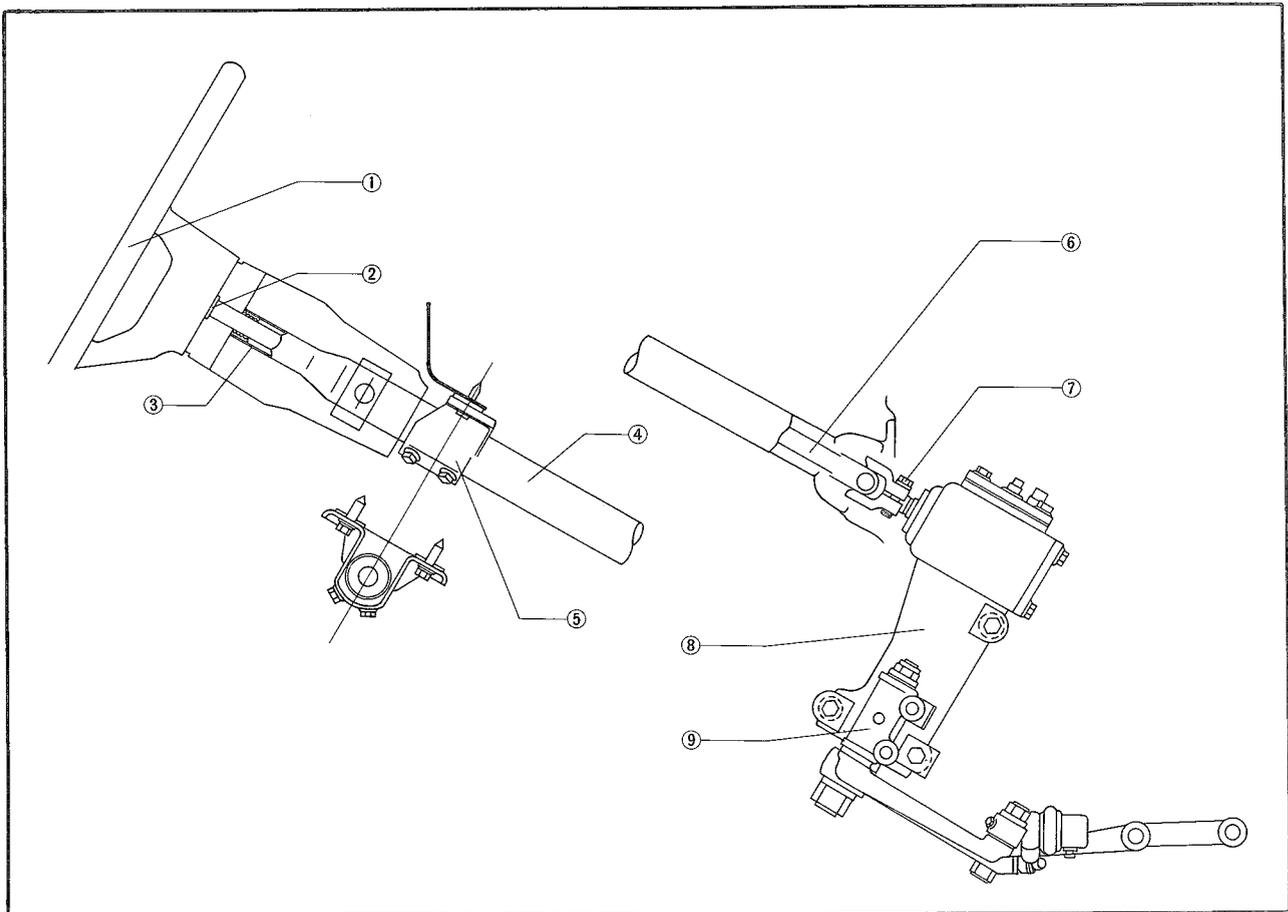


Fig. 10-2 Steering assembly

- | | | |
|-----------------------|-----------------|--------------------------|
| 1. Steering wheel | 4. Shaft jacket | 7. Bolt |
| 2. Stop ring | 5. Bracket | 8. Steering gear housing |
| 3. Shaft support bush | 6. Shaft ass'y | 9. Idler arm |



Fig. 10-3 Removing securing bolt

6. Remove the speedometer cable from the clips attached to the steering gear housing and the power brake unit.
7. Remove the bolts and nuts retaining the steering gear housing to the body.
8. Remove the gear housing assembly and the vehicle.

10-C. STEERING GEAR DISASSEMBLY

Before disassembling, thoroughly clean the outside surface of the steering gear housing.

1. Drain lubricant from the gear housing by removing the filler plug.
2. Hold the steering gear housing in a vise.
3. Remove the nut holding the pitman arm and remove the pitman arm with the puller (49 0223 965D).
4. Remove the sector shaft adjusting screw lock nut.
5. Remove the side cover attaching bolts, and remove the side cover and gasket by turning the adjusting screw clockwise through the cover.



Fig. 10-4 Removing side cover

6. Remove the adjusting screw and shim from the slot at the end of the sector shaft.
7. Carefully remove the sector shaft from the gear housing so as not to damage the bushes and oil seal.
8. Remove the bolts that attach the end cover to the gear housing and remove the end cover and shims.



Fig. 10-5 Removing sector shaft



Fig. 10-6 Removing end cover and adjusting shim

9. Remove the worm shaft and ball nut assembly from the gear housing.
10. Remove the oil seal from the gear housing, if necessary.

10-D. STEERING INSPECTION

1. Check the operation of the ball nut assembly on the worm shaft. If the ball nut does not travel smoothly and freely on the worm shaft and there is roughness, the ball nut and worm shaft assembly should be replaced.

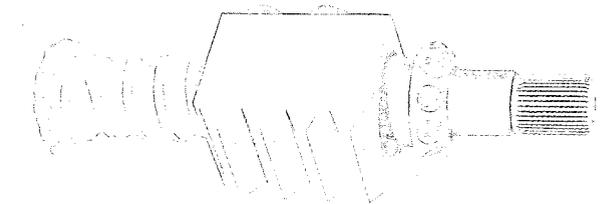


Fig. 10-7 Worm shaft and ball nut assembly

Note: The worm shaft and ball nut are serviced as an assembly only.

2. Check the worm bearings and cups for wear or any damage. If defective, replace with new ones.

3. Check the clearance between the sector shaft and the bores in the housing. If it exceeds **0.20 mm (0.008 in)**, replace the gear housing with new one.
4. Check the oil seal for wear, flaw, or any damage. If there is any possibility of oil leakage, replace the oil seal.

The shims are available in the following four thicknesses:

1.95 mm (0.077 in)	2.05 mm (0.081 in)
2.00 mm (0.079 in)	2.10 mm (0.083 in)

10-E. STEERING GEAR ASSEMBLY

1. Install the oil seal to the gear housing.
2. Insert the worm shaft and ball nut assembly into the gear housing.
3. Install the end cover and the preload adjusting shims to the gear housing, and adjust the worm bearing preload to **1.0 ~ 4.0 cm-kg (0.9 ~ 3.5 in-lb)**, as instructed in Par. 10-F-1.



Fig. 10-8 Installing end cover and adjusting shim

4. Install the adjusting screw into the slot at the end of the sector shaft. Check the end clearance with a feeler gauge, and adjust this clearance to be **0 ~ 0.1 mm (0 ~ 0.004 in)** by inserting appropriate shims.

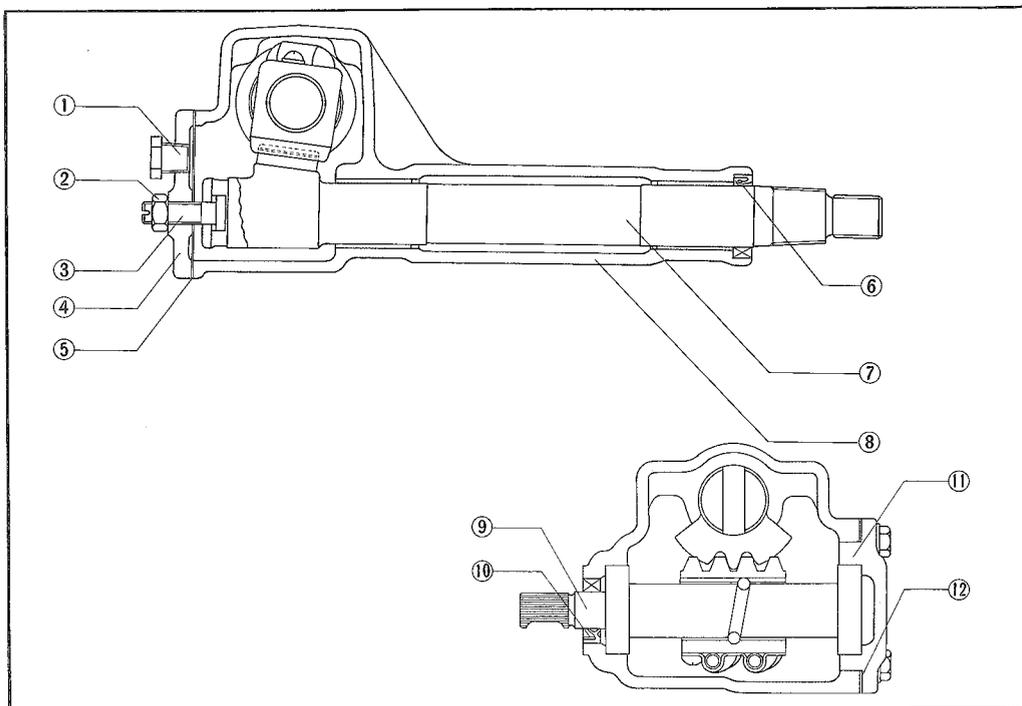


Fig. 10-11 Steering gear

1. Plug
2. Lock nut
3. Adjusting screw
4. Side cover
5. Gasket
6. Oil seal
7. Sector shaft
8. Steering gear housing
9. Worm shaft and ball nut assembly
10. Oil seal
11. End cover
12. Adjusting shim

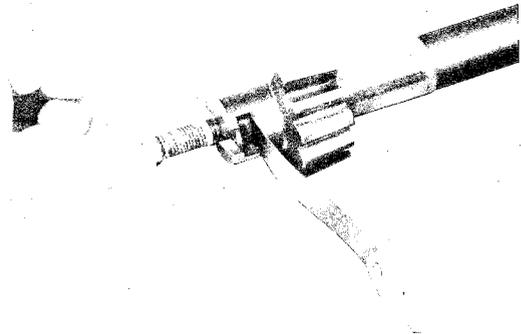


Fig. 10-9 Checking end clearance

5. Turn the worm shaft and place the rack in the center position of the worm in the gear housing.

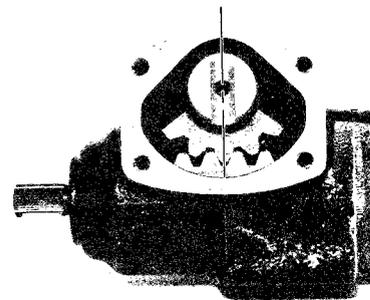


Fig. 10-10 Position of sector gear and worm gear

Insert the sector shaft and adjusting screw into the gear housing, being careful not to damage the bushes and oil seal, and ensuring that the center of the sector gear is in alignment with the center of the racks, as shown in Fig. 10-12.

6. Place the side cover and the gasket onto the adjusting screw and turn the adjusting screw counter-clockwise until it is screwed into proper position.

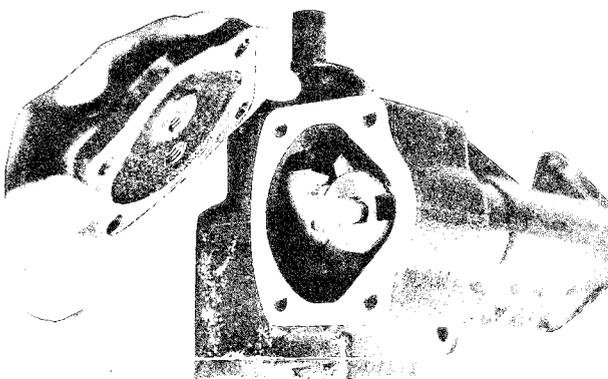


Fig. 10-12 Installing side cover

7. Install the side cover attaching bolts and tighten the bolts.

8. Adjust the backlash between the sector gear and rack, as explained in Par. 10-F-2.

9. Install the pitman arm onto the sector shaft, aligning the identification marks of the pitman arm and sector shaft. Install the pitman arm attaching nut

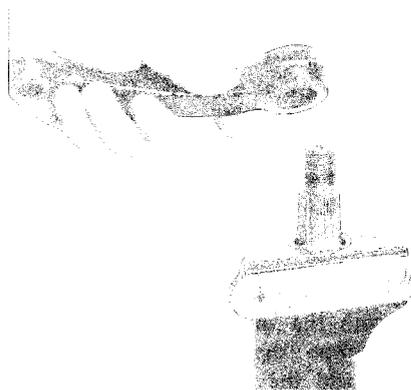


Fig. 10-13 Installing pitman arm

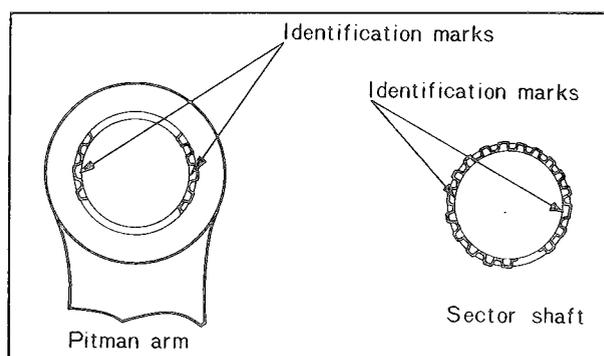


Fig. 10-14 Identification marks

and tighten the nut to 15.0 ~ 18.0 m-kg (108.0 ~ 130.0 ft-lb).

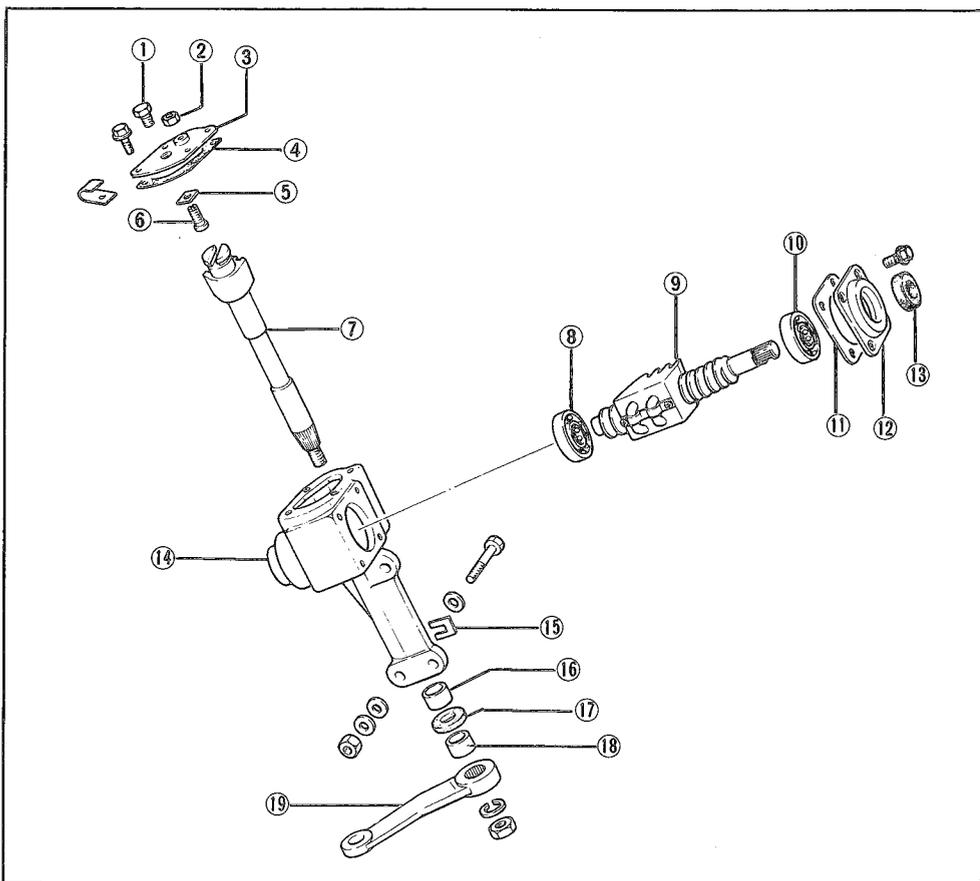


Fig. 10-15 Steering gear components

1. Oil plug
2. Lock nut
3. Side cover
4. Gasket
5. Thrust washer
6. Adjusting screw
7. Sector shaft
8. Bearing
9. Worm shaft and ball nut assembly
10. Bearing
11. Adjusting shim
12. End cover
13. Oil seal
14. Steering gear housing
15. Adjusting shim
16. Bush
17. Oil seal
18. Bush

10-F. STEERING GEAR ADJUSTMENT

10-F-1. Adjusting Worm Bearing Preload

To adjust the worm bearing preload, remove the steering gear from the vehicle. With a torque wrench, rotate the worm shaft and check the rotating torque. The rotating torque (preload) should be between 9 ~ 12 cm-kg (7.9 ~ 10.4 in-lb).

If the reading is not within the specifications, adjust the preload as follows:

1. Remove the column jacket attaching bolts and the end cover together with the shims.
2. If the preload is less than 9 cm-kg (7.9 in-lb), reduce the shim, and add the shim if the preload is more than 12 cm-kg (10.4 in-lb).

The following shims are available:

0.050 mm (0.0019 in)	0.070 mm (0.0027 in)
0.060 mm (0.0023 in)	0.080 mm (0.0031 in)

3. Install the end cover and recheck the worm bearing preload.

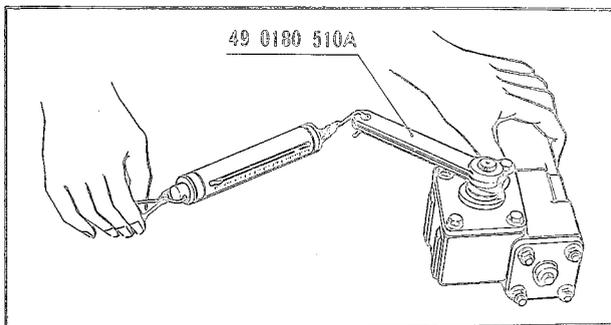


Fig. 10-16 Checking bearing preload

Note: The preload before installing the sector shaft should be between 1.0 to 4.0 cm-kg (0.9 to 3.5 in-lb). If the preload is checked with a spring scale and 10 cm length of attachment (49 0180 510A), as shown in Fig. 10-16, the reading should be 0.1 ~ 0.4 kg (0.22 ~ 0.88 lb).

10-F-2. Adjusting Sector Gear and Ball Nut Backlash

The sector shaft adjusting screw, installed in the side cover, raises or lowers the sector shaft to provide proper mesh between the tapered teeth of the sector gear and the rack of the ball nut.



Fig. 10-17 Adjusting backlash

This adjustment can be accurately made only after proper worm bearing preload has been established. Adjust the backlash as follows:

1. Turn the worm shaft gently and stop it at the center position.
2. Loosen the lock nut of the adjusting screw and screw in or out the adjusting screw until the correct adjustment is obtained. The standard backlash is 0 ~ 0.1 mm (0 ~ 0.004 in). This is equivalent to a movement of about 3 degrees of the worm shaft.
3. Tighten the adjusting screw lock nut securely.
4. Rotate the worm shaft and check to ensure that the sector shaft turns 40° smoothly to the right and left.

10-G. STEERING GEAR INSTALLATION

To install the steering gear assembly, reverse the procedure in Par. 10-B.

Note:

- a) The tightening torque for the bolts and nuts attaching the gear housing to the frame is 4.4 ~ 5.5 m-kg (32 ~ 40 ft-lb).
- b) When installing the steering wheel, align the marks on the steering wheel and column shaft, and tighten the steering wheel nut to 3.0 ~ 4.0 m-kg (22 ~ 29 ft-lb).
- c) Fill the gear housing with lubricant (A.P.I. Service GL-4 SAE 90) up to the level hole.

10-H. STEERING LINKAGE

10-H-1. Checking Ball Joints

1. Check the dust seal for wear, flaw or any damage. If the dust seal is defective, this will allow entry of water and dust resulting in ball joint wear. Replace the dust seal if necessary.
2. The end play of the ball stud is preadjusted at the factory to be from 0 ~ 0.25 mm (0 ~ 0.01 in). If it exceeds 1.0 mm (0.039 in), replace the ball joint in its assembled form.

10-H-2. Replacing Idler Arm

1. Raise the front end of the vehicle and support with stands. Remove the front wheel.

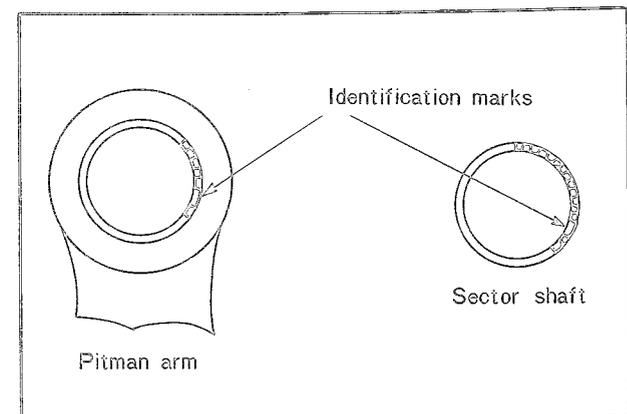


Fig. 10-18 Idler arm

2. Disconnect the center link from the idler arm by removing the split pin and nut and washer.
3. Remove the split pin, nut and washer attaching the idler arm to the bracket. Remove the idler arm from the bracket.
4. Check the bushes and replace if they are worn excessively.
5. Install the idler arm to the bracket and center link.
6. Lubricate the idler arm, as described in Par. 10-H-6.

10-H-3. Replacing Pitman Arm

1. Raise the front end of the vehicle and support with stands. Remove the front wheel.
2. Disconnect the center link at the pitman arm.
3. Remove the nut attaching the pitman arm to the sector shaft and remove the pitman arm with the puller (49 0223 695D).
4. Install the pitman arm onto the sector shaft, aligning the identification marks of the pitman arm and sector shaft. Tighten the nut to 15.0 ~ 18.0 m·kg (108.0 ~ 130.0 ft·lb).

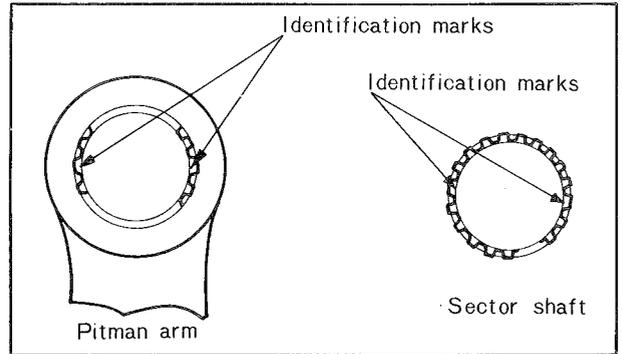


Fig. 10-19 Identification marks

5. Connect the center link to the pitman arm and tighten the nut to 3.0 ~ 4.5 m·kg (22 ~ 32 ft·lb). Install new split pin.

10-H-4. Replacing Tie-rod

1. Raise the front end of the vehicle and support with stands. Remove the front wheel.
2. Disconnect the tie-rod from the center link and

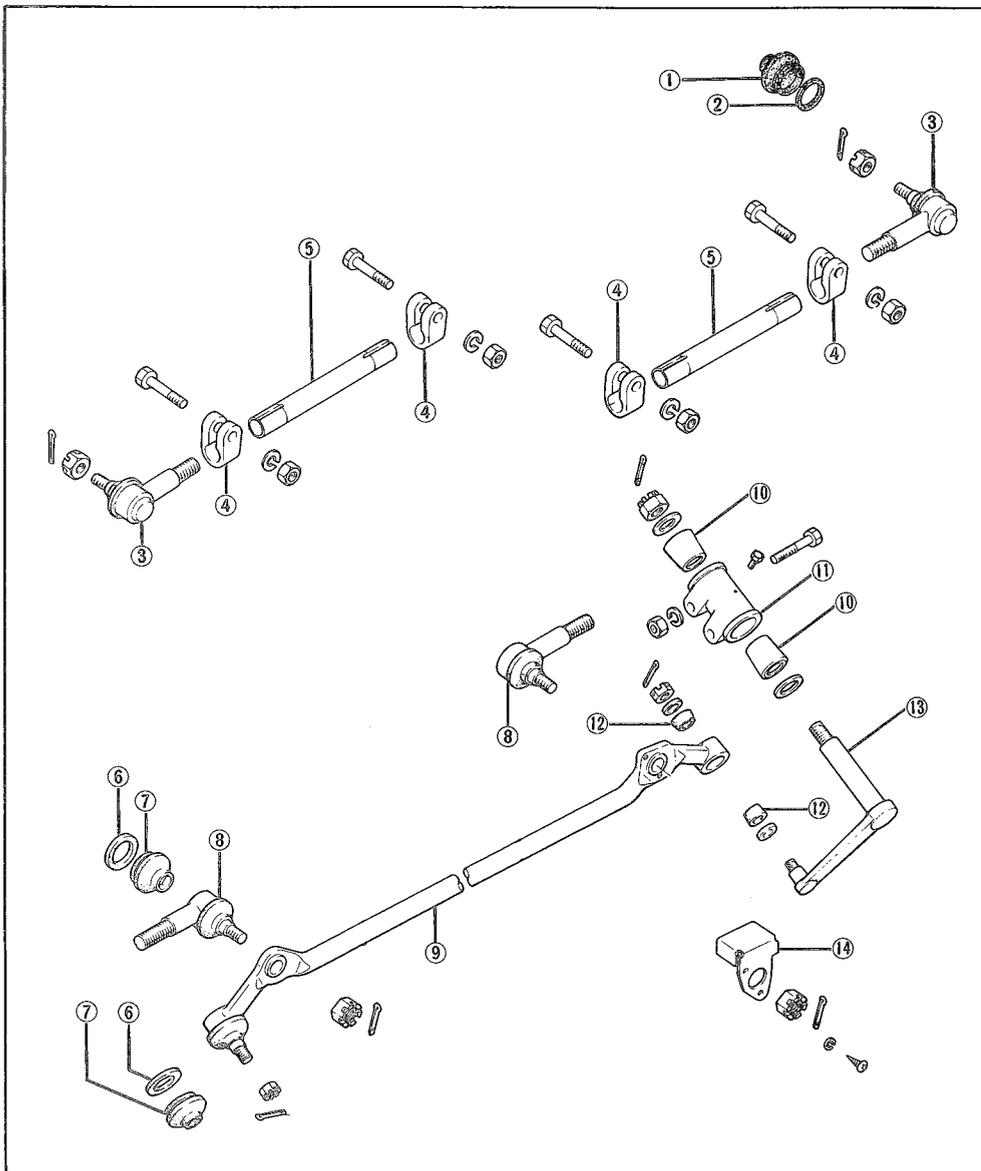


Fig. 10-20 Steering linkage

1. Dust seal
2. Dust seal ring
3. Ball joint
4. Tie rod clamp
5. Tie rod
6. Dust seal ring
7. Dust seal
8. Ball joint
9. Center link
10. Tapered bush
11. Idler bracket
12. Tapered bush
13. Idler arm
14. Insulator

knuckle arm by removing the split pins and nuts and by using the puller (49 0118 850C).

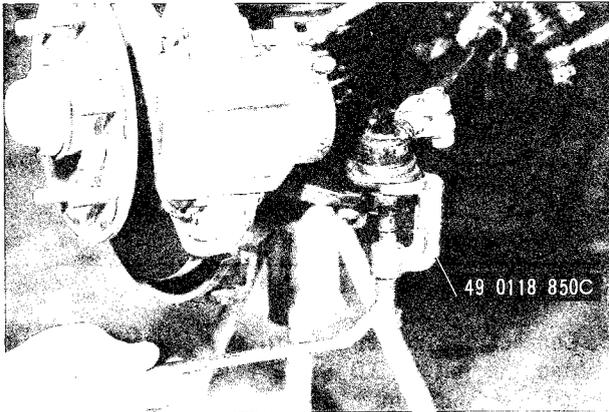


Fig. 10-21 Disconnecting tie-rod end

3. Install the tie-rod to the center link and knuckle arm.
4. Tighten the nuts to 3.0 ~ 4.5 m-k_g (22 ~ 32 ft-lb) and install new split pins.

Note: Whenever the tie-rod or ball joint is replaced, the toe-in must be reset.

10-H-5. Replacing Center Link

1. Raise the front end of the vehicle and support with stands. Remove the front wheels.
2. Remove the center link from both tie rods, pitman arm and idler arm by removing the split pins and nuts and by using the puller (49 0118 850C).
3. Install the center link to the pitman arm, idler arm and tie rods.
4. Tighten the nuts to 3.0 ~ 4.5 m-k_g (22 ~ 32 ft-lb) (center link to idler arm : 2.5 ~ 3.5 m-k_g = 18 ~ 25 ft-lb) and install new split pins.

10-H-6. Lubrication of Idler Arm

The idler arm should be lubricated at intervals, following the maintenance schedule. When lubrication becomes necessary, proceed as follows:

1. Remove the plug and install a grease nipple in stead.
2. Remove the split pin and loosen the nut holding the idler arm to the bracket.
3. Feed "Lithium Grease" through the nipple until new grease appears from the brim of the bush.
4. Tighten the nut to 4.5 ~ 6.5 m-k_g (33 ~ 47 ft-lb) and fit a new split pin.
5. Remove the grease nipple and reinstall the plug.
6. Grease to the other end of the idler arm in the same manner described above.

Note: The tightening torque of the nut is 4.5 ~ 6.5 m-k_g (33 ~ 47 ft-lb).

7. Wipe off excess grease around the idler arm.

10-H-7. Lubrication on Ball Joints

The ball joints for the steering linkage are filled with lithium grease and are completed sealed which require no lubrication service.

10-I. FRONT WHEEL ALIGNMENT

10-I-1. Inspection Before Checking Front Wheel Alignment

Proper alignment of the front wheels must be maintained in order to ensure steering stability and satisfactory tire life. Before checking or correcting the front wheel alignment, the following points which will affect steering should be inspected.

1. Check the tire inflation and bring to recommended pressure.
2. Inspect the front wheel bearing adjustment and correct if necessary.
3. Inspect the wheel and tire run-out and balance.
4. Inspect the ball joints of the front suspension and steering linkage for any excessive looseness.
5. The vehicle must be on level ground and have no luggage or passenger load.

10-I-2. Toe-in

Toe-in is the difference in the distance between the front wheels, measured at the front and at the rear of the tires, the standard toe-in is 0 ± 3 mm (0 ± 0.12 in).

Check and adjust the toe-in as follows:

1. Raise the front end of the vehicle until the wheels clear the ground.
2. Turning the wheels by hand, mark a line in the center of each tire tread by using a scribing block.
3. Lower the vehicle and place the front wheels in the straight-ahead position.

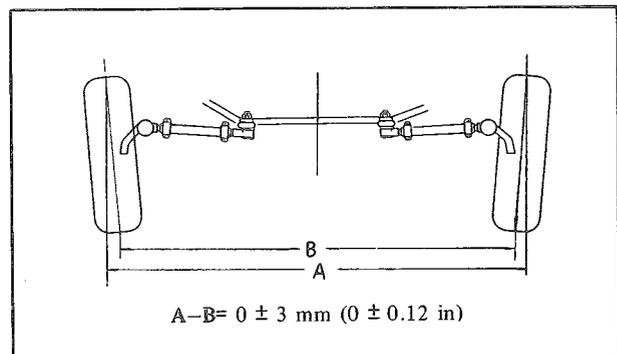


Fig. 10-22 Toe-in

4. Measure the distance between the marked lines at the front and rear of the wheels. Both measurements must be taken at equal distances from the ground.

If the distance between the wheels at the rear is greater than that at the front by 0 ± 3 mm ($0 \sim 0.12$ in), it is correct.

If it is found to be incorrect, adjust the toe-in by loosening the clamps and turning the tie rods.

Note: The cramps on the tie-rods must be positioned as Fig. 10-23 to prevent interference with the center link when the toe-in is readjusted.

10-I-3. Camber

Camber is the outward tilting of the front wheel at the top from the vertical as shown in Fig. 10-24. The

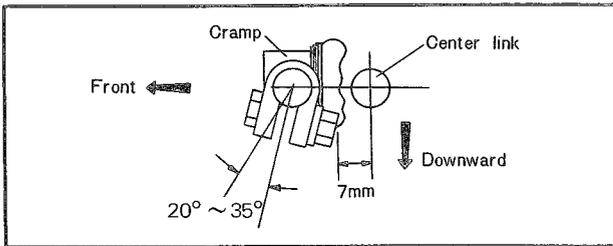


Fig. 10-23 The tightening position of clamp

standard camber angle is $15' \pm 20'$. To check the camber, use a wheel aligning gauge in accordance with the manufacturer's instructions. The camber is adjusted by adding or subtracting the shim between the upper arm shaft and the support bracket. The shims are available in thicknesses of 1.0, 1.6, 2.0 and 3.2 mm (0.039, 0.063, 0.079 and 0.126 in).

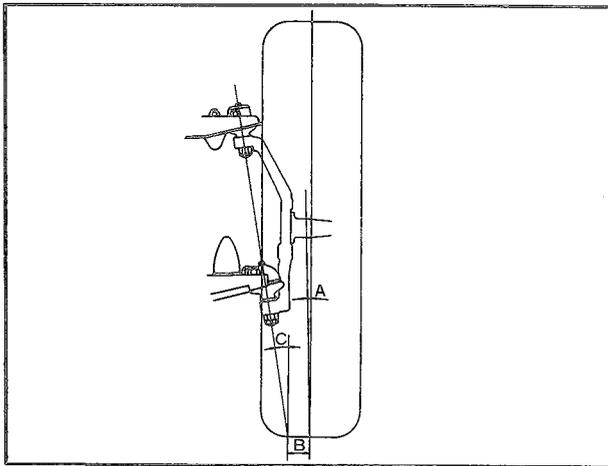


Fig. 10-24 Camber and king pin inclination

- A. Camber
- B. Camber trail
- C. King pin inclination

10-1-4. Caster

Caster is the inclination of the upper ball joint to wards the rear of the vehicle. The standard caster angle is $1^{\circ}12' \pm 20'$.

To check the caster, use a wheel aligning gauge following the manufacturer's instructions. If found incorrect, adjust the shims between the upper arm shaft and the support bracket or turn the upper arm shaft until the correct adjustment is obtained.

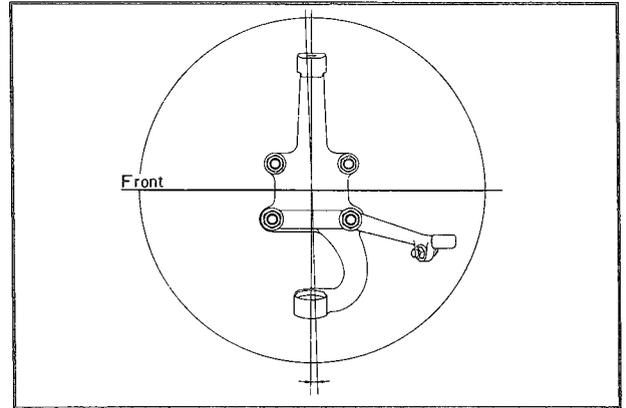


Fig. 10-25 Caster

10-1-5. Adjusting Turning Angle

The turning angle stop screws are located at the steering knuckle. Using a turntable, check that the front wheels turn $33^{\circ}18'$ inward and $32^{\circ}26'$ outward. If necessary, adjust the turning angle by the stop screws.

SPECIAL TOOLS

49 0118 850C	Ball Joint puller
49 0180 510A	Preload checking tool
49 0223 695D	Pitman arm puller



BRAKES

DESCRIPTION	11 : 1
11-A. BRAKE PEDAL ADJUSTMENT	11 : 1
11-A-1. Pedal Height Adjustment	11 : 1
11-A-2. Free Travel Adjustment	11 : 1
11-B. REAR BRAKE ADJUSTMENT	11 : 1
11-C. AIR BLEEDING	11 : 1
11-D. BRAKE MASTER CYLINDER	11 : 2
11-D-1. Removing Brake Master Cylinder	11 : 2
11-D-2. Disassembling Brake Master Cylinder	11 : 2
11-D-3. Checking Brake Master Cylinder	11 : 3
11-D-4. Assembling Brake Master Cylinder	11 : 3
11-D-5. Installing Brake Master Cylinder	11 : 4
11-E. POWER BRAKE UNIT	11 : 4
11-E-1. Checking Power Brake Unit on Car	11 : 4
11-E-2. Removing Power Brake Unit	11 : 4
11-E-3. Disassembling Power Brake Unit	11 : 4
11-E-4. Checking Power Brake Unit	11 : 6
11-E-5. Assembling Power Brake Unit	11 : 6
11-E-6. Installing Power Brake Unit	11 : 7
11-F. CENTRALIZING BRAKE FAIL INDICATOR	11 : 7
11-G. HYDRAULIC LINES	11 : 7
11-H. FRONT BRAKE	11 : 8
11-H-1. Replacing Disc Brake Shoes	11 : 8
11-H-2. Removing Caliper	11 : 9
11-H-3. Disassembling Caliper	11 : 9
11-H-4. Checking Caliper	11 : 9
11-H-5. Assembling Caliper	11 : 9
11-H-6. Installing Caliper	11 : 10
11-H-7. Checking Brake Disc	11 : 10
11-H-8. Removing Brake Disc	11 : 10
11-H-9. Installing Brake Disc	11 : 11
11-I. BEAR BRAKE	11 : 11
11-I-1. Removing Rear Brake Shoes	11 : 11
11-I-2. Inspecting Rear Brake	11 : 11
11-I-3. Installing Rear Brake Shoes	11 : 12
11-I-4. Removing and Disassembling Rear Wheel Cylinder	11 : 12
11-I-5. Checking Rear Wheel Cylinder	11 : 13
11-I-6. Assembling and Installing Rear Wheel Cylinder	11 : 13
11-J. PARKING BRAKE ADJUSTMENT	11 : 13
SPECIAL TOOLS	11 : 13

DESCRIPTION

The brakes consist of two systems, the foot brake, and the parking brake. The front brakes are of a disc brake type.

The rear brakes are of a drum type with leading and trailing shoes. The brake pedal is of a pendant type.

The parking brake operates the brake shoes of the rear wheels through the wire linkage.

11-A. BRAKE PEDAL ADJUSTMENT**11-A-1. Pedal Height Adjustment**

The pedal height from the floor, as shown in Fig. 11-1, should be 187.0 mm (7.36 in). To adjust the pedal height, proceed as follows:

1. Disconnect the wires from the stop lamp switch.
2. Loosen the lock nut and turn the stop lamp switch until the correct pedal height is obtained.
3. Tighten the lock nut.

11-A-2. Free Travel Adjustment

There should always be a free pedal travel from 8.5 to 10.0 mm (0.33 to 0.39 in) before the piston in the power brake unit operates. To adjust the free travel, proceed as follows:

1. Loosen the lock nut and turn the push rod connected to the brake pedal until the specified free travel is obtained.
2. Tighten the lock nut.

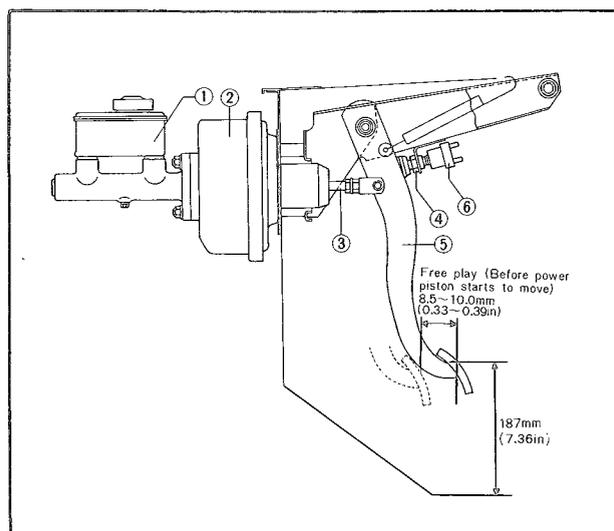


Fig. 11-1 Adjusting brake pedal

- | | |
|---------------------|----------------------|
| 1. Master cylinder | 4. Lock nut |
| 2. Power brake unit | 5. Brake pedal |
| 3. Push rod | 6. Stop light switch |

11-B. REAR BRAKE ADJUSTMENT

When the rear brakes require adjustment, proceed as follows:

1. Jack up the rear end of the vehicle until the wheels are free to turn. Then, support with stands.
2. Make sure that the parking brake lever is fully released.

3. Remove the shoe adjusting hole plugs from the back of the backing plate.

4. Insert a screwdriver into the star wheel. With an inward force to the screw driver, rotate the star wheel toward the center of the brake drum until the wheel is locked. Then, back off the star wheel 5 notches so that the drum rotates freely without drag.

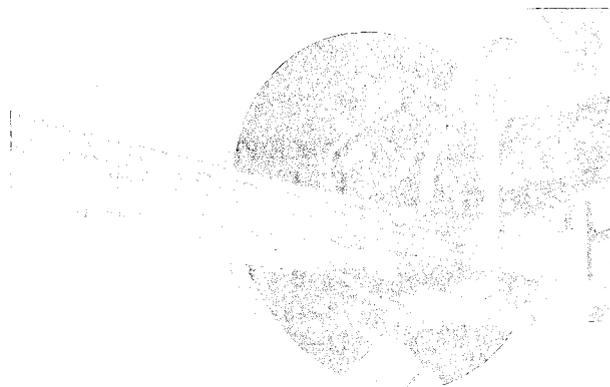


Fig. 11-2 Rear brake adjustment

5. Repeat the above adjustment on each wheel cylinder of each wheel. The adjustments must be the same on all wheels.

6. Install the adjusting hole plugs.

11-C. AIR BLEEDING

Whenever the fluid line is disconnected, the wheel cylinder or master cylinder is overhauled, or air enters the system, air bleeding must be carried out.

If a pressure bleeding equipment is available, it would be easier to use. The front and rear hydraulic brake systems are individual systems and are bled separately.

Note:

- a) During bleeding operation, the reservoir of the master cylinder must be kept at least 3/4 full of the brake fluid.
- b) Do not mix low temperature brake fluid with the specified fluid during the bleeding operation.
- c) Never re-use brake fluid which has been drained from the hydraulic system.
- d) Do not use the secondary piston stop bolt, located on the side of the master cylinder to bleed the brake system.

Loosening or removing this bolt could result in damage to the secondary piston or stop bolt.

1. Remove the rubber cap from the bleeder screw and attach a vinyl tube to the bleeder screw.
2. Place the end of the vinyl tube in the glass jar and submerge in brake fluid.
3. Open the bleeder valve. Depress the brake pedal a full stroke and allow it to return slowly. Continue this pumping action until air bubbles cease to appear in the jar.

4. When bleeding operation is completed, close the bleeder valve, remove the vinyl tube and fit the cap to the bleeder screw.



Fig. 11-3 Front air bleeding

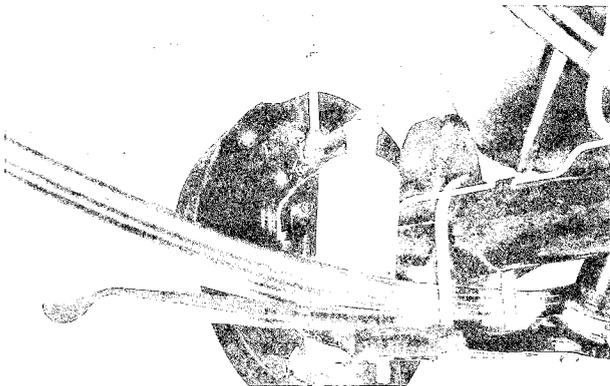


Fig. 11-4 Rear air bleeding

5. Centralize the brake fail indicator as described in Par. 11-F.

11-D. BRAKE MASTER CYLINDER

11-D-1. Removing Brake Master Cylinder

1. Disconnect the fluid pipes at the master cylinder outlets.
2. Remove the nuts that attach the master cylinder to the power brake unit.
3. Remove the master cylinder assembly from the power brake unit.

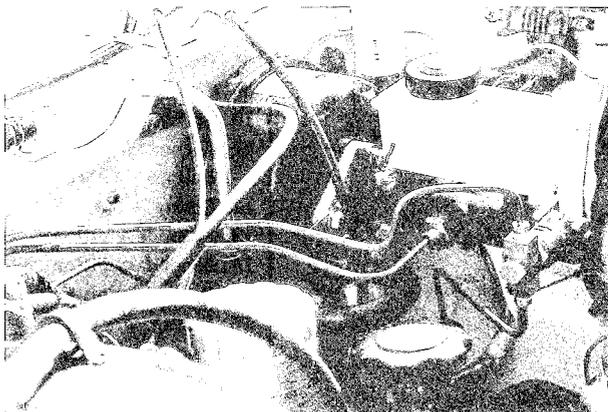


Fig. 11-5 Removing brake master cylinder

Note: Never allow the brake fluid to drop on any painted surface.

11-D-2. Disassembling Brake Master Cylinder

1. Clean the outside of the master cylinder thoroughly and drain the brake fluid.
2. Separate the reservoir from the cylinder body by removing the two attaching screws from the end of the cylinder body and then lifting the reservoir away from the two rubber grommets in the cylinder body. Remove the two grommets.
3. Using a screwdriver, remove the piston stop ring from the cylinder. Remove the stop washer.

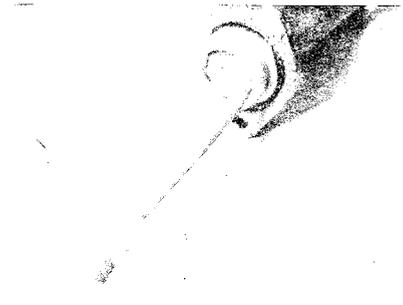


Fig. 11-6 Removing snap ring

4. Remove the primary piston, cups, spacer and spring seat assembly and return spring from the cylinder.



Fig. 11-7 Removing primary piston

5. Loosen the secondary piston stop bolt. **Do not** remove it.

6. Pushing in the secondary piston with a screwdriver, remove the stop bolt and insert the guide pin in its

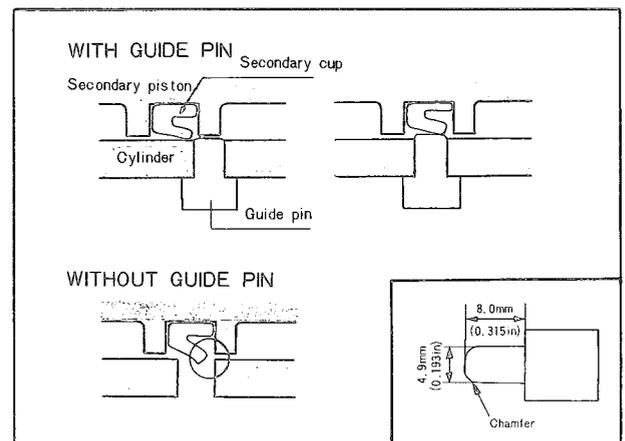


Fig. 11-8 Piston guide pin

place. Then, gradually take out the screwdriver and remove the secondary piston and cups assembly and return spring from the cylinder.

If necessary, blow out with compressed air from the outlet hole.

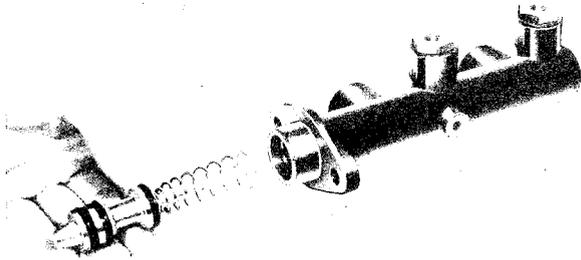


Fig. 11-9 Removing secondary piston

7. Remove the fluid pipe fittings and gaskets from the cylinder, and then remove the check valves and springs.

11-D-3. Checking Brake Master Cylinder

1. Wash the parts in clean alcohol or brake fluid. **Never use gasoline or kerosene.** Blow the parts dry with compressed air.
2. Check the piston cups and replace if they are damaged, worn, softened, or swelled.
3. Examine the cylinder bore and pistons for wear, roughness or scoring.
4. Check the clearance of the cylinder bore and pistons. If it is **more than 0.15 mm (0.006 in)**, replace the cylinder or piston.
5. Ensure that the compensating ports on the cylinder are open.

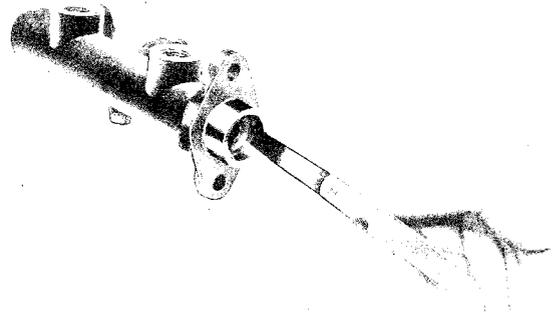


Fig. 11-10 Checking piston clearance

11-D-4. Assembling Brake Master Cylinder

1. Dip the pistons and cups in clean brake fluid.
2. Fit the check valve springs and check valves into the outlet holes. Install the pipe fittings and gaskets to the outlet holes. Tighten the fittings to **6.0 ~ 7.0 m-kg (43 ~ 51 ft-lb)**.

Note: Be sure to fit the valve which has a hole in the center of it to the front side outlet hole (disc brake).

3. Fit the secondary cup and primary cup onto the piston.
4. Fit the guide pin, as shown in Fig. 11-6, into the stop bolt hole and insert the piston assembly and return spring into the cylinder. With a screwdriver push the piston as far as it will go, remove the guide pin, and install the stop bolt and washer.
5. Fit the primary cup and secondary cup onto the primary piston.
6. Insert the return spring and the primary piston assembly.
7. Install the stop washer and piston stop ring.

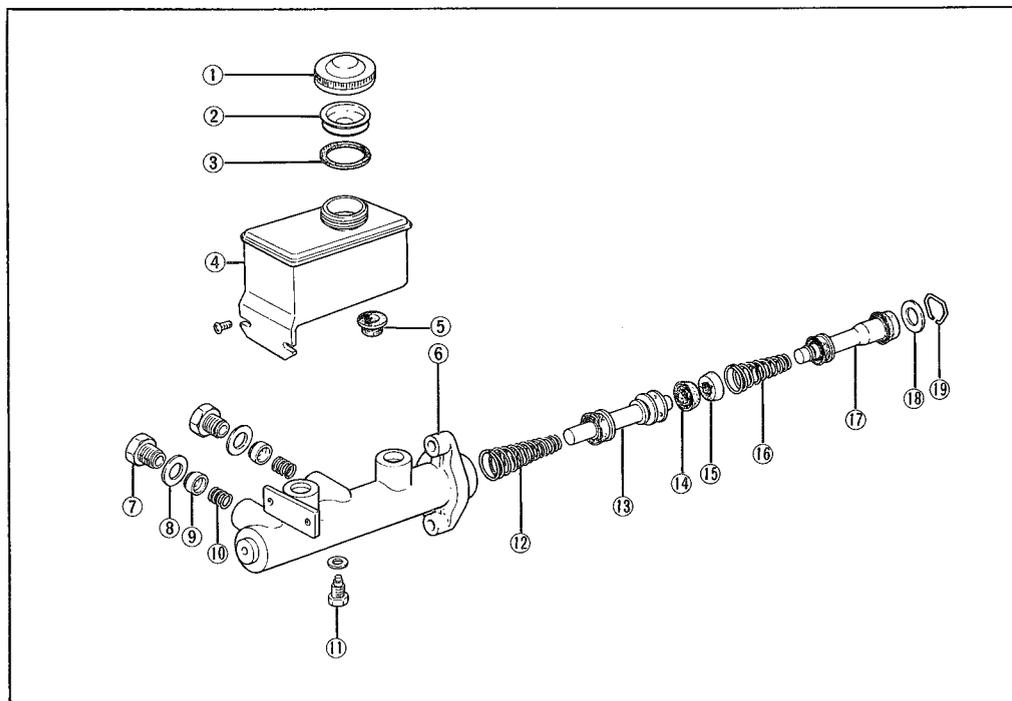


Fig. 11-11

Brake master cylinder
Components

1. Reservoir cap
2. Fluid baffle
3. Packing
4. Reservoir
5. Bush
6. Cylinder
7. Joint bolt
8. Gasket
9. Check valve
10. Spring
11. Secondary piston stop bolt and "O" ring
12. Spring
13. Secondary piston
14. Secondary piston cup
15. Secondary piston cup
16. Spring
17. Primary piston
18. Stop washer
19. Snap ring

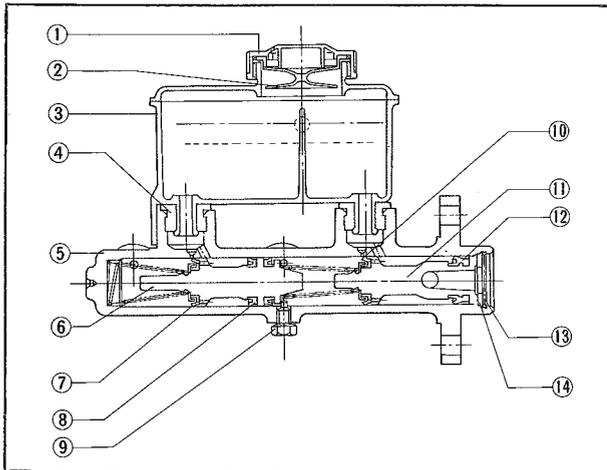


Fig. 11-12 Brake master cylinder cross section

- | | |
|---------------------|--------------------|
| 1. Reservoir cap | 8. Secondary cup |
| 2. Fluid baffle | 9. Stop bolt |
| 3. Reservoir | 10. Primary cup |
| 4. Bush | 11. Primary piston |
| 5. Cylinder | 12. Secondary cup |
| 6. Secondary piston | 13. Stop wire |
| 7. Primary cup | 14. Stop washer |

Note: Make sure that the piston cups do not cover the compensating ports.

8. Install the unions, washers and connector bolts to the master cylinder inlets and tighten connector bolts.
 9. Install the two grommets in the cylinder body.
 10. Position the reservoir on the cylinder body so that the reservoir outlet tubes are seated in the grommets and install the reservoir to cylinder body attaching screws.

11-D-5. Installing Brake Master Cylinder

To install the master cylinder, carry out the removing operation in the reverse order. After installing, bleed the brake system, referring to Par. 11-C, and check for proper brake operation.

11-E. POWER BRAKE UNIT

11-E-1. Checking Power Brake Unit on Car

1. Road test the brakes by making a brake application at about 30 km (20 miles) to determine if the vehicle stops evenly and quickly. If pedal has a spongy feel when applying brakes, air may be present in hydraulic system. Bleed the system as described in Par. 11-C.
2. With the engine stopped and transmission in neutral, apply brakes several times to deplete all vacuum reserve in the power brake unit. Depress brake pedal, hold light-foot pressure on the pedal and start the engine. If vacuum system is operating, pedal will tend to fall away under foot pressure and less pressure will be required to hold pedal in applied position. If no action is felt, vacuum system is not functioning.
3. Stop the engine. Again deplete all vacuum reserve in system. Depress the brake pedal and hold foot pressure on the pedal. If pedal gradually falls away

under foot pressure, hydraulic system is leaking internally or externally.

4. Start the engine with brakes off and transmission in neutral. Run the engine to medium speed and turn off ignition switch. Immediately close throttle. This builds up vacuum. Wait no less than 90 seconds, then try brake action. If not vacuum-assisted for two or more applications, vacuum check valve is faulty or there is a leak in vacuum system.

11-E-2. Removing Power Brake Unit

1. Remove the brake master cylinder, as described in Par. 11-D-1.
2. Disconnect the vacuum hose at the power brake unit.
3. Disconnect the push rod from the brake pedal by removing the cotter pin at the fork end.

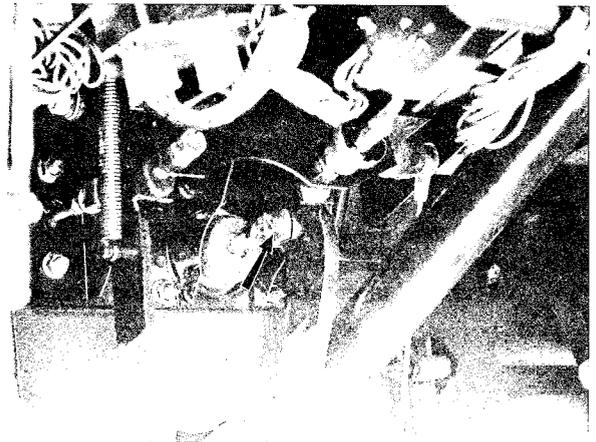


Fig. 11-13 Removing cotter pin

4. Remove the nuts that attach the power brake unit to the dash panel.
5. Remove the power brake unit from the dash panel.

11-E-3. Disassembling Power Brake Unit

1. Place the power brake unit in a vice with push rod up. Clamp the unit firmly on the flange.
2. Scribe a mark on the bottom center of the front and rear shells to facilitate reassembly.
3. Remove the fork end, lock nut and dust boot.

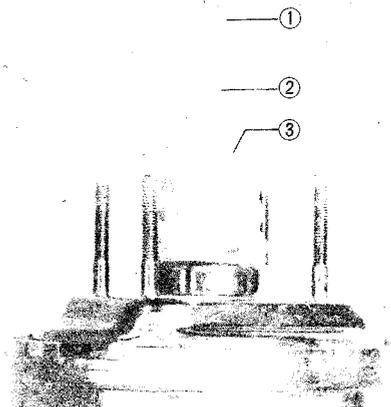


Fig. 11-14 Removing boot

1. Fork end
2. Lock nut
3. Boot

4. Attach the wrench (49 6500 090) to the studs of the rear shell as shown in Fig. 11-15. Rotate the rear shell clockwise to unlocked position.

Note: Loosen the rear shell carefully as it is spring-loaded.



Fig. 11-15 Removing rear shell

5. Lift the rear shell, diaphragm and power piston assembly, valve rod and plunger assembly from the unit. Then, remove the return spring.

6. Remove the diaphragm and power piston assembly, valve rod and plunger assembly from the rear shell.

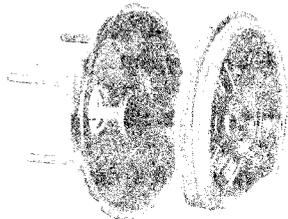


Fig. 11-16 Removing power piston assembly

Note: Do not remove the rear seal from the rear shell unless the seal is defective and a new seal is available. To remove the rear seal, support the rear shell and drive out the rear seal with a punch or a screwdriver.

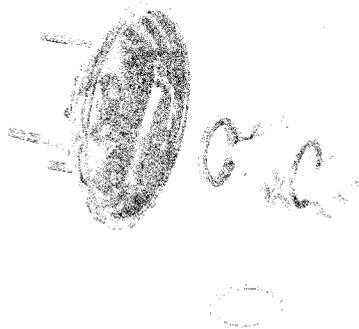


Fig. 11-17 Removing rear seal

7. Remove the diaphragm from the power piston.



Fig. 11-18 Removing diaphragm

8. Remove the air silencer with the air filter from the power piston, being careful not to chip plastic.

9. Press in on the valve rod to remove the valve retainer key. Remove the valve rod and plunger assembly.

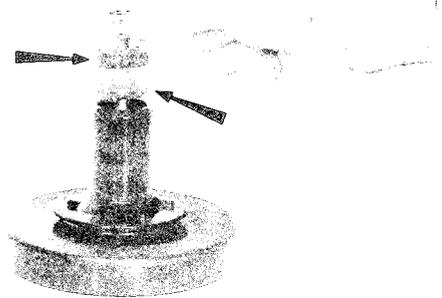


Fig. 11-19 Removing air filter

Note: The valve rod and plunger are serviced as an assembly only.

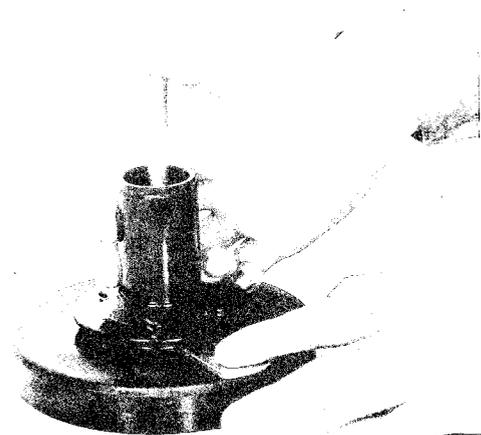


Fig. 11-20 Removing retainer key

10. Press the reaction disc out of the power piston.
11. Remove the push rod from the front shell.

12. Remove the front seal from the front shell if necessary.



Fig. 11-21 Reaction disc

11-E-4. Checking Power Brake Unit

1. Inspect all rubber parts. Wipe free of fluid and carefully inspect each rubber part for cuts, nicks

or other damage.

2. Check the power piston for cracks, distortion, chipping and damaged seats.

3. Inspect the reaction disc for deterioration of rubber.

4. Check the valve rod and plunger for all seats to be smooth and free of nicks and dents. Replace with a new one if defective.

5. Inspect the front and rear shells for scratches, scores, pits, dents or other damage.

6. Check the diaphragm for cuts, or other damage.

11-E-5. Assembling Power Brake Unit

1. Apply power brake lubricant to the inner surface of the tube section of the power piston and to the surfaces of the valve rod and plunger.

2. Insert the valve rod and plunger assembly into the tube section of the power piston.

3. Press down on the valve rod and align the groove in the valve plunger with the slot of the power piston. Insert the valve retainer key.

4. Install the diaphragm on the power piston making certain the diaphragm is seated in the groove.

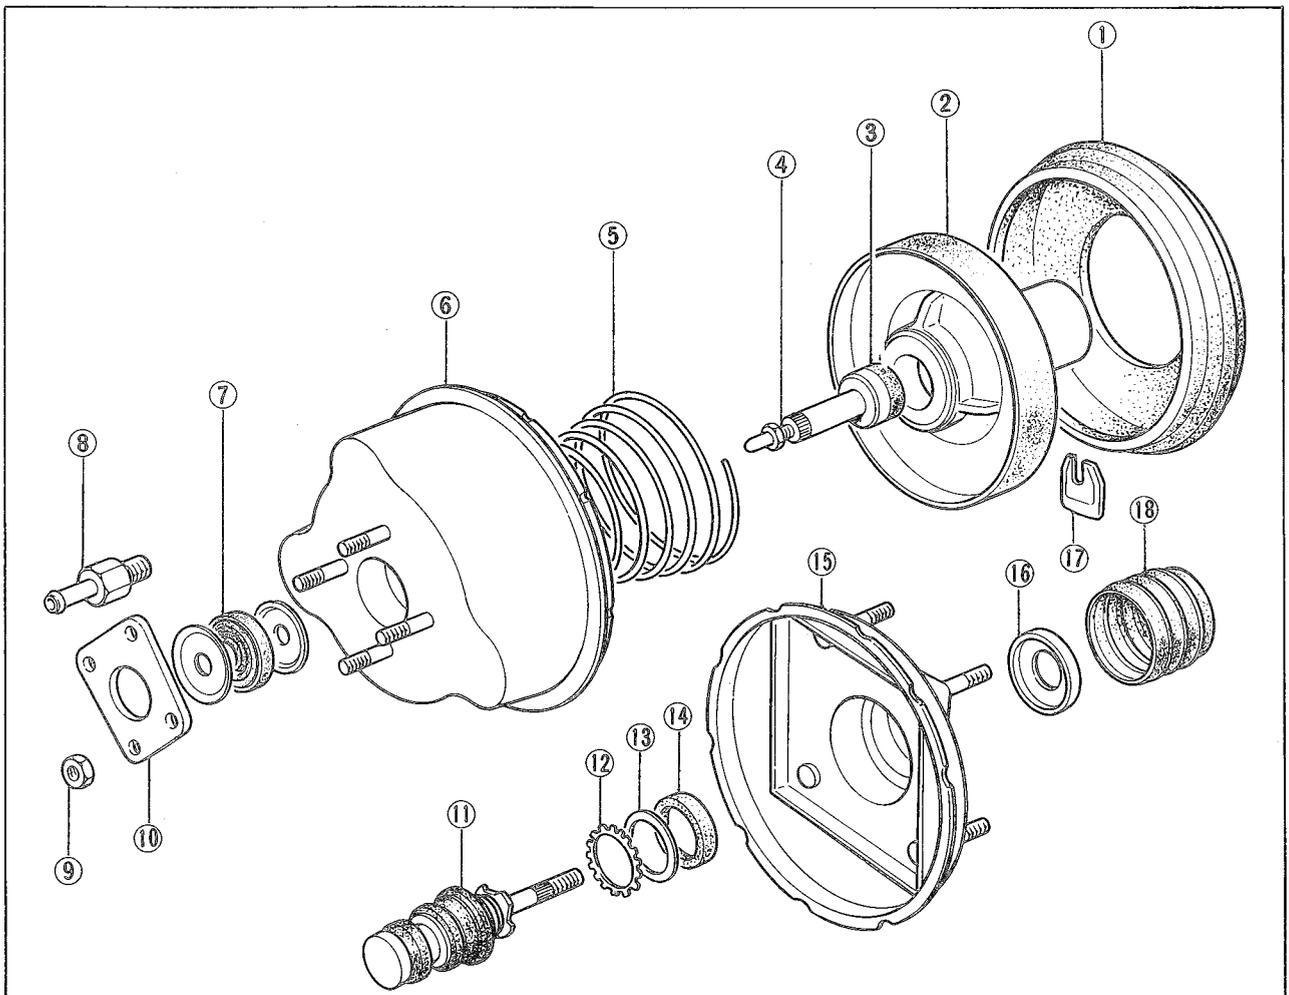


Fig. 11-22 Power brake unit components

- | | | | |
|-------------------------|----------------|------------------------------------|---------------------------|
| 1. Diaphragm | 6. Front shell | 11. Valve rod and plunger assembly | 16. Air silencer retainer |
| 2. Plate and valve body | 7. Front seal | 12. Retainer | 17. Retainer key |
| 3. Reaction disc | 8. Check valve | 13. Bearing | 18. Boot |
| 4. Push rod | 9. Nut | 14. Valve body seal | |
| 5. Spring | 10. Flange | 15. Rear shell | |

5. Assemble the air filter and the air silencer over the rod and position in the power piston.
6. Apply power brake lubricant liberally to the entire surface of the reaction disc and install the reaction disc into the power piston.
7. Coat the outer bead of the diaphragm with power brake lubricant where it bears against the outer rims of the front and rear shells to aid in assembly.
8. Apply power brake lubricant to the seal in the rear shell and carefully guide the tube end of the power piston, through the seal in the rear shell.
9. Install the push rod to the front of the power piston.
10. Install the return spring on the front shell.
11. Install the rear shell assembly onto the front shell by using the wrench to rotate the rear shell counter-clockwise until scribe marks align.

Note: Press the rear shell down firmly, maintaining a pressure until the shell flanges are fully locked.

12. Install the dust boot down against the rear shell.
13. Install the fork end and lock nut.

11-E-6. Installing Power Brake Unit

Install the power brake unit in the reverse order of removing.

After installing the unit, bleed the hydraulic system according to the procedure described in Par. 11-C and check for proper brake operation.

Note: The clearance between the primary piston and the push rod of the power brake unit should be 0.1 ~ 0.5 mm (0.004 ~ 0.020 in). If the original push rod remains in the original unit, the adjustment is required. If the parts are replaced with new ones, adjust the clearance by loosening the lock nut and turning the push rod.

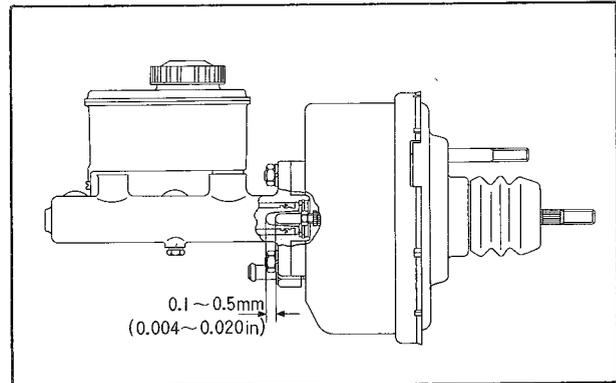


Fig. 11-23 Clearance between piston and rod

11-F. CENTRALIZING BRAKE FAIL INDICATOR

After any repair or bleeding of the front or rear brake system, the brake warning light will usually continue to be illuminated due to the brake fail indicator remaining in the off center position. To centralize the brake fail indicator, turn off the warning light after a repair operation.

1. Turn the ignition switch to the ON position.
2. Check the fluid level in the master cylinder reservoir and fill them to 3/4 full of the brake fluid.
3. Depress the brake pedal and the piston will center itself causing the brake warning light to go out.
4. Turn the ignition switch to the OFF position.
5. Before driving the vehicle, check operation of the brakes and be sure that a firm pedal is obtained.

11-G. HYDRAULIC LINES

Inspect all brake lines for any leakage with the foot brakes applied. Check all brake pipes, hoses and connections for signs of chafing, deterioration or any other damage.

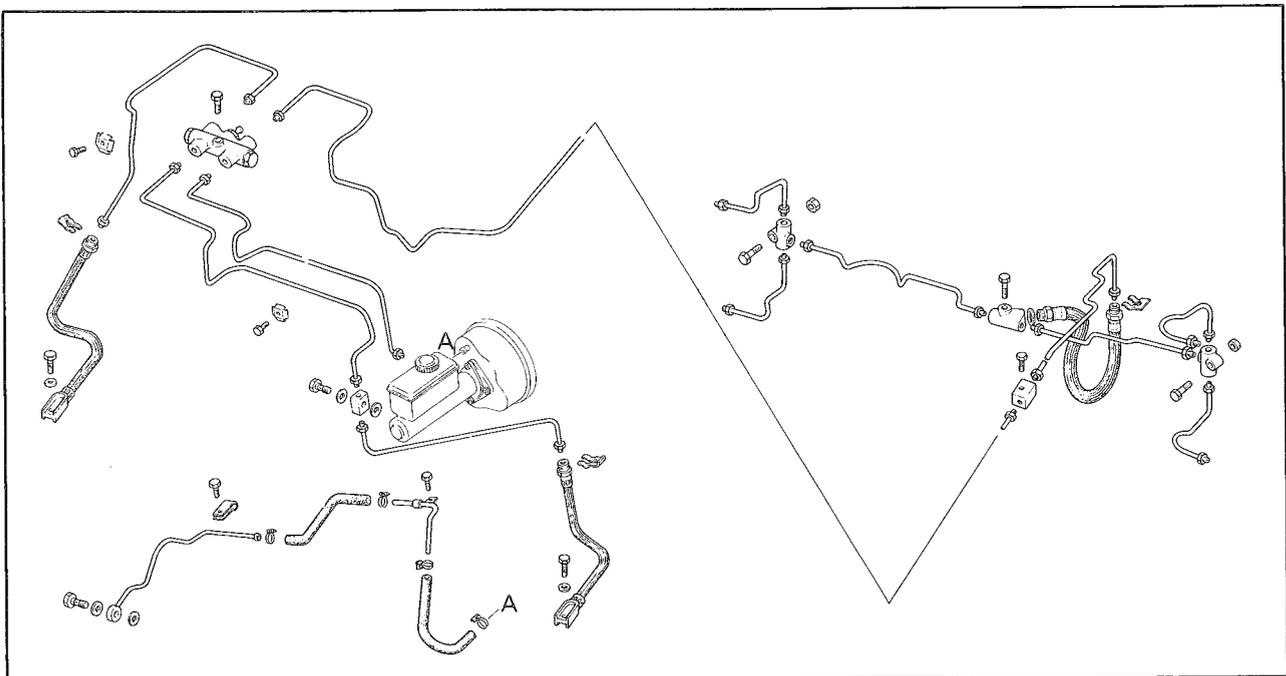


Fig. 11-24 Hydraulic lines

11-H. FRONT BRAKE

11-H-1. Replacing Disc Brake Shoes

The lining should be inspected at intervals following the maintenance schedule. The shoe and lining assembly should be replaced, if the thickness of the shoe and lining is 7.0 mm (0.276 in) or less due to wear. To replace the disc brake shoes, proceed as follows:

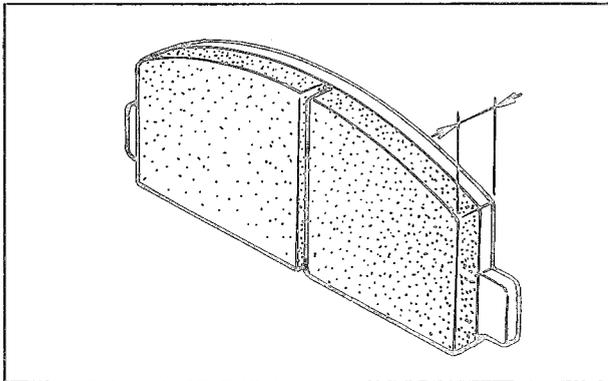


Fig. 11-25 Checking lining thickness

1. Raise the front end of the vehicle and support with stands.
2. Remove the front wheel.
3. Remove the locking clips and pull out the stopper plates.



Fig. 11-26 Removing hair pin retainers

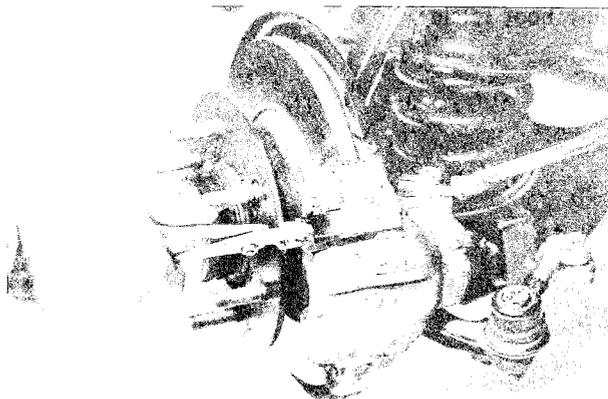


Fig. 11-27 Removing stopper plates

4. Remove the caliper and anti-rattle spring.

Note: It is not necessary to remove the brake pipe when replacing the brake shoe. But do not allow the caliper to hang from the brake pipe, as damage may occur.

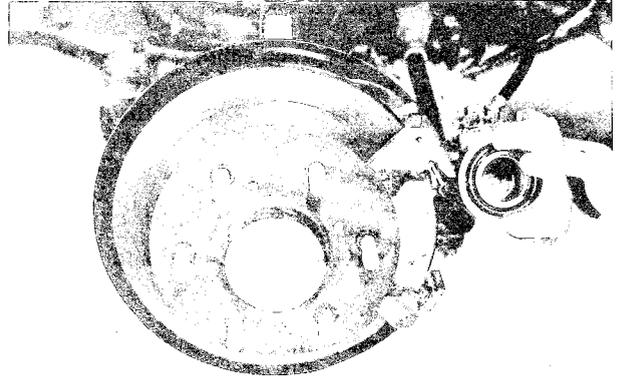


Fig. 11-28 Removing caliper

5. Remove the brake shoes and shims.

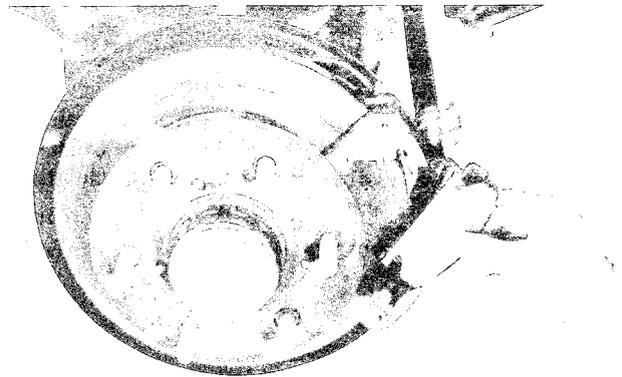


Fig. 11-29 Removing brake shoe

6. Remove the rubber cap from the bleeder screw, and connect a vinyl tube to the bleeder screw. Submerge the other end of the vinyl tube into a suitable container.

7. Open the bleeder valve and press the piston into the cylinder with the piston retracting tool (49 0221 600C).

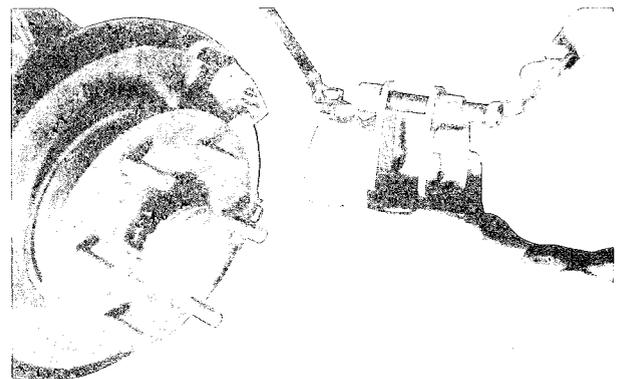


Fig. 11-30 Piston retracting tool

8. Tighten the bleeder screw and remove the vinyl tube and retracting tool.
9. Install new brake shoes and shims.

Note:

- a) When the disc brake shoes are replaced, replace all shoes on both wheels at the same time.
- b) Do not mix different types of linings when replacing

- 10. Install the anti-rattle spring, caliper, stopper plates and locking pins.
- 11. Install the front wheel and tighten the bolts to 9.0 ~ 10.0 m·kg (65 ~ 72 ft·lb). Lower the vehicle.
- 12. Top up the reservoir with brake fluid as necessary.

11-H-2. Removing Caliper

- 1. Raise the front end of the vehicle and support with stands.
- 2. Remove the front wheel.
- 3. Disconnect the brake fluid pipes at the fender apron. Plug the end of the fluid pipe to prevent entrance of dirt and loss of fluid.
- 4. Remove the clip and disconnect the brake fluid pipe at the front shock absorber.
- 5. Remove the caliper, as described in Par. 11-H-1.

11-H-3. Disassembling Caliper

- 1. Clean the outside of the caliper.
- 2. Remove the retainer and dust boot from the caliper.
- 3. Place a hardwood in the caliper pit in order to avoid damage, gradually blow compressed air from the fluid pipe hole and remove the piston.



Fig. 11-31 Removing piston

Note: If the piston is seized and cannot be forced from the caliper, tap lightly around the piston while

applying air pressure.

- 4. Remove the piston seal from the caliper bore.
- 5. Remove the bleeder screw, if necessary.

11-H-4. Checking Caliper

- 1. Clean the disassembled parts in clean brake fluid or alcohol. Never use gasoline or kerosene. Blow the parts dry with compressed air.
- 2. Inspect the caliper bore and piston for scoring, scratches or rust. If any of these conditions is found, replace with new piston or caliper. Minor damage can be eliminated by means of polishing with crocus cloth.
- 3. The piston seal and dust boot should be replaced with new ones every time repair work is carried out on the brake caliper.

11-H-5. Assembling Caliper

- 1. Apply brake fluid to the piston seal and install it into the groove of the caliper bore.

Note: Be sure that the piston seal does not become twisted and it is seated fully in the groove.

- 2. Lubricate the piston and caliper bore with brake fluid.
- 3. Insert the piston into the caliper bore.



Fig. 11-33 Inserting piston

- 4. Install the dust boot by setting the flange squarely in the inner groove of the caliper bore. Install the dust boot retainer.



Fig. 11-32 Removing piston seal

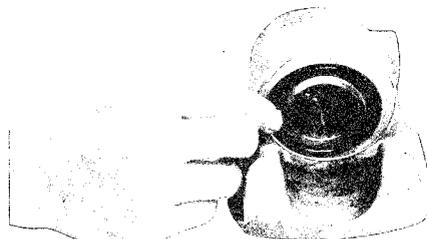


Fig. 11-34 Installing retainer

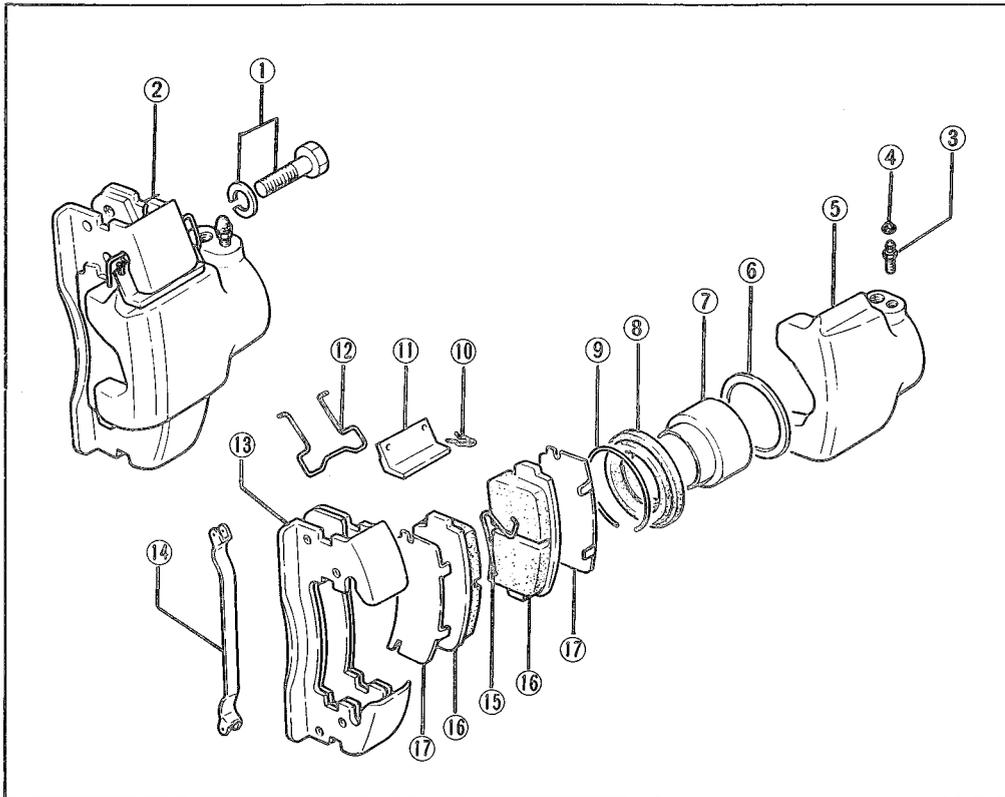


Fig. 11-35

- Caliper components
1. Bolt and washer
 2. Caliper assembly
 3. Bleeder screw
 4. Bleeder cap
 5. Caliper body
 6. Piston seal
 7. Piston
 8. Dust boot
 9. Boot retainer
 10. Hair pin retainer
 11. Stopper plate
 12. Spring
 13. Caliper bracket
 14. Anti-rattle spring clip
 15. Anti-rattle spring
 16. Brake shoe and lining assembly
 17. Shim

11-H-6. Installing Caliper

Install the caliper in the reverse order of removing and bleed the hydraulic system, referring to Par. 11-C.

11-H-7. Checking Brake Disc

1. Inspect the friction surfaces of the disc and recondition if they are scored, scratched or rusted.
 2. Check the lateral run-out of the disc with a dial indicator, as shown in Fig. 11-36.
- If the run-out is more than 0.10 mm (0.0039 in), reface the disc.

Note: Make certain that the wheel bearings are correctly adjusted and the disc is fitted securely on the hub, before checking the run-out of the disc.

When refacing the disc, remove only so much material as is necessary to clean up the disc.

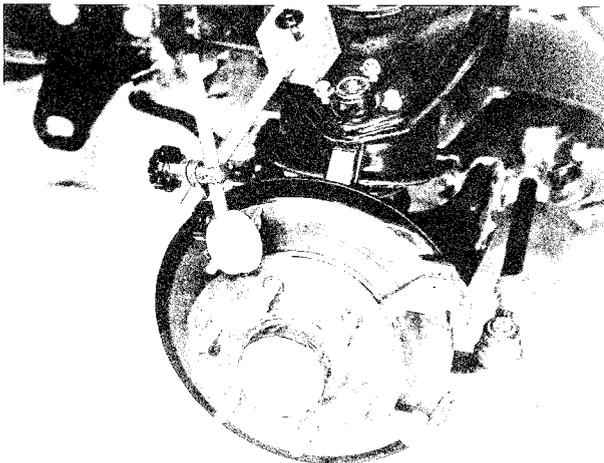


Fig. 11-36 Checking brake disc run-out

The thickness of the disc after refacing must not be less than 11 mm (0.433 in).

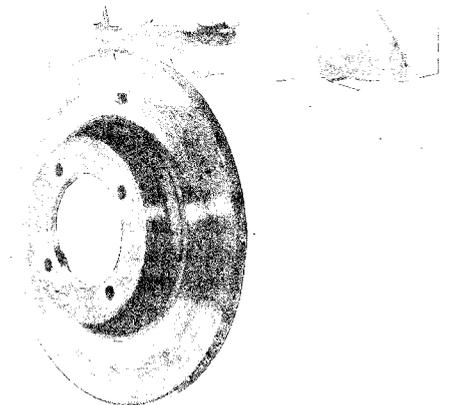


Fig. 11-37 Checking brake disc thickness

11-H-8. Removing Brake Disc

Before removing the brake disc, check the lateral run-out of the brake disc, as detailed in Par. 11-H-7.

1. Raise the front end of the vehicle and support with stands.

2. Remove the front wheel.

3. Remove the bolts attaching the caliper bracket and remove the caliper and bracket assembly. Attach the caliper and bracket assembly to the coil spring with a piece of wire.

Note: Never allow the caliper assembly hang from the brake pipe as damage may occur.

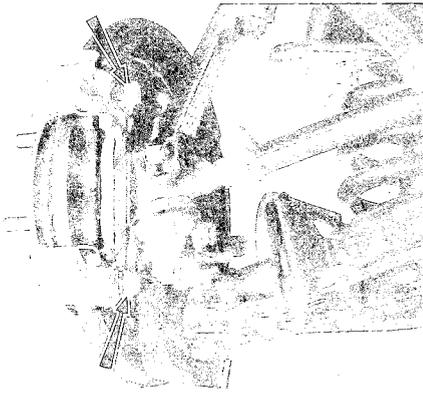


Fig. 11-38 Removing caliper assembly

4. Remove the grease cap, split pin, nut lock and bearing adjusting nut.
5. Remove the thrust washer and outer bearing from the wheel hub.
6. Slide the wheel hub and brake disc assembly off the spindle.
7. Place the wheel hub and brake disc assembly in the vise equipped with soft jaws.
8. Mark the position of brake disc and wheel hub.
9. Remove the attaching bolts and separate the brake disc from the wheel hub. Do not drive it off.

11-H-9. Installing Brake Disc

Carry out the removing operation in the reverse order. After installing, adjust the bearing preload, as instructed in Par. 12-F-5.

11-I. REAR BRAKE

11-I-1. Removing Rear Brake Shoes

1. Raise the rear end of the vehicle and support with stands.
2. Remove the rear wheel.
3. Make sure that the parking brake is fully released.
4. Remove the drum attaching screws and fit them into the tapped holes and screw them in evenly to force the drum away from the axle shaft flange.

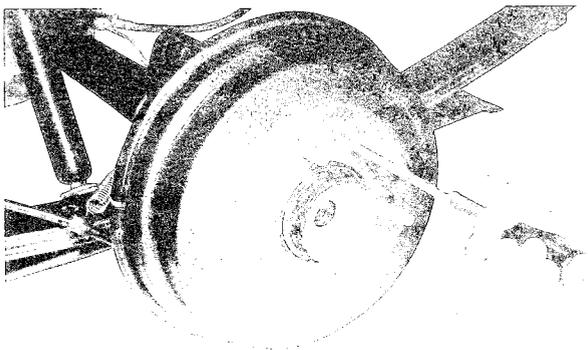


Fig. 11-39 Removing brake drum

5. Remove the brake shoe return springs.
6. Remove the primary brake shoe retaining spring

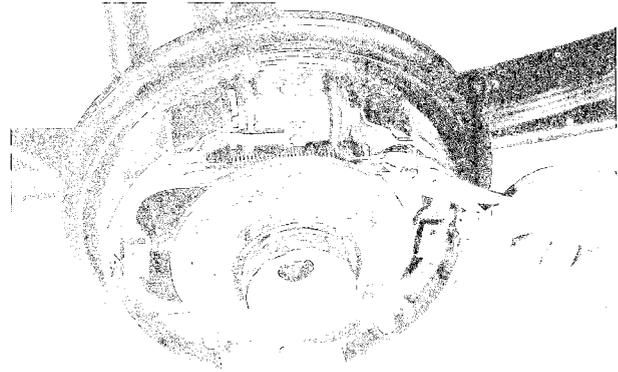


Fig. 11-40 Removing return spring

and turning the guide pin 90 degrees. Then, remove the primary brake shoe and adjustable parking brake strut rod.

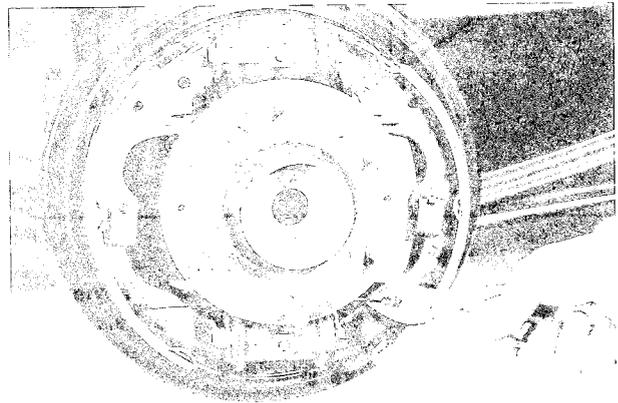


Fig. 11-41 Removing shoe hold-down spring

7. Remove the secondary brake shoe retaining spring and guide pin as instructed in Step 6 and remove the secondary brake shoe.
8. Disengage the parking brake cable from the operating lever on the secondary brake shoe.

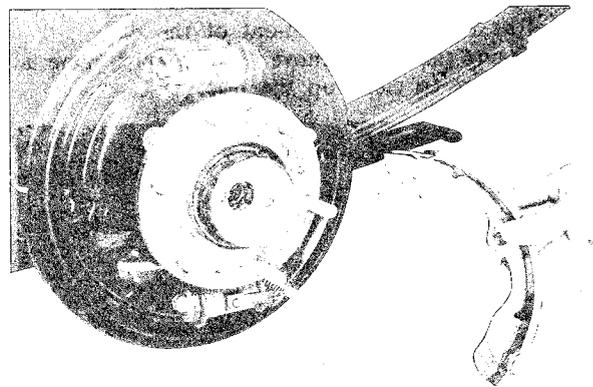


Fig. 11-42 Removing secondary brake shoe

11-I-2. Inspecting Rear Brake

a. Inspecting brake drum

Inspect the brake drum and recondition if it is rough or scored.

Check the out of roundness with a dial indicator. If it is 0.15 mm (0.0059 in) or more, reface the drum. When refacing the drum, remove only so much material as is necessary to obtain a smooth surface on the drum.

The inner diameter of the drum after refacing must not be more than 261 mm (10.2758 in).

b. Inspecting brake linings

1. Check the brake linings and replace with new parts if the linings are badly burned or worn.

2. Examine the lining contact pattern. For inspection, chalk the entire inner surface of the drum and slide the lining along the chalked surface.

The lining should show a uniform contact across the entire width, extending from toe to heel. Shoes having sufficient lining but improper contact should be re-ground to obtain proper contact.

3. If oil or grease is evident on the lining, wash off the oil or grease with a suitable solvent. Then, correct the cause of the leakage. However, if the lining is saturated with oil or grease, replace it.

c. Inspecting wheel cylinders

Examine whether the exterior of the wheel cylinder boots is wet with brake fluid. Excessive amounts of fluid at this point indicate leakage past the piston cups. Therefore, the wheel cylinder must be overhauled.

d. Inspecting brake lines

Inspect all brake lines for leakage with the foot brake applied. Check all brake pipes, hoses, and connections for signs of chafing, deterioration, or other damage.

11-I-3. Installing Rear Brake Shoes

Follow the removal procedure in the reverse order.

Note: Adjust the brake shoe clearance as described in Par. 11-B.

11-I-4. Removing and Disassembling Rear Wheel Cylinder

1. Remove the rear brake shoes, as described in Par. 11-I-1.

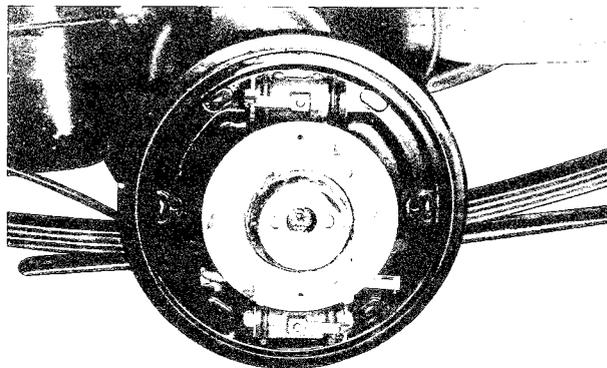


Fig. 11-43 Removing wheel cylinder

2. Disconnect the brake fluid pipe at the rear wheel cylinder, using the spanner (49 0259 770A). Plug the end of the brake fluid pipe.

3. Remove the nuts attaching the rear wheel cylinder to the backing plate. Remove the rear wheel cylinder.

4. Remove the dust boots and pistons from both ends of the cylinder.

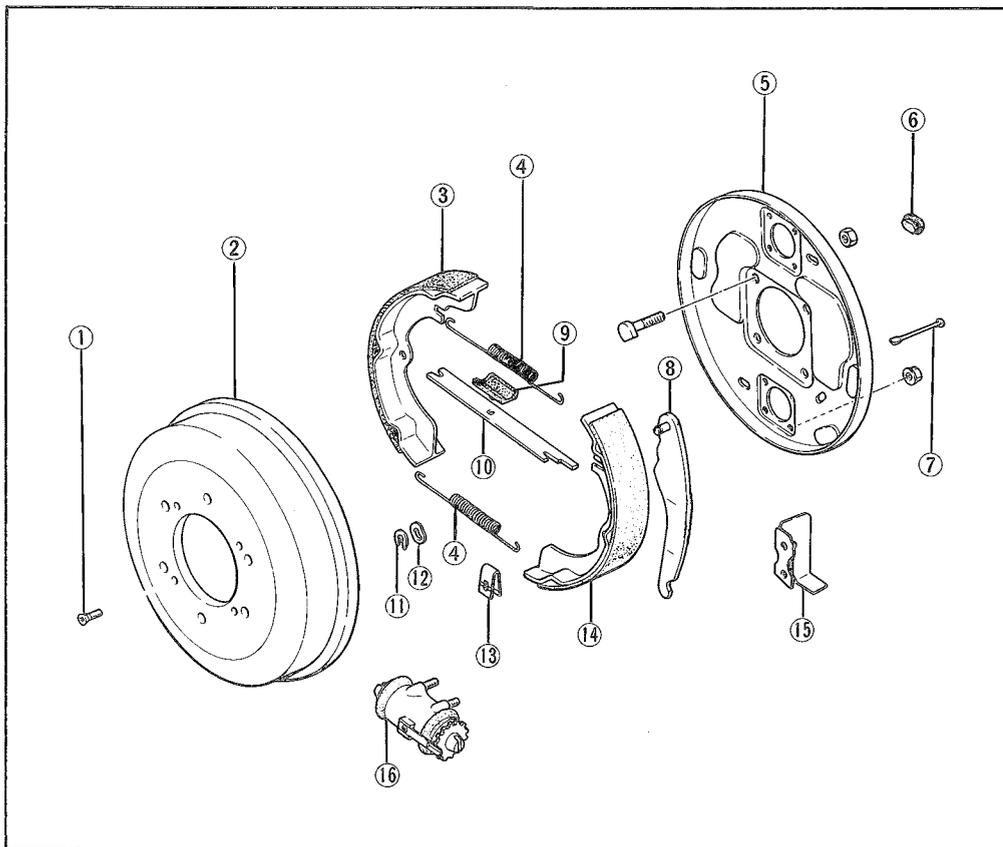


Fig. 11-44

Rear brake components

1. Screw
2. Drum
3. Brake shoe
4. Shoe return spring
5. Backing plate
6. Plug
7. Guide pin
8. Parking brake opening lever
9. Strut holder
10. Parking brake strut
11. Clip
12. Wave washer
13. Retaining spring
14. Brake shoe
15. Brake pipe guard
16. Wheel cylinder

5. Press in the piston cup and force out the piston cups, filling blocks and return spring.
6. Remove the bleeder screw and steel ball, if necessary.

11-I-5. Checking Rear Wheel Cylinder

1. Wash all parts in clean alcohol or brake fluid. Never use gasoline or kerosene.
2. Examine the cylinder bore and piston for wear, roughness or scoring.
3. Check the clearance between the cylinder and the piston. If it is more than 0.15 mm (0.006 in), replace with new parts.
4. Inspect the piston cups for wear, softening, swelling or any damage. If any of these conditions exists, replace the cups.

11-I-6. Assembling and Installing Rear Wheel Cylinder

1. Apply clean brake fluid to the cylinder bore, pistons and piston cups.
2. Install the piston cup into the cylinder with the flat side outward.
3. Install the filling block, return spring, filling block, piston cup and pistons in sequence.
4. Install the dust boots.
5. Install the steel ball and bleeder screw into the bleeder hole.
6. Install the wheel cylinder to the backing plate. Connect the fluid pipe and tighten the nut securely with the spanner (49 0259 770A).
7. Install the brake shoes and drum, as described in

Par. 11-I-3.

8. Bleed the brake lines as detailed in Par. 11-C.

11-J. PARKING BRAKE

11-J-1. Parking Brake Adjustment

The service brake must be properly adjusted before adjusting the parking brake.

Adjust the length of the front cable with the adjusting nut on the end of the front cable so that the brake is locked when the parking brake lever is pulled 5 to 10 notches [40 ~ 80 mm (1.6 ~ 3.1 in)].

After adjustment, apply the parking brake several times, then release and make sure that the rear wheels rotate freely without dragging.



Fig. 11-46 Adjusting parking brake

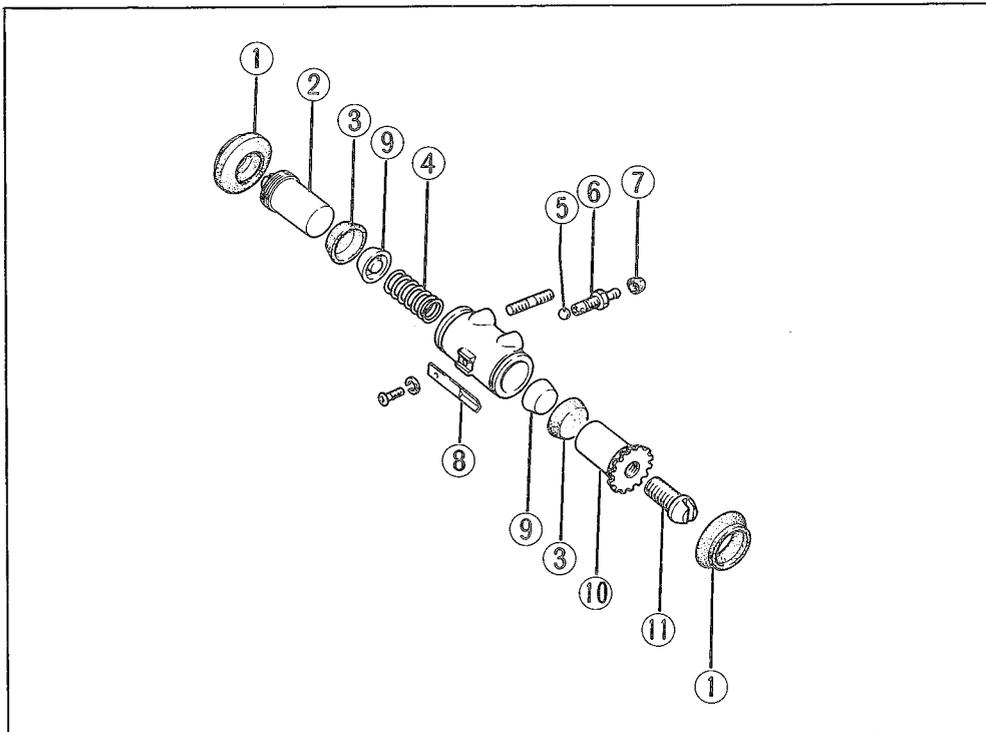


Fig. 11-45 Wheel cylinder component

1. Boot
2. Piston
3. Piston cup
4. Spring
5. Steel ball
6. Bleeder screw
7. Bleeder cap
8. Spring
9. Filling block
10. Adjuster
11. Screw

SPECIAL TOOLS

49 0221 600C
49 6500 090

Piston expanding tool
Wrench for power brake unit

WHEELS AND TIRES

12-A.	INFLATION OF TIRES	12 : 1
12-B.	TIRE ROTATION	12 : 1
12-C.	CHANGING WHEELS	12 : 1
12-D.	WHEEL AND TIRE RUN-OUT	12 : 2
12-E.	WHEEL BALANCING	12 : 2
12-F.	FRONT WHEEL HUB AND BEARINGS.....	12 : 2
	12-F-1. Checking Front Wheel Bearing on Car	12 : 2
	12-F-2. Removing Front Wheel Hub and Bearings	12 : 2
	12-F-3. Inspecting Front Wheel Hub and Bearings	12 : 3
	12-F-4. Installing Front Wheel Hub and Bearings	12 : 3
	12-F-5. Adjusting Front Wheel Bearings	12 : 3
12-G.	REAR WHEEL BEARING	12 : 4

12-A. INFLATION OF TIRES

Maintenance of correct inflation pressure is one of the most important elements of tire care.

Excessive inflation pressure will cause:

1. Hard rides
2. Damage to tire carcass
3. Poor traction
4. Premature tread wear in center of tire

Low inflation pressure will cause:

1. Hard steering
2. Rapid and uneven wear on the edges of tire tread
3. Increased cord fatigue or broken tire cords
4. High tire temperature
5. Blow outs

Check the inflation pressure with a reliable gauge when the tires are cold.

The standard pressure is as follows:

7.35-14-6PR (Tubeless)	Front	Rear
	24psi	36psi

After checking or inflating the pressure, place the valve cap back on and tighten by hand. It helps to maintain the air pressure in the tires in case of any

valve leak and keeps dust and water out of the valve.

12-B. TIRE ROTATION

To equalize wear and make a set of tires last longer, it is recommended that the tires be rotated, as shown in Fig. 12-1 at intervals following the maintenance schedule.

When rotating the tires, check for signs of abnormal wear and bulging and any stone, nail, glass, etc. should be removed.

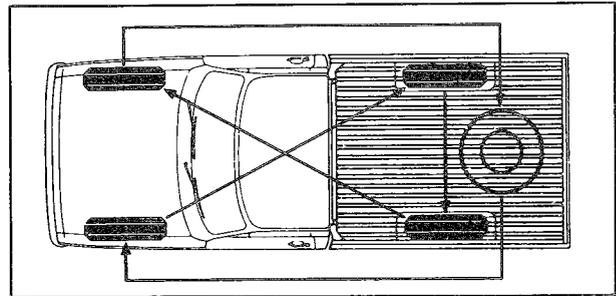


Fig. 12-1 Tire rotation

12-C. CHANGING WHEEL

1. Remove the center cap. Loosen, but do not remove

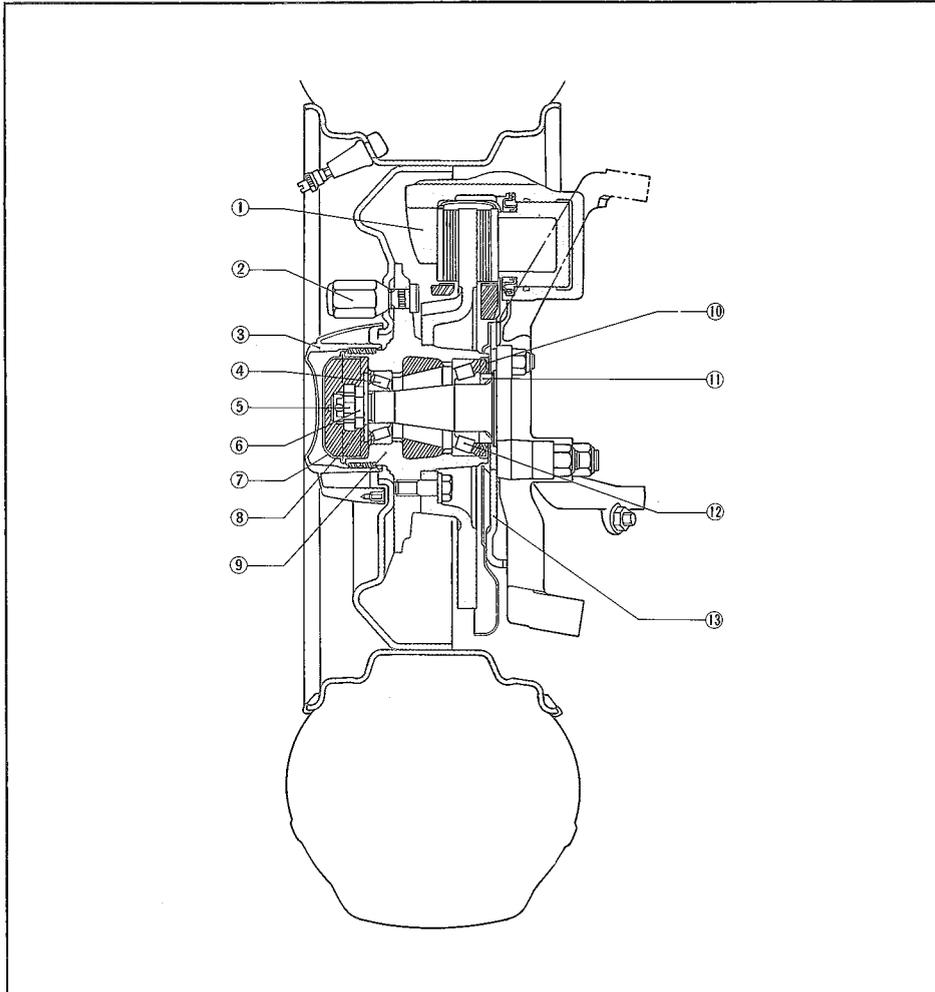


Fig. 12-2 Front wheel cross section

1. Caliper
2. Wheel bolt
3. Center cap
4. Hub outer bearing
5. Nut lock
6. Bearing preload adjusting nut
7. Grease cap
8. Flat washer
9. Hub
10. Grease seal
11. Spacer
12. Hub inner bearing
13. Mounting adaptor

the wheel nuts.

Note: The wheel nuts are loosened by turning these in the counter-clockwise direction on the right side wheels and in the clockwise direction on the left side wheels.

2. Jack up the vehicle until the wheel clears the ground.
3. Remove the wheel nuts and change the wheel.
4. Install the wheel nuts and alternately tighten the diametrically opposite nuts until the wheel closely touches the hub flange or axle shaft flange.
5. Lower the vehicle and firmly tighten the nuts to **8.0 ~ 9.0 m-kG (58 ~ 65 ft-lb)**.
6. Refit the center cap.

12-D. WHEEL AND TIRE RUN-OUT

Wheel and tire should be measured for both radial and lateral run-out. The radial run-out is the difference between the high and low points on the tread of tire; while the lateral run-out is the wobble of the wheel.

To measure the radial run-out, apply a dial indicator against the center rib of the tire tread and rotate the wheel slowly. This measurement should not exceed **2.0 mm (0.08 in)**.

To measure the lateral run-out, position a dial indicator against the side of the tire. The reading of the indicator should be within **2.5 mm (0.10 in)**.

12-E. WHEEL BALANCING

The allowable unbalance is **600 cm-gr (8.3 in-oz)**, which is less than **30 gr (1.1 oz)** at the rim.

Excessive wheel unbalance causes shimmy at high speed. If unbalance exceeds **600 cm-gr (8.3 in-oz)** or when a tire is disassembled for repair, the tire and wheel assembly should be statically and dynamically balanced with a wheel balancer in accordance with the manufacturer's instructions.

12-F. FRONT WHEEL HUB AND BEARING

12-F-1. Checking Front Wheel Bearings on Car

To check the front wheel bearings, raise the vehicle with a jack until the wheels clear the ground. Grip the tire and shake it sideways. If considerable play is noticed, this indicates that the bearings are rough.

12-F-2. Removing Front Wheel Hub and Bearings

1. Raise the front end of the vehicle and support with stands.

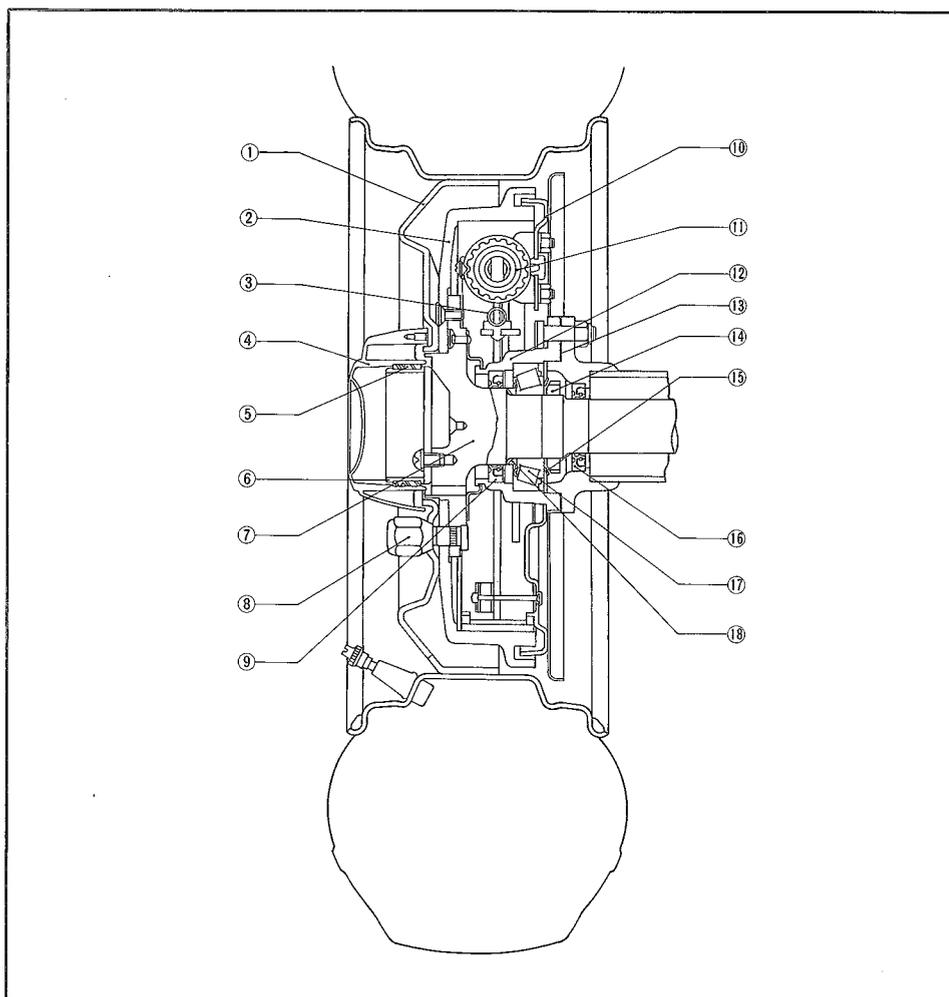


Fig. 12-3 Rear wheel cross section

1. Wheel
2. Brake drum
3. Brake shoe return spring
4. Center cap
5. Set rubber
6. Center cap adaptor
7. Rear axle shaft
8. Wheel bolt
9. Oil seal
10. Backing plate
11. Wheel cylinder
12. Hub
13. Adjusting shim
14. Lock nut
15. Lock washer
16. Oil seal
17. Bearing
18. Spacer

2. Remove the center cap and wheel.
3. Remove the bolts that attach the caliper bracket and remove the caliper and bracket assembly. Attach the caliper and bracket assembly to the coil spring with a piece of wire.

Note: Never allow the caliper assembly hang from the brake pipe, as damage may occur.

4. Remove the grease cap, split pin, nut lock and adjusting nut.
5. Remove the thrust washer and outer bearing from the wheel hub.
6. Slide the wheel hub and brake disc assembly off the spindle.

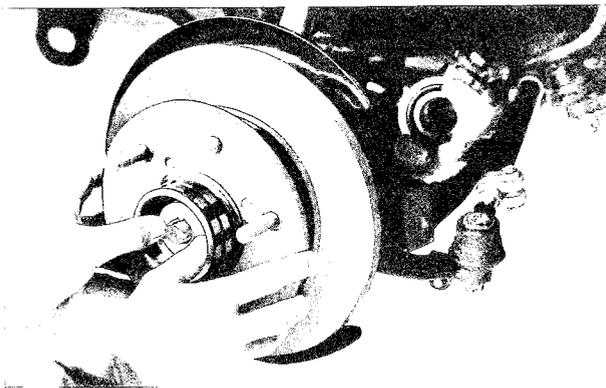


Fig. 12-4 Removing hub and disc assembly

7. Remove the grease seal and inner bearing from the wheel hub.
8. If it becomes necessary to separate the wheel hub and brake disc, refer to Par. 11-H-8.

12-F-3. Inspecting Front wheel Hub and Bearings

1. Clean the lubricant off the inner and outer bearing

outer races with solvent and inspect the outer races for scratches, pits excessive wear and other damage. If the outer race replacement is necessary, drive out the outer race, using a suitable drift in the slots provided for this purpose. Install a new outer race into the hub with a suitable tool. Be sure to seat the outer race properly in the hub.

2. Thoroughly clean the inner and outer bearing cones and rollers with solvent and dry them thoroughly.

Note: Do not spin the bearings with compressed air, otherwise the cone and rollers will be damaged.

3. Inspect the cones and rollers for cracks, nicks, brinelling or seized rollers and replace them if necessary.

Note: The cone and roller assembly and outer race should be replaced as a unit.

4. Clean the spindle and inside of the hub with solvent to remove all old grease.

12-F-4. Installing Front Wheel Hub and Bearings

Install the front wheel hub and bearings in the reverse order of removing, with care taken on the following points:

1. Clean the bearings thoroughly and repack them with lithium grease. **Do not** overpack.
2. Fill the hub cavity with lithium grease.
3. Adjust the bearing preload, as instructed in the following paragraph.

12-F-5. Adjusting Front Wheel Bearings

The wheel bearing preload is adjusted by the adjusting nut. Adjusting procedure is as follows:

1. Check the bearing preload by hooking a spring scale on the hub bolt.
2. Pull the spring scale squarely and take a reading

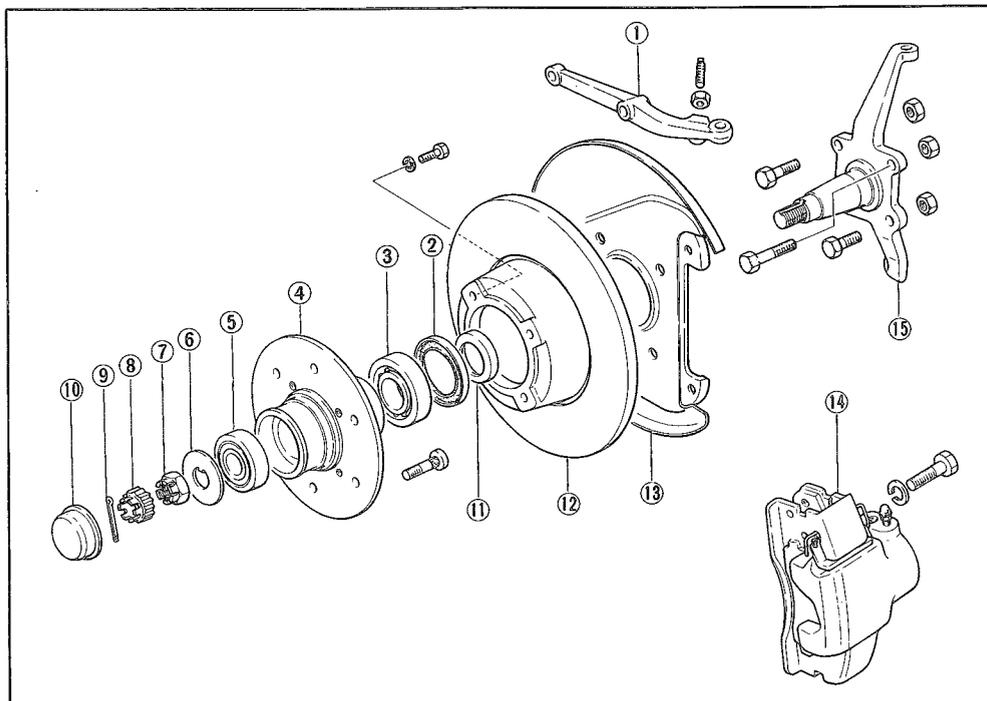


Fig. 12-5 Front wheel hub components

1. Knuckle
2. Grease seal
3. Inner bearing
4. Hub
5. Outer bearing
6. Washer
7. Adjusting nut
8. Nut lock
9. Cotter pin
10. Grease cap
11. Spacer
12. Rotor
13. Caliper mounting adaptor
14. Caliper assembly
15. Steering knuckle

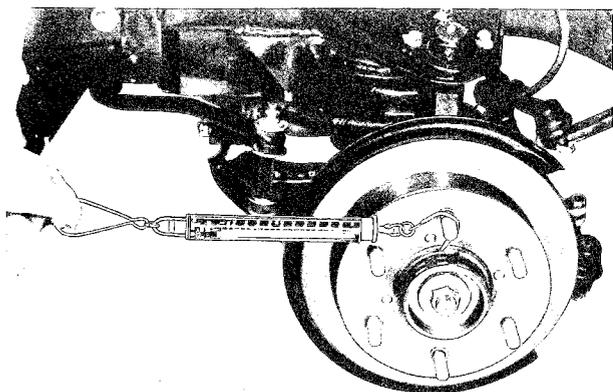


Fig. 12-6 Checking wheel bearing preload

on the scale when the hub starts to turn. This reading should be 0.6 to 1.1 kg (1.32 to 2.43 lb).

3. Tighten the adjusting nut until the correct reading is obtained.

4. Fit the nut lock onto the adjusting nut and align the slots of the nut lock with the hole of the spindle. Install the split pin.

Note: If a spring scale is not available, adjust as follows:

Rotate the hub and tighten the adjusting nut until the hub binds.

Then, back off the adjusting nut about one-sixth of a turn, making sure that the hub rotates freely without any sidewise stroke.

12-G. REAR WHEEL BEARING

Servicing the rear wheel bearings is explained in Part 9-A.



SUSPENSION

SUSPENSION.....	13 : 3
13-A. FRONT SHOCK ABSORBER	13 : 3
13-A-1. Removing Front Shock Absorber	13 : 3
13-A-2. Checking Front Shock Absorber	13 : 3
13-A-3. Installing Front Shock Absorber	13 : 3
13-B. FRONT SUSPENSION	13 : 3
13-B-1. Lubricating Front Suspension	13 : 3
13-B-2. Removing Front Suspension	13 : 4
13-B-3. Checking Front Suspension	13 : 4
13-B-4. Installing Front Suspension	13 : 4
13-C. REAR SHOCK ABSORBER	13 : 4
13-C-1. Removing Rear Shock Absorber	13 : 4
13-C-2. Checking Rear Shock Absorber	13 : 4
13-C-3. Installing Rear Shock Absorber	13 : 4
13-D. REAR SPRING	13 : 5
13-D-1. Removing Rear Spring	13 : 5
13-D-2. Checking Rear Spring	13 : 5
13-D-3. Installing Rear Spring	13 : 5
SPECIAL TOOLS	13 : 5

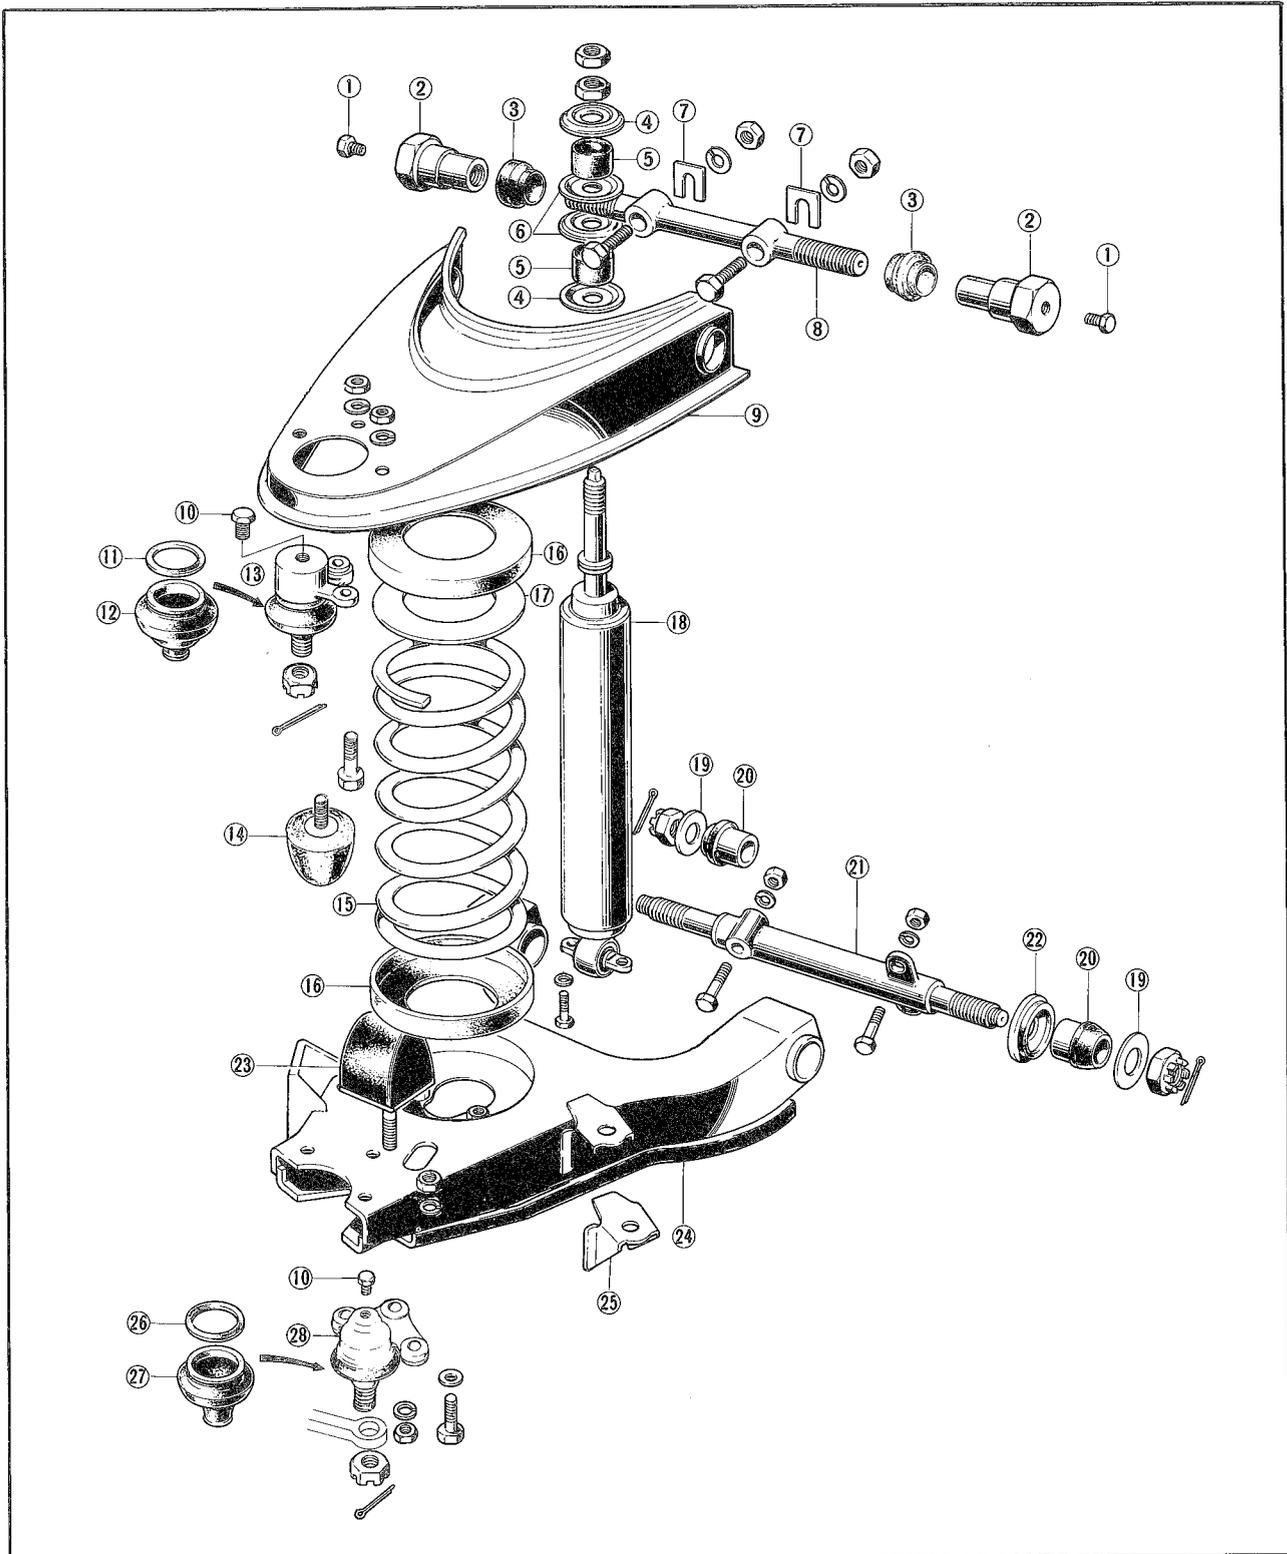


Fig. 13-1 Front suspension components

- | | | | |
|-------------------|-------------------------|---------------------|----------------|
| 1. Plug | 8. Upper arm shaft | 15. Coil spring | 22. Stopper |
| 2. Thread bush | 9. Upper arm | 16. Seat | 23. Stopper |
| 3. Dust seal | 10. Plug | 17. Adjusting plate | 24. Lower arm |
| 4. Retainer | 11. Set ring | 18. Shock absorber | 25. Bracket |
| 5. Bush | 12. Dust seal | 19. Washer | 26. Set ring |
| 6. Retainer | 13. Ball joint assembly | 20. Bush | 27. Dust seal |
| 7. Adjusting shim | 14. Stopper | 21. Lower arm shaft | 28. Ball joint |

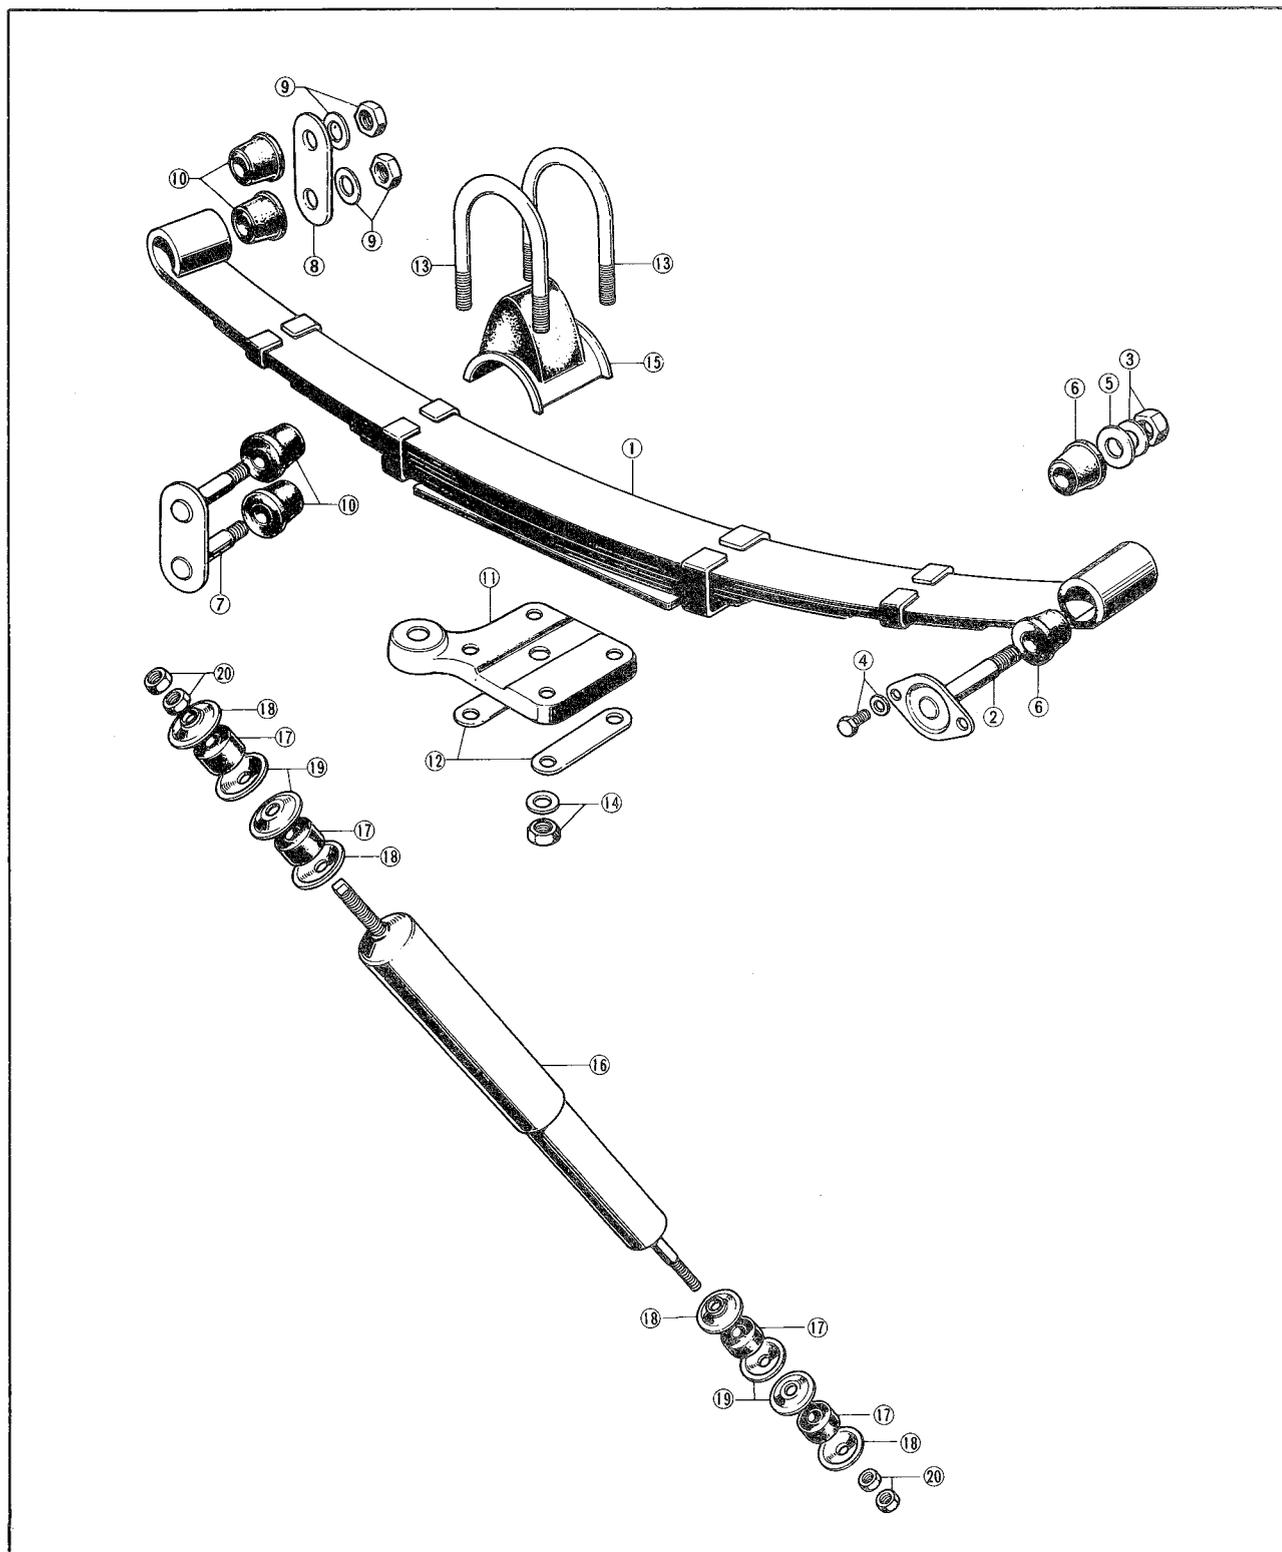


Fig. 13-2 Rear suspension components

- | | | |
|---------------------------|--------------------|----------------------|
| 1. Rear spring | 8. Shackle plate | 15. Stopper rubber |
| 2. Spring pin assembly | 9. Nut and washer | 16. Shock absorber |
| 3. Nut | 10. Bush | 17. Bush |
| 4. Bolt | 11. Spring clamp | 18. Retainer |
| 5. Spacer | 12. Pack | 19. Centering washer |
| 6. Bush | 13. "U" bolt | 20. Nut |
| 7. Shackle plate assembly | 14. Nut and washer | |

SUSPENSION

MAZDA Rotary pickup uses the wishbone type suspension arms with the coil springs on the front and semielliptic leaf springs on the rear.

The shock absorbers are of the hydraulic double action type.

13-A. FRONT SHOCK ABSORBER

13-A-1. Removing Front Shock Absorber

1. Remove the nuts that attach the upper end of the shock absorber to the cross member.
2. Remove the rubber bushes and washers.
3. Remove the bolts that attach the lower end of the shock absorber to the lower arm.
4. Remove the shock absorber from under the lower arm.

13-A-2. Checking Front Shock Absorber

1. Check the shock absorber for proper operation. To check, remove it from the vehicle. Hold the shock absorber in an upright position and work it up and down in its full length of travel, four or five times. If a strong resistance is felt due to hydraulic pressure, the shock absorber is functioning properly. If no resistance is felt or there is a sudden free movement in travel, the shock absorber should be replaced.
2. If excessive amount of fluid is evident on the exterior of the shock absorber, replace a new shock absorber.
3. Check the rubber bushes. If the rubber bushes appear to be worn, damaged or deteriorated, replace with new ones.

13-A-3. Installing Front Shock Absorber

Install the shock absorber in the reverse order of removing.

Note: Tighten the shock absorber nut to the dimension shown in Fig. 13-3.

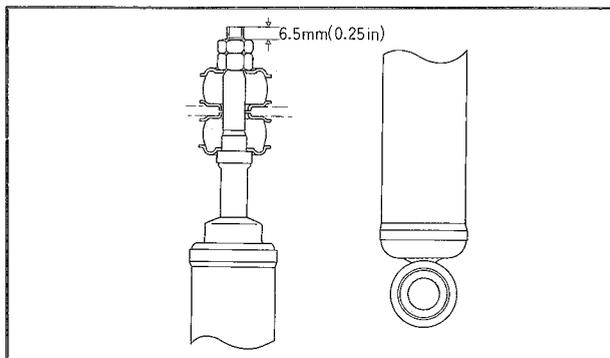


Fig. 13-3 Tightening nut

13-B. FRONT SUSPENSION

13-B-1. Lubricating Front Suspension

The ball joints and the thread bushes (upper arm shaft bushes) of the suspension arms.

When greasing becomes necessary on, supply molyb-

denum disulfide lithium grease to the ball joints and the thread bushes, proceeding as follows:

Ball Joints:

1. Remove the set ring from the groove on the dust seal and turn the dust seal inside out.
2. Remove the plug and fit the grease nipple in its stead.
3. Remove all of the used grease in the socket and the dust seal by gradually supplying new grease through the nipple.



Fig. 13-4 Greasing ball joint

4. When the used grease is thoroughly removed, fit the dust seal and secure it in place with the set ring.
5. Add new grease until the dust seal begins to balloon. Then, depress the dust seal with the fingers so that about half of the grease remains in the dust seal.
6. Wipe off excess grease around the ball joint.
7. Remove the grease nipple and fit the plug.

Thread Bushes:

1. Remove the plug from one end of the thread bush and fit the grease nipple in its stead.
2. Remove all of the used grease in the thread bush and the dust seal by gradually supplying new grease through the nipple.
3. When the used grease is thoroughly removed, add new grease until new grease appears from the brim of the dust seal.
4. Remove the grease nipple and reinstall the plug.
5. Grease to the other end of the thread bush in the same manner described above.
6. Wipe off excess grease around the thread bush.

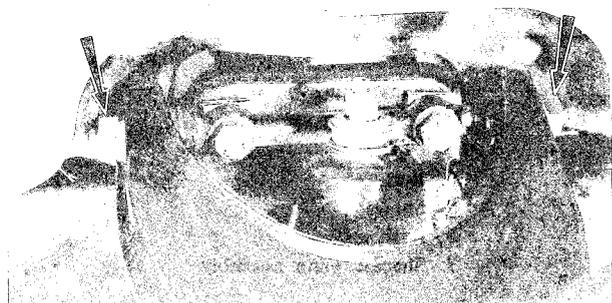


Fig. 13-5 Greasing thread bushes

13-B-2. Removing Front Suspension

1. Raise the front end of the vehicle and position safety stands under both sides of the frame just back of the lower arm.
2. Remove the front wheel.
3. Remove the front shock absorber, as described in Par 13-A-1.
4. Disconnect the upper ball joint from the steering knuckle by removing the split pin and nut, and using the puller (49 0727 575).
5. From under the hood remove the two upper arm retaining bolts and nuts, noting the numbers and positions of alignment shims so that correct alignment is obtained when reassembling. Remove the upper arm from the vehicle.
6. Remove the three ball joint retaining nuts and bolts and remove the ball joint from the upper arm.
7. Remove the stabilizer bar retaining nut, washers and bushes and disconnect the stabilizer bar from the lower arm.

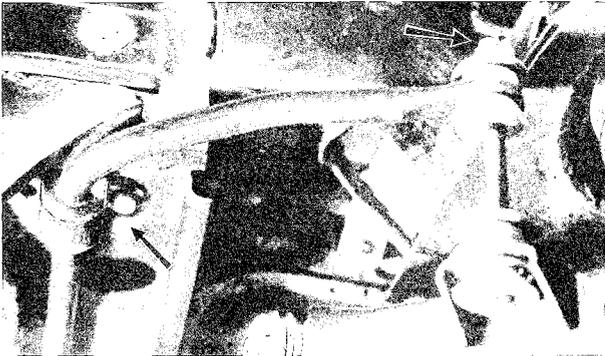


Fig. 13-6 Disconnecting stabilizer

8. Position a floor jack under the lower arm and raise the arm to relieve spring pressure.
9. Using the coil spring holder (49 0223 640A and 641), compress the coil spring.

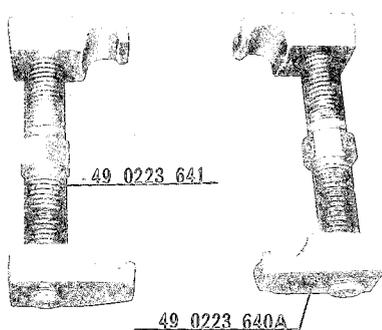


Fig. 13-7 Coil spring holder

10. Remove the split pin and nut. Using the puller (49 0727 575), disconnect the lower ball joint from the steering knuckle.
11. Lower the lower arm on the jack and remove the coil spring from the vehicle.
12. Remove the two lower arm retaining bolts and nuts and remove the lower arm from the vehicle.
13. Remove the three ball joint retaining bolts and nuts and remove the ball joint from the vehicle.

13-B-3. Checking Front Suspension

1. Check for any crack, bend or torsion on both upper and lower arms.
2. Inspect the coil spring for signs of fatigue, crack and any damage.
3. Check the dust seal of the ball joint and replace if it is defective.
4. Check end play of the upper and lower ball joints. If it exceeds 1.0 mm (0.039 in), replace with a new one.

13-B-4. Installing Front Suspension

Install the front suspension in the reverse order of removing.

Note: When replacing the coil spring, install a suitable coil spring and adjusting plate to get equal road clearance both on the right and left.

13-C. REAR SHOCK ABSORBER**13-C-1. Removing Rear Shock Absorber**

1. Remove the nuts, washers, and rubber bushes from both the upper and lower ends of the shock absorber.



Fig. 13-8 Removing rear shock absorber

2. Compress the shock absorber and remove it from the vehicle.

13-C-2. Checking Rear Shock Absorber

1. Check the shock absorber for proper operation. To check, remove it from the vehicle. Hold the shock absorber in an upright position and work it up and down in its full length of travel, four or five times. If a strong resistance is felt due to hydraulic pressure, the shock absorber is functioning properly. If no resistance is felt or there is a sudden free movement in travel, the shock absorber should be replaced.
2. If excessive amount of fluid is evident on the exterior of the shock absorber, replace a new shock absorber.
3. Check the rubber bushes. If the rubber bushes appear to be worn, damaged or deteriorated, replace with new ones.

13-C-3. Installing Rear Shock Absorber

Install the rear shock absorber in the reverse order of removing.

Note: Tighten the shock absorber nuts to the dimension shown in Fig. 13-9.

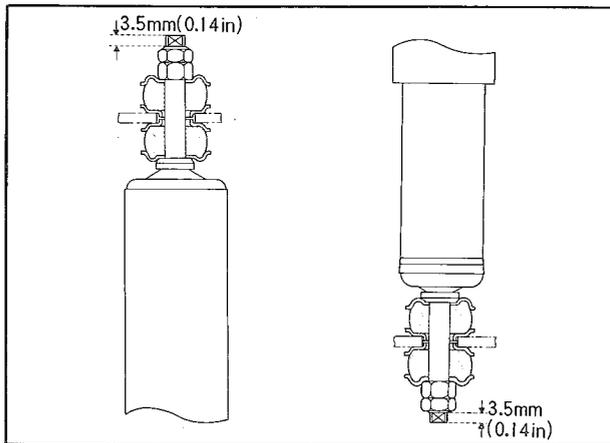


Fig. 13-9 Tightening nuts

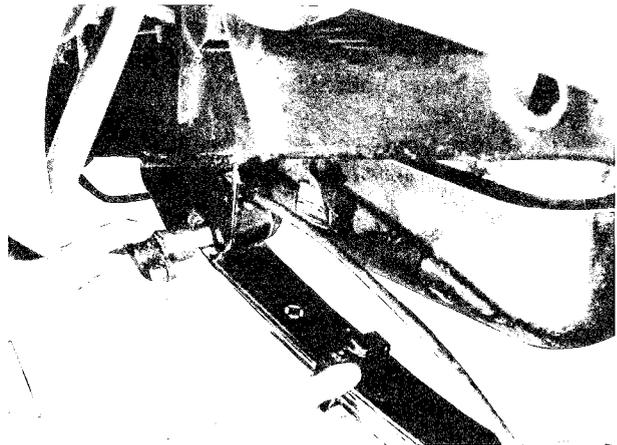


Fig. 13-10 Inserting spring pin

13-D. REAR SPRING

13-D-1. Removing Rear Spring

1. Raise the rear end of the vehicle and place a stand under the frame side rail, permitting the spring to hang free.
2. Support the rear axle in this position with the jack.
3. Remove the rear wheel.
4. Disconnect the rear shock absorber at the lower mounting point.
5. Remove the "U" bolt nuts and the spring clamp.
6. Remove the spring pin nut and remove two bolts and nuts attaching the spring pin plate to the frame bracket.
7. Remove the spring pin and remove the front end of the spring from the vehicle. Remove the rubber bushes.
8. Remove the shackle pin nuts and shackle plate and remove the rear end of the spring from the vehicle. Remove the rubber bushes.

13-D-2. Checking Rear Spring

1. Check the spring for corrosion, fatigue, or any damage. If any of these conditions exists, replace the spring.
2. Check the looseness of the spring center bolt.
3. Check the shackle pin, spring pin and rubber bushes for wear or any damage.

13-D-3. Installing Rear Spring

1. Install the rubber bushes into the front eye of the spring and position it in the frame bracket so as to align the holes of the rubber bushes with the hole of the frame bracket.
2. Insert the spring pin from the outside through the rubber bushes.
3. Tighten the nuts and bolts attaching the spring pin plate to the frame bracket to 2.0 ~ 2.5 m-kg (14 ~ 18 ft-lb). Do not tighten the spring pin nut.
4. Fit the rubber bushes to the rear eye of the spring and the shackle pin. Install the spring and the shackle pin to the frame bracket. Do not tighten the nuts.

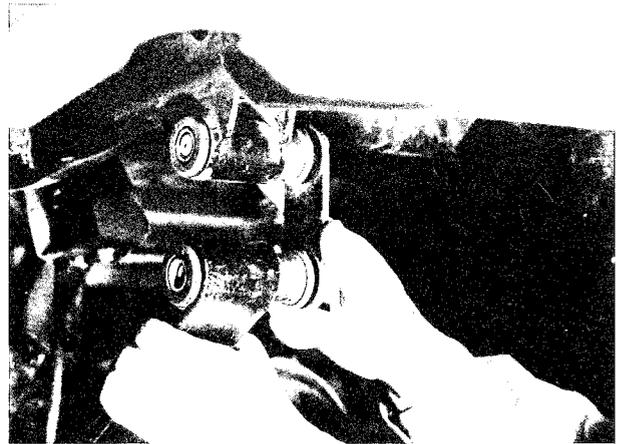


Fig. 13-11 Installing shackle pin

5. Lower the rear axle and place the center hole of the axle spring seat over the head of the spring center bolt.
6. Place the spring clamp under the spring and install the "U" bolts. Tighten the nuts to 6.4 ~ 8.0 m-kg (46 ~ 58 ft-lb).
7. Remove the stand and lower the vehicle.
8. Jounce the vehicle several times, and tighten the spring pin nut and shackle pin nuts to 8.5 ~ 10.5 m-kg (61 ~ 76 ft-lb).

SPECIAL TOOLS

49 0727 575	Knuckle arm puller
49 0223 640A and 641	Coil spring holder

BODY

14-A.	WINDSHIELD GLASS.....	14	: 1
	14-A-1. Removing Windshield Glass.....	14	: 1
	14-A-2. Installing Windshield Glass.....	14	: 1
14-B.	BACK WINDOW.....	14	: 1
14-C.	DOOR.....	14	: 1
	14-C-1. Disassembling Door.....	14	: 1
	14-C-2. Assembling Door.....	14	: 2
	14-C-3. Adjusting Door.....	14	: 2
14-D.	HEADLINING (Top ceiling).....	14	: 3
	14-D-1. Removing Headlining.....	14	: 3
	14-D-2. Installing Headlining.....	14	: 4
14-E.	INSTRUMENT PANEL.....	14	: 5
	14-E-1. Removing Meter Set.....	14	: 5
	14-E-2. Installing Meter Set.....	14	: 5
	14-E-3. Removing Center Panel.....	14	: 5
	14-E-4. Installing Center Panel.....	14	: 5
	BODY CHECKING DIMENSION.....	14	: 6

BODY

14-A. WINDSHIELD GLASS

14-A-1. Removing Windshield Glass

1. Remove the windshield wiper arms and blades.
2. Remove the windshield mould from weatherstrip.
3. Detach the adhesive cement between the weatherstrip and the body flange with a wooden spatula.
4. Push out the inner lip of the weatherstrip along the edge of the windshield with a suitable tool from inside the vehicle while pushing the windshield glass outwards.

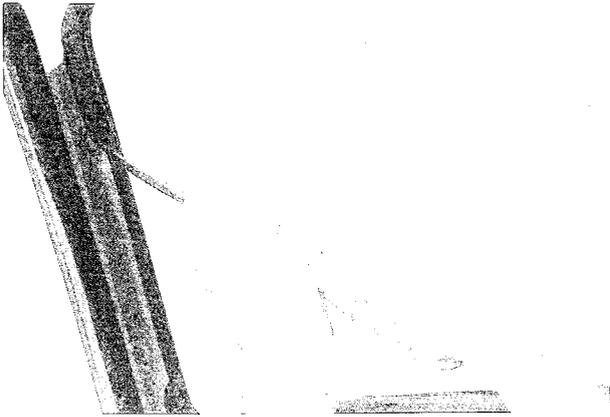


Fig. 14-1 Pushing out inner lip of weatherstrip

5. Remove the windshield glass together with the weatherstrip.
6. Remove the weatherstrip from the windshield glass.

14-A-2. Installing Windshield Glass

Before installing the windshield glass, clean off an old adhesive cement thoroughly from the windshield glass and the body.

1. Install the weatherstrip along the circumference of the windshield glass as shown in Fig. 14-2.

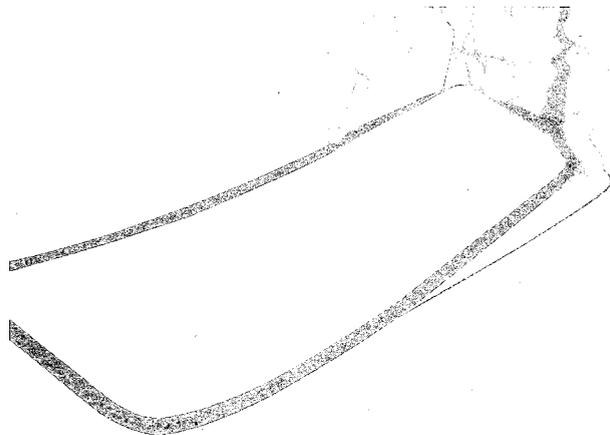


Fig. 14-2 Installing weatherstrip

2. Apply a liberal amount of liquid soap in the groove of the weatherstrip, which is fitted to the body flange.
3. Fit a string of 4 mm (0.16 in) in diameter to the groove of the weatherstrip as shown in Fig. 14-3.

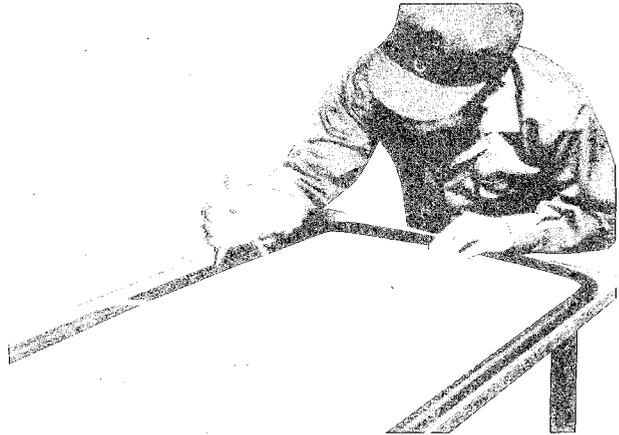


Fig. 14-3 Fitting string

4. Place the windshield glass and weatherstrip assembly into position on the body flange.
5. Pull the string so as to place the inner lip over the flange as shown in Fig. 14-4. At the same, tap the glass from the outside to settle it into position.

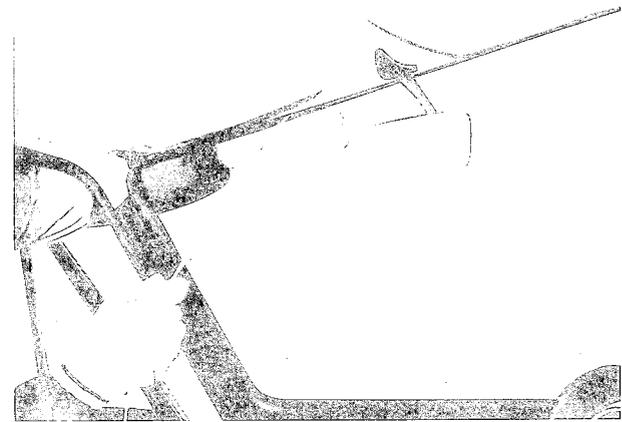


Fig. 14-4 Installing windshield glass

6. Make the weatherstrip and the body flange contact properly with a screwdriver.
7. Seal the weatherstrip against the glass and the body flange by carefully applying a thin coat of Rubber Sealer.

14-B. BACK WINDOW

Remove the back window and install it applying the same method as the windshield glass.

14-C. DOOR

14-C-1. Disassembling Door

1. Remove the arm rest and garnish plate.
2. Remove the inside door handle and the window regulator handle by pressing in the escutcheon and removing the holding pin as shown in Fig. 14-5.
3. Remove the trim board and the inside screen (water shield).
4. Remove the screws holding the window sash assembly to the door. Lower the door glass and slide



Fig. 14-5 Removing regular handle

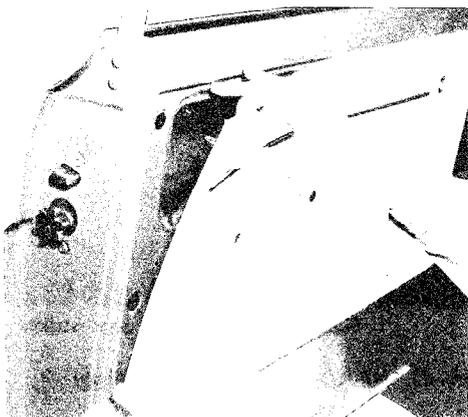


Fig. 14-6 Removing trim board

the window sash up out of the door.

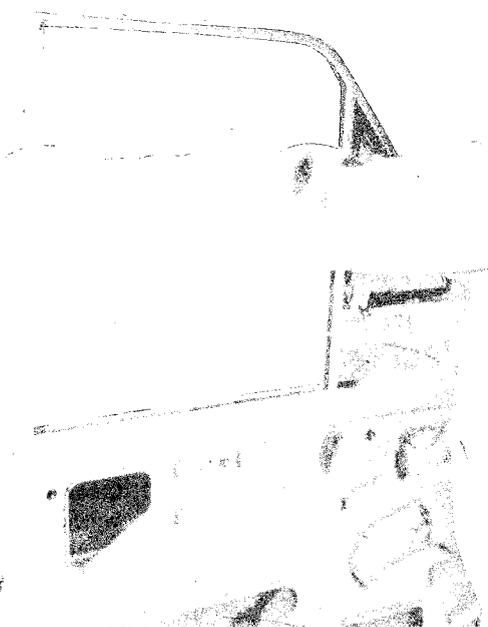


Fig. 14-7 Removing window sash

5. Disengage the guide groove at the glass from the regulator arm and remove the glass.

6. Remove the screws attaching the door handle and remove the outer handle.

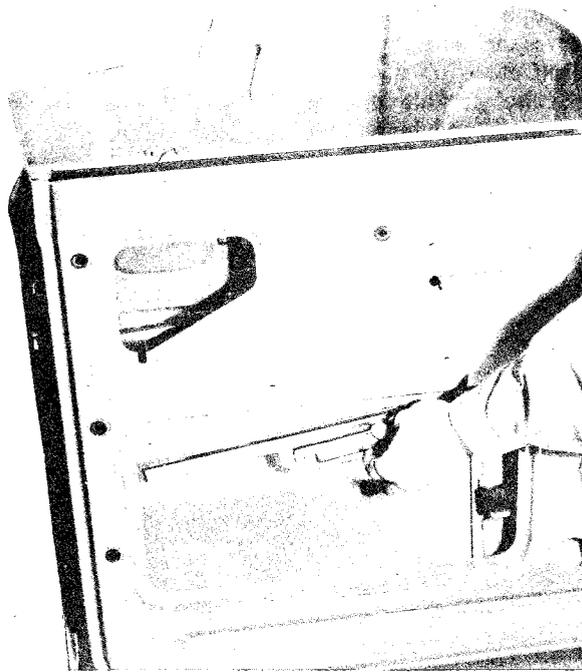


Fig. 14-8 Removing glass

7. Using a screw driver, pry the retainer off from the key cylinder groove and remove the key cylinder.

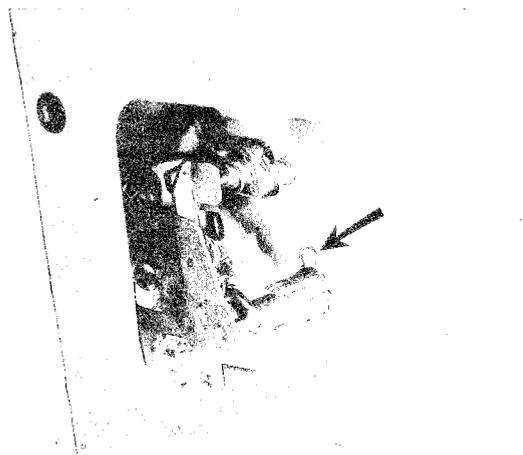


Fig. 14-9 Prying cylinder retainer

8. Remove the screws that attach the door lock assembly to the door. Remove the screws that attach the remote control assembly to the door inner panel, and remove the door lock and remote control assembly.

9. Remove the four screws attaching the regulator assembly to the door inner panel, and remove the regulator assembly.

14-C-2. Assembling Door

Assemble the door in the reverse order of disassembling noting the following point.

Install each water shield securely and apply Sealer to the screw threads, as faulty sealing will cause water leaks.

14-C-3. Adjusting Door

The door hinges are constructed to permit up and

down, and in and out adjustments. To adjust, loosen the upper and lower door hinge attaching screws and move the door up or down, in or out until correct alignment is obtained. Fore and aft door adjustments are also possible through the use of shims between the hinge and hinge pillar.

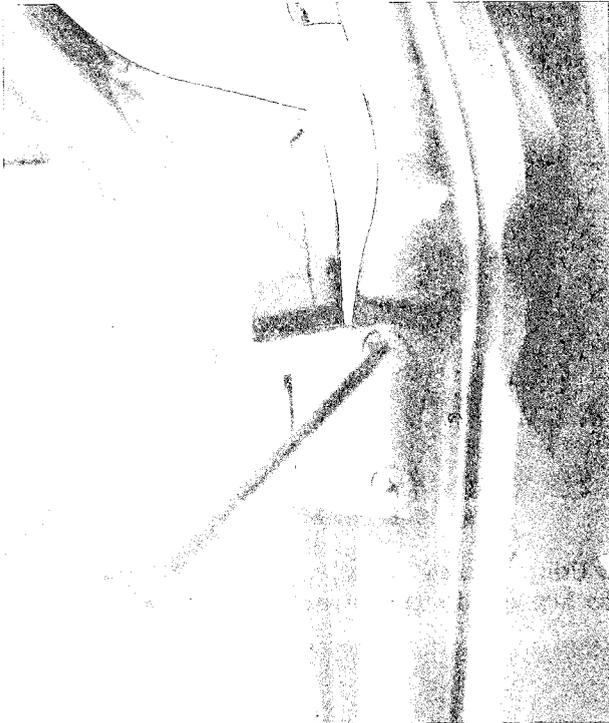


Fig. 14-10 Adjusting door hinge

The door striker is attached to the pillar through oversize holes permitting movement of the striker up and down, in and out. Fore and aft adjustment can be made by adding or subtracting shims between the striker and pillar. The striker should be adjusted so that the door lock enters freely and door will remain in closed position.

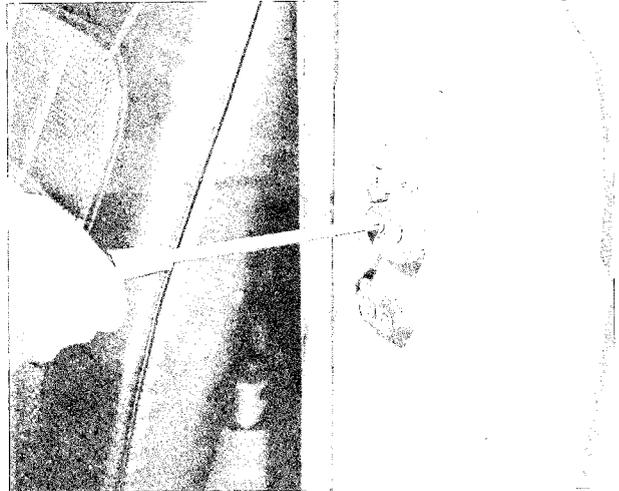


Fig. 14-11 Adjusting door striker

14-D. HEADLINING (Top ceiling)

14-D-1. Removing Headlining

If it becomes necessary to remove the headlining, proceed as follows :

1. Remove the windshield glass and the rear window,

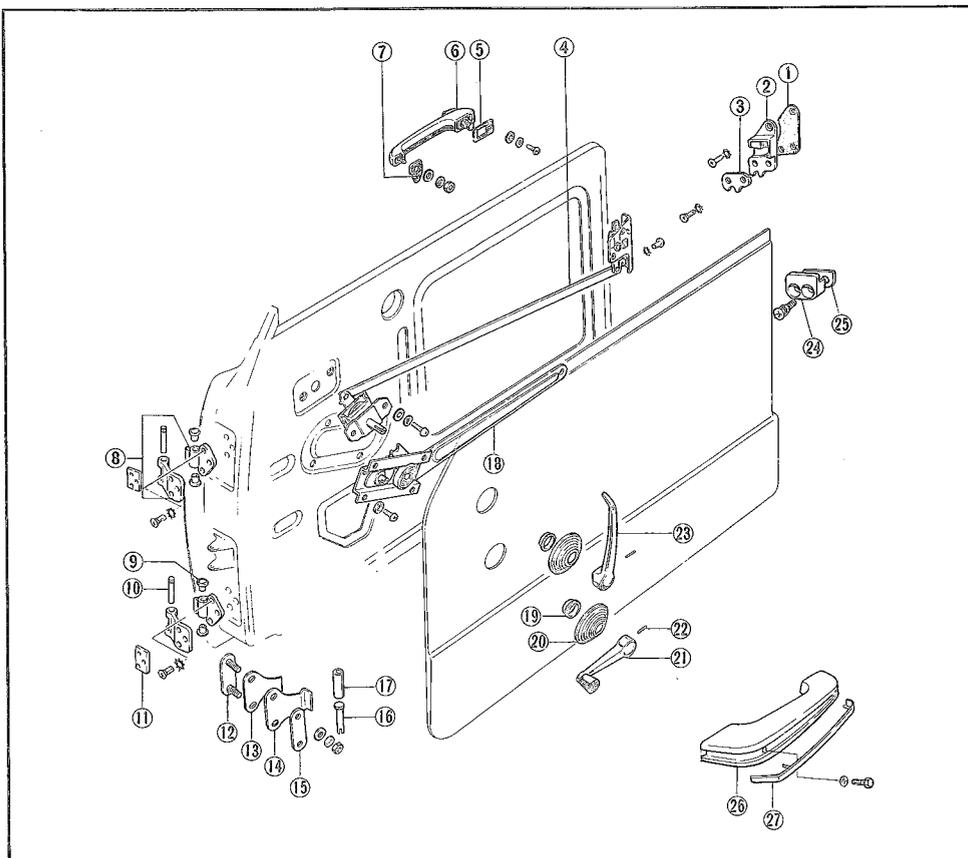


Fig. 14-12

Door components

1. Striker seat
2. Door look striker
3. Door look rack
4. Door look
5. Seat No. 1
6. Outer handle
7. Seat No. 2
8. Door hinge
9. Bush
10. Hinge pin
11. Spacer
12. Door checker set plate
13. Check sub spring
14. Check spring
15. Checker washer
16. Checker pin
17. Checker roller
18. Window regulator
19. Escutcheon crown
20. Handle escutcheon
21. Regulator handle
22. Tapered pin
23. Inner handle
24. Anti-burst block
25. Anti-burst block shim
26. Arm rest
27. Garnish

as described in Par. 14-A and 14-B.

2. Remove the rear view mirror and sun visor.
3. Pull the headlining loose from the cemented area at the windshield headers and the door openings.
4. Disengage the front and center listing wires from the holes in the left and right roof rails.
5. Remove the interior lamp attaching screws, disconnect the wire and remove the interior lamp.
6. Remove the screws that attach the rear listing wire brackets to the back plate.
7. Pull the rear listing wire upward and remove the headlining from the vehicle.

14-D-2. Installing Headlining

1. Beginning at the rear, insert both ends of rear listing wire into the holes of the back plate, as shown in Fig. 14-13.

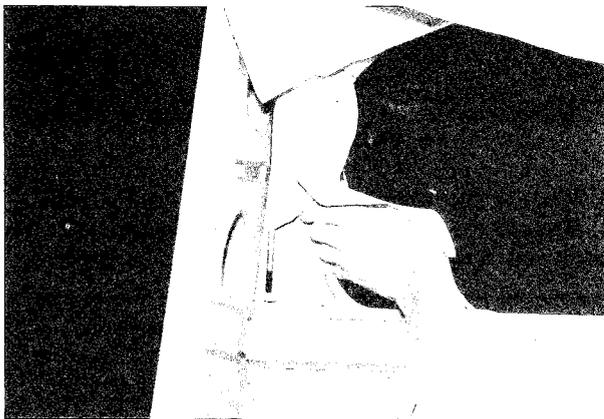


Fig. 14-13 Inserting rear listing wire

2. Install the fixing brackets, attached to rear listing wire, to the back plate with screws.



Fig. 14-14 Installing listing wire bracket

3. Cut a hole in the headlining material for the interior lamp and connect the wire through the headlining.
4. Install the remaining two listing wires into the side roof rails, making sure to stretch the headlining evenly as shown in Fig. 14-15.
5. Apply cement to the front and rear headers.

6. Wait until it becomes tacky, then cement the headlining in place at front and rear, stretching the headlining to make it taut.



Fig. 14-15 Installing listing wire

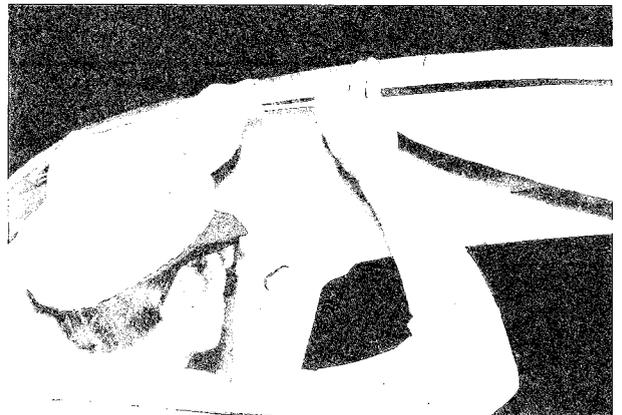


Fig. 14-16 Gluing headlining

7. Trim the material properly at the corners to prevent wrinkling, as shown in Fig. 14-17, and cement to the pillars.

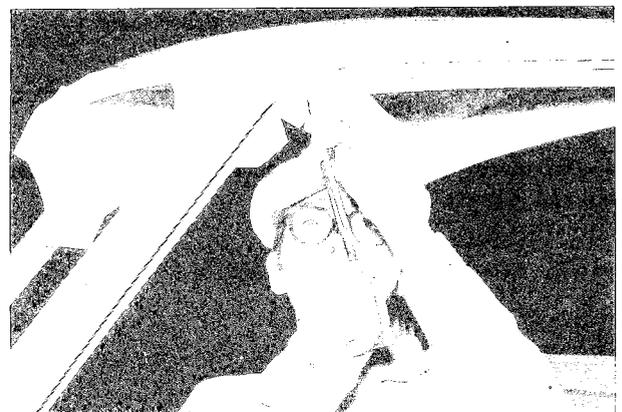


Fig. 14-17 Trimming headlining material

8. Tighten the interior lamp attaching screws.
9. Trim the excess material at the front and rear.
10. Install the rear view mirror and sun visor.
11. Install the windshield glass and the rear window, as described in Par. 14-A-2.

14-E. INSTRUMENT PANEL

14-E-1. Removing Meter Set

1. Remove the two bolts attaching the steering shaft bracket to the instrument panel.
2. Remove the four screws attaching the meter set to the instrument panel.

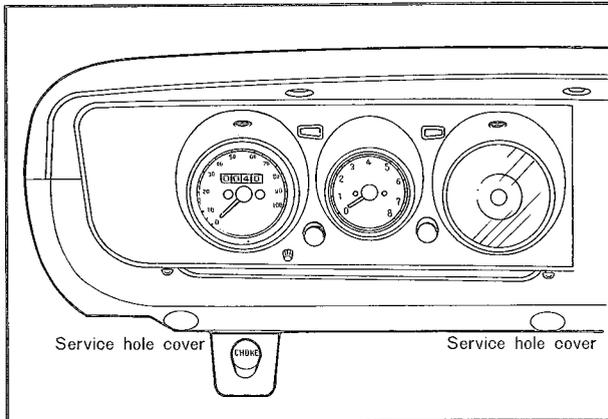


Fig. 14-18 Meter set attaching screws

3. Reach under the instrument panel and disconnect the speedometer cable by pressing on the flat surface of the plastic connector and pulling the cable away from the head.

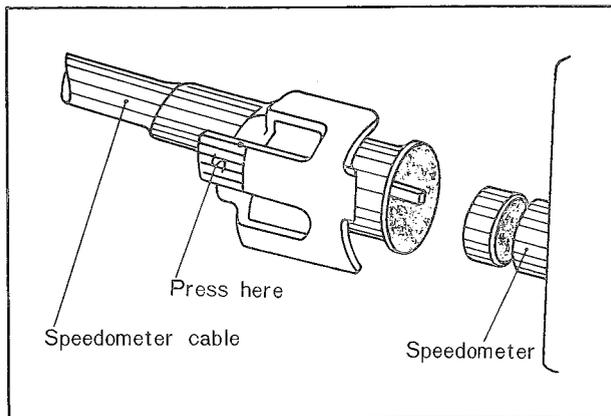


Fig. 14-19 Disconnecting speedometer cable

4. Disconnect the wiring connectors from the meter set and remove the meter set.

14-E-2. Installing Meter Set

Follow the removal procedures in the reverse order.

14-E-3. Removing Center Panel

1. Pull and remove the heater control knobs, radio control knobs and resistor knob.
2. Remove the nuts attaching the radio to the center panel.

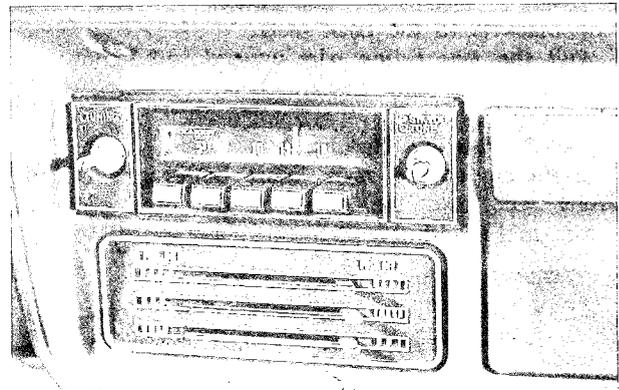


Fig. 14-20 Removing nuts

3. Remove the cigar lighter from the center panel.
4. Remove the nut attaching the panel resistor to center panel and disconnect the wirings from the resistor.

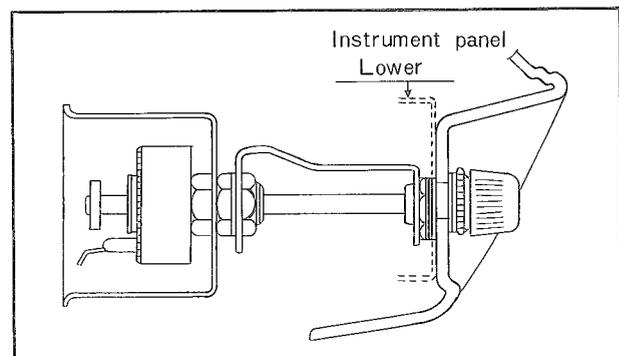



Fig. 14-21 Removing panel resistor


5. Loosen the two screws attaching the center panel to the instrument panel and remove the center panel.

14-E-4. Installing Center Panel

Follow the removal procedures in the reverse order.

BODY CHECKING DIMENSION

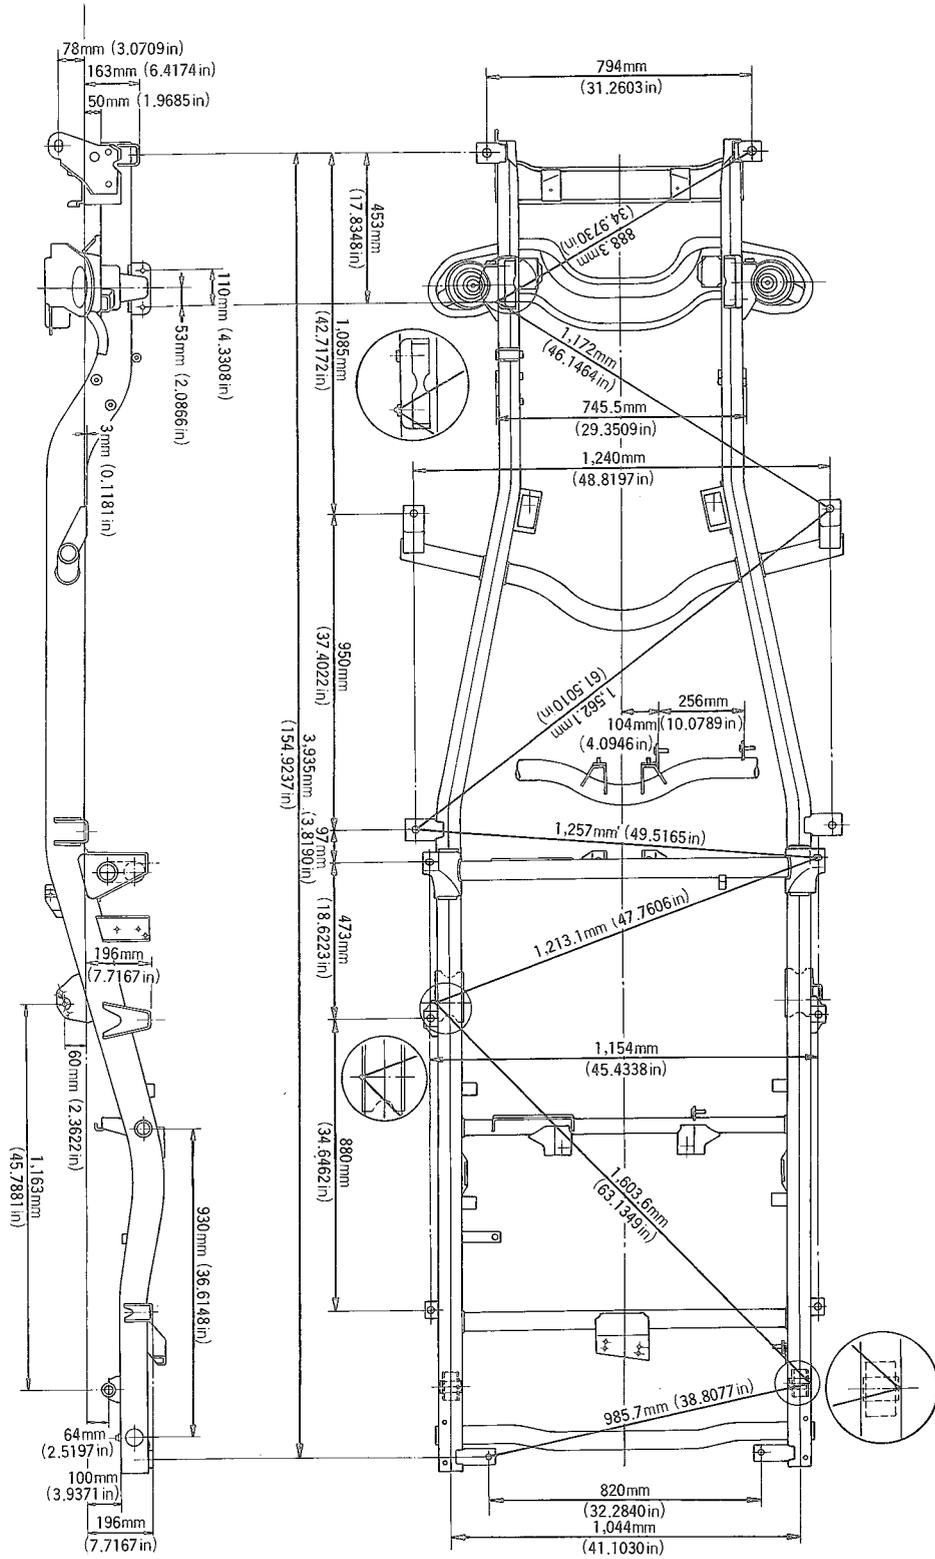



ELECTRICAL SYSTEM

(BODY)

15-A.	LIGHTING SYSTEM	15 : 1
15-A-1.	Adjusting Head Light	15 : 1
15-A-2.	Bulb Capacity	15 : 1
15-B.	FUEL AND WATER TEMPERATURE GAUGE	15 : 1
15-B-1.	Checking Fuel and Water Temperature Gauge	15 : 1
15-C.	COMBINATION SWITCH	15 : 4
15-C-1.	Checking Combination Switch	15 : 4
15-D.	INHIBITOR SWITCH	15 : 5
15-D-1.	Checking Inhibitor Switch	15 : 5
15-E.	IGNITION SWITCH	15 : 5
15-E-1.	Checking Ignition Switch	15 : 5
15-F.	HEATER FAN SWITCH	15 : 5
15-F-1.	Checking Heater Fan Switch	15 : 5
15-G.	CENTRAL CONTROL UNIT	15 : 6
15-G-1.	Checking Central Control Unit	15 : 6
15-H.	WIPER MOTOR	15 : 7
15-H-1.	Checking Wiper Motor	15 : 7
15-I.	METER	15 : 7
15-I-1.	Checking Meter Set	15 : 7

15-A. LIGHTING SYSTEM

The wiring of the lighting systems is shown in the wiring diagrams. The wires in the various circuits are of different colors to aid when checking individual circuits.

15-A-1. Adjusting Head Light

Before adjusting the headlights, make sure that the tires are inflated uniformly to recommended pressure and the vehicle is on the level ground without load. Adjust the headlight to meet the regulation of each country.

To adjust the headlight, turn the two spring loaded screws of the sealed beam unit until the headlights are properly aimed.

15-A-2. Bulb Capacity

When replacing the bulb, conform to the following table.

Head light lower and upper beam	60/37.5W
Head light upper beam	37.5W
Front turn signal light	8/27W
Front side marker light	8W
Rear combination light	27W
Reverse light	12W
License light	8W
Rear side marker light	8W
Interior light	5W
Automatic indicator light	3W

15-B. FUEL AND WATER TEMPERATURE GAUGE

The fuel gauge indicates the quantity of gasoline in the tank only when the ignition switch is turned on. The fuel gauge circuit is composed of the fuel gauge, mounted on the instrument panel, and the fuel tank unit, connected by a single wire through the ignition switch.

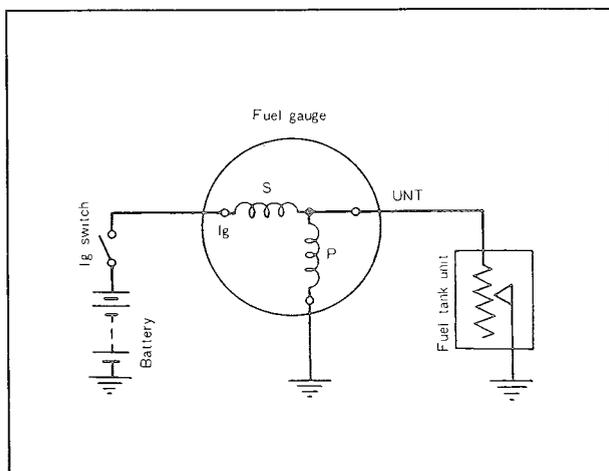


Fig. 15-1 Diagram of fuel gauge

The water temperature gauge electrically operated like the fuel gauge, consists of the water temperature gauge in the instrument panel and sending unit installed on the rear housing.

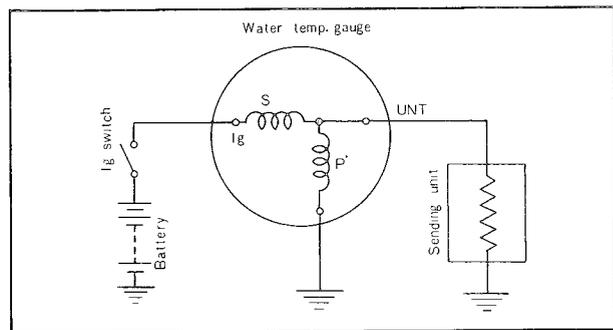


Fig. 15-2 Diagram of water temp. gauge

15-B-1. Checking Fuel and Water Temperature Gauge

a. Fuel and water temperature gauge

If the checker (49 0839 285) is available, use it according to the following procedure to confirm whether the trouble lies in the meter or in the unit.

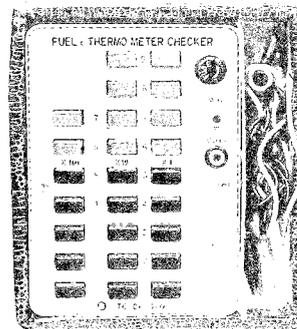


Fig. 15-3 Checker

1. Disconnect wiring connector from unit.
2. Connect this wiring connector to red lead of checker.
3. Connect black lead of checker to earth connection on vehicle body.

Note: Make this earth connection at position close to unit.

4. Turn engine key on (in ignition position).
5. Set checker to the specified resistance value according to the following resistance figure.

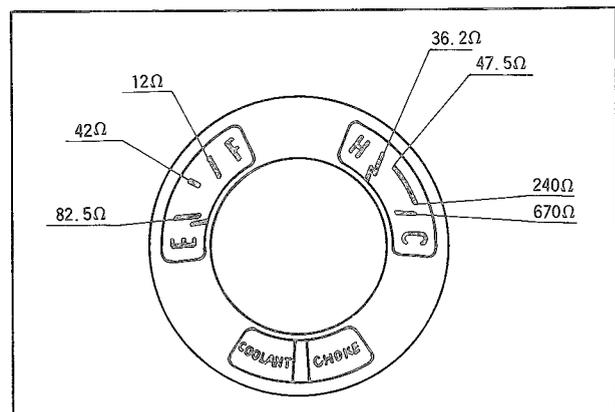


Fig. 15-4 Resistance figure

Example:

If specified resistance value of temperature gauge C is 671,

$$671 = 600 + 70 + 1$$

Therefore, push 6 of column x 100

7 of column x 10

1 of column x 1

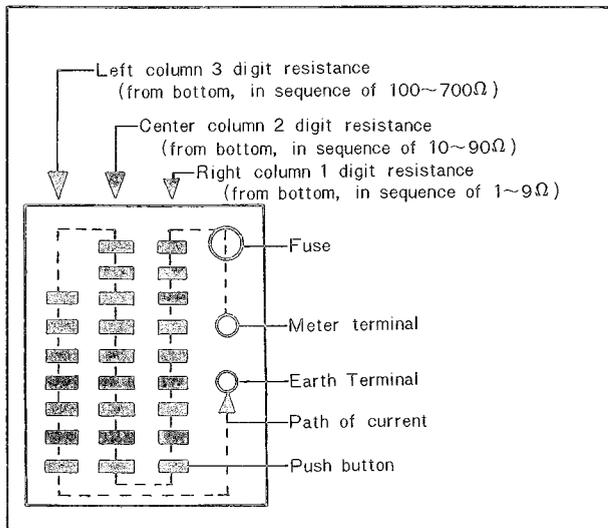


Fig. 15-5 Setting checker

Note:

- a) To return button to its original position, push another button in same column half-way down.
- b) When setting checker, push buttons in sequence starting from the largest value.

6. Check and see whether indicated value on meter concurs with set value on checker.

Note: When making judgement, wait for about 20 secs before making judgement.

Judgement:

- 1) If indicated value on meter concurs with set value on checker, the operation of meter is satisfactory. The unit or wiring is defective.

- 2) If there is error in indicated value of meter, use following standard to check error. Tolerance is roughly ± 2 widths of needle ($\pm 1/16$ of one graduation).

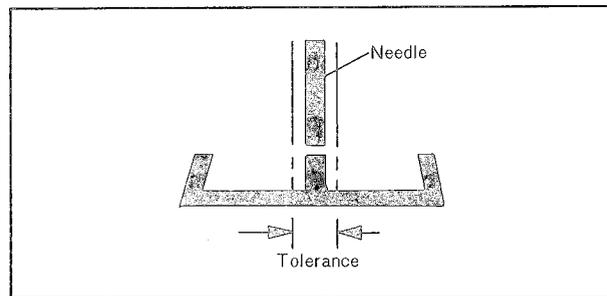


Fig. 15-7 Tolerance

- 3) If needle does not move or does not swing back, or if error in indicated value is excessive:

- a) Earth connection of meter is fault.
- b) Contact in wiring connector is fault.
- c) Inside of meter is defective.

b. Fuel gauge unit

For inspecting the fuel gauge unit, proceed as follows.

- 1. Remove unit, and connect terminal and body of unit to radio tester.
- 2. Slowly move unit arm to E point or F point

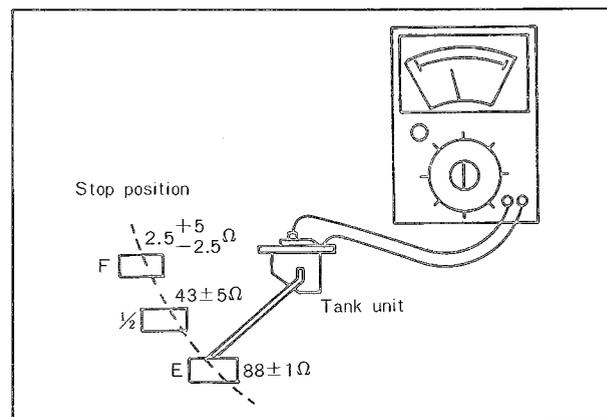


Fig. 15-8 Checking fuel gauge unit

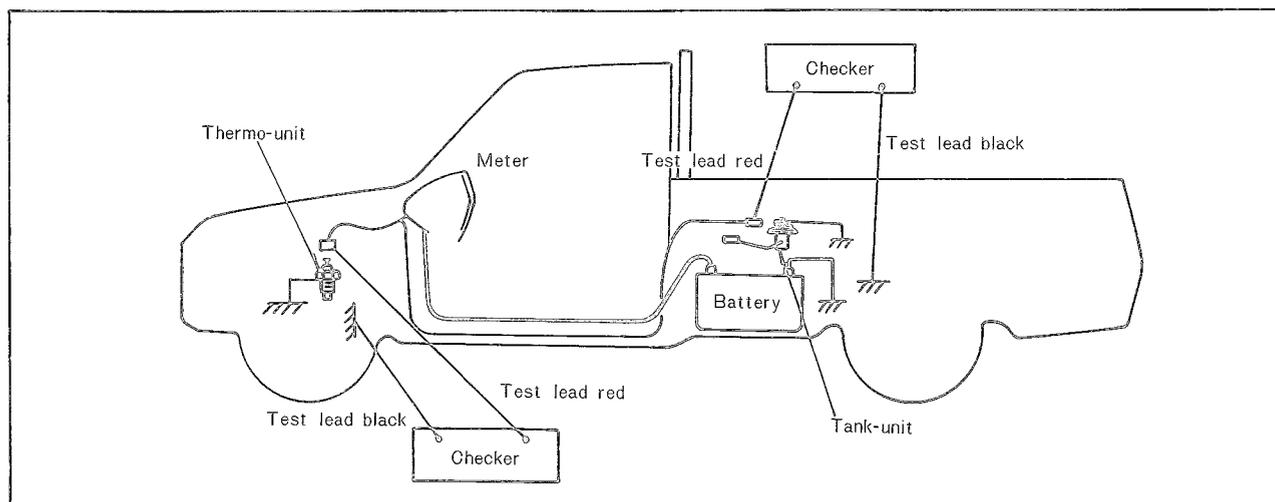


Fig. 15-6 Connecting

and take reading of resistance value of tester at that time.

Judgement:

- 1) If resistance value at E point or F point concurs with standard value indicated in standards chart, unit is satisfactory.
- 2) If resistance value is great or small it indicates there is breakage in wiring or short circuit.
- 3) If reading is only slightly off from standard value, correct by adjusting unit arm.

Inspection and correction of unit arm:

- a) Move arm until reading concurs with standard resistance value indicated in standards chart, and check height of float at that time (horizontal distance between center of float and fulcrum arm).
- b) Bend and adjust arm so that height of float will be of standard height as shown in figure.

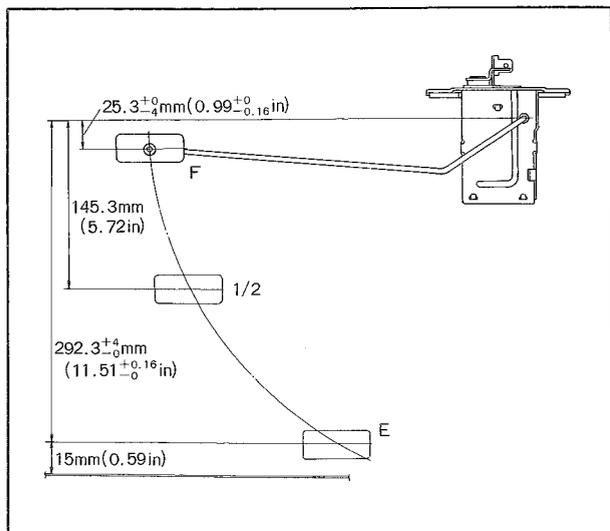


Fig. 15-9 Adjusting unit arm

c. Water temperature gauge unit

For inspecting the water temperature gauge unit, proceed as follows.

1. Remove unit, and connect terminal and body of unit to radio tester.
2. Place unit in hot water tank.

Note: Care should be taken not to immerse unit terminal in hot water.

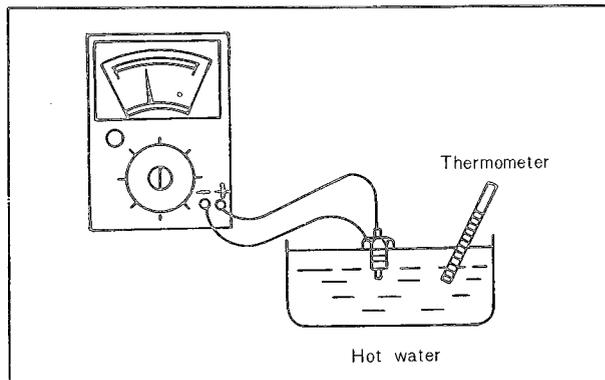


Fig. 15-10 Checking temperature gauge unit

3. Place thermometer in hot water tank.
4. Take reading of thermometer and at the same time reading of resistance value on tester.

Note:

- a) Water should be hot (about 80°C) when inspection is being made.
- b) Change temperature of hot water and make another inspection.

Judgement:

- 1) If temperature and resistance value at that temperature are within range of tolerance, unit is satisfactory. Range of tolerance is $\pm 20\%$ to resistance value shown in standards chart (including measuring errors).
- 2) If unit is outside of range of tolerance replace with new unit.

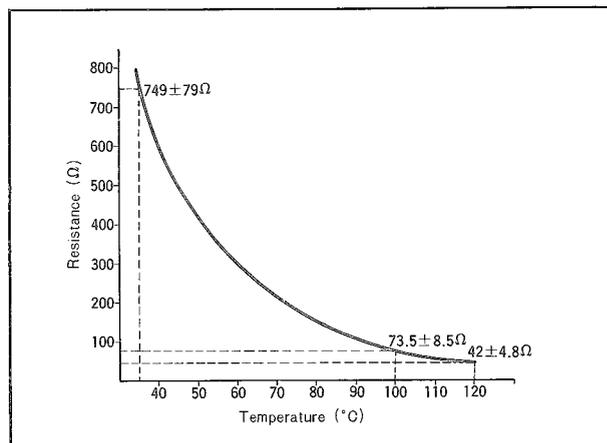


Fig. 15-11 Characteristic of thermistor

15-C. COMBINATION SWITCH

15-C-1. Checking Combination Switch

Check the continuity between the coupler terminals using the circuit tester according to the following switch interconnection diagram.

1. Turn Signal and Hazard Switch

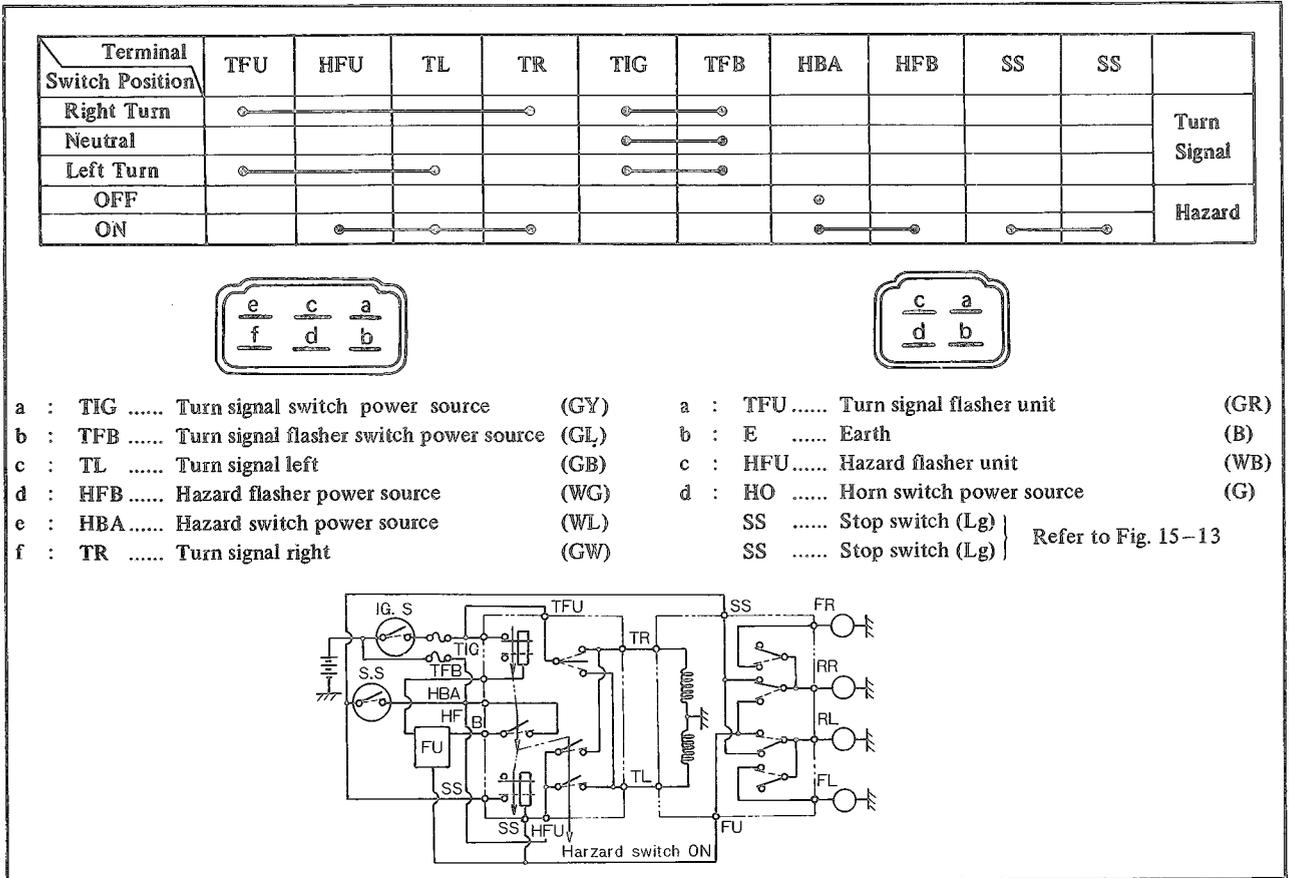


Fig. 15-12 Turn signal and hazard switch interconnection diagram

2. Light, Dimmer and Passing Switch

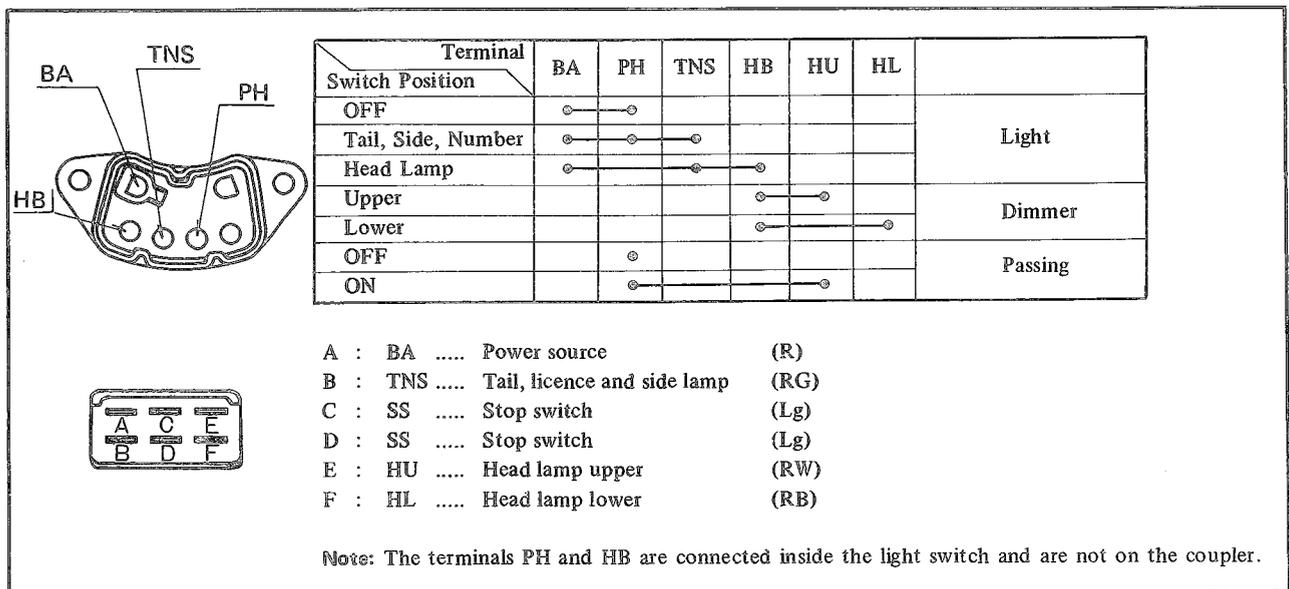


Fig. 15-13 Light, dimmer and passing switch interconnection diagram

3. Wiper and Washer Switch

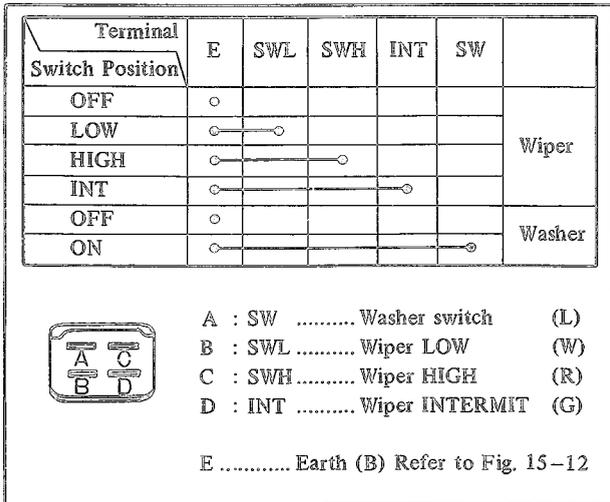


Fig. 15-14 Wiper and washer switch interconnection diagram

15-D. INHIBITOR SWITCH

15-D-1. Checking Inhibitor Switch

Check the continuity between the coupler terminals using the circuit tester according to Fig. 15-15.

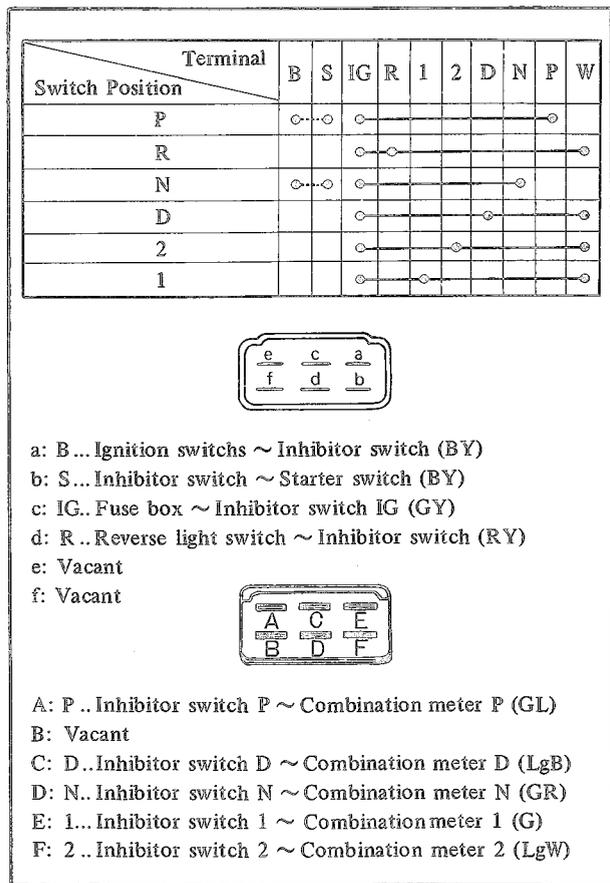


Fig. 15-15 Inhibitor switch interconnection diagram

Note:

a) Solid lines show the connection for indicator light circuit.

b) Dotted lines show the connection for starting circuit.

15-E. IGNITION SWITCH

15-E-1. Checking Ignition Switch

Check the continuity between the switch terminals using the circuit tester according to Fig. 15-16.

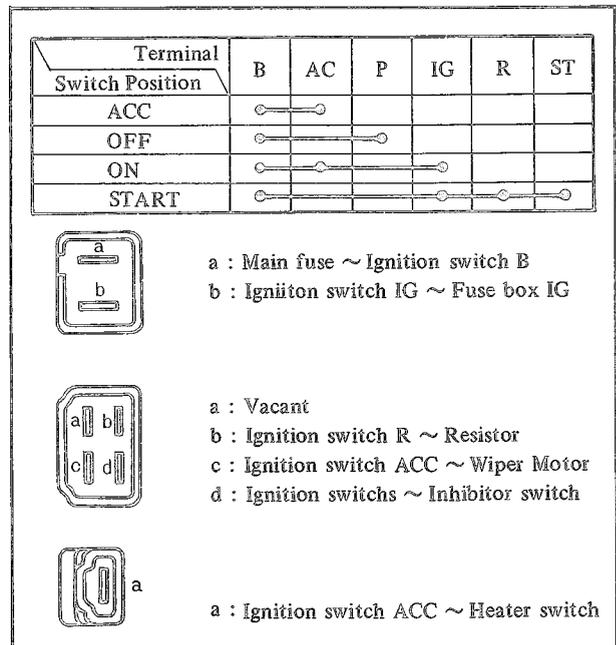


Fig. 15-16 Ignition switch interconnection diagram

15-F. HEATER FAN SWITCH

15-F-1. Checking Heater Fan Switch

Check the continuity between the coupler terminals using the circuit tester according to Fig. 15-17.

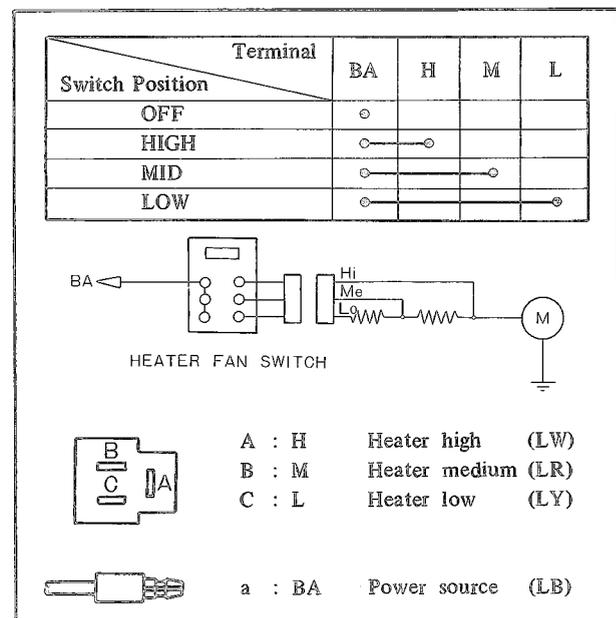


Fig. 15-17 Heater fan switch interconnection diagram

15-G. CENTRAL CONTROL UNIT

The central control unit is composed of wiper relay (R1 and R2), flasher relay (R3), horn relay (R4) and flasher unit (U1), each of which is a plug-socket connection type. Each relay and unit are easy to replace. In replacing the flasher unit, care should be taken that its capacity differs depending upon area. Also, the "multi-grade relay" has been prepared which is applicable as replacement of any of the relays.

15-G-1. Checking Central Control Unit

Check the central control unit using the battery and circuit tester as follows:

1. Wiper relay (R1)

When the battery ⊕ is connected to the WIG terminal and the battery ⊖ to the S2 terminal, LOW terminal and unit body should be in continuity with each other.

2. Wiper relay (R2)

(a) When the battery ⊕ is connected to the WIG terminal and the battery ⊖ to the S2 and S3 terminals, H1 terminal and unit body should be in continuity with each other.

(b) AS terminal and LOW terminal should be in continuity with each other without connecting the battery to them.

3. Horn relay (R4)

When the battery ⊕ is connected to the HZB terminal and the battery ⊖ to the HNS terminal, HZB terminal and HON terminal should be in continuity with each other.

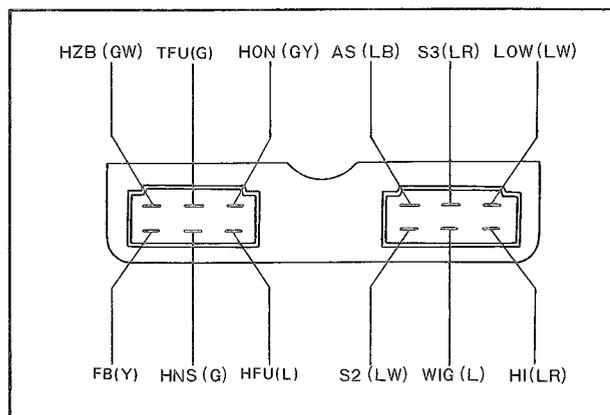


Fig. 15-18 Central control unit coupler

4. Flasher unit (U1)

In checking the flasher unit, connect a prescribed lamp as indicated on the central control unit cover between the unit (with the flasher relay R3) and battery as shown in Fig. 15-8.

(a) Turn signal

When the battery ⊕ is connected to the FB terminal and a prescribed lamp between the battery ⊖ and TFU terminal, the lamp must turn on and off 90 ± 10 times per minute with interval between flasher under 1.5 second.

(b) Hazard

When the battery ⊕ is connected to the HFU terminal and a prescribed lamp between the battery ⊖ and

TFU terminal, the lamp must turn on and off 90 ± 10 times per minute with the interval between flasher under 1.5 second.

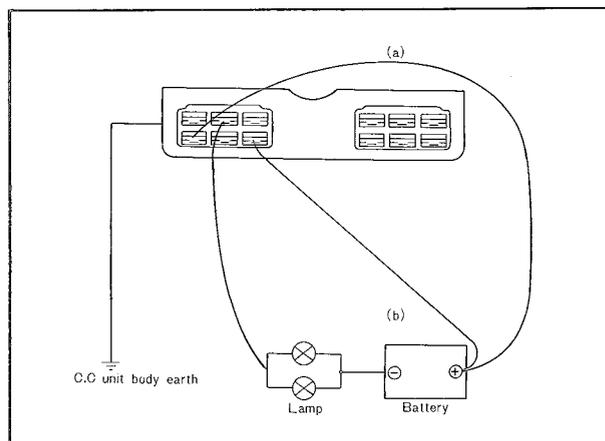


Fig. 15-19 Hazard and flasher unit interconnection diagram

Note:

The flashing on and off of the lamp varies depending upon the lamp capacity and the central control unit earth condition as follows:

Flasher

Faulty unit earth	Lamp remains lighted
Lamp capacity decreased	Flash becomes slower or lamp remains lighted
Lamp capacity increased	Number of flashes remains unchanged

Hazard

Faulty unit earth	Lamp remains lighted
Lamp capacity decreased	Number of flashes remains unchanged
Lamp capacity increased	Number of flashes remains unchanged

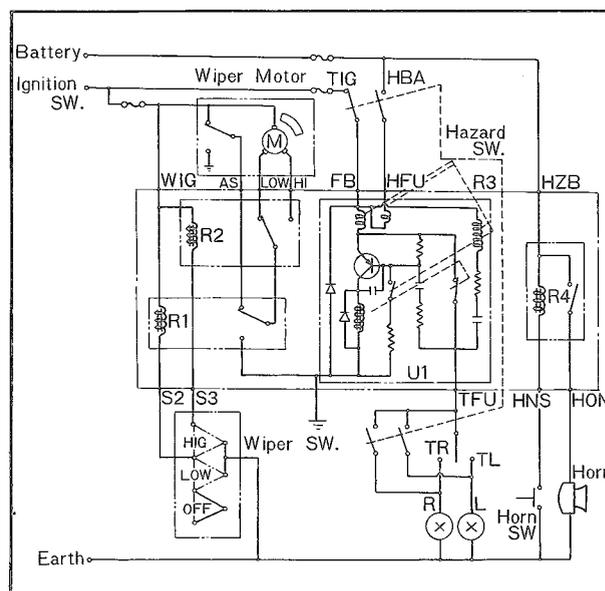


Fig. 15-20 Central control unit circuit

15-H. WIPER MOTOR

15-H-1. Checking Wiper Motor

Connect the wiper motor, ammeter and battery according to the following diagram, and check the number of wiping revolutions and amperage.

Wiper motor	Wiping revolution number	Amperage
Low	40 ~ 55 RPM	Less than 2.5A
High	60 ~ 85 RPM	Less than 2.5A

Note:

- a) The difference in number of revolutions between Low and High should be more than **15 RPM**.
- b) The Auto Stop does not work in the case of faulty wiper motor earth.

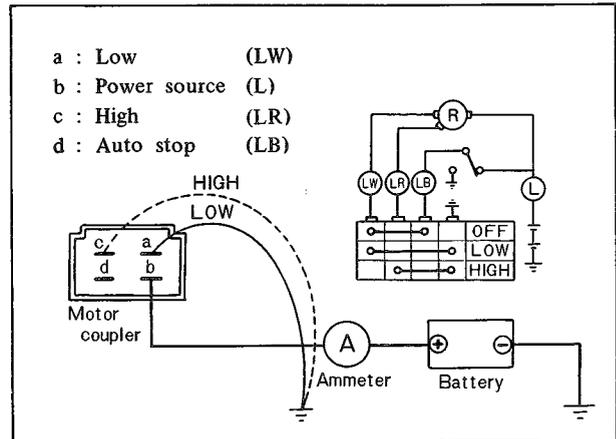


Fig. 15-21 Wiper motor interconnection diagram

15-I. METER

15-I-1. Checking Meter Set

Check the continuity between connector pin and lamp, and that between connector pin and meter using the circuit tester according to the interconnection diagram below.

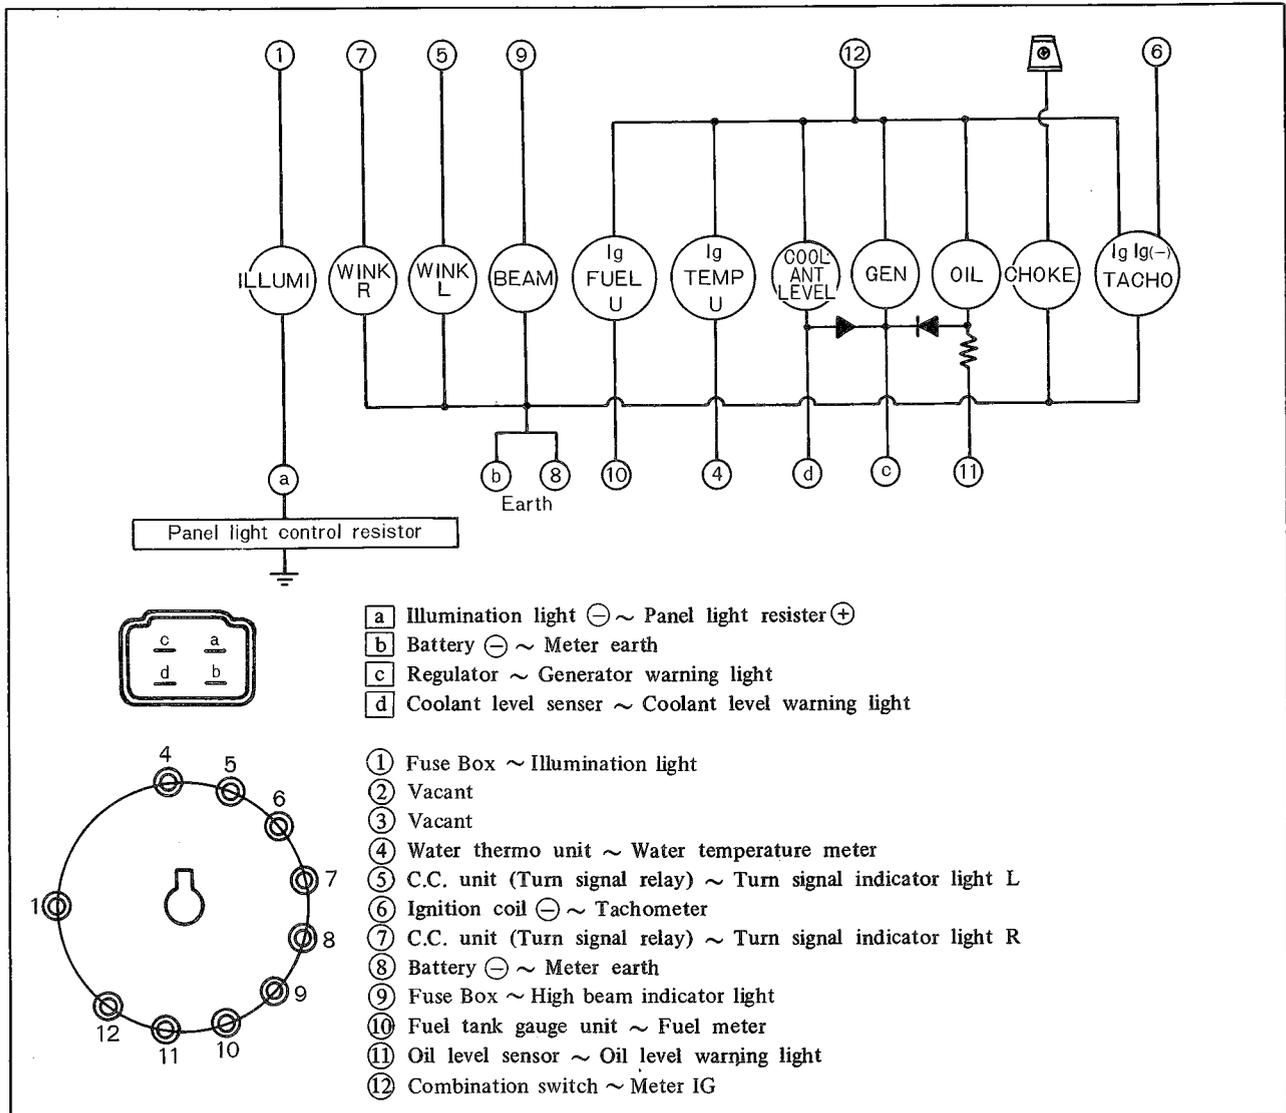


Fig. 15-22 Print panel interconnection diagram

TECHNICAL DATA

ENGINE (General Data)			
Type	Rotary piston engine, 2 rotors in line, water cooled	Side seal protrusion	More than 0.5 mm (0.020 in)
Displacement	654 cc (40.0 cu-in) x 2 rotors	Oil seal	
Compression ratio	9.2 : 1	Height	5.6 mm (0.220 in)
Compression pressure		Contact width of oil seal lip	Less than 0.8 mm (0.031 in)
Limit	6.0 kg/cm ² (85 lb/in ²) at 250 rpm	Oil seal protrusion	More than 0.5 mm (0.020 in)
Max. permissible difference between chambers	1.0 kg/cm ² (14 lb/in ²)	Corner seal	
Port timing		Outer diameter	11.0 mm (0.433 in)
Intake opens	32° ATDC	Height	7.0 mm (0.276 in)
Intake closes	50° ABDC	Corner seal protrusion	More than 0.5 mm (0.020 in)
Exhaust opens	75° BBDC	Main bearing clearance	
Exhaust closes	38° ATDC	New	0.04 ~ 0.07 mm (0.0016 ~ 0.0028 in)
		Wear limit	0.10 mm (0.0039 in)
		Rotor bearing clearance	
		New	0.04 ~ 0.08 mm (0.0016 ~ 0.0031 in)
		Wear limit	0.10 mm (0.0039 in)
		Eccentric shaft	
		Eccentricity of rotor journal	15 mm (0.591 in)
		Main journal diameter	43 mm (1.692 in)
		Rotor journal diameter	74 mm (2.913 in)
		Max. permissible run-out	0.06 mm (0.0024 in)
		End play	
		New	0.04 ~ 0.07 mm (0.0016 ~ 0.0028 in)
		Limit	0.09 mm (0.0035 in)
		Air pump belt tension (slack)	
		(Between air pump and water pump pulleys)	
		Belt deflection	10 ± 1 mm (0.40 ± 0.04 in)
		Alternator belt tension (slack)	
		(Between alternator and eccentric shaft pulleys)	
		Belt deflection	15 ± 2 mm (0.60 ± 0.08 in)
ENGINE			
Side housings (Front, intermediate and rear housings)			
Limit of distortion	0.04 mm (0.0016 in)		
Limit of wear			
Sliding surface	0.10 mm (0.0039 in)		
Rotor housing			
Width	80 mm (3.150 in)		
Max. permissible difference in width	0.06 mm (0.0024 in)		
Rotor			
Width	79.85 mm (3.144 in)		
Clearance of side housing and rotor (ΔR)	0.10 ~ 0.21 mm (0.0039 ~ 0.0083 in)		
Apex seal			
Length	79.85 mm (3.144 in)		
Width	3.0 mm (0.118 in)		
Height			
New	8.5 mm (0.335 in)		
Limit	7.0 mm (0.276 in)		
Clearance of apex seal and side housing (ΔS)			
New	0.13 ~ 0.17 mm (0.0051 ~ 0.0067 in)		
Limit	0.30 mm (0.0118 in)		
Clearance of apex seal and rotor groove (ΔG)			
New	0.05 ~ 0.09 mm (0.0020 ~ 0.0035 in)		
Limit	0.15 mm (0.006 in)		
Apex seal spring			
Free height			
New	4.7 mm (0.185 in) or more		
Limit	3.8 mm (0.150 in)		
Side seal			
Thickness	1.0 mm (0.039 in)		
Height	3.5 mm (0.138 in)		
Clearance of side seal and rotor groove (ΔW)			
New	0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in)		
Limit	0.10 mm (0.004 in)		
Clearance of side seal and corner seal (ΔE)			
New	0.05 ~ 0.15 mm (0.002 ~ 0.006 in)		
Limit	0.40 mm (0.016 in)		
LUBRICATING SYSTEM			
Oil pump			
Type		Rotor	5.0 liters/min. (1.30 U.S. gal/min, 1.10 Imp. gal/min.)
Feeding capacity at 1,000 rpm (Engine revolution)		Chain and sprockets	12 mm (0.47 in)
Oil pump driven by			
Limit of chain adjuster protrusion			
Outer rotor and body clearance			
New			0.20 ~ 0.25 mm (0.008 ~ 0.010 in)
Wear limit			0.30 mm (0.0118 in)
Clearance between rotor lobes			
New			0.01 ~ 0.09 mm (0.0004 ~ 0.0035 in)
Wear limit			0.15 mm (0.006 in)
Rotor end float			
New			0.03 ~ 0.13 mm (0.001 ~ 0.005 in)
Wear limit			0.15 mm (0.006 in)
Oil pressure at 3,000 rpm of engine	4.5 ~ 5.5 kg/cm ² (64 ~ 79 lb/in ²)		
Oil pressure at idle speed of engine	1.0 ~ 3.8 kg/cm ² (14 ~ 16 lb/in ²)		

<p>Pressure regulator valve (Rear housing) Operating pressure Free length of spring Pressure control valve (Front cover) Operating pressure Free length of spring By-pass valve (Oil cooler) Starts to close Fully closes Opening pressure Oil filter Type Relief valve opens at Oil metering pump Feeding capacity of 2,000 rpm of engine Lubricant Classification -10°C ~ 40°C (15°F ~ 100°F) -18°C ~ 50°C (0°F ~ 120°F) -18°C ~ 40°C (0°F ~ 100°F) -18°C ~ 30°C (0°F ~ 85°F) Below -18°C (0°F) Oil capacity Oil pan Full capacity</p>	<p>5.0 kg/cm² (71.1 lb/in²) 46.4 mm (1.830 in) 11.0 kg/cm² (156 lb/in²) 73.0 mm (2.874 in) 60 ~ 65°C (140 ~ 149°F) 70 ~ 75°C (158 ~ 167°F) 3.56 kg/cm² at 70°C (50.7 lb/in² at 158°F) Full flow, cartridge 0.8 ~ 1.2 kg/cm² (11 ~ 17 lb/in²) 2.0 ~ 2.5 cc/6 min. (0.068 ~ 0.085 U.S. oz/6 min.) A.P.I. Service SD or SE SAE 20W-40 or 20W-50 SAE 10W-50 SAE 10W-40 SAE 10W-30 SAE 5W-20 or 5W-30 5.0 liters (5.3 U.S. quarts, 4.4 Imp. quarts) 6.4 liters (6.8 U.S. quarts, 5.6 Imp. quarts)</p>	<p>Cooling capacity With heater 9.7 liters (10.3 U.S. quarts, 8.5 Imp. quarts)</p>	<p>9.7 liters (10.3 U.S. quarts, 8.5 Imp. quarts)</p>
<p>COOLING SYSTEM</p>		<p>FUEL SYSTEM</p>	
<p>Water pump Type Feeding capacity at 6,500 rpm of engine Pump driven by Pulley ratio of eccentric shaft and pump Fan Fan diameter Number of fan blades Fan drive Standard revolution of fan Thermostat Type Starts to open Fully opens at Lift Radiator Type Pressure cap opens at</p>	<p>Centrifugal impeller 150 ~ 160 liter/min. (39 ~ 42 U.S. gal/min.) (33 ~ 35 Imp. gal/min.) "V" belt 1 : 1.18 390 mm (15.4 in) 7 1,500 ± 200 rpm at 4,000 rpm of engine Wax pellet 88 ± 1.5°C (190 ± 2.7°F) 100°C (212°F) 8 ~ 10 mm (0.315 ~ 0.394 in) Corrugated fin, with expansion tank 0.9 kg/cm² (13.0 lb/in²)</p>	<p>Fuel tank capacity 80 liters (20.8 U.S. gal, 17.6 Imp. gal) Fuel pump Type Fuel pressure Feeding capacity Fuel filter Carburetor (Manual transmission) Type Throat diameter Primary Secondary Venturi diameter Primary Secondary Main jet Primary Secondary Main air bleed Primary Secondary Slow jet Primary Secondary Slow air bleed Primary No. 1 No. 2 Secondary No. 1 No. 2 Richer jet (Calif. only) Richer air bleed (Calif. only) Power jet Vacuum jet Primary Secondary Carburetor (Automatic transmission) Type Throat diameter Primary Secondary Venturi diameter Primary Secondary</p>	<p>Electrical, plunger 0.3 ~ 0.38 kg/cm² (4.26 ~ 5.41 lb/in²) More than 1,150 cc/min. (2.4 U.S. pints, 2.0 Imp. pints) Cartridge, paper element Down draft, 2 stage 4 barrel 28 mm (1.10 in) 34 mm (1.34 in) 22 x 13 x 6.5 mm (0.87 x 0.51 x 0.26 in) 28 x 10 mm (1.10 x 0.39 in) California # 104 Federal # 104 Canada # 106 # 130 California # 80 Federal # 80 Canada # 70 # 90 California # 45 Federal # 48 Canada # 48 # 80 # 200 # 100 # 80 # 45 # 120 — 2.2 mm (0.087 in) # 80 Down draft, 2 stage 4 barrel 28 mm (1.10 in) 34 mm (1.34 in) 22 x 13 x 65 mm (0.87 x 0.51 x 0.26 in) 28 x 10 mm (1.10 x 0.39 in)</p>

<p>Main jet Primary</p> <p>Secondary</p> <p>Main air bleed Primary</p> <p>Secondary</p> <p>Slow jet Primary</p> <p>Secondary</p> <p>Slow air bleed Primary No.1 No. 2</p> <p>Secondary No. 1 No. 2</p> <p>Richer jet</p> <p>Richer air bleed</p> <p>Power jet</p> <p>Vacuum jet Primary</p> <p>Secondary</p> <p>Fast idle adjustment (Clearance between primary throttle valve and bore when choke knob is fully pulled)</p> <p>Float level (from surface of gasket)</p> <p>Float drop (from surface of gasket)</p> <p>Idle speed Manual transmission</p> <p>Automatic transmission ("D" range)</p> <p>Fast idle speed</p> <p>Sub-zero starting assist fluid (Federal & Canada)</p> <p>Primary throttle valve opening angle at idle (Federal & Canada)</p>	<p>California # 102 Federal # 104 Canada # 104 # 125</p> <p># 80 # 90</p> <p>California # 45 Federal # 48 Canada # 48 # 80</p> <p># 200 — # 100 # 80</p> <p>— — # 40</p> <p>2.2 mm (0.087 in) # 80</p> <p>California 1.94 ± 0.15 mm (0.076 ± 0.006 in) Federal & Canada 1.65 ± 0.2 mm (0.065 ± 0.008 in)</p> <p>8.5 ± 1.0 mm (0.33 ± 0.004 in)</p> <p>52 ± 0.5 mm (2.05 ± 0.02 in)</p> <p>800 ^{+ 50}_{- 0} rpm</p> <p>750 ^{+ 50}_{- 0} rpm</p> <p>California 3,000 ~ 3,500 rpm Federal & Canada 2,800 ~ 3,500 rpm Anti-freeze 90% Water 10%</p> <p>2 ± 0.5 mm (0.079 ± 0.02 in)</p>	<p>Specific gravity at 20°C (68°F) Fully charged</p> <p>Recharge at</p> <p>Distributor Breaker point Number</p> <p>Dwell angle</p> <p>Point gap</p> <p>Arm spring tension</p> <p>Centrifugal advance Leading</p> <p>Trailing</p> <p>Condenser capacity</p> <p>Firing order</p> <p>Ignition timing Leading</p> <p>Trailing</p> <p>Timing mark location</p> <p>Spark plug Type</p> <p>Initial gap</p> <p>Alternator Ground</p> <p>Rated output</p> <p>Number of poles</p> <p>No load test Voltage</p> <p>Current</p> <p>Revolution</p> <p>Load test Voltage</p> <p>Current</p> <p>Revolution</p> <p>Number of brushes</p> <p>Brush length</p> <p>Wear limit</p> <p>Brush spring pressure</p> <p>Pulley ratio of eccentric shaft and alternator</p>	<p>N50Z N70Z 1.260 1.280 1.200 1.220</p> <p>California: 3 Federal & Canada: 2 Leading, Trailing: 58 ± 3° Leading retard (California only): 53 ± 3° 0.45 ± 0.05 mm (0.018 ± 0.002 in) 0.5 ~ 0.65 kg (1.10 ~ 1.4 lb)</p> <p>Starts: 0° at 500 rpm Maximum: 10° at 1,750 rpm</p> <p>Starts: 0° at 500 rpm Maximum: 10° at 1,750 rpm</p> <p>0.24 ~ 0.30μF 1-2</p> <p>Federal: 0 ± 1° TDC Canada: 5 ± 1° ATDC California: Normal: 0 ± 1° TDC Retarded: 20 ± 2° ATDC 15 ± 2° ATDC Eccentric shaft pulley</p> <p>NGK: B7EM, B7EMV BR8EM, BR7EMV B8EM, B8EMV BR8EM, BR8EMV</p> <p>NIPPON DENSO W22EA, W22EA-G W22EAR, W22EAR-G W25EA, W25EA-G W25EAR, W25EAR-G</p> <p>CHAMPION: N180B, RN-180B N178B, RN-178B</p> <p>0.65 ± 0.05 mm (0.026 ± 0.002 in)</p> <p>Negative 12V 50A 12</p> <p>14V 0 amp. Less than 1,050 rpm</p> <p>14V 40 amp. Less than 2,500 rpm 2 16 mm (0.63 in) 10 mm (0.39 in) 330 ~ 450 gr (12 ~ 16 oz) 1 : 2.08</p>
ELECTRICAL SYSTEM			
<p>Battery Type</p> <p>Federal Manual transmission</p> <p>Automatic trans- mission</p> <p>California Canada</p> <p>Capacity (20 hour rate)</p> <p>Voltage</p> <p>Terminal ground</p>	<p>N50Z M70Z</p> <p>N50Z N70Z</p> <p>N50Z (60 amp.) N70Z (70 amp.)</p> <p>12 Volt Negative</p>		

Regulator			Current	Less than 780 amp.	Less than 1,100 amp.
Constant voltage relay			Torque	1.1 m-kg (8.0 ft-lb)	2.4 m-kg (17.4 ft-lb)
Air gap	0.7 ~ 1.3 mm (0.028 ~ 0.051 in)		Free running test		
Point gap	0.3 ~ 0.45 mm (0.012 ~ 0.018 in)		Voltage	11.5 volt	11.5 volt
Back gap	0.7 ~ 1.5 mm (0.028 ~ 0.059 in)		Current	Less than 75 amp.	Less than 100 amp.
Regulated voltage without load at 4,000 rpm of alternator	14.5 ± 0.5 V		Speed	More than 4,900 rpm	More than 7,800 rpm
Pilot lamp relay			Number of brushes	4	4
Air gap	0.9 ~ 1.4 mm (0.035 ~ 0.055 in)		Brush length	18.5 mm (0.73 in)	18.5 mm (0.73 in)
Point gap	0.7 ~ 1.1 mm (0.028 ~ 0.043 in)		Wear limit	11.5 mm (0.45 in)	11.5 mm (0.45 in)
Back gap	0.7 ~ 1.5 mm (0.028 ~ 0.059 in)		Brush spring pressure	1.4 ~ 1.8 kg (49 ~ 63 oz)	1.4 ~ 1.8 kg (49 ~ 63 oz)
Pilot lamp lights on	0.5 ~ 3.0 V		Control switch	Solenoid	Solenoid
Pilot lamp lights out	4.2 ~ 5.2 V		Voltage required to close solenoid contacts	Less than 8 volt	Less than 8 volt
Ignition coil (Leading)			Undercutting mica	0.5 ~ 0.8 mm (0.020 ~ 0.032 in)	0.5 ~ 0.8 mm (0.020 ~ 0.032 in)
Type	HP5-13J		Clearance between pinion and stop collar	0.5 ~ 2.0 mm (0.020 ~ 0.08 in)	0.5 ~ 2.0 mm (0.020 ~ 0.08 in)
Primary resistance	1.35Ω at 20°C (68°F)		Clearance between armature shaft and brush	Less than 0.2 mm (0.008 in)	Less than 0.2 mm (0.008 in)
External resistance	1.4Ω at 20°C (68°F)		Armature shaft end play	0.1 ~ 0.4 mm (0.004 ~ 0.016 in)	0.1 ~ 0.4 mm (0.004 ~ 0.016 in)
Ignition coil (Trailing)					
Type	HP5-13E				
Primary resistance	1.5Ω at 20°C (68°F)				
External resistance	1.6Ω at 20°C (68°F)				
Starting motor	Manual transmission	Automatic transmission			
Capacity	1.2KW	2.0KW			
Lock test					
Voltage	5.0 volt	5.0 volt			

CLUTCH		Oil capacity 4 speed 5 speed	1.7 liters (1.8 U.S. quarts) 2.2 liters (2.3 U.S. quarts)
Type	Single dry plate, diaphragm spring	AUTOMATIC TRANSMISSION	
Pressure plate Permissible lateral run-out	0.05 mm (0.0020 in)		
Clutch disc Lateral run-out of clutch disc Limit	1.0 mm (0.039 in)	Model	JATCO R3A
Clutch release mechanism	Hydraulic	Gear ratio	
Clutch pedal free play (Before push rod contacts with piston)	0.5 ~ 3.0 mm (0.02 ~ 0.12 in)	Low	2.458
Master cylinder bore	15.87 mm (5/8 in)	Second	1.458
Clearance between piston and master cylinder bore		Top	1.000
New	0.032 ~ 0.102 mm (0.0013 ~ 0.0040 in)	Reverse	2.181
Wear limit	0.15 mm (0.006 in)	Torque converter	
Release cylinder bore	19.05 mm (3/4 in)	Type	Symmetrical 3-element 1-stage 2-phase torque converter coupling
Clearance between piston and release cylinder bore		Stall torque ratio	2.0 : 1
New	0.040 ~ 0.125 mm (0.0016 ~ 0.0049 in)	Fluid type	M2C33F (Type F)
Wear limit	0.15 mm (0.006 in)	Fluid capacity	6.2 liters (6.6 U.S. quarts) (5.5 Imp. quarts)
MANUAL TRANSMISSION		Oil pump	
Type	4-speed or 5-speed Manual transmission	Side play of inner gear and outer gear	
Gear ratio		New	0.02 ~ 0.04 mm (0.001 ~ 0.002 in)
First	3.683	Limit	0.08 mm (0.003 in)
Second	2.263	Clearance between outer gear and crest	
Third	1.397	New	0.14 ~ 0.21 mm (0.006 ~ 0.008 in)
Top	1.000	Limit	0.25 mm (0.010 in)
Reverse	3.692	Clearance between outer gear and housing	
Fifth (5 speed only)	0.862	New	0.05 ~ 0.20 mm (0.002 ~ 0.008 in)
Main shaft		Limit	0.25 mm (0.010 in)
Max. permissible run-out	0.03 mm (0.0012 in)	Side clearance between oil seal ring and groove on oil pump cover	0.04 ~ 0.16 mm (0.002 ~ 0.006 in)
Clearance between main shaft and gear (or bush)		Front clutch	
Wear limit	0.15 mm (0.006 in)	Number of drive plates or driven plates	4
Reverse idle gear		Thickness of drive plate	1.60 mm (0.063 in)
Clearance between reverse idle gear bush and shaft		Total clearance measured between retaining plate and stopper	1.6 ~ 1.8 mm (0.063 ~ 0.071 in)
Wear limit	0.15 mm (0.006 in)	End play of front clutch drum	0.5 ~ 0.8 mm (0.020 ~ 0.031 in)
Shift fork and rod		Governor	
Clearance between shift fork and clutch sleeve		Type	38 type
Wear limit	0.5 mm (0.020 in)	Drive plate run-out	
Clearance between shift fork and reverse idle gear		New	Less than 0.3 mm (0.012 in)
Wear limit	0.5 mm (0.020 in)	Limit	0.5 mm (0.020 in)
Clearance between shift rod gate and control lever		Rear clutch	
Wear limit	0.8 mm (0.031 in)	Number of drive plates or driven plates	5
Synchronizer ring		Thickness of drive plate	1.6 mm (0.063 in)
Clearance between synchronizer ring and side of gear when fitted		Total clearance measured between retaining plate and stopper	0.8 ~ 1.5 mm (0.031 ~ 0.059 in)
New	1.5 mm (0.059 in)	Low and reverse brake	
Wear limit	0.8 mm (0.031 in)	Number of friction plates or steel plates	4
Lubricant		Thickness of friction plate	2.0 mm (0.079 in)
Above -18° (0°F)	EP. SAE 90	Total clearance measured between retaining plate and stopper	0.8 ~ 1.05 mm (0.031 ~ 0.041 in)
Below -18° (0°F)	EP. SAE 80		

Gear assembly	
Total end play	0.25 ~ 0.50 mm (0.010 ~ 0.020 in)
Planetary gear side play	
New	0.2 ~ 0.7 mm (0.008 ~ 0.028 in)
Limit	0.8 mm (0.03 in)
Engine stall speed	
In break-in period	2400 ~ 2650 rpm
After break-in period	2450 ~ 2700 rpm

Shift speed

Throttle condition (Manifold vacuum)		mph
Kick-down (0 ~ 100 mm-Hg) (0 ~ 3.94 in-Hg)	D1 → D2	33 ~ 49
	D2 → D3	63 ~ 85
	D3 → D2	56 ~ 72
	D2 → D1	15 ~ 31
Half throttle (200 ± 10 mm-Hg) (7.87 ± 0.39 in-Hg)	D1 → D2	10 ~ 23
	D2 → D3	19 ~ 44
Fully closed throttle	D3 → D1	6 ~ 13
Manual 1	12 → 11	27 ~ 36

Governor pressure

Driving speed	Output shaft speed	Governor pressure	
		kg/cm ²	lb/in ²
mph	rpm		
20	980 ~ 1,080	0.8 ~ 1.3	12 ~ 18
35	1,730 ~ 1,850	1.4 ~ 2.1	20 ~ 29
55	2,730 ~ 2,250	2.6 ~ 3.6	36 ~ 51

Line pressure

Manual range	Engine idling condition		Engine stall condition	
	kg/cm ²	lb/in ²	kg/cm ²	lb/in ²
R	4.0 ~ 7.0	57 ~ 100	15.5 ~ 19.0	220 ~ 270
D	3.0 ~ 4.0	43 ~ 57	9.5 ~ 11.0	135 ~ 156
2	10.0 ~ 12.0	142 ~ 171	10.0 ~ 12.0	142 ~ 171
1	3.0 ~ 4.0	43 ~ 57	9.5 ~ 11.0	135 ~ 156

PROPELLER SHAFT

Max. permissible run-out	0.4 mm (0.016 in)
Max. permissible unbalance at 4,000 rpm	
At front	15 cm-gr (0.21 in-oz)
At center	30 cm-gr (0.42 in-oz)
At rear	30 cm-gr (0.42 in-oz)
Universal joint	
Spider diameter	
Wear limit	16.549 mm (0.6515 in)

REAR AXLE

Type	Semi-floating, hypoid gears
Reduction ratio	Manual transmission 4.375 Automatic transmission 4.111
Number of gear teeth	Manual transmission 35:8 Automatic transmission 37:9
Backlash of ring gear and pinion	0.19 ~ 0.21 mm (0.0075 ~ 0.0083 in)
Max. allowable variation of backlash	0.08 mm (0.0031 in)
Pinion bearing preload (Without pinion oil seal)	13 ~ 18 cm-kg (11.3 ~ 15.6 in-lb)
Differential side bearing preload (Without pinion)	5 ~ 15 cm-kg (4.3 ~ 13.0 in-lb)
Note: The above preload on the differential side bearings is obtained by tightening the adjusters until the distance between both pilot sections on the bearing caps ("L" shown in figure) becomes as follows:	
"L" (Case spread)	204.5 ⁺⁰ / _{-0.072} mm (8.0513 ⁺⁰ / _{-0.0028} in)
Backlash of side gear and pinion gear	0 ~ 0.2 mm (0 ~ 0.008 in)
Clearance between rear axle shaft and thrust block (Rear axle shaft end play)	
First installed	0.65 ~ 0.85 mm (0.026 ~ 0.033 in)
Second installed	0.05 ~ 0.15 mm (0.002 ~ 0.006 in)
Lubricant	
Above -18°C (0°F)	A.P.I. Service GL5 SAE 90
Below -18°C (0°F)	A.P.I. Service GL5 SAE 80
Oil capacity	1.3 liters (1.4 U.S. quarts)

STEERING

Type	Recirculating ball nut
Reduction ratio	20.2 : 1
Free play of steering wheel (Turning direction)	
New	20 ~ 30 mm (0.8 ~ 1.2 in)
Limit	50 mm (2.0 in)
Backlash between rack and sector gear	0 ~ 0.1 mm (0 ~ 0.004 in)
Worm bearing preload	
Without sector shaft and column bush	1 ~ 4 cm-kg (0.9 ~ 3.5 in-lb)
With sector shaft and column bush	9 ~ 12 cm-kg (6.5 ~ 8.7 in-lb)
Clearance between sector shaft and housing (or bush)	
New	0.028 ~ 0.049 mm (0.0011 ~ 0.0019 in)
Wear limit	0.20 mm (0.008 in)
End clearance of adjusting screw and sector shaft	0 ~ 0.1 mm (0 ~ 0.004 in)
Lubricant	A.P.I. Service GL-4, SAE 90
End play of ball stud of center link and tie rods	
New	0 ~ 0.25 mm (0 ~ 0.010 in)
Limit	1.0 mm (0.039 in)

Max. wheel angle on full lock Wheel on inside of curve Wheel on outside of curve Minimum turning radius Steering geometry King pin inclination Camber Max. permissible difference in camber between sides Camber offset Caster Max. permissible difference in caster between sides Caster trail Toe-in	33° 18' 32° 36' 5.5 m (18 ft 1 in) 8° 45' 15' ± 20' 20' 52.5 mm (2.07 in) 1°57' ± 20' 20' 5.0 mm (0.20 in) 0 ± 3 mm (0 ± 0.12 in)	WHEELS AND TIRES		
		Wheel disc Front Rear Tire Front Rear Inflation pressure Front Rear	5½J × 14WDC 5½J × 14WDC 7.35-14-6PR 7.35-14-6PR 24 psi 36 psi	
BRAKES		FRONT SUSPENSION		
		Type Coil spring Spring constant Wire diameter Coil diameter Free length Fitting length Fitting load	Wishbone, coil spring 9.13 kg/mm (511 lb/in) 16.5 mm (0.65 in) 100.5 mm (3.96 in) 298 mm (11.73 in) 218 mm (8.58 in) 694 ~ 766 kg (1530 ~ 1689 lb)	
Brake pedal free travel Before push rod contacts with piston Before power brake piston operates Master cylinder Type Bore Clearance between piston and bore New Wear limit Front disk brake Brake disk outer diameter Thickness of brake disk New Limit Max. allowable lateral run-out of brake disk Thickness of lining and shoe New Wear limit Wheel cylinder bore Rear drum brake Type Drum diameter New Max. permissible diameter Thickness of lining New Limit Rear wheel cylinder Bore Clearance between piston and bore New Wear limit Parking brake Type Operates at		— 8.5 ~ 10 mm (0.33 ~ 0.39 in) Tandem 22.22 mm (7/8 in) 0.040 ~ 0.125 mm (0.0016 ~ 0.0049 in) 0.15 mm (0.006 in) 256 mm (10.079 in) 12 mm (0.4724 in) 11 mm (0.4331 in) 0.10 mm (0.0039 in) 14 mm (0.551 in) 7 mm (0.276 in) 53.97 mm (2.1248 in) Dual-acting two-leading shoes 260 mm (10.2364 in) 261 mm (10.2758 in) 5.5 mm (0.197 in) 1.0 mm (0.039 in) 19.05 mm (3/4 in) 0.040 ~ 0.125 mm (0.0016 ~ 0.0049 in) 0.15 mm (0.006 in) Mechanical Rear wheels	Note: When replacing the coil spring, install an adjusting plate/plates to get equal road clearance both on the right and left.	
			REAR SUSPENSION	
DIMENSIONS		Type Leaf spring Spring constant Number of leaves Length Width Thickness	Leaf spring 5.54 kg/mm (310 lb/in) 6 1200 mm (47.24 in) 60 mm (2.36 in) No. 1, 2, 3, & 4: 6 mm (0.24 in) No. 5: 5 mm (0.20 in) Helper: 12 mm (0.47 in)	
		Overall length Overall width Overall height Wheelbase Tread Front Rear Min. road clearance Min. turning radius Seating capacity	4402 mm (173 in) 1695 mm (67 in) 1540 mm (61 in) 2650 mm (104 in) 1450 mm (57 in) 1430 mm (56 in) 195 mm (8 in) 5.0 mm (16.5 in) 2	

TIGHTENING TORQUE

	m-kg	ft-lb			
Engine			Actuator for parking rod to extension housing	0.8 ~ 1.1	5.8 ~ 8.0
Oil pump sprocket	3.0 ~ 3.5	22 ~ 25	Note:		
Oil pan	0.7 ~ 1.0	5 ~ 7	When adjusting the band brake, tighten the piston stem to a torque of 1.2 ~ 1.5 m-kg (9 ~ 11 ft-lb), and then loosen it by two turns.		
Eccentric shaft pulley	10 ~ 12	72 ~ 87	Propeller shaft		
Inlet manifold	1.6 ~ 2.3	12 ~ 17	Yoke to rear axle companion flange	5.5 ~ 6.5	40 ~ 47
Thermal reactor	3.0 ~ 5.5	22 ~ 40	Yoke to front propeller shaft	16.0 ~ 18.0	116 ~ 130
Spark plugs	1.3 ~ 1.8	9 ~ 13	Center bearing support	3.2 ~ 4.7	23 ~ 34
Oil pressure switch	1.2 ~ 1.8	9 ~ 13	Rear axle		
Temperature gauge unit	0.7 ~ 0.8	5 ~ 6	Ring gear	9.0 ~ 11.0	65 ~ 80
Tension bolts	3.2 ~ 3.8	23 ~ 27	Differential side bearing caps	5.6 ~ 8.2	41 ~ 59
Water temperature switch	1.0 ~ 1.8	7 ~ 13	Compansion flange to pinion	20.0 ~ 35.0	145 ~ 253
Clutch			Steering		
Flywheel	40.0 ~ 50.5	289 ~ 362	Steering wheel nut	3.0 ~ 4.0	22 ~ 29
Clutch cover	1.8 ~ 2.7	13 ~ 20	Steering gear housing to frame	4.5 ~ 5.7	33 ~ 41
Transmission			Pitman arm to sector shaft	15.0 ~ 18.0	108 ~ 130
Shift lock spring cap	4.5 ~ 5.5	33 ~ 40	Idler arm bracket to frame	4.5 ~ 5.7	33 ~ 41
Plug for interlock pin hole	1.0 ~ 1.5	7 ~ 11	Idler arm to bracket	5 ~ 8	36 ~ 58
Reverse lock spring cap	4.5 ~ 5.5	33 ~ 40	Idler arm to center link	5 ~ 8	36 ~ 58
Control lever to control rod end	2.8 ~ 3.4	20 ~ 25	Pitman arm to center link	3.0 ~ 4.0	22 ~ 29
Shift fork set bolts	0.8 ~ 1.2	6 ~ 9	Tie rod to center link	3.0 ~ 4.0	22 ~ 29
Main shaft lock nut	20.0 ~ 28.0	145 ~ 203	Tie rod to knuckle arm	3.0 ~ 4.0	22 ~ 29
Under cover	0.6 ~ 0.9	4 ~ 7	Tie rod lock nut	1.8 ~ 2.5	13 ~ 18
Reverse lamp swtich (4-speed)	2.5 ~ 3.5	18 ~ 25	Wheels		
(5-speed)	3.0 ~ 4.0	22 ~ 29	Wheel nuts	8.0 ~ 9.0	58 ~ 65
Automatic transmission			Suspension		
Drive plate to counter weight	3.7 ~ 5.5	27 ~ 40	Ball joints to knuckle	7.0 ~ 9.0	51 ~ 65
Drive plate to torque converter	3.7 ~ 5.5	27 ~ 40	Ball joint to lower suspension arm	8.3 ~ 9.7	60 ~ 70
Converter housing to engine	3.2 ~ 4.7	23 ~ 34	Upper suspension arm shaft to frame	8.5 ~ 10.5	61 ~ 76
Converter housing to transmission case	4.5 ~ 5.5	33 ~ 40	Lower suspension arm shaft to frame	7.5 ~ 9.5	54 ~ 69
Extension housing to transmission case	2.0 ~ 2.5	14 ~ 18	"U" bolts	6.4 ~ 8.0	46 ~ 58
Oil pan	0.5 ~ 0.7	3.6 ~ 5.1	Spring pin nuts	8.5 ~ 10.5	61 ~ 76
Piston stem lock nut	1.5 ~ 4.0	11 ~ 29	Spring pin to frame bracket	2.0 ~ 2.5	14 ~ 18
Servo piston retainer	1.0 ~ 1.5	7.2 ~ 10.8	Shackle pin nuts	6.0 ~ 8.0	46 ~ 58
Servo cover	0.5 ~ 0.7	3.6 ~ 5.1	Unless otherwise specified		
One-way clutch inner race	1.3 ~ 1.8	9 ~ 13	6T		
Control valve body to transmission case	0.55 ~ 0.75	4.0 ~ 5.4	6 mm bolt/nut	0.7 ~ 1.0	5 ~ 7
Lower valve body to upper valve body	0.25 ~ 0.35	1.8 ~ 2.5	8 mm bolt/nut	1.6 ~ 2.3	12 ~ 17
Side plate to control valve body	0.25 ~ 0.35	1.8 ~ 2.5	10 mm bolt/nut	3.2 ~ 4.7	23 ~ 34
Reamer bolt of control valve body	0.5 ~ 0.7	3.6 ~ 5.1	12 mm bolt/nut	5.6 ~ 8.2	41 ~ 59
Oil strainer	0.25 ~ 0.35	1.8 ~ 2.5	14 mm bolt/nut	7.7 ~ 10.5	56 ~ 76
Governor valve body to oil distributor	0.5 ~ 0.7	3.6 ~ 5.1	8T		
Oil pump cover	0.6 ~ 0.8	4.3 ~ 5.8	6 mm bolt/nut	0.8 ~ 1.2	6 ~ 9
Inhibitor switch	0.5 ~ 0.7	3.6 ~ 5.1	8 mm bolt/nut	1.8 ~ 2.7	13 ~ 20
Manual shaft lock nut	3.0 ~ 4.0	22 ~ 29	10 mm bolt/nut	3.7 ~ 5.5	27 ~ 40
Oil cooler pipe set bolt	1.6 ~ 2.4	12 ~ 17	12 mm bolt/nut	6.4 ~ 9.5	46 ~ 69
Oil pressure test plug	0.5 ~ 1.0	3.6 ~ 7.2	14 mm bolt/nut	10.4 ~ 14.0	75 ~ 101



LOC. Y04F
PART NO. 9999-95-012B-76
DESC. REPUWS MAN
QTY. 1 QTY. SHIP
ORD.

126 INV. LINE
42199 INV. NO.
10/11/77 INV. DATE
19012 DLR. CODE